

User Manual

**Multi-port Switch Game Card Reader
with Wireless Remote Control**




Human friendly

English

Thank you for choosing Unitek Multi-port Switch Game Card Reader with Wireless Remote Control. Please read the user manual carefully before use and save them. If you need any help, please contact our professional customer service team at:

support_us@unitek-products.com

Product Diagram

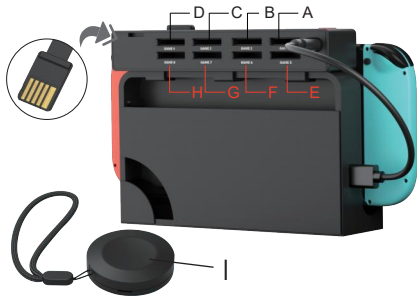

LED Light Indicator

- A: 1 Game Card Slot: Red
- B: 2 Game Card Slot: Orange
- C: 3 Game Card Slot: Pink
- D: 4 Game Card Slot: Yellow
- E: 5 Game Card Slot: Green

F: 6 Game Card Slot: Blue Violet
G: 7 Game Card Slot: Blue
H: 8 Game Card Slot: Cyan
I: Wireless Remote Control

Package Contents

1 x Switch Game Card Reader
1 x USB A to C Power Cable
1 x Wireless Remote Control

How to Use

Step 1: Snap the Switch Game Card Switcher into the Switch Dock.

Step 2: Connect the USB C cable to the Switch Dock.

Step 3: Insert the connecting plug into the game card slot on Switch Console.

Step 4: Insert the game cards you need into the card slots accordingly.

Note

1. When multiple game cards are inserted into the switch game card reader, all games will show on the display or TV screen but it can read **ONLY** one game at one time.
2. When playing the game, please do **NOT** insert a new game card. Or else it will exit the current game and switch to the new game card automatically.
3. You can switch the different game by using the "switch" button or the attached wireless remote control, Press 1 time

the game will be next.

4. Our game card reader and remote control are pre-paired before leaving the factory. If the wireless remote control isn't working with the game card reader, please first make sure to disconnect the power cable from the card reader, then hold down the "switch" button until the USB C power cable is connected and the LED light turns yellow. Next, hold down the remote control for 2s. Once the LED light on the game card reader turns green, it means the remote control has successfully connected to the switch game card reader.

5. Kindly be noted, the wireless remote control is including a CR2032 li-ion battery, Unitek CANNOT replace it, please buy to replace from the online or offline store.

6. If the switch card reader is powered by the original Switch dock, it may interfere with the sleeping mode. Therefore, it is recommended to connect an external power supply for the switch card reader.

Why does the Switch wake up in sleep mode?

The issue occurs exclusively in Switch Docks that use a USB HUB expansion chipset. The solution is to use an additional USB charger instead of plugging the USB cable into the Switch dock's USB port.

Warranty

The Unitek Multi-port Switch Game Card Reader with Wireless Remote Control is covered by Unitek warranty for 24 months. If the product fails due to manufacturer defects, please contact us by email at: **support_us@unitek-products.com**

日本語

尊敬するお客様:

この度は、弊社のUnitek 8-in-1 Switch ゲームカードリーダー・リモコン付きご購入頂き、誠にありがとうございます。いつでも見えるようにこの取扱説明書をご保管してほしいです。ご不明なところがあったら、お気軽にお問い合わせさせていただきますようお願いいたします。

support_us@unitek-products.com

製品構造写真



LEDライトインジケータ

- A: ゲーム カード スロット: 赤
- B: ゲーム カード スロット: オレンジ
- C: ゲーム カード スロット: ピンク
- D: ゲーム カード スロット: 黄
- E: ゲーム カード スロット: グリーン

- F: ゲーム カード スロット: 青紫
- G: ゲーム カード スロット: 青
- H: ゲーム カード スロット: シアン
- I: リモコン

パッケージ内容

- 本体 × 1
- USB A - C 電源ケーブル × 1
- リモコン × 1

使用方法

- ステップ 1: カードリーダー切り替え器をSwitch ドックにはめ込みます。
- ステップ 2: USB C ケーブルを Switch ドックに接続します。
- ステップ 3: 接続プラグを Switch主体のゲームカードスロット に挿入します。
- ステップ 4: 使用なゲームカードをカードスロットに挿入します。

警告

- 本製品のプラグやUSBケーブルのコネクタなどを逆向きや斜めに取付けないでください。
- 本製品を水分や湿気の多い場所、直射日光の当たる場所、ホコリや油煙などの多い場所、車中や暖房器具のそばなどの高温となる場所に設置したり、保管したりしないでください。
- 可燃物や重いものを載せたり、毛布や座布団で覆ったり包んだりしないでください。
- 小さなお子様の手の届く所に置かないでください。

ご注意事項

- 複数のゲームカードをUnitek Switchゲームカードリーダーに挿入すると、すべてのゲームがディスプレイやテレビ画面に表示されますが、一度に1つのゲームのみを読み取ることができます。
- ゲームをプレイするとき、新しいゲームカードを挿入しないでください。さもなければそれは現在のゲームを終了し、新しいゲームカードに自動的に転換します。
- 本体にある切り替えボタンあるいはリモコンを押して、次のゲームに切り替えます。
- リモコンが動作しない場合は、マッチングをやり直してください。マッチングの手順: ゲームカード切替器本体の切替ボタンを長押しし、USB電源を差し込んで電源を入れ、切替ボタンを4秒間長押しすると、LEDが黄色に点灯し、ホストがペアリングモードであることを示します。この時、リモコンの切替ボタンを約2秒間長押ししてペアリングを行います。本体LEDが緑色に点灯したらペアリング成功です。
- リモコンは「CR2032」リチウムイオン電池を内蔵します。弊社が交換のサービスができません。オンラインまたはオフラインストアから交換するために購入してください。
- スイッチカードリーダーがオリジナルのスイッチドックから給電されている場合、スリープモードに干渉する可能性があります。そのため、スイッチカードリーダーに外部電源を接続することをお勧めします。

アフターサービスサポート

品質保証期間: 12ヶ月

お問い合わせメールアドレス: support_us@unitek-products.com

※ 製品に何か不明なところがあったら、いつでもお気軽にお問い合わせください。または、万の一、何か故障が起きた場合にも、弊社にご連絡くださいますようお願いいたします。

