

R3A784  
RoHS



**K&S Technology Ltd**

Posthoornstraat 17, 3011 WD,  
Rotterdam, Netherlands



R 210-220085



Li-ion



CCA J23LP4BA0T4 CMIIT ID: 23J99Z05V671



Product: Bluetooth Headphone

Model Name: FI-UX2DPL

FCC ID: 2AX2R-UX2000

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna,
- Increase the separation between the equipment and receiver,
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# UX2000

User's Manual

取扱説明書

使用说明书




final



UX2000



User Manual

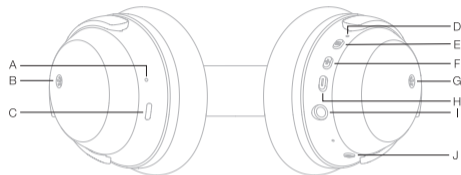USB Type-C  
Charging CableAnalog Audio Cable  
with 3.5mm Plug

A : Charging Indicator

B : Microphone

C : USB Charging Port

D : Bluetooth/ANC Indicator

E : Power Button

F : Volume + Button

G : Microphone

H : Volume - Button

I : 3.5mm Audio Jack

J : ANC(Active Noise Canceling) Button

## Charging the Headphones

---

Connect the USB Charging Port to a charging adaptor with the supplied USB Type-C Charging Cable. The Charging Indicator flashes Red while charging and turns Green when the headphones are fully charged.

\*1 While charging, the power of the headphones will be turned OFF and the Bluetooth connection will also be disabled.

\*2 Please do not use any charging cables other than the one provided.



## Powering ON

---

Press and hold the Power Button for 4 seconds and the headphones will turn ON with a "Power ON" announcement and the Bluetooth/ANC Indicator lights up in Blue.

## Powering OFF

---

Press and hold the Power Button for 5 seconds and the headphones will turn OFF with a "Power OFF" announcement. When the power is turned OFF, the Bluetooth/ANC Status Indicator lights up Red and fades off.

## Activating/Deactivating ANC (Active Noise Canceling)

When you power ON headphones, noise canceling is automatically activated. While the headphones are in pairing mode, the Bluetooth/ANC indicator will blink alternately in Red and Blue, and upon connecting to a device such as a smartphone, the Bluetooth/ANC Indicator will light up in Green.

With the power ON, pressing the ANC Button will play a voice prompt saying "Noise Canceling OFF", turning OFF the noise canceling feature, and the Bluetooth/ANC Indicator will turn OFF.

Pressing the ANC Button again will play a voice prompt saying "Noise Canceling", reactivating the noise canceling feature, and the Bluetooth/ANC indicator will light up in Green.

## Performing Device Pairing

In order to use the UX2000 with your device, initial device pairing is necessary. Once the headphone is paired to a device, it will connect to the device automatically next time the power is turned ON.



Performing initial device pairing:

1. Press and hold the Power Button for around 4 seconds and the headphones will turn ON with a "Power ON" announcement. The headphones start device pairing mode automatically with the Bluetooth/ ANC Status Indicator flashing alternately in Red and Blue.
2. With the Bluetooth function of the device being ON, choose "UX2000" under the device list. The device pairing is successful if "UX2000 Connected" is shown.

Unpairing current device and performing new device pairing with another device:

1. While the headphone power is OFF, press and hold the Power Button for 5 seconds and the headphones will turn ON and start device pairing mode with "Power ON" & "Bluetooth Pairing" announcements and the Bluetooth/ANC Status Indicator flashes alternately in Red and Blue.
2. With the Bluetooth function of the device is ON, choose "UX2000" under the device list. The device pairing is successful if "UX2000 Connected" is shown.

\* This product supports multipoint connections, allowing it to be connected to 2 devices simultaneously. When connecting a third device or more, it will automatically overwrite the initially connected device with the newly connected device in sequence. Additionally, the product will automatically connect to previously paired devices. Therefore, if there is a device you do not wish to connect to simultaneously, please turn off the Bluetooth functionality or delete the pairing record on the device.

## Deleting the Pairing Record

To prevent unintended connections due to the multipoint feature, which allows simultaneous connection with 2 devices, please delete the pairing information using the following procedure if you wish to disconnect. After the operation is complete, please pair the device again.

1. When the device is powered ON, press and hold both the Volume + Button and the Volume - Button simultaneously until the Bluetooth/ANC Indicator lights up in Purple.
2. The headphones will automatically enter pairing mode, and the Bluetooth/ANC Indicator will blink alternately in Red and Blue, indicating that the pairing record has been deleted.

\* Please note that button operations are disabled when the Analog Audio Cable with 3.5mm Plug is connected.

## Media Control while Analog Audio Cable is Connected

By connecting the included Analog Audio Cable with 3.5mm Plug into the 3.5mm Audio Jack on the headphones, you can also use them as wired headphones. When the 3.5mm Audio Jack is connected, the power of the headphones will automatically turn OFF, and all the button operations will be disabled. Please perform media control operations on the playback device side.

## Gaming Mode

Pressing the ANC Button twice will turn on Gaming Mode, and you will hear a voice guidance saying "Gaming Mode ON".

During Gaming Mode, you can enjoy content such as games and videos with low-latency wireless connection.

To turn Gaming Mode OFF, press the ANC Button twice again, and you will hear a voice guidance saying "Gaming Mode OFF", turning Gaming Mode OFF.

\* The latency reduction effect varies depending on the model connected.

## Media Control

Music Playback	Play	Press the Power Button once
	Pause	Press the Power Button once
	Next	Press and hold the Volume + Button
	Previous	Press and hold the Volume - Button
Phone Call	Receiving Call	Press the Power Button once
	End Call	Press the Power Button once
	Declining Call	Press and hold the Power Button for 2 seconds
Music Playback / Phone Call	Increasing Volume	Press the Volume + Button
	Decreasing Volume	Press the Volume - Button
Siri/ Google Assistant	Activating	Press the Power Button twice *1
Switching Gaming Mode ON/OFF		Press the ANC Button twice
Switching ANC ON/OFF		Press the ANC Button once

\* 1: There is a possibility that this does not work for certain devices.




\* Media controls on the headphones are disabled when the headphones is connected with the Analog Audio Cable.










## Maintenance

Regularly wipe the headband and earpads with a soft, dry cloth to keep the headphones clean.








## Safety Precautions








The following descriptions are provided to explain matters that must be observed in order to prevent harm to the user as well as other people, along with damages to property. Please be sure to observe this before using the product..

 <b>DANGER</b>	Failure to observe the precautions indicated by this label will result in death or serious injury to the user.
 <b>WARNING</b>	Failure to observe the precautions indicated by this label may result in death or serious injury to the user.
 <b>CAUTION</b>	Failure to observe the precautions indicated by this label may result in personal injury or property damage.

 <b>DANGER</b>	
 <b>FLAMMABLE</b>	 <b>ELECTRIC SHOCK</b>
Fire, electric shock, overheating, ignition, leakage, rupture, or accidental ingestion may cause death, blindness, or serious injury.	
 <b>PROHIBITED</b>	Do not use, store, or leave the product in a humid or dusty place, or in a car where it will be exposed to high temperatures, or places exposed to direct sunlight. Doing so may cause overheating, leakage, or rupture of the product.
 <b>PROHIBITED</b>	Do not use other than the supplied USB cable. Doing so may cause rupture, battery leakage, or overheating and consequently result in fire, burn mark, or injury.
 <b>PROHIBITED</b>	Do not put it in a fire. Doing so may cause leakage or rupture and consequently result in injury or burn mark.
 <b>PROHIBITED</b>	Do not charge the battery when the Charging Port or USB cable is wet. Doing so may cause abnormal heating or malfunction due to short circuit.
 <b>DO NOT DISASSEMBLE</b>	Do not disassemble the product. Doing so may cause product malfunctions.
 <b>PROHIBITED</b>	If you find that liquid is leaking from the headphones, or if there is an unusual odor or overheating, do not touch the liquid and stop using the headphones immediately. Besides that, move all combustible materials nearby away from the headphones.

## Safety Precautions

 <b>WARNING</b>	
 <b>FLAMMABLE</b>	 <b>ELECTRIC SHOCK</b>
Fire, electric shock, overheating, ignition may cause burn or serious injury.	
 <b>PROHIBITED</b>	Do not use the product while driving a car, motorcycle, bicycle, etc. Doing so may cause a traffic accident.
 <b>PROHIBITED</b>	Do not use the product in places where it would be dangerous if the surrounding sound is not audible. Listening at high volume makes it difficult to hear surrounding sounds. Use at railroad crossings, pedestrian crossings, station platforms, etc. may cause accidents or injuries.
 <b>PROHIBITED</b>	Do not allow water or foreign matter to get inside the headphones and Transmitter. These devices are not waterproof. Water or foreign matter may cause fire or electric shock. If water or foreign matter should enter the devices, stop using it immediately. Regularly check and ensure that no foreign matter adheres to charging port as it may cause overheating or fire.
 <b>PROHIBITED</b>	Do not charge the headphones while it is covered by bedding or other covering. The heat buildup may cause abnormal overheating, which may result in a fire.

 <b>CAUTION</b>	
May cause injury or damage to surrounding property.	
 Keep out of reach of children or persons requiring supervision. Swallowing any part of the product such as magnets or batteries can be very dangerous and lead to choking hazards, or internal organ damage.	 A drastic change of air pressure inside the earcup could cause severe damage not only to headphones but also to the ears. It is dangerous, so please do not press the earcups while wearing the headphones.
 Do not use in medical institutions or around people using medical equipment. It may cause malfunction to medical devices such as pacemakers.	 Do not listen at high volume for long periods of time. Prolonged use at excessive volume may result in permanent hearing loss. Do not exceed 40 hours/week at 80 dB (A) and 5 hours/week at 89 dB (A).
 When using the headphones on board an aircraft, follow the instructions of the flight crew. Radio wave effects may cause an accident.	 Using headphones with earrings, piercings, etc., on your ears may cause injury. In addition, they may cause degradation to the headphones performance or result in scratches to the body of the headphones.

Problem	Cause	Remedy
Headphones will not turn ON	(Immediately after purchasing) Battery charge is low	For safety of transportation from overseas, laws and regulations do not allow the internal battery to be fully charged at the time of shipping. For that reason, voltage may fall below the level required for operation at the time the customer opens the package. Fully charging the battery before use may relieve this inconvenience. Please refer to "Charging the Headphones" on P.4 regarding the method for charging.
	Power Button has not been pressed for adequate time	Please press and hold the Power Button long enough for the headphones to turn ON. Please refer to "Powering ON" on P.5 for the details of the method.
	Analog Audio Cable with 3.5mm Plug is connected	Please disconnect the Analog Audio Cable since the power is automatically turned OFF once the Analog Audio cable is connected.
Headphones will not turn OFF	An error has occurred	Normally, headphones power automatically turns OFF when charging. Please try to charge the headphones by using the supplied USB Type-C charging cable and check if the Charging Indicator lights up in Red. Then please disconnect the cable and check again if the power can be turned OFF.
	Power Button has not been pressed for adequate time	Please press and hold the Power Button long enough for the headphones to turn OFF. Please refer to "Powering OFF" on P.5 for the details of the method.

Troubleshooting: When you think, "Is it broken?"

Problem	Cause	Remedy
In case it takes time to charge	The output of the USB adapter being used for charging is low	In case you are using the USB port on a PC, etc., there are cases in which the output is low and it may take more time to charge than the time stated on the specification. As such please use a 5V/1A USB adapter for charging this product.
Headphones cannot be detected / paired	Headphones are not in the pairing mode	It may be fixed by deleting the pairing record of the headphones. Please refer to "Deleting the Pairing Record" on P.8 for the method to delete the pairing record.
	Connection automatically established with the previously connected device	Please try performing the pairing operation again after having deleted the pairing information from a previously paired device.
Unstable music playback	Interference from external factors	Bluetooth communicates using the 2.4GHz band which might be interfered by other wireless standards such as Wi-Fi, etc. Moreover, the connection is sensitive against liquid where humidity, rain, or even the size of head could cause disruption to the connection. The specifications of the device to be connected could cause variation too. For that reason, reducing the distance between devices or switching OFF unused Wi-Fi/Bluetooth of surrounding devices may improve the connection.
Microphone cannot be used	Analog Audio Cable with 3.5mm Plug is connected	As the power automatically turned OFF and the microphone is disabled once the analog audio cable is connected. Please disconnect the analog audio cable.

Troubleshooting: When you think, "Is it broken?"

Problem	Cause	Remedy
Unable to activate the Gaming Mode	Analog Audio Cable with 3.5mm Plug is connected	When the included cable is connected to the 3.5mm Audio Jack, the power of the device will automatically turn OFF, disabling all button operations and Gaming Mode. If you wish to use Gaming Mode, please disconnect the Analog Audio Cable and power ON the headphones. Please use this mode while the headphones are wirelessly connected to a device, such as a smartphone.
Unable to activate the ANC	Analog Audio Cable with 3.5mm Plug is connected	When the included cable is connected to the 3.5mm Audio Jack, the power of the device will automatically turn OFF, disabling all button operations and ANC feature. If you wish to activate the ANC feature, please disconnect the Analog Audio Cable and power ON the headphones.



## Warranty and After Service

---

The warranty for this product is valid for 1 year from the date of purchase. During the warranty period, we will repair the product based on the provisions below. The warranty is only valid in the country in which the product was purchased. Regarding questions pertaining to repairs, please contact the store you purchased the product from or contact us by visiting our "Contact" page.

1. During the warranty period, we will repair the product free of charge if the product failed even though it was used in accordance with the instructions in the user's manual and the point of caution sections.
2. In the following cases, repairs to the product will be subject to a fee even during the warranty period:
  - (1) Warranty card, original purchase receipt or other equivalent document showing the date of purchase are failed to be presented.
  - (2) The product is identified to be modified, disassembled, or repaired by a third party or customer other than our company or our authorized organizations.
  - (3) The headphones were subjected to a strong impact or were allowed to get wet. Product failure resulting from an excessive use of force on the product.
  - (4) Failure of the product or damage caused as a result of fire, earthquake, storm or flood damage, lightning strike or other natural disaster.
  - (5) Repair of scratches on the surface of the housing or repair of the housing itself.
3. We shall not be liable for any incidental or consequential damages for breach of any express or implied warranty or condition on this product. Nor shall recovery of any kind against us be greater than the original purchase price of the product from us or an our authorized dealer.

Regarding the earpads:

Earpads are considered as consumable parts which is not covered under warranty. Kindly contact the store you made the purchase from for the information regarding the purchase of a new pair of earpads.

## Disposal Regulation

---

The rechargeable batteries built into the equipment are recyclable. During disposal, please follow the instructions from your local municipal government and do not attempt to disassemble the product.



## Contacting Us

---

Please contact us by visiting our official "CONTACT" page by scanning this QR code.



<https://final-inc.com/pages/lang-contact>

Manufacturer:  
final Inc.

\* There is a possibility of a change in the specification, so please scan this QR code for the latest user manual.




<https://final-inc.com/pages/lang-download-ux2000>



ヘッドホン本体



取扱説明書

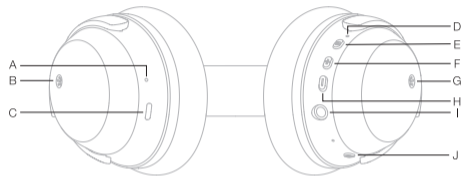USBタイプC  
充電用ケーブル3.5mm有線  
接続ケーブル

A : 充電インジケータ

B : マイク

C : USBポート

D : Bluetooth/ANC インジケータ

E : 電源ボタン

F : 音量(+)ボタン

G : マイク

H : 音量(-)ボタン

I : 3.5mmオーディオケーブルジャック

J : ANCボタン


## 充電する

---

付属の充電用ケーブルUSB(C)コネクタをヘッドホンのUSBポートに接続し、USB(A)コネクタを同形状のコネクタを有する電子機器やアダプターに接続するとヘッドホンの充電が開始されます。充電中はヘッドホンの充電インジケータが赤く点灯し、充電が完了すると青く点灯します。

※充電中は電源がOFFになるため、Bluetooth接続でのご使用はできません。

※付属の充電用ケーブル以外はご使用にならないでください。



## 電源をONにする

---

電源ボタンを約4秒間押し続けると「Power On」という音声が流れ、Bluetooth/ANCインジケータが青く点灯し、本体の電源がONになります。

## 電源をOFFにする

---

電源ボタンを約5秒間押し続けると「Power Off」という音声が流れ、本体の電源がOFFになります。電源がOFFになるとBluetooth/ANCインジケータが赤く点灯し、その後消灯します。


## ノイズキャンセリングをON/OFFにする

本体の電源をONにすると、自動的にノイズキャンセリングがONになります。本体がペアリングモード中は、Bluetooth/ANCインジケータが赤・青の交互点滅となり、スマートフォン等の機器と接続されると、Bluetooth/ANCインジケータが緑に点灯します。

電源がONの状態、ANCボタンを押すと「Noise Cancelling OFF」という音声が流れ、ノイズキャンセリングがOFFになり、Bluetooth/ANCインジケータが消灯します。  
再度ANCボタンを押すと「Noise Cancelling」という音声が流れ、ノイズキャンセリングがONになり、Bluetooth/ANCインジケータが緑に点灯します。

## ペアリングする

お手持ちのスマートフォン等の機器と初めて接続する場合は、ペアリングを行なう必要があります。ペアリングが完了した機器同士は、次回からヘッドホンの電源をONにするだけで自動的に接続できます。



本機を初めてご使用になる場合：

1. 電源ボタンを約4秒間押し続けると「Power On」という音声が流れ本体の電源がONになり、自動的にペアリングモードになります。その際、Bluetooth/ANCインジケータが赤・青に交互点滅します。
2. スマートフォン等の機器のBluetooth機能をONにし、ペアリングする機器を選択する画面で「UX2000」が表示されたら選択します。接続する機器の画面に、「UX2000 接続済」と表示されたらペアリングは完了です。

ペアリングをやり直す場合・2台目以降の機器とペアリングする場合：

1. 電源がOFFの状態、電源ボタンを約5秒間「Power On」「Bluetooth Pairing」という2種類の音声が流れるまで長押しするとペアリングモードになります。その際、Bluetooth/ANCインジケータが赤・青に交互点滅します。
2. スマートフォン等の機器のBluetooth機能をONにし、ペアリングする機器を選択する画面で「UX2000」が表示されたら選択します。接続する機器の画面に、「UX2000 接続済」と表示されたらペアリングは完了です。

※本製品はデバイス2台と同時接続可能なマルチポイントに対応しています。

3台目以降の機器を接続する場合、最初に接続された機器から順に自動的に上書きされます。また、接続登録がある機器と自動的に接続されるため、同時に接続したくないデバイスはBluetooth機能をOFFにさせていただくか、接続登録を削除してください。

## ペアリング情報を削除する

デバイス2台と同時接続可能なマルチポイント機能による、意図しないデバイスとの接続を防ぐため、接続を解除したい場合は以下の手順でペアリング情報の削除を行なってください。操作完了後、再度ペアリングを行なってください。

1. 本体の電源がONの状態では音量(+)ボタンと音量(-)ボタンを同時に長押しすると、Bluetooth/ANCインジケータが紫に点灯します。
2. その後、自動的にペアリングモードに移行し、Bluetooth/ANCインジケータが赤・青に交互点滅します。この状態でペアリング情報の削除操作が完了です。

## 有線接続について

付属の3.5mm有線接続ケーブルをヘッドホン本体の3.5mmオーディオケーブルジャックに挿入することで、有線型ヘッドホンとしてもご使用いただけます。3.5mmオーディオケーブルジャックにケーブルが挿入されると本体の電源は自動的にOFFになり、ヘッドホン本体の各種ボタン操作は無効となりますので、再生機器側にて操作を行なってください。

## ゲーミングモードについて

ANCボタンを2回押しするとゲーミングモードがONになり「Gaming Mode ON」という音声ガイダンスが流れます。ゲーミングモード使用時は、低遅延のワイヤレス通信でゲームや動画などのコンテンツをお楽しみいただけます。再度ANCボタンを2回押しすると「Gaming Mode OFF」という音声ガイダンスが流れ、ゲーミングモードがOFFになります。

※接続する機種によって効果は異なります。

## その他の操作

音楽	再生	電源ボタンを1回押す
	一時停止	電源ボタンを1回押す
	次の曲へ	音量(+)ボタンを長押しする
	前の曲へ	音量(-)ボタンを長押しする
着信	着信受話	電源ボタンを1回押す
	通話終了	電源ボタンを1回押す
	着信拒否	電源ボタンを約2秒間長押しする
音楽/着信共通	音量を上げる	音量(+)ボタンを押す
	音量を下げる	音量(-)ボタンを押す
Siri/ Googleアシスタント	起動する	電源ボタンを2回押し※1
ゲーミングモードON/OFF		ANCボタンを2回押し
ノイズキャンセリングモード切り替え		ANCボタンを1回押し




※1: 接続する機器によっては、機能しない場合があります。

※有線接続状態ではボタン操作が無効となります。

## メンテナンス

ヘッドバンドやイヤークッションに皮脂等の汚れが付いた場合、乾いた柔らかい布等でやさしく拭き取ってください。

本項目には製品を安全にご使用いただくための重要な注意事項が示してあります。ご使用前によくご確認ください。

	この表示の注意事項を守らないと使用者が死亡または重傷を負います。
	この表示の注意事項を守らないと使用者が死亡または重傷を負う原因となります。
	この表示の注意事項を守らないと使用者が軽傷、または周囲に物的損害を与える可能性があります。

### 危険



火災・感電・発熱・発火・液漏れ・破裂・誤飲により死亡や失明、大げがの原因になる可能性があります。



湿気や埃の多い場所、直射日光が当たる場所、車の中など高温になる場所での使用・保管・放置をしないでください。本体の異常な発熱や液漏れ、破裂の原因になります。



付属のUSBケーブル以外を使用しないでください。破裂や電池の液漏れ、発熱などにより、火災や怪我、周囲の汚損の原因になります。



ヘッドホン本体の端子部やUSBケーブルが濡れた状態で充電をしないでください。ショートによる異常な加熱や故障の原因になります。



火の中に入れてください。液漏れや破裂により、怪我や周囲汚損の原因になります。



分解しないでください。あらゆる故障の原因になります。



ヘッドホン本体から液体が漏れていることを確認した場合、もしくは異臭・発熱がある場合には、直ちに使用を中止し、液体には触らないでください。また近くに火気及び可燃物があるときは速やかに遠ざけてください。

### 警告



火災・感電・発熱・発火によりやけどや大げがの原因なる可能性があります。



自動車やバイク、自転車などの運転中に本機を使用しないでください。交通事故の原因になります。



本機を布団などで覆った状態で充電しないでください。熱が籠もることで異常な発熱を起こし、火災の原因になることがあります。

### 警告



火災・感電・発熱・発火によりやけどや大げがの原因なる可能性があります。



ヘッドホン本体やトランスミッターの端子部に水や異物を入れないでください。本製品は防水ではありません。水や異物が入った場合、火災や感電の原因になります。万が一、水や異物が入った場合は、直ちに使用を中止してください。また、端子部に異物が付着すると発熱や火災の原因となりますので、定期的に異物の付着が無いかをご確認ください。



踏切や横断歩道、駅のホームなど、周囲の音が聞こえないと危険な場所で使用しないでください。本機の音量を上げると周囲の音が聞こえにくくなります。また、本機はノイズキャンセリングを搭載しているため、警告音なども聞こえにくくなり、事故や怪我の原因になります。

### 注意

怪我や周囲の家財に損害を与える可能性があります。



子供や監督を必要とする方などの手の届くところは置かないでください。本機は磁石及び電池を使用しています。小さな部品を飲み込むと窒息の危険性や内臓を傷つけるなど深刻な症状を引き起こす恐れがあります。



医療機関内や医療機器を使用している方の近くで使わないでください。ペースメーカーなどの医療機器に影響を与える恐れがあります。



イヤリング、ピアスなど耳につける装身具をつけたままヘッドホンを使用すると、怪我の原因となる恐れがあります。また、ヘッドホンの性能が損なわれたり、ヘッドホンを傷つける可能性があります。



ヘッドホンを頭に装着した状態で、ハウジングを耳から浮かして手を離したり、ヘッドホンを頭に装着した状態でハウジングを高側から押さえつけるなどの動きをすると、ハウジング内部に急激な圧力の変化が起こり、ヘッドホンの故障の原因だけでなく耳にも圧力がかり、危険ですでおやめください。



大音量で長時間聴かないでください。長期にわたる過剰な音量での使用は永久的な難聴を招く恐れがあります。80 dB (A)の音量で40時間/週、89 dB (A)の音量で5時間/週を超えないようにしてください。



本機を航空機内で使用する場合は、客室乗務員の指示に従ってください。電波が影響することで、事故の原因になる恐れがあります。

問題点	原因	対処法
ヘッドホンの電源がONにならない	(ご購入直後の場合) 電池残量が少ない	内蔵バッテリーは、海外からの輸送の安全のため、法令に基づき工場出荷時にフル充電することができません。そのため、お客様が開封された際に動作に必要な電圧を下回ることがございます。ご使用前にフル充電してください。充電方法については、P.20の「充電する」をご確認ください。
	電源ボタンを押す時間が十分でない	電源ボタンを電源がONになるまで長押ししてください。電源をONにする方法については、P.21の「電源をONにする」をご確認ください。
	3.5mm有線接続ケーブルが挿入されている	付属の3.5mm有線接続ケーブルをヘッドホン本体の3.5mmオーディオケーブルジャックに挿入することで、有線型ヘッドホンとしてもご使用いただけますが、3.5mmオーディオケーブルジャックにケーブルが挿入されると本体の電源は自動的にOFFになります。ワイヤレス機能をご使用になる場合は、ケーブルを外した状態でご使用ください。
ヘッドホンの電源がOFFにならない	何らかのエラーが発生している	充電時は本体の電源がOFFになります。付属の充電ケーブルを挿入し、充電インジケータが赤く点灯することをご確認ください。その後、充電ケーブルを抜いて改めて状態をご確認ください。
	電源ボタンを押す時間が十分でない	電源ボタンを電源がOFFになるまで長押ししてください。電源をOFFにする方法については、P.21の「電源をOFFにする」をご確認ください。

問題点	原因	対処法
ヘッドホンの検索/ ペアリングができない	ヘッドホンがペアリング状態にならない	ペアリング情報の削除操作を行なうことで改善する場合がございます。ペアリング情報の削除方法については、P.24の「ペアリング情報を削除する」をご確認ください。
	(一度ペアリングを行なった場合) 以前接続した機器に自動的に接続されている	以前ペアリングされた機器のペアリング情報を削除してから、再度ペアリング操作を行なってください。
音楽再生中に音(接続)が途切れる	外的要因により干渉を受け、接続状況に影響が出ている	Bluetoothは、2.4GHzの帯域を使って通信を行なっております。この帯域は、Wi-Fiなどさまざまな無線規格で使われておりますので、それらの干渉を受ける可能性がございます。また、この2.4GHz帯は水分に吸収されやすい帯域です。湿度や雨天による影響を受ける場合がございます。なお、人体も水分ですので、頭部の大きさにより接続性に個人差がございます。そのため、ご自宅では周囲の使用していないWi-Fi / Bluetoothの設定をOFFにする等が対策です。外出中であれば、鞆のスマートフォン等を胸ポケットに移動させる等、機器同士の距離を近づけることで接続状況が改善される可能性がございます。
充電に時間がかかる	充電に使用しているUSBアダプターの出力が低い	PC等のUSBポートをご使用いただいている場合、出力が低く、公称値よりも充電に時間が掛かる場合がございます。そのため、本製品を充電される際は、5V/1AのUSBアダプターをご使用ください。

問題点	原因	対処法
マイクが使用できない	有線接続ケーブルを装着している	3.5mmオーディオケーブルジャックに付属のケーブルが挿入されると本体の電源は自動的にOFFになり、マイクが使用できません。本製品のマイク機能を利用する場合は、ケーブルを外して本体の電源をONにし、スマートフォン等の機器とペアリングした状態でご使用ください。
ゲーミングモードがONにならない	有線接続ケーブルを挿入している	3.5mmオーディオケーブルジャックに付属のケーブルが挿入されると本体の電源は自動的にOFFになるためボタン操作が行なえず、ゲーミングモードが使用できません。ゲーミングモードを使用する場合は、ケーブルを外した状態で本体の電源をONにし、スマートフォン等の機器と接続した状態でご使用ください。
ノイズキャンセリングがONにならない	有線接続ケーブルを挿入している	3.5mmオーディオケーブルジャックに付属のケーブルが挿入されると本体の電源は自動的にOFFになるためボタン操作が行なえず、ノイズキャンセリングは使用できません。ノイズキャンセリングを使用する場合は、ケーブルを外し、本体の電源をONにした状態で操作を行ってください。

機器に内蔵されている充電式電池はリサイクルできます。この充電式電池の取り外しはお客様自身では行わず、各地方自治体の指示に従ってください。また、右記「お問い合わせフォーム」からもご相談を受け付けています。



本製品の保証期間はご購入日より1年間です。保証期間中は以下の保証規定に基づき修理いたします。保証はご購入いただいた国でのみ有効です。修理のお申込みは弊社WEBサイト「修理・サポート」ページの「修理申込みフォーム」より行なってください。居住国以外の国でご購入の場合や保証期間後のサポートについては、「CONTACT」ページの「お問い合わせフォーム」よりお問い合わせください。

- 保証期間内に、取扱説明書に記載の警告、注意書きに従った使用状態で故障した場合には、無償修理させていただきます。
- 保証期間内でも次の場合には、有償で修理させていただきます。
  - (1) レシート等、購入日を証明するものをご提示いただけない場合。
  - (2) 弊社および弊社が指定する機関以外の第三者やお客様により改造、分解、修理がなされた場合。
  - (3) 強い衝撃を与えたり、水に濡らした場合。無理な力がかかるような状況下で起こった故障。
  - (4) 火災、地震、風水害、落雷、その他天変地異などによる故障、人災による故障、盗難、ウイルス感染による故障。
  - (5) 筐体表面の傷の修理、筐体自体の修理。
- 本製品のご使用により、お客様に生じた損害については、弊社は一切その責任を負わないものとします。また、いかなる場合でも、弊社が負担する損害賠償額は、お客様がお支払いになったこの商品の代価相当額をもって、その上限とします。

イヤーパードについて：

イヤーパードは消耗品となります。新しいイヤーパードをお求めの際は弊社WEBサイト「CONTACT」ページの「お問い合わせフォーム」よりお問い合わせください。



弊社WEBサイト画面下部のチャットアイコンより「よくあるご質問」をご参照いただくか、「CONTACT」ページの「お問い合わせフォーム」よりお問い合わせください。

<https://final-inc.com>

製造：株式会社 final

※仕様変更の可能性がございますので、最新の取扱説明書は下記QRをスキャンしてご確認ください。



<https://final-inc.com/pages/lang-download-ux2000>



耳机本体




使用说明书



USB type C  
充电线



3.5mm  
耳机线

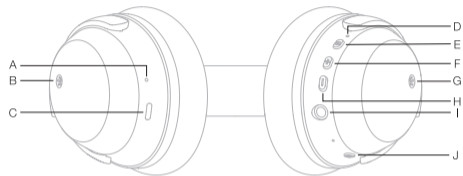

A : 充电指示灯

B : 麦克风

C : USB 连接埠

D : Bluetooth/ANC 指示灯

E : 电源键

F : 音量(+)键

G : 麦克风

H : 音量(-)键


I : 3.5mm 音源线接孔

J : ANC 键

附属的 USB type C 充电线与耳机的 USB 端子连接, USB type A 接头同形状的电线或电子机器设备又或是变电器连接后, 耳机开始进行充电。充电中的耳机充电指示灯会长亮红灯, 充满电时会转为长亮蓝灯。

※充电中时耳机整体电源关闭的原因、蓝牙无法进行配对使用。

※请不要使用本产品自带以外的充电线。



## 电源开启时

---

电源键约长按4秒听见「Power On」的人声导引，Bluetooth/ANC指示灯会呈现蓝光。耳机本体电源开启。

## 电源关闭时

---

电源键约长按5秒听见「Power Off」的人声导引，耳机本体的电源关闭。  
电源关闭时 Bluetooth/ANC 指示灯会长亮红灯后熄灭。

## 降噪模式的开启 / 关闭

---

本体电源开启时，会自动的进入降噪模式。耳机本体还在配对状态时，Bluetooth/ANC指示灯红蓝交互闪烁，与智能手机等设备连接后，Bluetooth/ANC指示灯会长亮绿灯。电源开启的状态，ANC键按压时会听到「Noise cancelling off」的人声导引，关闭降噪功能时，Bluetooth/ANC指示灯会熄灭。再次ANC键按压时会听到「Noise cancelling」人声导引，此时Bluetooth/ANC指示灯会长亮绿灯，表示开启降噪模式。

## 配对模式

手上的智能手机等设备，第一次连接的情况下，需要进行配对。配对完成的设备，下次耳机开机时会自行连接。



第一次使用本产品的情况：

1. 电源键约 4 秒长按到听到「Power On」人声导引时耳机本体电源启动，并自动的进入配对模式。此时 Bluetooth/ANC 指示灯红·蓝交互闪烁。
2. 智能手机等设备的蓝牙功能开启，在要进行配对的设备画面上选择标示「UX2000」的选项。连接设备的画面上显示「UX2000 已连线」即表示配对完成。

重新配对的情况·第 2 台以后的设备要进行配对的情况：

1. 电源关闭的状态下，电源键长按约 5 秒，听见「Power On」及「Bluetooth Pairing」2 种人声导引为止进入配对模式。此时，Bluetooth/ANC 指示灯红·蓝交互闪烁。
2. 智能手机等设备的蓝牙功能开启，在要进行配对的设备画面上选择标示「UX2000」的选项。连接设备的画面上显示「UX2000 已连线」即表示配对完成。

※本产品对应多点连线，能同时连结 2 台设备。

当连接第 3 台或后续设备时，一开始连接的设备将自动被覆盖。

另外，由于有可能会自动连接到已配对过的设备，因此对于不想同时进行连接的设备，请关闭蓝牙功能或删除相关连接资讯。

## 配对资讯清除方法

具备同时可以连接 2 台设备的多点连线功能、为了防止连线到原本没有想要配对的设备、连接过后想将设备解除配对的话，请照下面的方式消除耳机上的配对记录。完成后请再度尝试进行配对操作。

1. 耳机本体的电源开启的状态下音量键(+)与音量键(-)同时按押，直到 Bluetooth/ANC 指示灯呈现紫色。
2. 之后会自动进入配对模式，会听到「Bluetooth pairing」的人声导引。Bluetooth/ANC 指示灯会呈现红·蓝交互闪烁的状态。这个状态表示耳机的配对资讯已被清除完成。

※在有耳机线使用情况下所有的操控键功能无效。

## 关于有线连接

附属的 3.5mm 耳机线插入耳机本体的 3.5mm 音源线接孔后，可以当有线耳机进行使用。3.5mm 音源线接孔与耳机线连接后，耳机本体的电源会自动关闭，耳机的各种操作键将失效，请由设备端进行操控。

## 关于 Gaming Mode

ANC 键连续 2 次按押后 Gaming Mode 启动，会听到「Gaming mode on」的人声导引。Gaming Mode 使用时，低延迟的无线通信方式使得在玩游戏及观赏动画作品时有更多的乐趣。想关闭 Gaming mode，只要再度连续按押 ANC 键 2 次，听到「Gaming mode off」的人声导引，Gaming mode 即被关闭。




※连接设备有所不同，效果也有可能不同。

音乐	播放	电源键按压一次
	暂停	电源键按压一次
	下一曲	长按音量(+)键
	上一曲	长按音量(-)键
来电	接听电话	电源键按压一次
	结束通话	电源键按压一次
	拒接来电	电源键长按约 2 秒
音乐/来电共通	音量增加	按音量(+)键一次
	音量减少	按音量(-)键一次
Siri/ Googleアシスタント	开启	电源键连两次按压※1
Gaming mode ON/OFF		ANC 键连 2 次按压
降噪功能切换		ANC 键 1 次按压

※1: 使用的设备不同, 有可能不对应相同功能。

※耳机线使用状态下, 操作键都无效。

为了能安全使用该产品, 请确认重要的注意事项及其标示。务必在使用前详细阅读。

 <b>危险</b>	该标示的注意事项不严格遵守, 使用者有可能造成危及生命或招致严重伤害的危险。
 <b>警告</b>	该标示的注意事项不严格遵守, 有可能危及生命或招致严重伤害的原因。
 <b>注意</b>	该标示的注意事项不严格遵守, 使用者可能招致伤害, 甚至造成周遭事物毁损的可能性。

### 危险



火灾, 触电, 发热, 自燃, 液体渗漏, 破裂,  
误食所造成的危及生命或失明, 甚至是招致严重伤害的原因。



请勿在湿度高或尘埃多的环境下, 日光直射的场所, 车厢内等高温场所中使用, 保管或放置。可能成为产品本身异常发热或液体渗漏, 破裂的原因。



请勿置入火中。恐因电池液体渗漏或破裂, 造成人员招致伤害或周遭污染损毁的原因。



请勿自行进行分解。往往为造成故障的原因。



请勿使用产品附属外的 USB 充电线。恐因破裂或电池液体渗漏, 发热, 造成火灾或人员招致伤害, 周遭污染损毁的原因。



从耳机本体或充电盒里有液体渗漏的情况, 或产生异臭, 发热等情况, 请立即中止使用, 请勿触碰渗漏的液体。此外附近有火气或易燃物时请尽速将其远离该场所以策安全。



在潮湿的情况下请勿使用充电盒及 USB 充电线。恐因短路造成异常加热或故障的原因。

### 警告




可能导致火灾, 触电, 发热, 自燃的原因, 进而造成烫伤或招致严重伤害。



驾驶汽车, 自行车等情况下请勿使用本机。恐导致交通事故的原因。



本机充电时请勿覆盖在毛巾或被单下。在不通风的环境, 无法顺利散热等原因导致异常发热, 甚至造成火灾。

警告	
 <p>可能导致火灾、触电、发热、自燃的原因，进而造成烫伤或招致严重伤害。</p>	
<p><b>禁止</b> 请勿将液体或异物塞入耳机本体或是充电/传输线端子中。本产品本不防水。液体或异物置入后，恐引起火灾、触电的原因。万一有水或异物进到充电盒内部时，请立即停止使用。另外耳机的充电插槽处有异物时恐造成发热或火灾的原因，请定期检查确认有无异物附着。</p>	<p><b>禁止</b> 平交道、马路、车站月台附近，因周遭环境声音听不见而造成危险的地方请勿使用。本机的音量提高后或开启搭载降噪模式，会导致周遭环境声音和警告声响听不见。造成发生事故或招致严重伤害的原因。</p>
注意	
<p>可能导致受伤或周遭财产损害的可能性。</p>	
<p><b>禁止</b> 请勿将产品置于孩童或需受成人监护的朋友容易取得的位置。本机使用了磁石及电池等材料。恐造成小零件被误食引起窒息的危险或使得内脏受伤等情况发生。</p>	<p><b>禁止</b> 头戴耳机时请避免刻意将耳机外壳从耳朵上提起撑开，或从两侧挤压外壳。如此的举动可能导致耳机内部产生突然的压力变化并造成耳机故障，此外对耳朵施予不必要的压力也有相对的危险性。</p>
<p><b>禁止</b> 医疗机关内或医疗器材使用中请勿靠近使用。恐对心律调节器等医疗器材造成影响。</p>	<p><b>禁止</b> 请勿长时间大音量的使用耳机。长时间大音量的使用恐造成听力受损的原因。80 db (A) 的音量每周请勿超过 40 小时以上，89 db (A) 的音量每周请勿超过 5 小时以上的使用时间。</p>
<p><b>注意</b> 同时戴着耳环等耳朵上的装饰品使用耳机，有可能会造成耳朵受伤。此外也可能影响到耳机性能，甚至有可能造成耳机的损坏。</p>	<p><b>提示</b> 本机在飞机机舱内使用时，请遵照机上空服人员的指示下进行使用。对通讯电波造成影响，恐导致事故发生的原因。</p>

状况	原因	对应方式
耳机电源无法开启	<p>(产品购入第一次使用时) 产品内含电量不足</p>	<p>内藏电池的产品，为了能确保海外运输上的安全性，基于法条规定，不能在满电的状态下进行运送。为此，在开封产品时，产品内电池电量有可能会低于产品动作所需。使用前如果先将产品充满电后再使用，有可能让该问题得以解决。关于充电方式，请参阅使用说明书第 35 页的充电方式。</p>
	<p>电源键按压时间不足</p>	<p>请长按电源键直到电源开启为止。关于电源开启方法请参阅使用说明书第 36 页的「启动耳机」。</p>
	<p>是否接上 3.5mm 耳机线</p>	<p>将附属的 3.5mm 有线耳机线由耳机本体的 3.5mm 有线耳机插孔插入后，也可以当有线耳机来使用。3.5mm 有线耳机插孔与耳机线连接后，本地电源会自动关闭。要以无线耳机机能来使用时，请将耳机线移除。</p>
耳机电源无法关闭	<p>不明原因所产生的故障</p>	<p>充电时耳机本体的电源会关闭。附属的充电线插入，请确认充电指示灯红灯亮起。之后将充电线拔除后，请再确认一次是否回到正常状态。</p>
	<p>电源键按压时间不足</p>	<p>请长按电源键直到电源关闭为止。关于电源开启方法请参阅使用说明书第 36 页的「电源关闭时」。</p>

状况	原因	对应方式
耳机无法正常被搜索 / 无法连线配对	耳机无法连线配对	有可能经由配对资讯清除方法使问题得以改善。关于配对资讯清除方法请参阅使用说明书第 39 页的页的「配对资讯清除方法」。
	(曾经配对过的情况) 与先前成功连线配对的机器自行连线	请将机器中先前成功连接配对的数据消除后, 再度进行联机配对。
音乐播放中讯号接收不良	受到外在因素的干扰, 导致影响收讯质量	本地的蓝牙通信设定所使用的频道是 2.4GHz。该频道广为 Wi-Fi 及许多无线产品使用, 可能造成频中各机器信号间相互的干扰。2.4GHz 频道无法穿透水分, 会因湿度或雨天等情形下受到影响, 另外人体中也富含水分, 信号接受能力也会因人而异。再者讯号接收也仰赖智能手机等机器的芯片性能。因此在自家环境下, 可以尝试将周围未使用的 Wi-Fi / 蓝牙等设定关闭。在外出的情况下, 将包中的智能手机移动到胸前的口袋等位置, 可能经由缩短机器间的距离, 而改善收讯的情况。
麦克风无法使用	是否接上 3.5mm 耳机线	将附属的 3.5mm 有线耳机线由耳机本体的 3.5mm 有线耳机插孔插入后, 也可以当有线耳机来使用。3.5mm 有线耳机插孔与耳机线连接后, 本地电源会自动关闭。要以无线耳机机能来使用时, 请将耳机线移除。

状况	原因	对应方式
充电时间过长	充电所使用的 USB 变电器功率低弱	当利用 PC 等的 USB 接口进行充电时, 有可能因为输出电量功率不足, 而拉长了产品充电所需时间。因此, 在对本产品进行充电时, 请选用 5V/1A 规格的 USB 变电器。
Gaming mode 无法开启	是否接上 3.5mm 耳机线	将附属的 3.5mm 有线耳机线由耳机本体的 3.5mm 有线耳机插孔插入后, 也可以当有线耳机来使用。3.5mm 有线耳机插孔与耳机线连接后, 本地电源会自动关闭。要以无线耳机机能来使用时, 请将耳机线移除。
降噪功能无法开启	是否接上 3.5mm 耳机线	将附属的 3.5mm 有线耳机线由耳机本体的 3.5mm 有线耳机插孔插入后, 也可以当有线耳机来使用。3.5mm 有线耳机插孔与耳机线连接后, 本地电源会自动关闭。要以无线耳机机能来使用时, 请将耳机线移除。

## 耳机保养

头戴及耳罩如果沾附皮肤油脂的话, 请以干燥柔软的布品进行擦拭。

## 本产品丢弃时

本产品内藏的可充电式电池为可回收电池。请客人勿自行进行拆解，将该充电电池取出，请遵照当地地方政府规定去进行处理。



## 保修以及售后服务

本产品的保修期自购买日起一年内有效。保修期内将按照敝社的保修条款提供维修服务。保修对象仅为该产品的购买国家有效。如果您对本产品有任何疑问或寻求售后服务时，请向购买店家或代理商进行咨询。

1. 商品在保修期内，且遵守使用说明，仍产生故障，敝社将免费提供维修服务。
2. 商品在保修期内，但出现以下情况，敝社将酌情收取维修费用。
  - (1) 无法出示保证书中记载之必要凭证资料时。
  - (2) 敝社及敝社所认可特定机关以外的第三方或是客人自身所进行的改造、分解、修理等情况。
  - (3) 商品在使用过程中受到强烈的外力冲击、进水等情况。故障因受到不合理外力而致使断裂的状况。
  - (4) 火灾、地震、风水灾害、雷击等自然灾害而造成的故障。人为所造成的故障、遗失、电脑病毒感染造成损坏。
  - (5) 表面痕迹清除、单独腔体维修。
3. 关于使用本产品下造成客人的财损伤害，弊社将一概不负责。任何情况下，弊社所负担的损害赔偿金额，为购入该产品时所支付的相当金额为上限。

### 关于耳罩：

耳罩属于消耗产品。如有期望购入耳罩配件，请与当地代理商进行咨商。

## 客服咨询

请由 final 官方网页「CONTACT」页面的连系栏与客服提出咨询内容。  
<https://final-inc.com>

制造商：final Inc.

※因为有规格更动的可能性，最新版本的使用说明书请扫描此二维码。



<https://final-inc.com/pages/lang-download-ux2000>