

Safety:

1. Do not modify, repair or dismantle the Earbuds. Doing so may result in fire, electric shocks or the Earbuds not working.
2. Do not use any volatile liquids to clean the Earbuds.
3. It is not recommended to use the Earbuds in any hazardous location.
4. Do not place the lid in boiling water.
5. Do not submerge lid in direct liquid. To clean lid use a damp cloth only. Do not rinse under running water. Do not place lid in dishwasher.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2ABHA0075

Sécurité:

1. Ne pas modifier, réparer ou démonter les oreillettes. Vous risqueriez de provoquer un incendie, des chocs électriques ou le dysfonctionnement des oreillettes.
2. N'utilisez aucun liquide volatil pour nettoyer les écouteurs.
3. Il n'est pas recommandé d'utiliser les écouteurs dans des endroits dangereux.
4. Ne placez pas le couvercle dans de l'eau bouillante.
5. Ne pas immerger le couvercle dans un liquide direct. Pour nettoyer le couvercle, utilisez uniquement un chiffon humide. Ne pas rincer sous l'eau courante. Ne placez pas le couvercle dans le lave-vaisselle.

Déclaration de la FCC:

Cet appareil est conforme à la section 15 de la réglementation de la FCC. Le fonctionnement est soumis aux deux conditions suivantes:

- (1) Cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) Cet appareil doit accepter toutes les interférences reçues, y compris celles susceptibles de provoquer un fonctionnement indésirable.

Attention:

Les changements ou modifications non expressément approuvés par la partie responsable de la conformité peuvent annuler l'autorité de l'utilisateur à utiliser l'équipement.


UNITE

WWW.UNITEBOTTLES.COM



USER MANUAL

1. Multifunction Button
2. Microphone
3. LED indicator
4. Ear Tips
5. Power Case/Lid
6. USB input
7. Power Case LED Indicator
8. Bottle

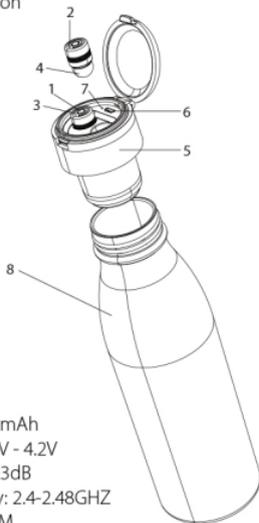

Specifications:

Earbuds

Model : SL148

Item No.: 2869

Battery capacity : 35 mAh

Working Voltage: 3.7V - 4.2V

Mic Sensitivity: -42 ±3dB

Bluetooth Frequency: 2.4-2.48GHZ

Bluetooth Range: 10M

Power Bank Station

Capacity: 240 mAh

DC Charging Voltage: DC5V

DC Charging Current (MAX): 0.24A

Charging

It is recommended to fully charge the earbuds and charging case prior to its first use.

Earbuds: When the earbuds are placed in the charging case, the LED indicator will display a solid red light. When the earbuds are fully charged, the indicator light will turn off.

Charging Case: Use the USB cable included to connect the charging case to a computer or adaptor.

Earbud Instructions

Power On: 1) Take both earbuds out of the charging case. Both earbuds will power on and connect with each other automatically.

2) Or press and hold the multifunction buttons on both earbuds at the same time for 3 seconds. The earbuds will power on and the indicator light will flash red and blue alternately.

Pairing: Earbuds will automatically link together after a few seconds and you will hear an alert tone. Once the Earbuds are turned on, using your mobile device, search for Bluetooth devices and select Bluetooth ID 'UNITE'. It will pair automatically.

Power Off: Place the Earbuds back in the charging case or press the multifunction button on the Earbud for 5 seconds. The indicator light will flash red once and turn off.

Answer/End Call: Press the multifunction button once to answer an incoming call. Press the button once to end the call.

Redial: Double press the multifunction button to redial the last number you called on your phone.

Reject Call: Press the multifunction button for 2 seconds to reject the incoming call.

Play/Pause: When listening to music, press multifunction button to pause/play music.

Note: If you attempt to connect before the earbuds have paired to each other, the earbuds will go into single earbud use. In this case, restart the process (select forget device from your Bluetooth List).

Charge

Il est recommandé de charger complètement les oreillettes et la station de charge avant la première utilisation.

Oreillettes: Lorsque les oreillettes sont placées dans l'étui de chargement, le voyant DEL reste allumé en rouge. Lorsque les oreillettes sont complètement chargées, le témoin s'éteint.

Cas de charge: Utilisez le câble USB fourni pour connecter le cas de charge à un ordinateur ou à un adaptateur.

Instructions concernant les oreillettes

Mise sous tension: 1) Retirez les deux oreillettes de l'étui de chargement, elles s'allumeront et se connecteront automatiquement.

2) Ou bien maintenez enfoncés les boutons multifonctions des deux écouteurs simultanément pendant 3 secondes; ils s'allument et le voyant clignote alternativement en rouge et en bleu.

Appariement: Les écouteurs se lieront automatiquement après quelques secondes et vous entendrez une tonalité d'alerte. Une fois les écouteurs activés, recherchez votre appareil Bluetooth à l'aide de votre appareil mobile, puis sélectionnez Bluetooth ID 'UNITE'. Il s'associera automatiquement.

Mise hors tension: Remplacez les écouteurs dans l'étui de charge ou appuyez sur le bouton multifonction de l'écouteur pendant 5 secondes. Le voyant clignote une fois en rouge et s'éteint.

Répondre / raccrocher: Appuyez une fois sur le bouton multifonction pour répondre à un appel entrant. Appuyez une fois sur le bouton pour mettre fin à l'appel.

Rappel: Appuyez deux fois sur le bouton multifonction pour recomposer le dernier numéro appelé sur votre téléphone.

Rejeter un appel: Appuyez sur le bouton multifonction pendant 2 secondes pour rejeter l'appel entrant.

Lecture / Pause: Lorsque vous écoutez de la musique, appuyez sur le bouton multifonction pour mettre en pause / lire de la musique.

Remarque: Si vous essayez de vous connecter avant que les oreillettes ne se soient associées, elles passeront à une utilisation unique. Dans ce cas, redémarrez le processus (sélectionnez oublier l'appareil dans votre liste Bluetooth).