Victor Video Production Camera Cart (CT-VTBS-36)

Assembly Manual

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

Top shelf

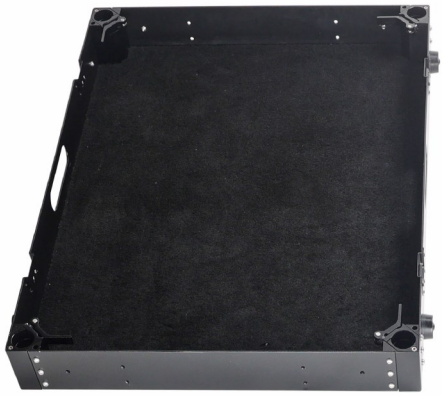

Bottom Shelf

4 x (31" Length) Rods

Crossbar

Carrying Handle

2 x Pneumatic Tires without Break

2 x Pneumatic Tires with Break

2 x Handles

4mm Allen Key

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Victor Cart **Setup**

Pneumatic Tires with Break Assembly

NOTE: Victor Cart comes packed in a compact rollable suitcase for easy transport. You will receive all parts of the Cart in one complete package.

- Open all the lock of the cart.

- Take out all the parts, as shown in image.

- Unlock 4 Pneumatic Wheels and slide onto cart Bottom Shelf, as shown in image.

Feature: One wheelset features a 360° swivel caster complemented by an efficient foot brake.

- After sliding the wheels, lock them with the knob on top.

- To keep the cart in static position, lock the wheels by pushing down the lever.

Feature: The wheels have brakes that keep the cart stable and secure for reliable parking.

- Loosen all the 4 ratchet knobs of lower shelf's corner hole as shown in the picture.

31” (Length) Rod Assembly

- Insert all the 4 Rods into 4 corners of Bottom Shelf.

- Now, tighten all the knobs to ensure proper attachment of all the rods.

- Mount the top shelf on the top of the rods by aligning it in the corners.

NOTE: Two peoples are needed to assemble the cart.

- Tighten all the 4 corner Rachet knobs of top shelf so that top shelf doesn't fall down.

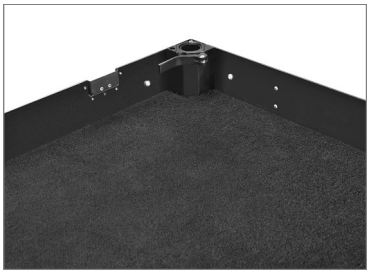

Handle Assembly

- Loosen the handle to open the clamp.

- Attach the handle through clamp on the rod and adjust the handle accordingly.

NOTE: It helps create the leverage needed while lifting the cart quickly over obstacles, stairs or other incline surfaces.

- Set the desired height position as shown in image.

Feature: The Ergonomically designed and rubber-coated handle quickly mounts to the rods of the Cart without any additional tools.

Crossbar Assembly

- Loosen the knob to open the clamp of crossbar.

- Now, the crossbar is fixed on the rods, as shown in the image.
- Tighten the knobs of the crossbar to securely position it.

Feature: The cart features dual crossbars that attach securely to the side for dynamic accessory mounting, with free and 3/8" threaded holes.

Carrying Handle Assembly

- Loosen the handle screw using a 4mm Allen key.

- All the screws have been removed from the handle as shown in the image.
- Attach the carrying handle matching the thread of the lower shelf.

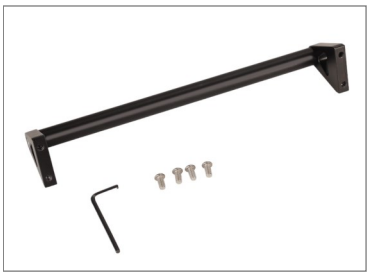

- After attaching the handle put the bolt tighten the bolts with the help of Allen key.

Feature: Carrying Handle at the side of the Cart that facilitates ease of movement even when the Cart is fully loaded.

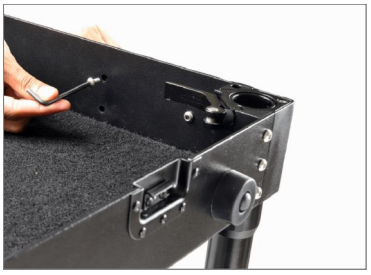

YOUR PROAIM VICTOR VIDEO PRODUCTION CAMERA CART
ALL DRESSED UP AND READY TO GO!

(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.