



Thanks for purchasing this product. Please read this Manual carefully before use.


Model	CT2Pro	Screen Type	1.55" -inch color screen
Battery capacity	210mAh	Charging Voltage	5V±0.2v
Charging Time	about 2.5 hours	Battery Life	7 Day
Waterproof level	5ATM	Weight of Product	40g
Operating Temperature	0° C-60° C	Bluetooth Version	BLE5.2
Product Frequency	2402-2480MHz	Max. transmission Power Consumption	0dBm



Scan the QR code for more function information

Quick Start (EN)

1. Know the Device



Physical Button

Press the physical button

1. Turn off reminders in the "Reminder" interface.
2. Turn on screen when screen is off.
3. Return to watch face when in other interfaces. In the watch face, the Stopwatch / Calculator / Exercise apps run in the background while other apps stop running.
4. Access the function list.


Press and hold the physical button

1. To turn on the device in power-off state;
2. In charging state, press and hold the physical button for 5s to reset the program without clearing data.

2. Power On/Off

Power On

When you start charging the device, it will be turned on automatically.

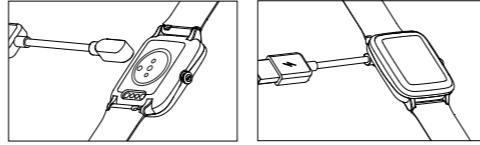


Note: the device must be charged and activated before the first use; please always use the original charger to charge the device.

Press and hold the physical button to turn on the device.

Power Off

Shutdown path: [Setup]→[Power Off].

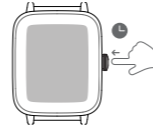

Downloading and Pairing

1. Download the APP

Scan the following QR code to download our app or you can download it with the following link: app.cubitt.co/ct2pro



2. Pairing

Turn on the APP and Bluetooth. Search and select the device in the APP. Finally, bind the device in the APP. Or go to the app > device > upper right corner and select the QR code scanner icon to scan the QR code in the watch screen to pair the device.

Screen Operations

Swipe the screen up/down

1. To switch among pages at the same level; or
2. To view long text or details.

Swipe the screen left/right

1. To switch among pages at the same level.

Inicio rápido (ES)

1. Conociendo el dispositivo



Botón físico

Pulsar el botón físico

1. Desactivar los recordatorios en la interfaz "Recordatorio".
2. Encender la pantalla cuando está apagada.
3. Volver a la pantalla de reloj estando en otras interfaces. En la pantalla del reloj, las aplicaciones Cronómetro/Calculadora/Ejercicio se ejecutan en segundo plano mientras que las demás dejan de funcionar.
4. Acceder a la lista de funciones.


Pulsar y sostener el botón físico

1. Encender el dispositivo en estado apagado;
2. En el estado de carga, pulsar y sostener el botón físico durante 5 seg para restablecer el programa sin borrar los datos.

2. Encendido/apagado

Encendido

Cuando inicie la carga del dispositivo, éste se encenderá automáticamente.

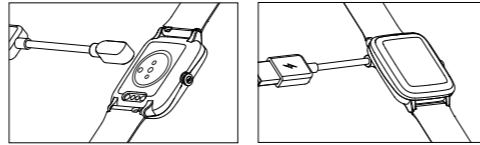


Nota: el dispositivo debe ser cargado y activado antes de su primer uso; siempre se debe usar el cargador original para cargar el dispositivo.

Pulsar y sostener el botón físico para encender el dispositivo.

Apagado

Ruta del apagado: [Configuración]→[Apagado].

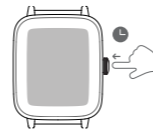

Descarga y emparejamiento

1. Descarga de la aplicación

Escanee el siguiente código QR para descargar la aplicación o descárguela a través del siguiente link: app.cubitt.co/ct2pro



2. Emparejamiento

Encienda la aplicación y Bluetooth. Busque y seleccione el dispositivo en la APLICACIÓN. Finalmente, vincule el dispositivo en la APLICACIÓN. También puede hacerlo desde el App > dispositivo > esquina superior derecha y seleccione el símbolo de escaner de código QR. Escanee el código que muestra la pantalla del reloj para empajar el dispositivo.

Operaciones de la pantalla

Deslizar la pantalla hacia arriba/abajo

1. Cambiar entre las páginas en el mismo nivel; o
2. Visualizar el texto largo o los detalles.

Deslizar la pantalla hacia la izquierda/derecha


1. Cambiar entre las páginas en el mismo nivel.

Click the screen

1. To go to the sub-page;
2. To complete the corresponding action, depending on which on-screen button is clicked.

Click and hold the screen

1. To change the watch face wallpaper.

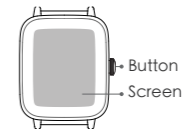

Functions

CT2 Pro supports features such as: multiple exercise modes, women's health, weather, watch face store, breath training, heart rate monitoring, sleep monitoring, stress level monitoring, blood oxygen level detection, notifications, etc. For instructions and FAQs for these functions, open the app to access the user guide for answers.

Maintenance


Below are three recommendations on wearing and maintenance:

Hacer clic en la pantalla

1. Ir a la subpágina;
2. Completar la acción correspondiente, según el botón en pantalla sobre el cual haga clic.

Hacer clic y sostener la pantalla

1. Cambiar el fondo de pantalla frontal del reloj.

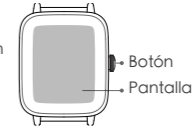

Funciones

CT2 Pro es compatible con funciones como: múltiples modos de ejercicio, salud femenina, tiempo, tienda de pantalla del reloj, entrenamiento de respiración, monitorización del ritmo cardíaco, monitorización del sueño, monitorización del nivel de estrés, detección del nivel de oxígeno en sangre, notificaciones, etc. Para ver instrucciones y preguntas frecuentes sobre estas funciones, abra la aplicación y acceda a la guía del usuario para conocer las respuestas.

Mantenimiento

A continuación se detallan tres recomendaciones acerca del uso y del mantenimiento:

1. Keep the device clean;
2. Keep the device dry;
3. Do not wear the device too tight.

- * Do not use household cleaners to clean the device. Use soap-free cleaners instead.
- * For stains that are difficult to remove, it is recommended to scrub with alcohol.

Waterproof performance: the device is not suitable for diving, swimming in the sea or sauna; it is suitable for swimming pool, shower (cold water) and swimming in shallows.

Safety

- * To prevent device failure, fire and explosion, never place the device or its accessories in any extremely-high-temperature or extremely-low-temperature area.
- * To prevent device damage, accessory damage and device failure, always protect the device against strong impact or shock.
- * Do not disassemble or modify the device or its accessories without authorization. Any device failure should be referred to our after-sales service personnel.

1. Mantener el dispositivo limpio;
2. Mantener el dispositivo seco;
3. No usar el dispositivo demasiado ajustado.

- * No utilizar limpiadores domésticos para limpiar el dispositivo. En cambio, se deben utilizar limpiadores libres de jabón.
- * Para las manchas que son difíciles de remover, se recomienda limpiar con alcohol.

Rendimiento impermeable: el dispositivo no es adecuado para bucear, nadar en el mar o en el sauna; es adecuado para piletas de natación, para la ducha (agua fría) y para la natación en aguas poco profundas.

Seguridad

- * A fin de evitar fallas en el dispositivo, incendio y explosión, nunca se debe colocar el dispositivo o sus accesorios en áreas de temperaturas extremadamente altas o extremadamente bajas.
- * Para evitar el daño al dispositivo, el daño a sus accesorios y fallas en el dispositivo, siempre se debe proteger el dispositivo contra impactos fuertes o choques.
- * No se debe desmontar o modificar el dispositivo o sus accesorios sin previa autorización. Cualquier falla del dispositivo debe ser remitida a nuestro personal de servicio de posventa.



The device meets the EU ROHS criterion.
Please refer to IEC 62321, EU ROHS
Directive 2011/65/EU and revised directive.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS