

REAR SEATSHIELD SIZING GUIDE


To determine which size of Optimus Gear Rear SeatShield will fit your vehicle, measure the **center-to-center distance** between the two furthest headrests in the rear seat of your vehicle (dimension “**A**” in the image below).

Medium SeatShield

A = Less than 81 cm (32 in)

Large SeatShield

A = Greater than 81 cm (32 in)

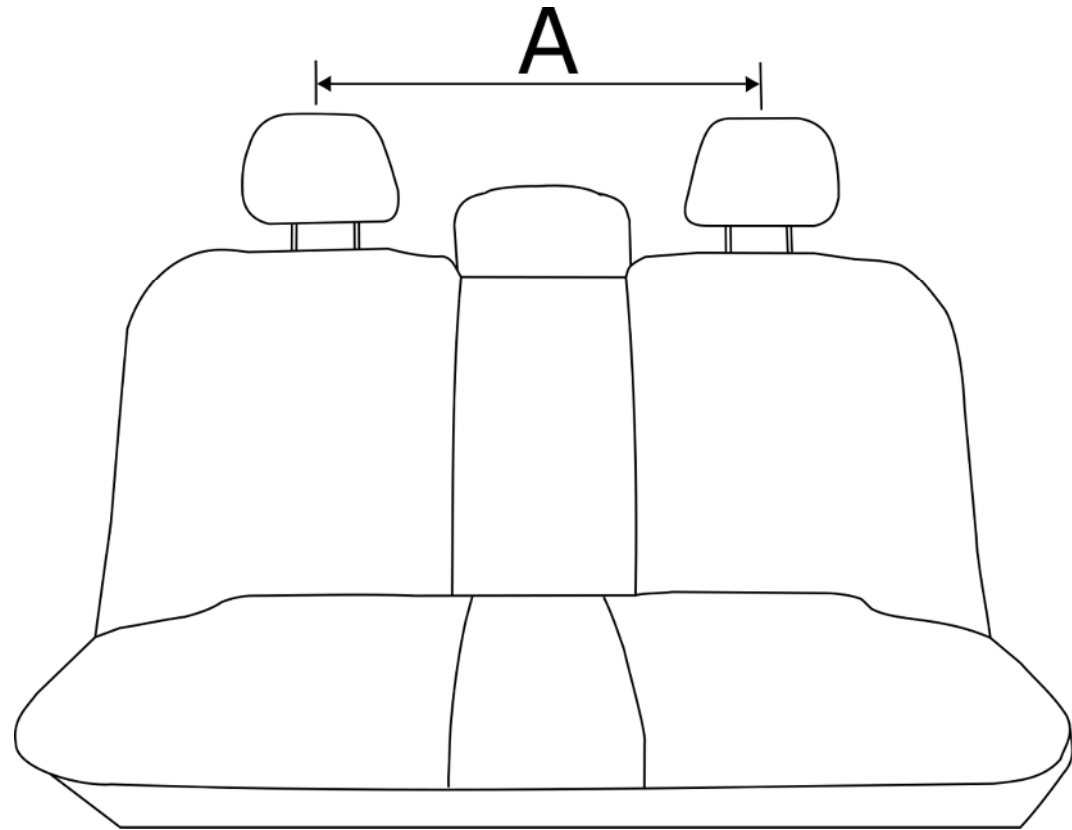

GUIDE DE TAILLE DE HOUSSE ARRIÈRE

Afin de déterminer quelle taille de housse de siège Optimus Gear correspond à votre véhicule, mesurez la **distance entre le centre** des deux appuie-têtes les plus éloignés dans le banc arrière de votre véhicule (dimension « A » dans l'image ci-dessous).

Housse de taille moyenne

A = moins de 81 cm (32 po)

Housse de taille large

A = Plus de 81 cm (32 po)

