




SOLAR MOVEMENT | SOLAR UHRWERK

# EPSON VR4G

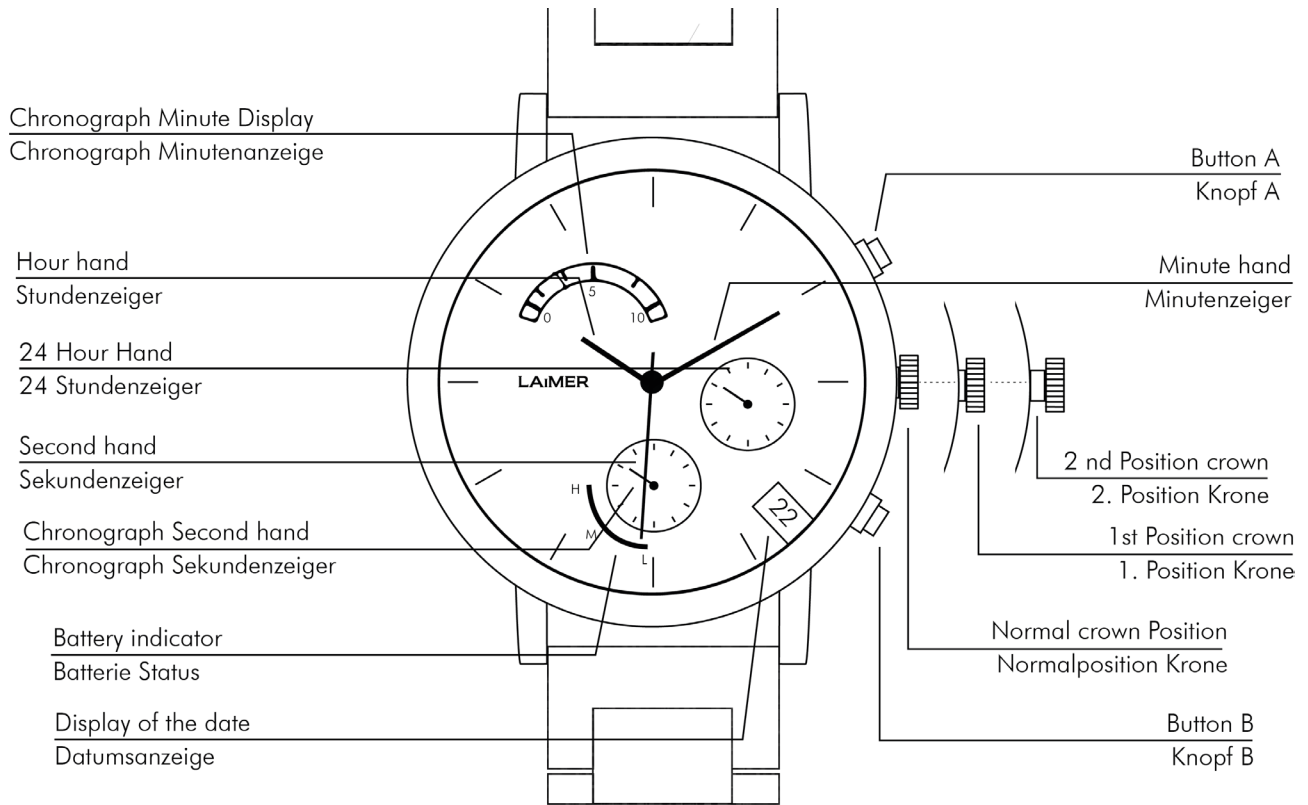

ACCURACY PER MONTH  
 $\pm 20$  sec

BATTERY  
TS920E

RUNNING TIME  
Appx. 4 months

GANGGENAUIGKEIT (MONAT)  
 $\pm 20$  sek

BATTERIE  
TS920E

LAUFZEIT (DUNKELGANG)  
Ca. 4 Monate



SOLAR MOVEMENT | SOLAR UHRWERK

# EPSON VR4G

## INSTRUCTION MANUAL

### SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hand
3. Push the crown back into the normal position.

### SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise for date setting.  
\*Do not set the date between 9 PM and 3 AM, otherwise the day may not change properly.
3. Push the crown back into the normal position.

### CHRONOGRAPH

Button A: Start and Stop  
Button B: Reset

### SETTING CHRONOGRAPH TO 0

Setting the Chronograph to 0, in case the hand position is not correct:

Pull the crown out to the 2nd position and press button A to set the hand clockwise, or Button B to set it counter-clockwise.

### BATTERY INDICATOR

Press Button B for more than 1 second. The remaining battery capacity is indicated. Status indication is 2 seconds. Then it returns automatically to its initial state.

### CHARGING THE WATCH CORRECTLY

1. pull out the crown - this will protect the movement
2. place the watch in the sun to charge
3. leave the watch to charge
4. return the crown to its normal position

## GEBRAUCHSANLEITUNG

### ZEIT EINSTELLEN

1. Krone auf Position 2 ziehen.
2. Krone drehen um den Stunden- und Minutenzeiger einzustellen.
3. Krone wieder auf die Normalposition stellen.

### DATUM EINSTELLEN

1. Krone auf Position 1 ziehen.
2. Krone gegen den Uhrzeigersinn drehen um das Datum einzustellen.  
\*Datum nicht zwischen 21.00 Uhr und 03.00 Uhr einstellen, sonst könnte es Probleme bei der Datumsumstellung geben.
3. Krone wieder zurück in Normalposition stellen.

### CHRONOGRAPH

Knopf A: Start und Stop  
Knopf B: Zurücksetzen

### NULLSTELLUNG DES CHRONOGRAPHEN

Nullstellung des Chronographen, sollte dieser verstellt sein: Krone auf Position 2 ziehen und den Knopf A, um den Zeiger im Uhrzeigersinn einzustellen, oder Knopf B gegen den Uhrzeigersinn.

### BATTERIE STATUS

Drücke den Knopf B für länger als eine Sekunde, damit der verbleibende Batteriestatus angezeigt wird. Die Anzeige bleibt 2 Sekunden lang so, wird dann wieder automatisch auf die Startposition zurückgesetzt.

### UHR RICHTIG AUFLADEN

1. Krone herausziehen - so wird das Werk geschont
2. Uhr zum laden in die Sonne legen
3. Uhr laden lassen
4. Krone wieder zurück in Normalposition stellen