




QUARTZ MOVEMENT | QUARZ UHRWERK

MIYOTA 6P24

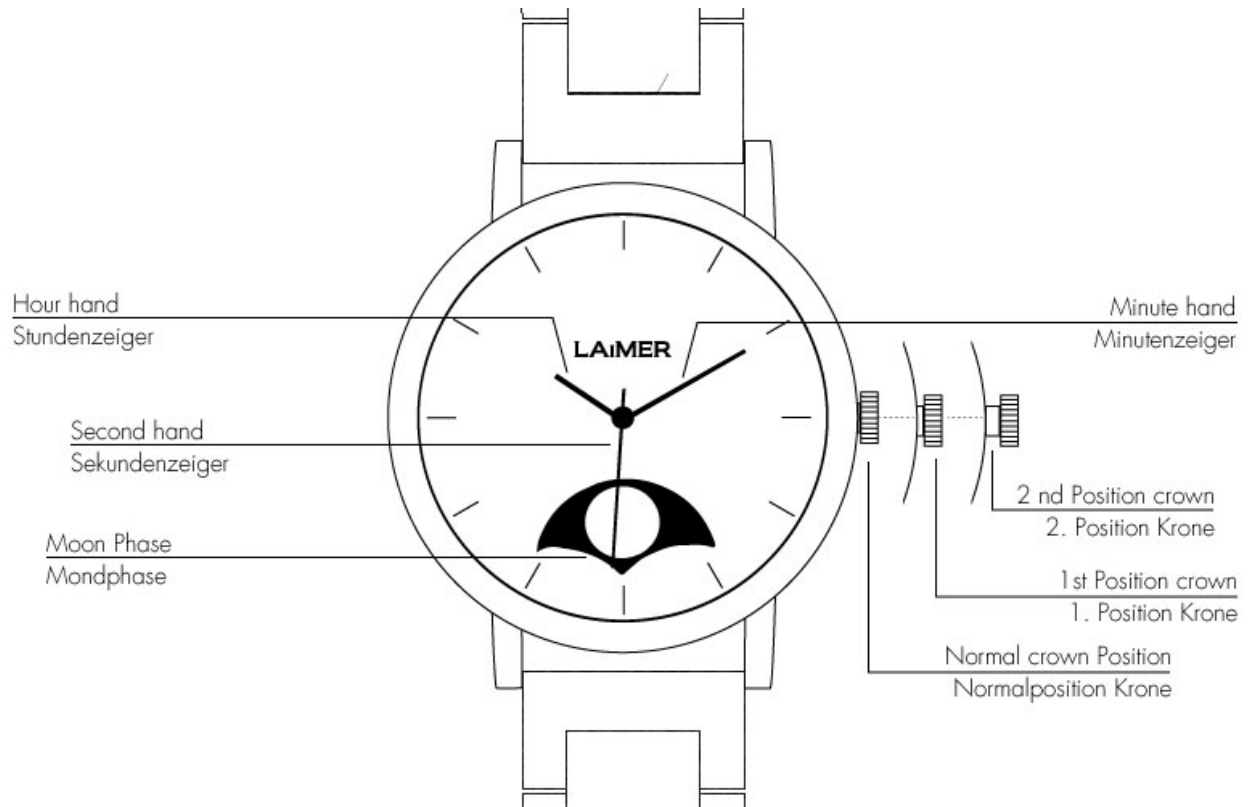

ACCURACY PER MONTH
 ± 20 sec

BATTERY
SR621SW

BATTERY LIFE
Appx. 3 Years

GANGGENAUIGKEIT (MONAT)
 ± 20 sek

BATTERIE
SR621SW

BATTERIE LEBENSDAUER
Ca. 3 Jahre



QUARTZ MOVEMENT | QUARZ UHRWERK

MIYOTA 6P24

INSTRUCTION MANUAL

GEBRAUCHSANLEITUNG

SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. Push crown back to the normal position.

ZEIT EINSTELLEN

1. Krone auf Position 2 ziehen.
2. Krone drehen um den Stunden- und Minutenzeiger einzustellen.
3. Krone auf die Normalposition stellen.

READING THE AGE OF THE MOON

The age of the moon is determined by the period between each new moon. The period is approximately 29.5 days.

The moon dial represents the age of the moon: The actual shape of the moon during each phase is not represented. Use the moon dial indication as a guide to the age or phase of the moon.

MONDANZEIGE LESEN

Das Alter des Mondes wird mit dem Zeit-Abstand zwischen jedem Neumond ermittelt. Dazwischen liegen ca. 29.5 Tage. Die Mondanzeige zeigt das Alter des Mondes, nicht die tatsächliche Form des Mondes. Verwende die Mondanzeige als Führung zur Mondphase.



1. New moon - moon's age: 0
2. First quarter moon - moon's age: 7
3. Full moon - moon's age: 15
4. Last quarter moon - moon's age: 22

1. Neumond - Alter: 0
2. 1/4 Mond - Alter: 7
3. Vollmond - Alter: 15
4. 4/4 Mond - Alter: 22

SETTING AGE OF THE MOON

Check the newspaper or other sources that list the current age of the moon. Referring to above index, set the moon dial to the age closest to that index position. More accurate settings can be made at the time of the new moon or full moon.

1. Pull the crown to the 1st position.
2. Turn the crown clockwise to set the moon dial.
3. Push crown back to normal position.

MONDANZEIGE EINSTELLEN

Verwende eine Zeitung o.ä. um das aktuelle Alter des Mondes herauszufinden. Verwende jetzt die Grafik oben um die Phase einzustellen, die der aktuellen am nächsten ist. Genauer kannst du das Alter bei Voll- oder Neumond einstellen.

1. Krone auf Position 1 ziehen.
2. Krone im Uhrzeigersinn drehen, um die Mondphase einzustellen.
3. Krone wieder auf Normalposition stellen.