




AUTOMATIC MOVEMENT | AUTOMATIK UHRWERK

MIYOTA 8N24

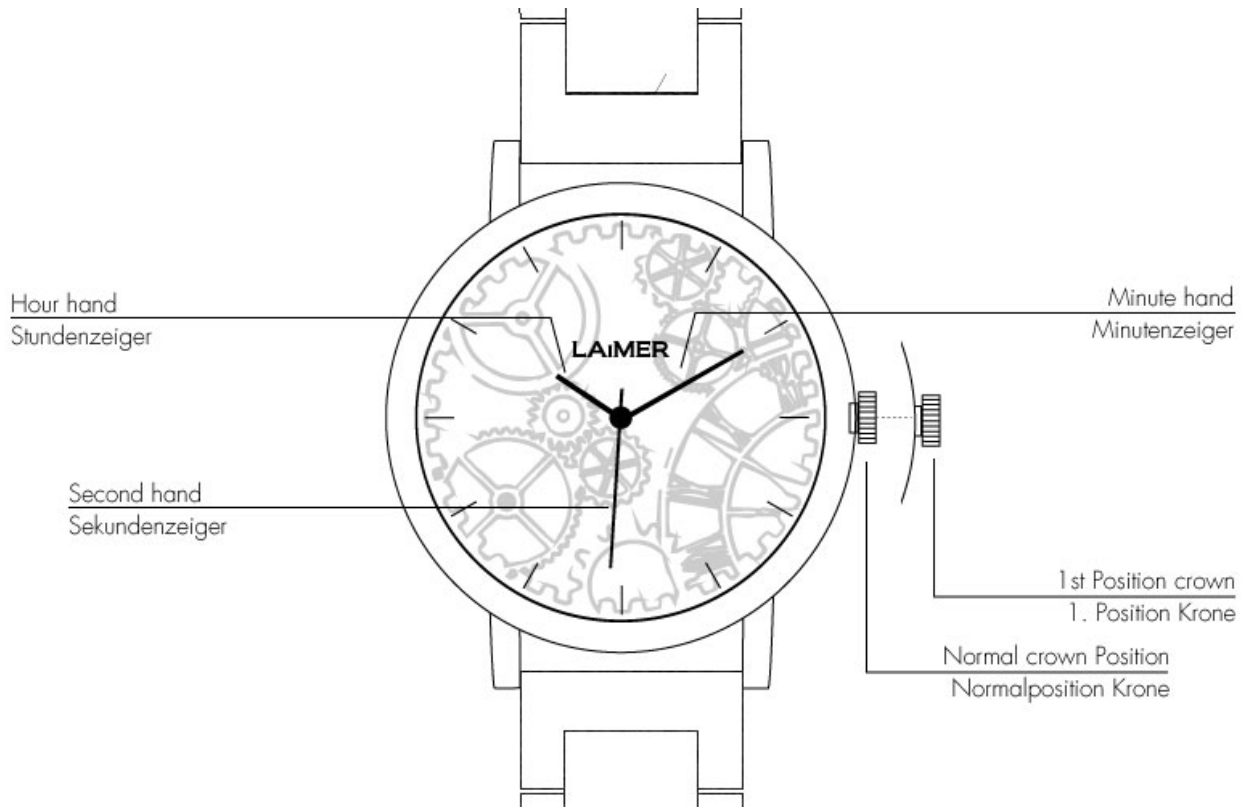

ACCURACY PER DAY
- 20 sec / + 40 sec

JEWELS
21 pcs

RUNNING TIME
Appx. 42 hours

Vibration Frequency per hour
21600

GANGGENAUIGKEIT (TAG)
- 20 sek / + 40 sek

JUWELEN
21 stk

GANGRESERVE
Ca. 42 Stunden

VIBATIONSFREQENZ (STUNDE)
21600



AUTOMATIC MOVEMENT | AUTOMATIK UHRWERK

MIYOTA 8N24

INSTRUCTION MANUAL

GEBRAUCHSANLEITUNG

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position.

ZEIT EINSTELLEN

1. Krone auf Position 1 ziehen.
2. Krone drehen um den Stunden- und Minutenzeiger einzustellen.
3. Krone wieder auf Normalposition stellen.

WINDING THE MAINSPRING

Automatic winding watch can also be hand wound by turning the crown clockwise in normal position. Wind several times clockwise. It will start to move naturally.

AUFZIEHEN

Diese Uhr lädt sich beim Tragen automatisch auf, kann aber auch manuell aufgezogen werden. Dazu einfach die Krone in der Normalposition im Uhrzeigersinn drehen. Die Uhr startet dann automatisch wieder.