




AUTOMATIC MOVEMENT | AUTOMATIK UHRWERK

SEAGULL TY2807

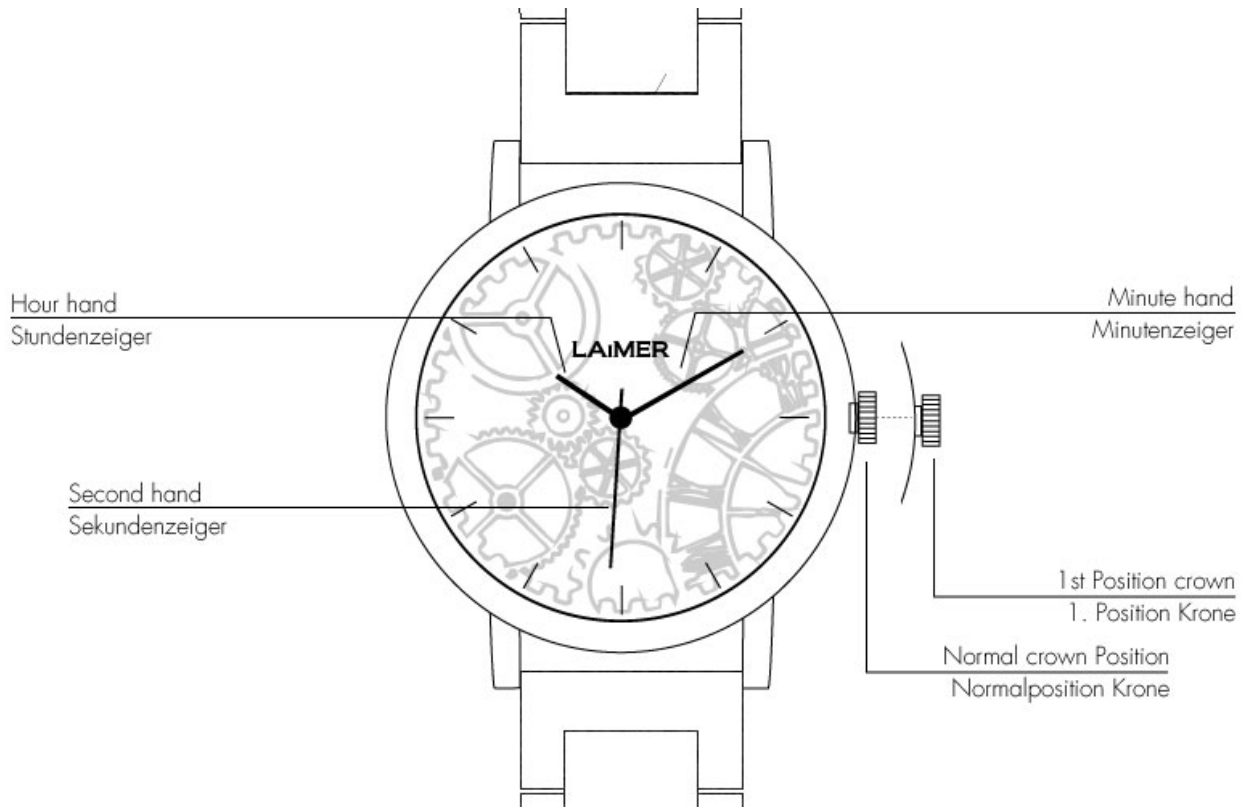

ACCURACY PER DAY
- 20 sec / + 40 sec

GANGGENAUIGKEIT (TAG)
- 20 Sek / + 40 Sek

RUNNING TIME
Appx. 42 hours

GANGRESERVE
Ca. 42 Stunden

VIBRATION FREQUENCY PER HOUR
21600

VIBRATIONSFREQUENZ (STUNDE)
21600



MECHANICAL MOVEMENT | AUTOMATIK UHRWERK

SEAGULL TY2807

INSTRUCTION MANUAL

GEBRAUCHSANLEITUNG

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, the second hand begins to run.

ZEIT EINSTELLEN

1. Krone auf Position 1 ziehen.
2. Krone drehen um den Stunden- und Minutenzeiger einzustellen.
3. Krone wieder auf Normalposition stellen; Sekundenzeiger bewegt sich wieder.

WINDING THE MAINSPRING

Automatic winding watch can also be hand wound by turning the crown clockwise in normal position. Wind several times clockwise. It will start to move naturally.

AUFZIEHEN

Diese Uhr lädt sich beim Tragen automatisch auf, kann aber auch manuell aufgezogen werden. Dazu einfach die Krone in der Normalposition im Uhrzeigersinn drehen. Die Uhr startet dann automatisch wieder.