




QUARTZ MOVEMENT | QUARZ UHRWERK

# SEIKO VD53

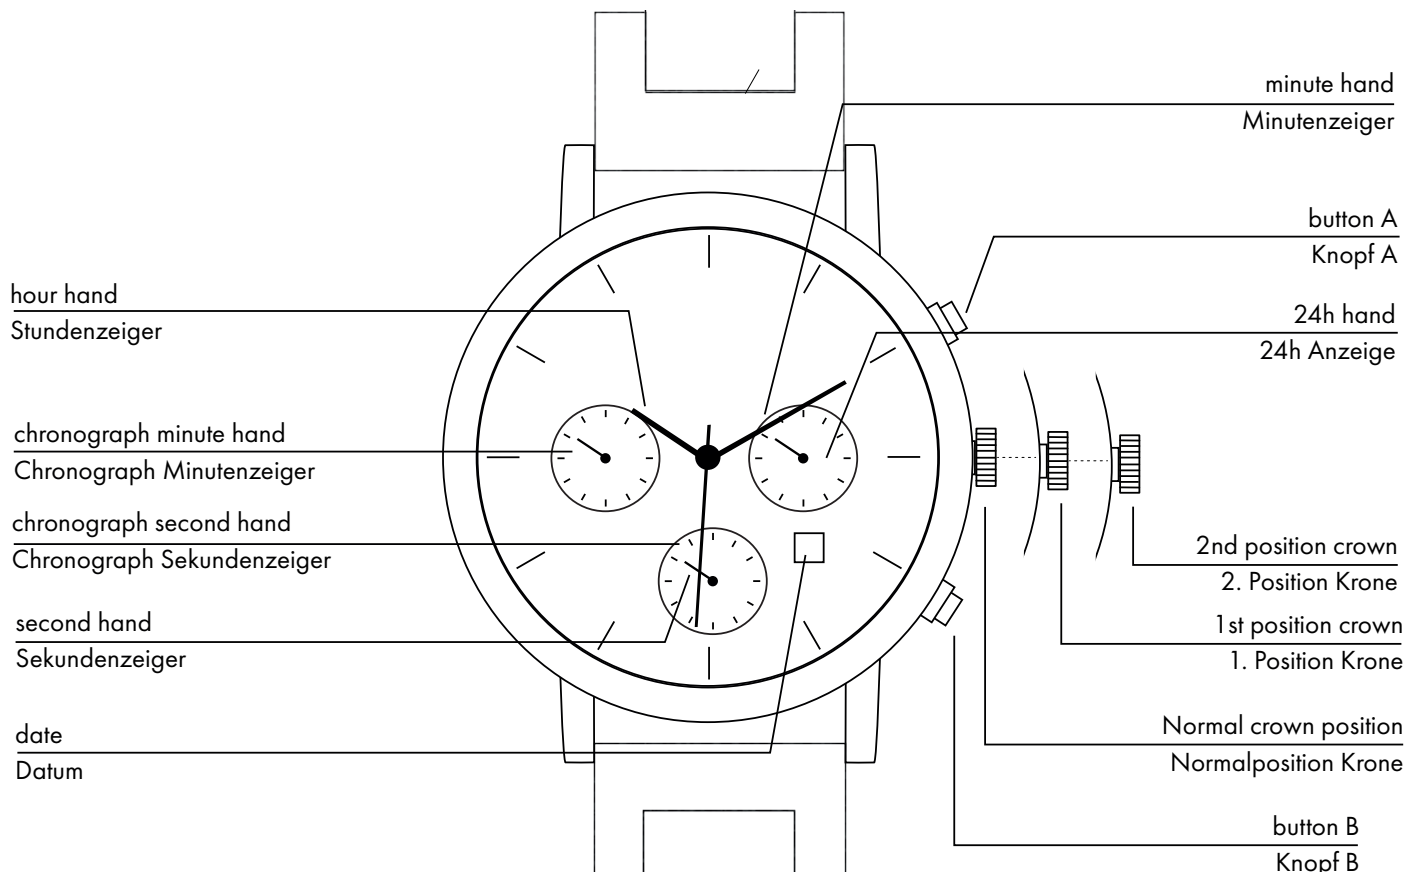

ACCURACY PER MONTH

$\pm 20$  sec

BATTERY

SR920SW

BATTERY LIFE

Appx. 3 Years

GANGGENAUIGKEIT (MONAT)


$\pm 20$  sek

BATTERIE

SR920SW

BATTERIE LEBENSDAUER

Ca. 3 Jahre

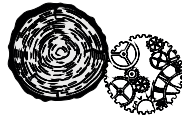

QUARTZ MOVEMENT | QUARZ UHRWERK

# SEIKO VD53

## INSTRUCTIONAL MANUAL

### SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise to set hour and minute hand.
3. Push the crown back into the normal position.

### SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set hour and minute hand.
3. Push the crown back into the normal position.

### CHRONOGRAPH

Button A: Start and Stop  
Button B: Reset

### SETTING CHRONOGRAPH TO 0

Setting the Chronograph to 0, in case the hand position is not correct:

Pull the crown out to the 2nd position and press button A to set the hand clockwise, or Button B to set it counter-clockwise.

## GEBRAUCHSANLEITUNG

### ZEIT EINSTELLEN

1. Krone auf Position 2 ziehen.
2. Krone im Uhrzeigersinn drehen um den Stunden- und Minutenzeiger einzustellen.
3. Krone wieder auf die Normalposition stellen.

### ZEIT EINSTELLEN

1. Krone auf Position 1 ziehen.
2. Krone gegen den Uhrzeigersinn drehen um den Kalender einzustellen.
3. Krone wieder auf die Normalposition stellen.

### CHRONOGRAPH

Knopf A: Start und Stop  
Knopf B: Zurücksetzen

### NULLSTELLUNG DES CHRONOGRAPHEN

Nullstellung des Chronographen, sollte dieser verstellt sein:

Krone auf Position 2 ziehen und den Knopf A, um den Zeiger im Uhrzeigersinn einzustellen, oder Knopf B gegen den Uhrzeigersinn.