




AUTOMATIC MOVEMENT | AUTOMATIK UHRWERK

PTS JHLS32

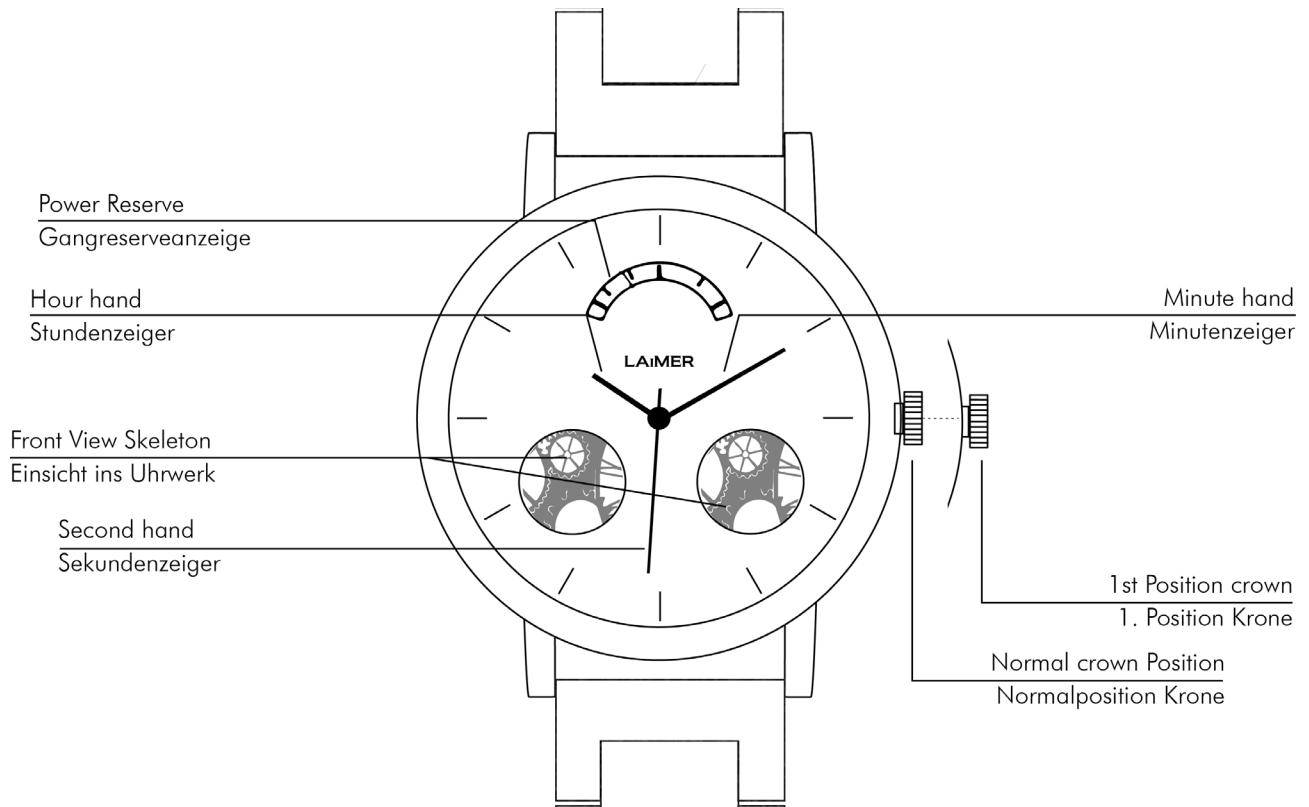

ACCURACY PER DAY
- 20 sec / + 40 sec

GANGGENAUIGKEIT (TAG)
- 20 Sek / + 40 Sek

JEWELS
47 pcs

JUWELEN
47 stk

RUNNING TIME
Appx. 42 hours

GANGRESERVE
Ca. 42 Stunden

VIBRATION FREQUENCY PER HOUR
21.600

VIBATIONSFREQUENZ (STUNDE)
21.600



AUTOMATIC MOVEMENT | AUTOMATIK UHRWERK

PTS JHLS32

INSTRUCTION MANUAL

SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position.

WINDING THE MAINSPRING

Automatic winding watch can also be hand wound by turning the crown clockwise in normal position. Wind several times clockwise. It will start to move naturally.

GEBRAUCHSANLEITUNG

ZEIT EINSTELLEN

1. Krone auf Position 1 ziehen.
2. Krone drehen um den Stunden- und Minutenzeiger einzustellen.
3. Krone wieder auf Normalposition stellen.

AUFZIEHEN

Diese Uhr lädt sich beim Tragen automatisch auf, kann aber auch manuell aufgezogen werden. Dazu einfach die Krone in der Normalposition im Uhrzeigersinn drehen. Die Uhr startet dann automatisch wieder.