



مايكروويف مع شواية

دليل المستخدم

الموديل:

MWHA-42G3H ▲

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الجهاز،
واحتفظ به للرجوع إليه مستقبلاً

هذه التصاميم والمواصفات عرضة للتغيير بهدف إدخال تحسينات عليها
وذلك دون إشعار مسبق

ISO9001 CE CB



مجموعة الحافظ للتجارة ش.م.ع
ALHAFIDH GROUP TRADING FZCO



Grill Microwave Oven

User's Manual

Models:

▲ MWHA-42G3H

Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change for improvement
without prior notice.

ISO9001 CE CB



مجموعة الحافظ للتجارة ش.م.ع
ALHAFIDH GROUP TRADING FZCO



Model: MWHA-42G3H

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	MWHA-42G3H
Rated Voltage:	220-240V~50Hz
Rated Input Power(Microwave):	1550W
Rated Output Power(Microwave):	1100W
Rated Input Power(Grill):	1200-1400W
Oven Capacity:	42L
Turntable Diameter:	Ø345mm
External Dimensions:	553x470x327 mm
Net Weight:	Approx. 17.72 kg

IMPORTANT SAFETY INSTRUCTIONS WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils that are suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.

IMPORTANT SAFETY INSTRUCTIONS WARNING

14. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFETY INSTRUCTIONS WARNING

- 26.The appliances are not intended to be operated by means of an external timer or separate remote-control system.
 - 27.Accessible parts may become hot during use. Young children should be kept away.
 - 28.Steam cleaner is not to be used.
 - 29.During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
 - 30.Only use the temperature probe recommended for this oven.(for ovens provided with a facility to use a temperature-sensing probe.)
 31. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
 - 32.The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
 - 33.The rear surface of appliance shall be placed against a wall.
 - 34.The microwave oven must not be placed in a cabinet.
 - 35.The microwave oven is intended for heating food and beverages.Drying of food or clothing and heating of warming pads, slippers,sponges,damp cloth and similar may lead to risk of injury, ignition or fire.
 36. Metallic containers for food and beverages are not allowed during microwave cooking.
 37. The appliance must not be installed behind a decorative door in order to avoid overheating.
- WARNING:**
When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated. The appliance must not be placed in a cabinet.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.
1. A short power-supply cord is provided to reduce the risks resulting from becoming

entangled in or tripping over a longer cord.

2. If a long cord set or extension cord is used:

1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

2)The extension cord must be a grounding-type 3-wire cord.

3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.

Materials you can use in microwave oven

Plastic wrap Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.

Thermometers Microwave-safe only (meat and candy thermometers).

Wax paper Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils Remarks

Aluminum tray May cause arcing. Transfer food into microwave-safe dish.

Food carton with metal handle May cause arcing. Transfer food into microwave-safe dish.

Metal or metal-trimmed utensils Metal shields the food from microwave energy. Metal trim may cause arcing.

Metal twist ties May cause arcing and could cause a fire in the oven.

Paper bags May cause a fire in the oven.

Plastic foam Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.

Wood Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray 1

Turntable ring assembly 1


Instruction Manual 1

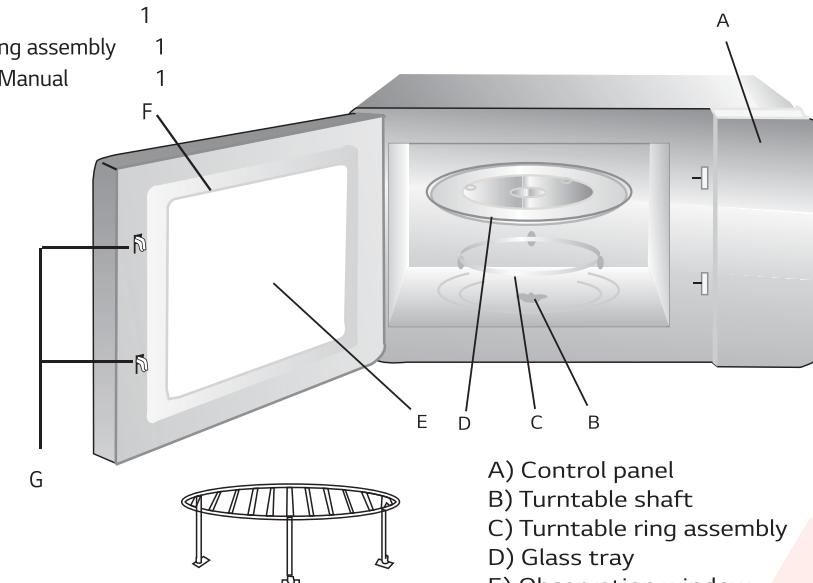

Grill Rack(Only be used in grill function and be placed on the glass tray)

- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

Turntable Installation

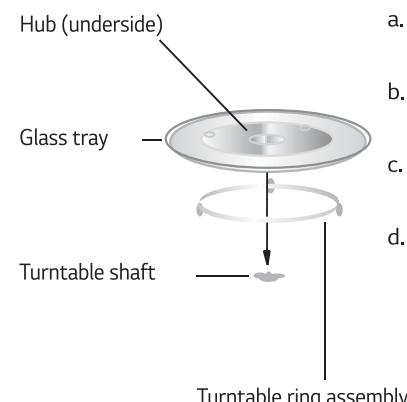

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

- Select a level surface that provide enough open space for the intake and/or outlet vents.

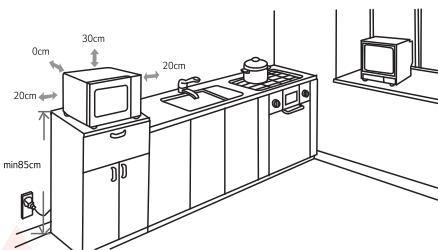

- (1) The minimum installation height is 85cm.
- (2) The rear surface of appliance shall be placed against a wall.
- Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.
- (3) Do not remove the legs from the bottom of the oven.
- (4) Blocking the intake and/or outlet openings can damage the oven.

(5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



OPERATION

1. Power Level

11 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

2. Clock Setting

- (1) Press "Clock/ Timer" once, "00:00" will display.
- (2) Press the number keys and enter the current time. For example, time is 1 2:10 now, please press "1, 2, 1, 0" in turn.
- (3) Press "Clock/ Timer" to finish clock setting. ":" will flash and the clock will be lighted.
- (4) If the numbers input are not within the range of 1:00--12:59, the setting will be invalid until valid numbers are input.

Note: (1) In the process of clock setting, if the "STOP/Cancel" button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

(2) If the clock need to be reset, please repeat step 1 to step 3.

3. Kitchen Timer

- (1) Press "Clock/ Timer" twice, the screen will display 00:00.
- (2) Press the number keys and enter the timer time.(the maximum cooking time is 99 minutes and 99 seconds)
- (3) Press "START/+30SEC." to confirm setting.
- (4) When the timer time arrives, the buzzer will ring 5 times.

If the clock has been set (12-hour system), the screen will display the current time.

Note: 1) The kitchen timer is different from 12-hour system. Kitchen Timer is a timer.
2) During kitchen timer, any program cannot be set.

4. Microwave cook

- (1) Press "Time Cook" once, the screen will display "00:00".
- (2) Press number keys to input the cooking time. The maximum cooking time is 99 minutes and 99 seconds.
- (3) Press "Power" once, the screen will display "PL10". The default power is 100% power. Now you can press number keys to adjust the power level.
- (4) Press "START/+30SEC." to start cooking.

Example: To cook the food with 50% microwave power for 15 minutes.

- a. Press " Time C ook " once. "00:00" displays.
- b.Press "1", "5", "0", "0" in order.
- c.Press " Power " once, then press "5" to select 50% microwave power.
- d.Press " START/+30SEC. " to start cooking.

Note:1) In the process of setting, if the " STOP/C an cel " button is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.

2) If "PLO" selected, the oven will work with fan for no power. You can use this level to remove the odour of the oven.

3)During microwave cooking, " Power" can be pressed to change the power you need.

After pressing " Power ", the current power flashes for 3 seconds, you can press number button to change the power. The oven will work with the selected power for the rest time.

5 . Grilling Cooking

(1) Press the " Grill/Combo " button once to choose the grill function, the screen will display "G-1".

(2) Set the cooking time, the maximum cooking time is 99 minutes and 99 seconds.

Example: Set 12 minutes 50 seconds, press "1", "2", "5", "0" in order.

(3) Press " START/+30SEC. " to start cooking. The cooking time counts down.

Note : If half the grill time passes, the oven pauses and sounds twice , and this is normal . You can just press " START/+30SEC. " to continue cooking. But in order to have a better effect of grilling food, you should turn the food over, close the door, and then press" START/+30SEC. " to continue cooking. If there is no operation in 1 minute, the oven will continue working and beep once.

6. Combination cooking (microwave + grilling)

(1) Press the " Grill/Combo " button twice or thrice to choose "Combination 1" (55% microwave+45%grill) or "Combination 2" (36% microwave+64%grill), screen will display "C-1" or "C-2".

(2) Set the cooking time, the maximum cooking time is 99 minutes and 99 seconds.

Example: Set 12 minutes 50 seconds, press "1", "2", "5", "0" in order.

(3) Press " START/+30SEC. " to start cooking. The cooking time counts down.

Function	Display	Microwave Power	Grill Power
Combi.1	C-1	55%	45%
Combi.2	C-2	36%	64%

7. Speedy Cooking

- (1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press " START/+30SEC. " to increase the cooking time. The maximum cooking time is 99 minutes and 99 seconds.
- (2) In waiting state, instant cooking at 100% power level with 30 seconds' cooking time can be started by pressing " START/+30SEC ". Each press on the same button will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes and 99 seconds.
- (3) After pressing " Time Cook " and the cooking time is selected, press " START/+30SEC. " to start cooking with full microwave power.

Note: During microwave cooking and time defrost, time can be added by pressing "START/+30SEC." button.

8. Weight Defrost Function

- (1) Press " Weight/T ime Defrost " once, the screen will display "DEF1".
- (2) Press numerical buttons to input weight to be defrosted.
Input the weight ranged between 100~2000 g.
- (3) If the weight input is not within 100~2000, the input will be invalid.
- (4) Press " START/+30SEC. " to start defrosting and the cooking time remained will be displayed.

9. Time Defrost Function

- (1) Press " Weight/T ime Defrost " twice, the screen will display "DEF2".
- (2) Press number pads to input defrosting time. The effective time range is 00:01~99:99
- (3) The default microwave power is power level 3. If you want to change the power level, press " Power " once, and the screen will display "PL 3", then press the number pad of the power level you wanted.
- (4) Press " START/+30SEC. " to start defrosting. The remained cooking time will be displayed.

10. POPCORN

- a)Press " Popcorn " repeatedly until the number you wish appears in the display, "50", "100" grams will display in order.
For example, press " Popcorn " once, "50" appears.
- b) Press " START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer will sound five times and then turn back to waiting state.

11.POTATO

- a) Press " Potato " repeatedly until the number you wish appears in the display, "1", "2", "3" will display in order.
"1"SET : 1 potato (approximate 230 gram)
"2"SETS: 2 potatoes (approximate 460 gram)
"3"SETS: 3 potatoes (approximate 690 gram)
For example, press " Potato " once, "1" appears.
- b) Press "START/+30 SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

12. FROZEN VEGETABLE

- a) Press " Frozen Vegetable " repeatedly until the number you wish appears in the display, "150", "350", "500" grams will display in order.
For example, press " Frozen V egetable " once, "150" appears.
- b) Press "START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

13. BEVERAGE

- a) Press " Beverage " repeatedly until the number you wish appears in the display, "1", "2", "3" cup will display in order. One cup is about 120ml. For example, press " Beverage " once, "1" appears.
- b) Press "START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

14. MEAT Function

A. Chicken menu

- a) Press " Meat " once to choose chicken menu,"CHIC" displays.
- b) Press " START/+30 SEC. " to confirm the menu. "400" displays.
- c) Keep pressing " Meat " to choose chicken weight. "600", "800", "1000" or "1200" grams can be selected.
- d) Press "START/+30 SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

B. BEEF menu

- a) Press " Meat " twice to choose beef menu,"BEEF" displays.
- b) Press " START/+30 SEC. " to confirm the menu. "300" displays.
- c) Keep pressing " Meat " to choose beef weight. "500", "700", "900" or "1100" grams can be selected.
- d) Press "START/+30 SEC. " to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

15. DINNER PLATE

- a) Press " Dinner Plate " repeatedly until the number you wish appears in the display, "250", "350", "500" grams will display in order.
For example, press " Dinner P late " once, "250" appears.
- b) Press "START/+30 SEC." to cook, buzzer sounds once. When cooking finishes, buzzer sounds five times and then turn back to waiting state.

16. FROZEN PIZZA

- a) Press " Frozen Pizza " repeatedly until the number you wish appears in the display, "100", "200", "400" grams will display in order.
For example, press " Frozen P izza " once, "100" appears.
- b) Press "START/+30 SEC. " to cook, buzzer sounds once. When cooking finish es, buzzer sounds five times and then turn back to waiting state.

17. Multi-stage cooking

At most 2 stages can be set for cooking. In multi-stage cooking, if one stage is

defrosting, then defrosting shall be placed at the first stage automatically.

Note : Auto cooking cannot work in the multi-stage cooking.

Example: If you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes. The cooking steps are as following:

- (1) Press " Time C ook " once, then press "5", "0", "0" to set the cooking time;
- (2) Press " Power " once, then press "8" to select 80% microwave power.
- (3) Press " Time C ook " once, then press "1", "0", "0", "0" to set the cooking time;
- (4) Press " Power " once, then press "6" to select 60% microwave power.
- (5) Press " START/ +30 SEC. " to start cooking.

18. LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press " STOP/C ancel " for 3 seconds, there will be a long "beep" denoting the entering into the children-lock state; meanwhile, screen will display ".E E E".

Lock quitting: In locked state, press " STOP/Cancel " for 3 seconds, there will be a long "beep" denoting that lock is released.

19. MEMORY FUNCTION

- (1) Press " 0/Memory " to choose memory 1-3 procedure. The screen will display 1, 2, 3.
- (2) If the procedure has been set, press " START/ +30 SEC. " to use it. If not, continue to set the procedure. Only one or two stages can be set.
- (3) After finishing the setting, press " START/ +30 SEC. " once to save the procedure.
If press " START / +30 SEC. " again, it will start cooking.

Example: To set the following procedure as the second memory, that is memory 2.

To cook the food with 80% microwave power for 3minutes and 20 seconds.

The steps are as follow:

- a. In waiting state, press "0/Memory" twice, stop pressing until the screen displays "2".
- b. Press "Time C ook" once, then press "3", "2", "0" in order.
- c. Press "Power" once, "PL10" displays, then press "8" and "PL8" displays.
- d. Press " START/ +30 SEC. " to save the setting. Buzzer sounds once and "2" displays.
If you press " START/+30SEC. " again, the procedure will be saved as the memory 2 and operated.
- e. If the electricity is not cut off, the procedure will be saved all the time. If it is, the procedure need to reset.
- f. If you want to run the saved procedure, in waiting state, press " 0/Memory " twice, screen displays "2", then press " START/+30SEC. " to run.

20. INQUIRING FUNCTION

- (1) In cooking state, press " Clock/ T imer ", the screen will display clock for three seconds.
- (2) In the microwave cooking state, press " Power " to inquire microwave power level, and the current microwave power will be displayed. After three seconds, the oven will turn back to the previous state. In multi-stage state, the inquiring way can be done by the same way as above.

21. COOKING END REMINDING FUNCTION

When the cooking is over, the buzzer will sound 5 "beep" to alert user the cooking is finished.

22. OTHER SPECIFICATIONS

- (1) In standby state, if the set clock digital tube displays current time, the icon " : " would flash; otherwise, it shows " 0:00 ".
- (2) In setting function state, the screen displays corresponding setting.
- (3) In working or pause state, the screen displays surplus cooking time.

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

أوضاع عاديّة

قد يحدث تشويش على إرسال الراديو والتليفزيون أثناء تشغيل فرن الميكروويف، تماماً مثل تأثير الأجهزة الكهربائية الصغيرة مثل الخلط والمكنسة والمروحة. هذا أمر طبيعي.

أثناء الطهي في الميكروويف على قدرة منخفضة، قد تصبح الإضاعة معتدلة. هذا أمر طبيعي.

قد ينبعث البخار من الطعام أثناء الطهي، ولكن قد يتجمع بعض من هذا البخار من فتحات التهوية، ولكن قد يتجمع بعض البخار على الأجزاء الباردة مثل باب الفرن. هذا أمر طبيعي.

يُنصح بتشغيل الجهاز بدون وجود طعام داخله، وهذا أمر خطير للغاية.


تشويش فرن الميكروويف على إرسال التليفزيون

إعتم ضوء الفرن

تراكم البخار على الباب أو خروج هواء ساخن من فتحات التهوية

بعد تشغيل الفرن بدون قصد مع عدم وجود طعام في الداخل

الحل	السبب المحتمل	المشكلة
يجب إزالة السلك من القابس ثم إعادة توصيله بعد ٢٠ ثانية.	١) سلك الكهرباء غير متصل جيداً بالقابس.	لا يمكن بدء تشغيل الفرن
يجب استبدال الفاصلية أو إعادة ضبط قاطع التيار (يتم إصلاحه بواسطة فني مختص).	٢) انصراف الفاصلية أو قاطع التيار مفعول.	
يجب اختبار المخرج مع جهاز كهربائي آخر.	٣) مشكلة في المخرج.	
يجب غلق الباب جيداً.	٤) الباب غير مغلق جيداً	لا يقوم الفرن بالتسخين
يجب الرجوع إلى القسم الخاص بـ "صيانة الميكروويف" للتعرف على كيفية تنظيف الأجزاء.	٥) اتساخ السطح الدوار وقع الفرن.	يحدث ضجيجاً عند تشغيل الفرن

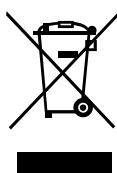

وفقاً للتوجيه الخاص بنفايات المعدات الكهربائية والالكترونية، يجب تجميع هذه النفايات ومعالجتها بشكل منفصل عن النفايات الأخرى. لذلك إذا احتجت في أي وقت في المستقبل أن تتخلص من هذا المنتج يرجى عدم التخلص منه مع النفايات المنزلية، بل يجب إرساله إلى نقاط تجميع نفايات المعدات الكهربائية والالكترونية أينما توفرت.

(1) اضغط على زر "ذاكرة" لاختيار إجراء الذاكرة ٣-١. سيظهر على الشاشة ١، ٢، ٣.

(2) في حال ضبط الإجراء، اضغط على زر "تشغيل" ٣+٣+٣ لاستخدامه. في حال عدم ضبطه، واصل الانتهاء من الضبط، اضغط على زر "تشغيل" ٣+٣+٣ مرة واحدة لحفظ الإجراء. ومع

الضغط مرة أخرى على زر "تشغيل" ٣+٣+٣ ستبدأ عملية الطهي. مثل: لضبط الإجراء التالي كذاكرة ثانية، هي الذاكرة ٢.

طهي الطعام بقدرة ميكروويف ٨٪ لمدة ٣ دقائق و٢ ثانية. الخطوات هي كالتالي:
أ. في وضع الانتظار، اضغط على زر "ذاكرة" مرتين، وبعدها توقف عن الضغط إلى أن تظهر على الشاشة "٣".

ب. اضغط على زر "زمن الطهي" مرة واحدة، وبعدها اضغط على "٣، ٣، ٣، ٣" بالتسلسل.
ت. اضغط على زر "القدرة" مرة واحدة، وسيظهر على الشاشة "١٤"، وبعدها اضغط على "٨" وسيظهر على الشاشة "١٤".

ث. اضغط على زر "تشغيل" ٣+٣+٣ لحفظ الإعدادات. سيصدر صوت تنبيهي مرة واحدة، وسيظهر على الشاشة "٣". في حال ضغطت على زر "تشغيل" ٣+٣+٣ مرة أخرى، سيتم حفظ الإجراء كذاكرة ٢ وسيجري العمل به.

ج. في حال عدم انقطاع التيار الكهربائي، سيعين إعادة الضبط مرة أخرى.

ج. في حال رغبت بتشغيل الجهاز بالإجراء الذي تم حفظه، في وضع الانتظار اضغط على زر "ذاكرة" مرتين، وسيظهر على الشاشة "٣"، وبعدها اضغط على زر "تشغيل" ٣+٣+٣ للتشغيل.

20.وظيفة الاستعلام
(1) في وضع الطهي، اضغط على زر "الساعة/المؤقت" ، وستظهر الساعة على الشاشة لمدة ٣ ثوان.

(2) في وضع الطهي في الميكروويف، اضغط على زر "القدرة" للاستعلام عن مستوى قدرة الميكروويف، وسيظهر على الشاشة المستوى الحالي لقدرة الميكروويف. وبعد ٣ ثوان، سيعود الفرن للوضع السابق. وفي وضع الطهي متعدد المراحل، يمكن الاستعلام بنفس الطريقة أعلاه.

21.وظيفة التذكرة بانتهاء الطهي
عند الانتهاء من الطهي، سيصدر صوت تنبيهي لمدة ٥ مرات لإعلام المستخدم بانتهاء عملية الطهي.

22.مواصفات أخرى
(1) في وضع الاستعداد، في حال ظهرت على الشاشة الساعة الرقمية التي تم ضبطها، سيؤمّض الرمز ":", وبخلاف ذلك سيظهر "...".

(2) في وضع وظيفة الضبط، سيظهر على الشاشة الضبط المطابق.
(3) في وضع التشغيل أو الإيقاف المؤقت، سيظهر على الشاشة زمن الطهي الفائق.

- (أ) اضغط على زر "بطاطا" مرتين إلى أن يظهر الرقم المراد على الشاشة، سيفعل ذلك على زر "الطبخ" مرة واحدة (٣ جم تقربياً)، على سبيل المثال: اضغط على زر "طبق الطعام" مرة واحدة، وسيظهر "٢٥.".
- (ب) اضغط على زر "تشغيل/.٣+ثانية" للطهي، وسيصدر صوت تنبهه لمرة واحدة. عند انتهاء الطهي، سيصدر صوت تنبهه لمدة ٥ مرات، وسيعود المايكروويف لوضع الانتظار.

12. طهي الخضروات المجمدة

- (أ) اضغط على زر "الخضروات المجمدة" مرتين إلى أن يظهر الرقم المراد على الشاشة، سيفعل ذلك على زر "الطبخ" مرة واحدة (٣ جم تقربياً)، على سبيل المثال: اضغط على زر "بطاطا" مرة واحدة، وسيظهر "٤" على الشاشة.
- (ب) اضغط على زر "تشغيل/.٣+ثانية" للطهي، وسيصدر صوت تنبهه لمرة واحدة. عند انتهاء الطهي، سيصدر صوت تنبهه لمدة ٥ مرات، وسيعود المايكروويف لوضع الانتظار.

13. إعداد المشروبات

- (أ) اضغط على زر "المشروبات" مرتين إلى أن يظهر الرقم المراد على الشاشة، سيفعل ذلك على زر "الطبخ" مرة واحدة (١٥ جم بالمسلسل). على سبيل المثال: اضغط على زر "بطاطا" مرة واحدة، وسيظهر "١٥.".
- (ب) اضغط على زر "تشغيل/.٣+ثانية" للطهي، وسيصدر صوت تنبهه لمرة واحدة. عند انتهاء الطهي، سيصدر صوت تنبهه لمدة ٥ مرات، وسيعود المايكروويف لوضع الانتظار.

14. طهي اللحوم

- (أ) قائمة الدجاج
- (أ) اضغط على زر "اللحوم" مرة واحدة لاختيار قائمة الدجاج، وسيظهر على الشاشة "CHICKEN".
- (ب) اضغط على زر "تشغيل/.٣+ثانية" لتأكيد القائمة. سيفعل ذلك على زر "الطبخ" مرة واحدة (٤ جم).
- (ت) واصل الضغط على زر "اللحوم" لاختيار وزن الدجاج. يمكن الاختيار من بين ".٦٠، .٨٠، .٩٠ أو .١٢ جم".
- (ث) اضغط على زر "تشغيل/.٣+ثانية" للطهي، وسيصدر صوت تنبهه لمرة واحدة. عند انتهاء الطهي، سيصدر صوت تنبهه لمدة ٥ مرات، وسيعود المايكروويف لوضع الانتظار.

ب. قائمة لحم البقر

- (أ) اضغط على زر "اللحوم" مرتين لاختيار قائمة اللحوم، وسيظهر على الشاشة "BEEF".
- (ب) اضغط على زر "تشغيل/.٣+ثانية" لتأكيد القائمة. سيفعل ذلك على زر "الطبخ" مرة واحدة (٣ جم).
- (ت) واصل الضغط على زر "اللحوم" لاختيار وزن لحم البقر. يمكن الاختيار من بين ".٥٠، .٧٠، .٩٠ أو .١٢ جم".
- (ث) اضغط على زر "تشغيل/.٣+ثانية" للطهي، وسيصدر صوت تنبهه لمرة واحدة. عند انتهاء الطهي، سيصدر صوت تنبهه لمدة ٥ مرات، وسيعود المايكروويف لوضع الانتظار.

أ) اضغط على زر "طبق الطعام" مرتين إلى أن يظهر الرقم المراد على الشاشة، سيفعل ذلك على زر "الطبخ" مرة واحدة (٣ جم تقربياً)، على سبيل المثال: اضغط على زر "طبق الطعام" مرة واحدة، وسيظهر "٢٥.".

(ب) اضغط على زر "تشغيل/.٣+ثانية" للطهي، وسيصدر صوت تنبهه لمرة واحدة. عند انتهاء الطهي، سيصدر صوت تنبهه لمدة ٥ مرات، وسيعود المايكروويف لوضع الانتظار.

16. طهي البيتزا المجمدة

(أ) اضغط على زر "بيتزا مجده" مرتين إلى أن يظهر الرقم المراد على الشاشة، سيفعل ذلك على زر "الطبخ" مرة واحدة (٣ جم تقربياً)، على سبيل المثال: اضغط على زر "بيتزا مجده" مرة واحدة، وسيظهر "٢٤.".

(ب) اضغط على زر "تشغيل/.٣+ثانية" للطهي، وسيصدر صوت تنبهه لمرة واحدة. عند انتهاء الطهي، سيصدر صوت تنبهه لمدة ٥ مرات، وسيعود المايكروويف لوضع الانتظار.

17. الطهي متعدد المراحل

يمكن اختيار مرحلتين للطهي كحد أقصى. في وظيفة الطهي متعدد المراحل، إذا كانت إحدى المرحلتين هي التذويب، يجري اختيار التذويب كمرحلة أولى تلقائياً.

ملاحظة: لا يعمل الطهي التلقائي مع وظيفة الطهي متعدد المراحل.

مثال: إذا رغبت بالطهي بقدرة مايكروويف ٨٪ لمدة ٥ دقائق + قدرة مايكروويف ٦٪ لمدة ١ دقيقة، تكون الخطوات كالتالي:

- (1) اضغط على زر "زمن الطهي" مرة واحدة، وبعدها اضغط على ".٥، .٠، .٠" لضبط زمن الطهي.
- (2) اضغط على زر "القدرة" مرة واحدة، وبعدها اضغط على ".٨" لاختيار قدرة مايكروويف ٨٪.
- (3) اضغط على زر "زمن الطهي" مرة واحدة، وبعدها اضغط على ".١، .٠، .٠" لاختيار زمن الطهي.
- (4) اضغط على زر "القدرة" مرة واحدة، وبعدها اضغط على ".٦" لاختيار قدرة مايكروويف ٦٪.
- (5) اضغط على زر "تشغيل/.٣+ثانية" لبدء الطهي.

18. خاصية الإقفال للأمان للأطفال

تفعيل الإقفال: في وضع الانتظار، اضغط على زر "إيقاف/إلغاء" لمدة ٣ ثوانٍ، تسمع بعدها صافرة طويلة تشير إلى الضبط على وضعية الإقفال للأمان الأطفال ويسريء مؤشر الإقفال. وسيظهر على الشاشة ".

إلغاء الإقفال: في وضع الإقفال اضغط "إيقاف/إلغاء" لمدة ٣ ثوان، تسمع بعدها صافرة طويلة تشير إلى إلغاء وضعية الإقفال للأمان الأطفال.

7. الطهي السريع

- 1) في وضع الانتظار، يمكن بدء تشغيل المايكروويف بخاصية الطهي السريع بقدرة %. ا من خلال اختيار زمن الطهي من إلى ٦ دقائق عن طريق الضغط على أزرار الأرقام إلى ٦. اضغط على زر "تشغيل/. ٣+٢ ثانية" لزيادة زمن الطهي. أقصى زمن للطهي هو ٩٩ دقيقة و ٩٩ ثانية.
- 2) في وضع الانتظار، يمكن بدء تشغيل المايكروويف بخاصية الطهي السريع بقدرة %. ا من طهي لمدة . ٣ ثانية من خلال الضغط على زر "تشغيل/. ٣+٢ ثانية". مع الضغط في كل مرة على الزر يزيد زمن الطهي. ٣ ثانية إضافية. أقصى زمن للطهي هو ٩٩ دقيقة و ٩٩ ثانية.
- 3) بعد الضغط على زر " زمن الطهي" واختيار الزمن المطلوب، اضغط على زر "تشغيل/. ٣+٢ ثانية" لبدء الطهي بالقدرة الكاملة للمايكروويف.
- ملاحظة: خلال العمل بخاصية الطهي في المايكروويف والتذويب حسب الوقت، يمكن زيادة الوقت من خلال الضغط على زر "تشغيل/. ٣+٢ ثانية".

8. التذويب حسب الوزن

- ا) اضغط على زر "التذويب حسب الوزن/الوقت" مرة واحدة، ليظهر على الشاشة "DEFI".
- ج) اضغط على أزرار الأرقام لإدخال وزن الطعام المراد تذويبه.
- يرجى مراعاة أن وزن الطعام يجب أن يكون ضمن نطاق . ١جم إلى ٢ كجم.
- ـ) في حال لم يكن وزن الطعام ضمن نطاق . ١جم إلى ٢ كجم، لن تعمل هذه الخاصية.
- ـ) اضغط على زر "تشغيل/. ٣+٢ ثانية" لبدء عملية التذويب. سيظهر على الشاشة الوقت المتبقى للطهي.

9. التذويب حسب الزمن

- ا) اضغط على زر "التذويب حسب الوزن/الوقت" مرتين، ليظهر على الشاشة "DEFI".
- ـ) اضغط على أزرار الأرقام لإدخال زمن التذويب. الوقت الفعال هو ضمن نطاق . ٩٩... - . ٩٩... .
- ـ) قدرة المايكروويف ستكون بالمستوى . ٣. في حال رغبت بتغيير مستوى القدرة، اضغط على زر "القدرة" مرة واحدة، ليظهر على الشاشة "PLA". وبعدها اضغط على أزرار الأرقام لاختيار المستوى الذي ترغب به.
- ـ) اضغط على زر "تشغيل/. ٣+٢ ثانية" لبدء التذويب. سيظهر على الشاشة الوقت المتبقى للطهي.

10. إعداد الفشار "بوب كورن"

- أ) اضغط على زر "بوب كورن" مراتاً إلى أن يظهر الرقم المراد على الشاشة. سيظهر . ٥ جم و . ٥ جم" بالتسليسل على الشاشة.
- على سبيل المثال: اضغط على زر "بوب كورن" مرة واحدة، ليظهر على الشاشة ". ٥".
- ـ) اضغط على زر "تشغيل/. ٣+٢ ثانية" للطهي، وسيصدر صوت تبيهیي مرة واحدة. عند انتهاء الطهي، سيصدر صوت تبيهیي ٥ مرات ويعود المايكروويف لوضع الانتظار.

مثال: لطهي الطعام بقدرة مايكروويف %. ٥ لمرة واحدة.

ـ) اضغط على زر " زمن الطهي" مرة واحدة، ليظهر على الشاشة ". ٦...".

ـ) اضغط على زر "٥، ٠، ٥" بالتسليسل.

ـ) اضغط على زر "القدرة" مرة واحدة، وبعدها اضغط على زر "٥" لاختيار قدرة مايكروويف %. ٥.

ـ) اضغط على زر "٣+٢ ثانية" لبدء الطهي.

ملاحظة: ١) خلال عملية الضبط خلال دقيقة واحدة، فإنه سيعود الفرن للعمل بنفس الإعدادات السابقة تلقائياً.

ـ) في حال اختيار "PLA"، سيعمل الفرن بالمروحة من دون طاقة. يمكنك استخدام هذا المستوى للتخلص من رائحة الفرن.

ـ) خلال عملية الطهي في المايكروويف، يمكن الضغط على زر "القدرة" لتعديل القدرة التي تريدها. بعد الضغط على زر "القدرة"، ستضيء القدرة الحالية لمدة . ٣ ثوان، وبعدها يمكنك الضغط على زر الأرقام لتعديل القدرة. سيعمل الفرن للوقت المتبقى بحسب القدرة التي قمت باختيارها.

٥. الطهي بالشواء

ـ) اضغط على زر "الشواء/الطهي المزدوج" مرة واحدة لاختيار وظيفة الشواء، وسيظهر على الشاشة "G-C".

ـ) اضبط زمن الطهي المطلوب. أقصى زمن للطهي هو ٩٩ دقيقة و ٩٩ ثانية.

ـ) اضبط زمن الطهي لمدة . ٣ دقيقة و . ٥ ثانية. اضغط على زر ". ٣، ٥، ٠" بالتسليسل.

ـ) اضغط على زر "تشغيل/. ٣+٢ ثانية" لبدء الطهي. سيظهر العد التنازلي لزمن الطهي.

ملاحظة: بعد مرور نصف زمن الشواء، سيتوقف الفرن عن العمل مؤقتاً ويصدر صافرة تبيهية مرتين، وهذا أمر طبيعي. يمكنك الضغط على زر "تشغيل/. ٣+٢ ثانية" لمواصلة الطهي، ولكن للحصول على تأثير أفضل للطعام المشوي، يجب أن تقوم بقلب الطعام على الجانب الآخر وغلق الباب والضغط على زر "تشغيل/. ٣+٢ ثانية" لاستكمال الطهي. وفي حال عدم القيام بأي إجراء لمدة دقيقة واحدة، سيواصل الفرن العمل ويصدر صوت تبيهیي مرة واحدة.

٦. الطهي المزدوج (مايكروويف + شواء)

ـ) اضغط على زر "الشواء/الطهي المزدوج" مرتين أو ثلاث مرات لاختيار "الطهي المزدوج" (قدرة مايكروويف + ٥٥% + قدرة شواء . ٤) أو "الطهي المزدوج G" (قدرة مايكروويف % . ٣٦ + قدرة شواء . ٧٤%)، وسيظهر على الشاشة "C-C" أو "C-C".

ـ) اضبط زمن الطهي. أقصى مدة لزمن الطهي هي ٩٩ دقيقة و ٩٩ ثانية.

ـ) اضبط زمن الطهي لمدة . ٣ دقيقة و . ٥ ثانية. اضغط على زر ". ٣، ٥، ٠" بالتسليسل.

ـ) اضغط على زر "تشغيل/. ٣+٢ ثانية" لبدء الطهي. سيظهر العد التنازلي لزمن الطهي.

قدرة الشواء	قدرة المايكروويف	المؤشر الظاهر على الشاشة	الوظيفة
%45	%55	C-1	الطهي المزدوج 1
%64	%36	C-2	الطهي المزدوج 2

تركيب الفرن على سطح العمل

يجب إخراج جميع مواد التعبئة والملحقات وفحص الفرن للتحقق من إصابته بالتلف مثل انبعاج أو باب مكسور. يجب عدم تركيب الفرن في حال إصابته بتلف.

الجسم الخارجي: يجب إزالة الطبقة الواقية الموجودة على الجسم الخارجي للفرن. ويجب عدم إزالة الغطاء المصنوع من معدن الميكا باللون البني الفاتح الذي يغطي تجويف الفرن لحماية الأنبوب المغناطيسي الإلكتروني.

تعليمات التشغيل

مستوى القدرة يتتوفر على مستوى القدرة.

المستوى	القدرة	الشاشة
0	10%	20%
1	30%	40%
2	50%	60%
3	70%	80%
4	90%	100%
5	PL0	اللهب شرط العاشر على الشاشة
6	PL1	PL2
7	PL3	PL4
8	PL5	PL6
9	PL7	PL8
10	PL9	PL10

ضبط الساعة

- اضغط على زر "الساعة/المؤقت" مرة واحدة، ليظهر على الشاشة "...".
- اضغط على مفاتيح الأرقام وادخل الوقت الحالي. على سبيل المثال، الوقت حالياً هو ١٢:٥٩، اضغط على "١، ٢، .، ٥، ٩". بالتدليل.
- اضغط على زر "الساعة/المؤقت" لإنهاء ضبط الساعة. سيبدأ رمز ":" بالوميض وستضيء الساعة.
- في حال كانت الأرقام المدخلة ليست ضمن نطاق ...-١٢:٥٩-٣٠، لن يتم ضبط الساعة ما لم يتم إدخال الأرقام الصحيحة.
ملاحظة: (١) خلال عملية ضبط الساعة، إذا تم الضغط على زر "إيقاف/إلغاء" أو في حال لم يتم إجراء العملية خلال دقيقة واحدة، فإنه سيعود الفرن إلى الإعدادات السابقة تلقائياً.
(٢) إذا استدعت الحاجة لإعادة ضبط الساعة، يرجى إعادة الخطوات من ١-٣.

مؤقت المطبخ

- اضغط على زر "الساعة/المؤقت" مرتين، ليظهر على الشاشة "...".
- اضغط على مفاتيح الأرقام وادخل زمن المؤقت. أقصى زمن للطهي هو ٩٩ دقيقة و٩٩ ثانية.
- اضغط على زر "تشغيل/.٣+ثانية" لتأكيد الضبط.
- عند الوصول لזמן المؤقت، سيصدر صوت تنبهبي لمدة ٥ مرات. وفي حال تم ضبط الساعة بنظام توقيت ٢٠ ساعة، سيظهر على الشاشة الوقت الحالي.
ملاحظة: (١) يختلف مؤقت المطبخ عن نظام توقيت ٢٠ ساعة. مؤقت المطبخ يستخدم لتحديد الزمن المطلوب للطهي.
(٢) لا يمكن ضبط أي برنامج آخر خلال العمل بمؤقت المطبخ.

الطهي في الميكروويف

- اضغط على زر "من الطهي" مرة واحدة، ليظهر على الشاشة "...".
- اضغط على مفاتيح الأرقام لإدخال زمن الطهي. أقصى زمن للطهي هو ٩٩ دقيقة و٩٩ ثانية.
- اضغط على زر "القدرة" مرة واحدة، ليظهر على الشاشة ".PL1". ستكون القدرة ١٠٪. والآن يمكنك الضغط على مفاتيح الأرقام للتحكم بمستوى القدرة.
(٤) اضغط على زر "تشغيل/.٣+ثانية" لبدء الطهي.

- 1) يجب وضع الفرن بعيداً عن أجهزة الرadioy والتليفزيون قدر الإمكان، إذ قد يسبب تشغيل الفرن تشويشاً على إرسال الرadioy أو التليفزيون.


- 2) يجب توصيل الفرن في مقبس منزلي عادي، مع ضرورة التتحقق من أن الفولتية والتردد بنفس القيم المذكورة على ملصق النسب.

- تحذير: يجب عدم تركيب الفرن أعلى سطح الموقد أو أي جهاز آخر يبعث حرارة. ويمكن أن يؤدي تركيب الفرن بالقرب من أو أعلى مصدر حرارة إلى تلف الفرن ويكون الضمان لاغياً في هذه الحالة.



- 1) يجب أن يكون أقل ارتفاع ل التركيب الضمان لاغياً في هذه الحالة.

- 1- يجب اختيار سطح مستوي يوفر مساحة مفتوحة كافية لفتحات المأخذ وأو المخرج.

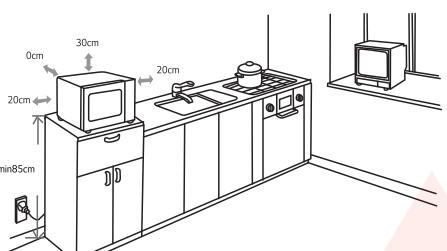

- 2) يجب وضع السطح الخلفي للجهاز في مواجهة الحائط.

- ويجب ترك مسافة ٣ سم على الأقل بين الفرن والحايط المجاور.

- 3) يجب عدم إزالة الأرجل من الفرن من أسفل.


- 4) يمكن أن يؤدي سد فتحات المأخذ وأو المخرج إلى تلف الفرن.

ضبط إعداد الفرن

أسماء القطع والملحقات الخاصة بالفرن.

قم بإخراج الفرن وكافة الأدوات من العبوة الكرتونية.
يأتي مع الفرن الملحقات التالية:


صينية زجاجية
الحلقة الخاصة بالقرص الدوار
دليل التعليمات

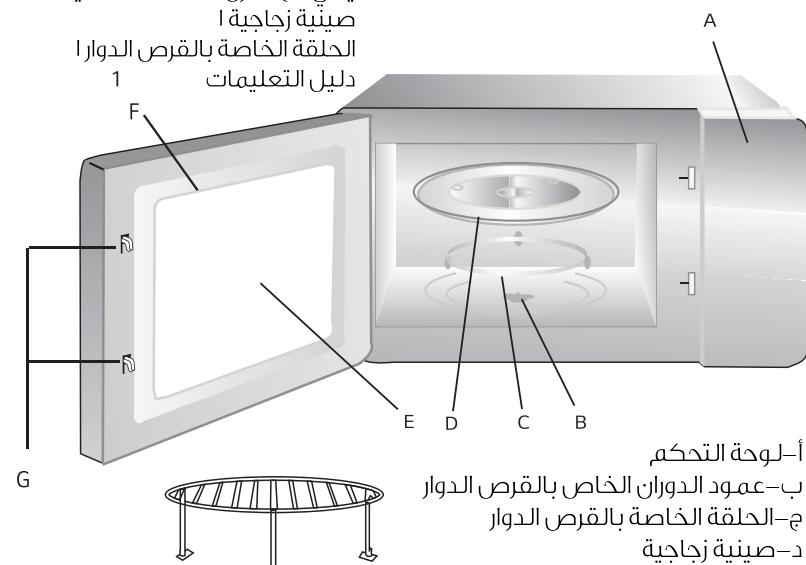

حامل الشوئاء (يستخدم فقط في
الشوئاء ويوضع على الصينية الزجاجية)

تركيب القرص الدوار

المotor (الجهة السفلية)

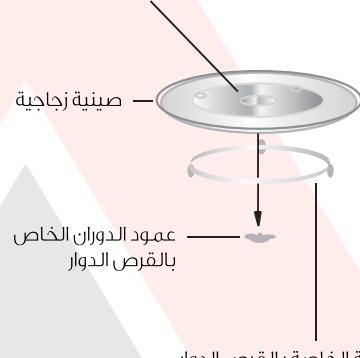

أ- يجب عدم وضع الصينية الزجاجية بالمقلوب، ويجب
عدم إعاقة حركتها.

ب- يجب استخدام الصينية الزجاجية والحلقة الخاصة
بالقرص الدوار أثناء الطهي.

ج- يجب وضع جميع أنواع الطعام وأواني الطعام
على الصينية الزجاجية للطهي.

د- في حال تصدع أو كسر الصينية الزجاجية أو حلقة
القرص الدوار، يجب الاتصال بأقرب مركز خدمة معتمد.

المواد التي يُنصح باستخدامها في فرن المايكروويف

التحليل بالبلاستيك
فقط الأنواع الآمنة الاستخدام في المايكروويف. يستخدم لتغطية الطعام أثناء الطهي لاحتفاظ بالسوائل فيه. يجب تجنب ملامسة الغلاف البلاستيكي للطعام.

مقاييس درجة الحرارة
فقط المقاييس الآمنة الاستخدام في المايكروويف (مقاييس درجة حرارة اللحوم
ومقاييس درجة حرارة الحلوي)

ورق الشمع
يستخدم كغطاء لتجنب انسكاب المحتويات والاحتفاظ بالسوائل.

الأدوات ملاحظات
المواد التي لا يُنصح باستخدامها في فرن المايكروويف

صينية من الألومنيوم
قد تسبب شرارة، لذلك يجب نقل الطعام إلى طبق آمن للاستخدام في المايكروويف.

عبوات الطعام
قد تسبب شرارة، لذلك يجب نقل الطعام إلى طبق آمن للاستخدام في الكرتونية المزودة المايكروويف.
بمقبضه عددي

الأدوات المعدنية تحمي المعادن الطعام من طاقة المايكروويف، ولكن قد تسبب شرارة.
أو ذات الحواف
لمعنية

الأربطة المعدنية
قد تسبب شرارة ويمكن أن تؤدي إلى اندلاع حريق في الفرن.

الأكاسيس
الورقية
قد تسبب حريقاً في الفرن.

الفوم
البلاستيكي
قد ينصهر الفوم البلاستيكي أو يتسبب في تلویث السائل الذي يحتويه عند التعرض لدرجة حرارة عالية.

الخشب
يتعرض الخشب للجفاف عند استخدامه في فرن المايكروويف وقد ينكسر أو يتشقق.

يجب التحقق من فصل الجهاز عن مصدر الكهرباء.

1- يجب تنظيف تجويف الفرن بعد الاستعمال باستخدام قطعة قماش مبللة قليلاً.

2- يجب تنظيف ملحقات الجهاز بالطريقة المعتادة في ماء بمنظر.

3- يجب العناية بتنظيف الإطار المحيط بالباب وغلق الأجزاء المحيطة باستخدام قطعة قماش مبللة عندما تراكم عليهم الأوساخ.

4- يجب عدم استخدام منظفات جلي قوية أو أدوات حادة لتقشير المعادن لتنظيف باب الفرن الزجاجي، إذ إنها يمكن أن تسبب في خدش السطح وهو ما قد يؤدي إلى كسر الزجاج.

5- نصيحة لتنظيف الجهاز - لتنظيف جوانب الفرن من الداخل والتي يمكن أن يلامسها الطعام الذي يتم تحضيره: ضع نصفليمونة في إناء، ثم أضف ..مل (٣/٤) بينت) من الماء واضبط درجة تسخين المايكرورويف على ..% المدة عشر دقائق. بعد ذلك امسح الفرن باستخدام قطعة قماش ناعمة وجافة.

أدوات الطعام

تبنيه

خطر إصابة الأشخاص

من الخطر أن يقوم شخص غير مختص بإجراء عمليات الصيانة أو الإصلاح التي تشمل إزالة غطاء الجهاز الذي يحمي من التعرض لطاقة المايكرورويف

يرجى الاطلاع على التعليمات الخاصة بـ

"المواد التي ينصح أو لا ينصح

باستخدامها في فرن المايكرورويف". وقد يكون هناك أدوات غير معدنية معينة لا يكون من الآمن استخدامها في فرن المايكرورويف. وفي حالة الشك يمكنك اختبار الأداة من خلال الإجراء التالي.

اختبار الأدوات:

- الملأ وعاء يكون من الآمن استخدامه في الفرن بكوب من الماء البارد (٥٠مل) وضع فيه الأداة.

- أقم بتشغيل الجهاز على أقصى طاقة لمدة دقيقة واحدة.

- أقم بتحبس الأداة بعناء، إذا كانت الأداة الفارغة دائمة فلا ينصح باستخدامها للطهي في فرن المايكرورويف.

- يجب ألا يزيد زمن الطهي عن دقيقة واحدة.

المواد التي ينصح باستخدامها في فرن المايكرورويف

ملاحظات

للタルيف فقط، إذ يمكن استخدام قطعة صغيرة لتفطية شرائط رفيعة من اللحم أو الدجاج للتجنب تسويتها بشكل زائد. ويمكن ظهور شرارة في حال ملاصقة ورق القصدير لجدار الفرن، لذلك يجب أن يبعد ورق القصدير مسافة بوصة واحدة (٢.٥ سم) عن الجدار.

يرجى الالتزام بتعليمات جهة التصنيع. يجب أن تكون قاعدة الطبق بعيدة عن القرص الدوار مسافة ١٦/٣ بوصة على الأقل (٥ ملم)، وقد يؤدي الاستخدام بشكل خاطئ إلى كسر القرص الدوار.

الأدوات الآمنة الاستخدام في المايكرورويف فقط. يرجى الالتزام بتعليمات جهة التصنيع. يجب عدم استخدام أطباق متصدعة أو مكسورة.

يجب إزالة الغطاء دائمًا، على أن تستخدم فقط لتسخين الطعام حتى يصبح دافئاً. معظم المرطبات الزجاجية لا تكون مقاومة للحرارة لذلك قد تنكسر.

تستخدم فقط الأواني الزجاجية المقاومة للحرارة المناسبة للفرن. يجب التتحقق من أنها غير مزودة بدواويف معدنية. ويجب عدم استخدام أطباق متصدعة أو مكسورة.

يرجى الالتزام بتعليمات جهة التصنيع. يجب عدم غلق الأكياس بأربطة معدنية. يجب عمل فتحات تسخيم بابعات البخار.

الأطباق والأكواب تستخدم فقط للطهي التدفئة فتحة قصيرة يجب عدم ترك الفرن دون متابعته أثناء الطهي.

تستخدم لتفطية الطعام الذي يعاد تسخينه وافتراض الدهون. يجب أن تستخدم تحت إشراف للطهي لفترة قصيرة فقط.

يستخدم كغطاء لمنع الانسكاب أو للタルيف أثناء تعريض الطعام للبخار.

فقط الأواني الآمنة الاستخدام في المايكرورويف. يرجى الالتزام بتعليمات جهة التصنيع. يجب أن تحمل هذه الأواني علامة "آمن للاستخدام في المايكرورويف".

بعض الأواني البلاستيكية تصبح لينة عندما يصبح الطعام الذي تحتويه ساخناً "أكياس الغليان" والأكياس البلاستيكية المحكمة الغلق يجب أن يتم عمل فتحات أو ثقوب فيها أو تهويتها حسب التوجيهات المكتوبة على العبوة.

لتقليل خطر إصابة الأشخاص التأريض

يجب استشارة كهربائي مختص أو أخصائي صيانة في حال عدم فهم إرشادات التأريض بشكل كامل أو في حال الشك في تأريض الجهاز على نحو سليم. وإذا كان من الضروري استخدام سلك الامتداد، يجب استخدام سلك مكون من ثلاثة أسلاك فقط.

- يأتي مع الجهاز سلك قصير للامداد بالكهرباء لتقليل المخاطر الناتجة عن التشابك أو التعرّض في حال استخدام سلك أطول.

- في حال استخدام مجموعة أسلاك أو سلك امتداد طويلاً:

أ- يجب أن تكون النسب الكهربائية الطاهرة على مجموعة الأسلاك أو سلك الامتداد متساوية على الأقل للنسبة الكهربائية للجهاز.

ب- يجب أن يكون سلك الامتداد مكوناً من ٣ أسلاك ومن النوع المناسب للتآريض.

ج- يجب ترتيب وضع السلك الطويل بحيث لا يكون متداولاً من سطح العمل أو سطح الطاولة حتى لا يتمكن الأطفال من سحبه أو التعرّض فيه دون قصد.

خطر
خطر الإصابة بصدمة كهربائية يمكن أن يؤدي ملامسة المكونات الداخلية إلى إصابة خطيرة أو تسبب الوفاة. يجب عدم فك أجزاء الجهاز. تحذير

خطر الإصابة بصدمة كهربائية يمكن أن يؤدي الاستخدام غير السليم للتآريض إلى الإصابة بصدمة كهربائية. يجب عدم توصيل الجهاز بمأخذ الطاقة حتى يتم تركيبه وتأريضه بشكل سليم.

يجب أن يتم تأريض الجهاز. وفي حال استخدام دائرة كهربائية قصيرة، يقلل التآريض من خطر الصدمة الكهربائية عن طريق توفير سلك لمرور التيار الكهربائي. ويتميز الجهاز بأنه مزود بسلك يحتوي على سلك تأريض ومقبس تأريض. ويجب توصيل المقبس بمائدة التيار الذي يجب تركيبيه وتأريضه بشكل سليم.

26- لا يعمل الجهاز باستخدام مؤقت خارجي أو نظام منفصل للتحكم عند بعد.
27- قد تصبح الأجزاء الظاهرة ساخنة أثناء الاستعمال، لذلك يجب بإعاد الأطفال عن الجهاز.

28- يجب عدم استخدام أداة التنظيف بالبخار لتنظيف الجهاز.
29- يصبح الجهاز ساخناً أثناء الاستعمال، لذلك يجب تجنب ملامسة الأجزاء الساخنة داخل الفرن.

30- يجب استخدام مستشعر درجة الحرارة الموصى به للفرن (للفران المزودة بخاصية استخدام مستشعر درجة الحرارة).
31- تحذير: يصبح الجهاز والأجزاء الظاهرة منه ساخنة أثناء الاستعمال، لذلك يجب تجنب ملامستها والحرص على إبعاد الأطفال أقل من ٨ سنوات عنها إلا إذا كان هناك من يراقبهم.

32- يجب فتح الباب الخارجي أثناء تشغيل فرن المايكرورويف (للفران المزودة بأبواب خارجية للتربيط).

33- يجب وضع السطح الخلفي للجهاز في مواجهة الحائط.

34- يجب عدم وضع الفرن داخل خزانة.
35- يستخدم الفرن لتسخين الأغذية والمشروبات. وقد يؤدي تجفيف الطعام أو الملابس أو تسخين قطع القماش المبللة وما شابه إلى خطر الإصابة أو الاشتغال أو الحريق.

36- يجب عدم استخدام أواني معدنية للطعام والمشروبات أثناء تحضيرها في المايكرورويف.

37- يجب عدم تركيب الجهاز خلف باب ما، وذلك لتجنب السخونة الزائدة.
عند عمل الجهاز بالوضع المزدوج، يجب على الأطفال عدم استخدام الفرن بدون إشراف من قبل الكبار، وذلك نظراً لدرجات الحرارة التي يولدها الجهاز. كما يجب عدم وضع الجهاز داخل كابينة.

يرجى قراءة التعليمات السابقة بعناية والاحتفاظ بها للاطلاع عليها في المستقبل.

- 14-لا ينصح بتسخين البيض بدون إزالة القشرة والبيض الكامل المسلوق جيداً في أفران المايکروويف، إذ من الممكن أن تنفجر البيضة حتى بعد انتهاء التسخين في الفرن.
- 15-هذا الجهاز مخصص لاستخدام المنزلي، إضافةً إلى استخدامات أخرى: المطابخ الخاصة بالعاملين في المتاجر والمكاتب وبيئات العمل الأخرى؛ النزلاء بالفنادق الكبيرة والصغيرة والبيئات السكنية الأخرى؛ البيوت في المزارع؛ البيئات التي توفر المبيت بسرير ووجبة إفطار.
- 16-في حال تلف سلك الطاقة، يجب استبداله بواسطة الجهة المصنعة أو وكيل الصيانة أو أشخاص مؤهلين على نفس المستوى لتجنب المخاطر.
- 17-يجب عدم حفظ الجهاز أو استعماله خارج المنزل.
- 18-يجب عدم استعمال الفرن بالقرب من الماء أو في حوض مبلل أو بالقرب من مسبح.
- 19-قد تكون درجة حرارة الأسطح الظاهرة مرتفعة أثناء التشغيل، ويمكن أن تزيد سخونة الأسطح أثناء الاستعمال. لذلك يجب إيقاع السلك بعيداً عن الأسطح الساخنة وينصح بعدم تغطية فتحات التهوية الموجودة بالجهاز.
- 20-يجب عدم ترك السلك متتدلياً على حافة الطاولة أو سطح العمل.
- 21-عدم الحفاظ على نظافة الفرن يمكن أن يؤدي إلى تلف السطح، وهو ما يمكن أن يؤثر سلباً على عمر الجهاز وينتهي عنه وضع خطير.
- 22-يجب تقليل أو رفع محتويات زجاجات الرضاعة ومرطبات طعام الأطفال والتدقيق من درجة حرارتها قبل إعطائهما للطفل لتجنب الحرائق.
- 23-يمكن أن يؤدي تسخين المشروبات في المايکروويف إلى غليان السائل وتدهقه في وقت لاحق، لذلك يجب توحين الحرارة عند الإمساك بالوعاء.
- 24-يجب عدم استعمال الجهاز بواسطة الأشخاص (بما فيهم الأطفال) الذين يعانون من قصور في القدرات البدنية أو الحسية أو العقلية أو الذين يفتقرون إلى الخبرة والمعرفة، إلا تحت إشراف أو توجيه شخص مسؤول عن سلامتهم.
- 25-يجب مراقبة الأطفال للتأكد من أنهم لا يعبثون بالجهاز.

تحذير لتقليل خطر اندلاع حريق أو صدمة كهربائية أو إصابة الأشخاص أو التعرض لطاقة المايکروويف الزائد أثناء استعمال الجهاز، يرجى الالتزام بالتدابير الاحترازية الأساسية التالية:

- تحذير: يجب عدم تسخين السوائل والأغذية الأخرى في أواني مغلقة لأنها تكون عرضة لانفجار.
- تحذير: من الخطأ أن يقوم أي شخص غير الشخص المختص بإجراء عمليات الصيانة أو الإصلاح التي تتطلب إزالة الغطاء الذي يحمي من التعرض لطاقة المايکروويف.
- لا يمكن أن يستخدم الجهاز بواسطة الأطفال أقل من سن 8 سنوات وأكثر أو الأشخاص الذين يعانون من قصور في القدرات البدنية أو الحسية أو العقلية أو يفتقرون إلى الخبرة والمعرفة سوى تحت إشراف أو التوجيه اللازم لاستعمال الآمن للجهاز وفهم المخاطر ذات الصلة. ولا يجوز للأطفال العبث بالجهاز ولا يجوز أن يقوموا بتنظيف الجهاز وصيانته إلا إذا كان سنهما أكثر من 8 سنوات وأن يتم ذلك تحت إشراف أشخاص بالغين.
- يُحفظ الجهاز والسلك بعيداً عن متناول الأطفال أقل من 8 سنوات.
- يجب استخدام الأدوات المناسبة لاستخدام في أفران المايکروويف.
- يجب تنظيف الفرن باستمرار وإزالة بقايا الطعام من داخله.
- يرجى قراءة واللتزام بـ "التدابير الاحترازية لتجنب التعرض المحتمل لطاقة المايکروويف الزائد".
- عند تسخين الطعام في أواني بلاستيكية أو ورقية، يجب مراقبة الفرن لتجنب إمكانية الاشتعال.
- في حال اندفاع دخان من الجهاز، يجب إيقاف تشغيله أو فصله عن الكهرباء وإيقاع الباب مغلقاً لإخماد اللهب.
- يجب تجنب طهي الطعام لوقت طويل داخل الفرن.
- يجب عدم استخدام تجوييف الفرن لأغراض حفظ الطعام، مثل الخبز والبسكويت، إلخ.
- يجب إزالة الأربطة المصنوعة من السلك والمقابض المعدنية من الأواني / الأكياس الورقية أو البلاستيكية قبل وضعها في الفرن.
- يجب تركيب أو وضع الفرن وفقاً لإرشادات التركيب الواردة في هذا الدليل.

تدابير احترازية لتجنب التعرض للمحتمل لطاقة المايكروويف الزائدة

- (أ) لا تحاول تشغيل الفرن والباب مفتوح، إذ يمكن أن يؤدي ذلك إلى التعرض بشكل خطير إلى الطاقة المايكروويف. ومن الضروري عدم كسر أقفال الأمان أو العبث بها.
- (ب) لا تضع أي غرض بين الواجهة الأمامية للفرن والباب، ولا تسمح بتجمع بقايا التربة أو المنظف على الأسطح الخاصة بإحكام الغلق.
- (ج) تحذير: في حال تلف الباب أو أقفاله، يجب عدم تشغيل الفرن حتى يتم إصلاحه على يد شخص مختص.

ملحق

في حال عدم الحفاظ على تنظيف الجهاز جيداً، يمكن أن يتعرض سطحه للتلف ويتأثر عمره، مما يؤدي إلى أخطار محتملة.

المواصفات

MWHA-42G3H	الموديل:
فولت 240 – 220 فولت 50 هرتز	الفولتية المقدرة:
1550 واط	طاقة الدخول المقدرة (موجات كهرومغناطيسية قصيرة):
1100 واط	طاقة الخرج المقدرة (موجات كهرومغناطيسية قصيرة):
1400 – 1200 واط	طاقة الدخول المقدرة (الشوي):
42 لتر	سعة الفرن:
Φ345 ملم	قطر القرص الدوار:
327 × 470 × 553 ملم	الأبعاد الخارجية:
17.72 كجم تقريباً	الوزن الصافي:



الطراز: MWHA-42G3H