



مدفأة كهربائية

PTC Room Heater

دليل المستخدم

User's Manual

الطراز:

EH2KTH3 ▲

Model:

▲ EH2KTH3

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الجهاز،
و احتفظ به للرجوع إليه مستقبلاً.

هذه التصاميم و المواصفات عرضة للتغيير بهدف إدخال تحسينات عليها
و ذلك دون إشعار مسبق.


Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change for improvement
without prior notice.

ISO9001 CE

ISO9001 CE



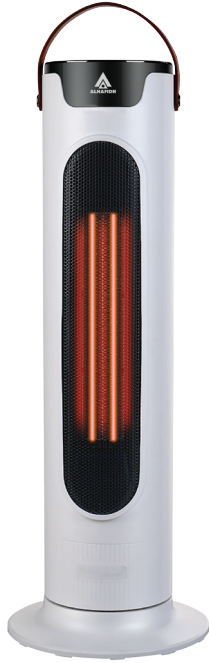


Model: EH2KTH3

SAFETY INSTRUCTION


1. Plug the heater into a polarized 220-240V- 50/60Hz outlet, please check the outlet when use and choice 250V- 10A or above outlet, and check outlet and plug connection is good.
2. Keep combustible materials such as furniture, pillows and curtains far away from the heater to avoid damage them and make the heater damaged by over-heating.
3. Don't set the heater directly under the power outlet.
4. To avoid meeting danger, don't insert any thing into the wind exit, it is more important to children.
5. This heater is hot when in use, to avoid burns, don't let bare skin touch hot surface.
6. When stop using, please first close the power switch, and keep the cold wind 30 seconds to One minute to protect inside part.
7. If long time don't use the heater, please pull out the plug from outlet.
8. Place the heater on a firm, level surface free from obstructions.
9. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. The fan heater must not be located immediately below a socket-outlet
11. If find that have some bad smell or smoking and other special noise, please stop using at that present, close the heater, and send to mend.
12. It will cause danger of fire when uncorrected place or packing .so do not make any element which can connect automatically power ,such as proceeding equipment, timer etc to use this heater
13. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
14. Warning: In order to avoid overheating, Do not cover the heater.
15. WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
16. This appliance can be used by children aged from 8 years and above and persons with rescued physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a sage way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised.



PRODUCT STRUCTURE

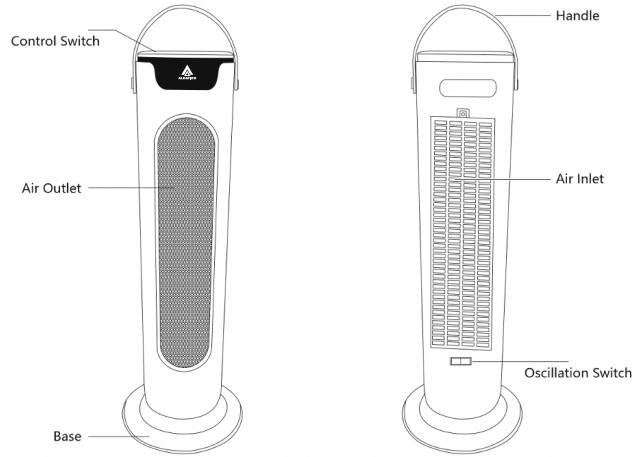

PRODUCT STRUCTURE

1. Completely uncoil the cord and plug heater directly into a 220-240 Volt grounded AC wall outlet. Be sure the plug fits tightly. A loose fit will cause overheating and damage the plug. Plug and cord may feel warm during normal usage. Avoid extension cords.

2. **FAN FUNCTION:** Turn the switch to the position “”, the heater will work at the fan function.


3. **HEATING FUNCTION:** Turn the switch to the position “”, the heater will work at the low heat situation. Turn the switch to the position “”, the heater works at the high heat situation.

4. **OFF FUNCTION:** When you want to turn off the heater, please turn the switch to the position “OFF”.

5. **THERMOSTAT FUNCTION:** turn the switch to the position from “MAX” to “MIN”; the heater works at the high heat situation. When environment temperature arrive your setting point, the PTC heating element will stop work, if environment temperature is lower than your setting point, the PTC heating element will continue to work.

6. **OSCILLATION FUNCTION:** turn on the “SWING” switch on the back of heater to control the oscillation function.  “O”= OFF, “-”=ON

CONTROL SWITCH

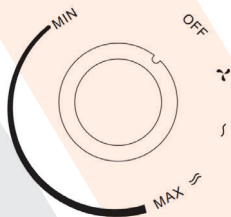

STORAGE AND MAINTENANCE

1. Turn off the power and unplug the power before cleaning.
2. After the product is completely cooled, wipe the outer surface with a soft cloth, and use a soft brush to clean the ventilation holes.
3. After cleaning, until the product is completely dried, it can be used by electricity or put into the original packaging, and placed in a dry and ventilated place for proper storage.
4. Do not rinse directly with water during the cleaning process to avoid damage to the machine.
5. Avoid using a thinner, toluene, acidic detergent, alcohol and other chemical agents to wipe the product.


DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT



To protect our environment and to recycle the raw materials used as completely as possible, the consumer is asked to return unserviceable equipment to the public collection system for electrical and electronic. The symbol of the crossed indicates that this product must be returned to the collection point for electronic waste to feed it by recycling the best possible raw material recycling.

By ensuring this product you will prevent possible negative effects on the environment and human health, which could otherwise be caused due to improper disposal of that product. The recycling of materials from this product, you will help to preserve a healthy environment and natural resources.


أجزاء الجهاز

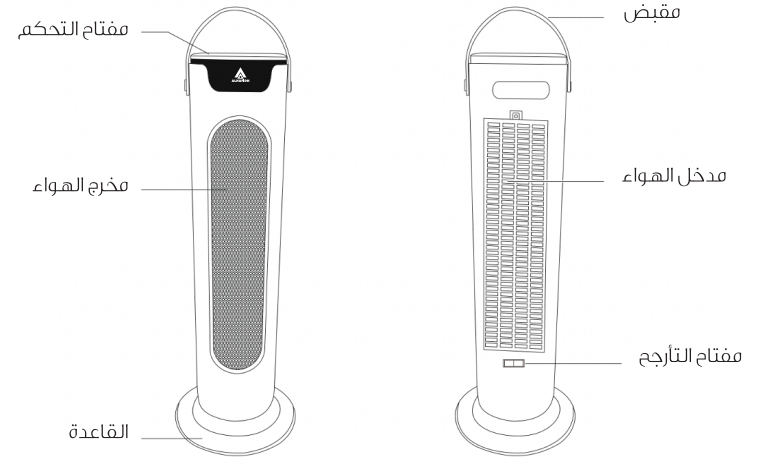

تعليمات التشغيل

1. قم بفك السلك تماماً، ووصل المدفأة مباشرةً بمأخذ تيار متردد مؤرض بقدرة 220-240 فولت. وتأكد من تركيب القابس بإحكام وسيؤدي عدم التوافق إلى ارتفاع درجة الحرارة وتلف القابس. وقد تشعر بسخونة القابس والسلك أثناء الاستخدام العادي، وتجنب وجود وصلات في الأسلاك.
2. وظيفة المروحة: أدر المفتاح إلى الوضع " "، ستعمل المدفأة في وظيفة المروحة.
3. وظيفة التدفئة: أدر المفتاح إلى الوضع " "، ستعمل المدفأة على وضع الحرارة المنخفضة. أدر المفتاح إلى الوضع " "، ستعمل المدفأة بوضع الحرارة المرتفعة.
4. وظيفة إيقاف المدفأة: عندما ترغب في إيقاف تشغيل المدفأة، يرجى تحويل المفتاح إلى الوضع "OFF".
5. وظيفة الترموستات: أدر المفتاح من "MAX" إلى "MIN"، وعندها ستعمل المدفأة في وضع الحرارة المرتفعة، وعندما تصل درجة حرارة البيئة المحيطة بالمدفأة إلى نقطة الضبط التي قمت بتحديدتها، عندها سيتوقف عنصر تسخين المعامل الحراري الموجب، وإذا كانت درجة حرارة البيئة أقل من نقطة الضبط الخاصة بك، فسيستمر عمل عنصر تسخين المعامل الحراري الموجب.
6. وظيفة تارجم المروحة: قم بتشغيل مفتاح "التارجم" في الجزء الخلفي من المدفأة للتحكم في وظيفة التارجم. "0" = إيقاف، "-" = تشغيل.

مفتاح التحكم

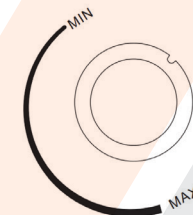

التخزين والصيانة

1. يجب إطفاء الجهاز وفصله عن مصدر الكهرباء.
2. بعد أن يبرد المنتج تماماً، يجب مسح السطح الخارجي بقطعة قماش ناعمة، مع استخدام فرشاة ناعمة لتنظيف فتحات التهوية.
3. بعد التنظيف، انتظر حتى يجف المنتج تماماً ويمكن توصيله بالكهرباء أو وضعه في العبوة الأصلية، ووضعه في مكان جاف وجيد التهوية للتخزين المناسب.
4. يحظر شطف المنتج مباشرةً بالماء أثناء عملية التنظيف لتجنب تلف الجهاز.
5. يحظر استخدام المنظفات الحمضية والمنظفات الحمضية والكحول والعوامل الكيميائية الأخرى لمسح المنتج.

خلص من نفايات المعدات الكهربائية والإلكترونية

لحماية بيئتنا وإعادة تدوير المواد الخام المستخدمة على أكمل وجه ممكن، يُطلب من المستهلك إعادة المعدات غير الصالحة للخدمة إلى نظام الجمع العام للكهرباء والإلكترونيات. ويشير الرمز الموضح إلى أنه يجب إعادة هذا المنتج إلى نقطة التجميع الخاصة بالنفايات الإلكترونية لغرض إعادة تدوير أفضل للمواد الخام. ستمنع الآثار السلبية المحتملة على البيئة وصحة الإنسان، والتي يمكن أن تحدث بسبب التخلص غير السليم من هذا المنتج. وستساعدك إعادة تدوير المواد الخاصة بهذا المنتج في الحفاظ على بيئة صحية وموارد طبيعية.



تعليمات السلامة

1. يرجى توصيل المدفأة بمقبس طاقة مستقطب 220-240 فولت- 50/60 هرتز، ويرجى التحقق من المقبس عندما يكون الاستخدام واختيار 250 فولت- 10 أمبير أو أعلى، والتحقق من أن توصيل المقبس والقابس جيد.
2. احتفظ بالمواد القابلة للاحتراق مثل الأثاث والوسائد والستائر بعيداً عن المدفأة لتجنب تلفها والتسبب في تلف المدفأة بسبب ارتفاع درجة الحرارة.
3. يحظر وضع المدفأة تحت القابض الكهربائي مباشرة.
4. لتجنب حدوث أي مخاطر، يرجى عدم إدخال أي شيء في مخرج الهواء الساخن.
5. تكون هذه المدفأة ساخنة عند الاستخدام، لذا يحظر لمس سطح المدفأة لأن ذلك سيسبب الحروق.
6. عند التوقف عن الاستخدام، يرجى أولاً إغلاق مفتاح الكهرباء، والحفاظ على الرياح الباردة لمدة تتراوح من 30 ثانية إلى دقيقة واحدة لحماية الجزء الداخلي.
7. في حالة عدم استخدام المدفأة لفترة طويلة، يرجى سحب القابض من المقبس.
8. ضع المدفأة على سطح ثابت ومستوي وخال من العوائق.
9. في حالة تلف سلك توصيل الطاقة الكهربائية، يجب استبداله بواسطة الشركة المصنعة أو وكيل الخدمة التابع لها أو أشخاص مؤهلين لتجنب المخاطر.
10. يجب عدم وضع المدفأة أسفل المقبوس الكهربائي مباشرة.
11. في حالة انبعاث رائحة كريهة من المدفأة أو رائحة دخان وغيرها من أصوات الضوضاء الخاصة، يرجى التوقف عن الاستخدام في ذلك الوقت وإغلاق المدفأة وإرسالها للإصلاح.
12. سوف يتسبب ذلك في خطر نشوب حريق عند وضع المدفأة في مكان غير صحيح أو تعبئتها بشكل غير مناسب، لذلك لا تستخدم أي عنصر يمكنه توصيل الطاقة تلقائياً، مثل معدات المتابعة والمؤقت وما إلى ذلك لاستخدام هذه المدفأة.
13. يحظر استخدام هذه المدفأة في محيط الحمام أو حمامات السباحة.
14. تحذير: يحظر تغطية المدفأة لتجنب الحرارة المفرطة.
15. تحذير: هذه المدفأة غير مجهزة بجهاز للتحكم في درجة حرارة الغرفة. لا تستخدم هذه المدفأة في الغرف الصغيرة عندما يكون بها أشخاص غير قادرين على مغادرة الغرفة من تلقاء أنفسهم حالة لم يكن هناك إشراف مستمر على المدفأة.
16. هذا الجهاز غير مصمم للاستخدام من قبل الأطفال الذين تتراوح أعمارهم بين 8 سنوات وما فوق والأشخاص الذين يعانون من قصور في القدرات البدنية أو الحسية أو العقلية أو نقص في الخبرة والمعرفة، إلا إذا كان ذلك تحت إشراف أو توجيه خاص باستخدام الجهاز بطريقة آمنة وفهم المخاطر التي ينطوي عليها استخدامه. لا ينبغي السماح للأطفال باللعب بالجهاز، لا يجوز السماح للأطفال بتنظيف وصيانة الجهاز دون الحصول للإشراف.



الطراز: EH2KTH3