



# QLED TV

## دليل المستخدم

### الموديل:

- 50Q8 ▲
- 55Q8 ▲
- 65Q8 ▲

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الجهاز،  
واحتفظ به للرجوع إليه مستقبلاً

هذه التصاميم والمواصفات عرضة للتغيير بهدف إدخال تحسينات عليها  
وذلك دون إشعار مسبق

ISO9001 CB



# QLED TV

## User's Manual

### Models:

- ▲ 50Q8
- ▲ 55Q8
- ▲ 65Q8

Please read this manual carefully before operating your set.  
Retain it for future reference.

Designs and specifications are subject to change for improvement  
without prior notice.

ISO9001 CB





Models: 50Q8  
55Q8  
65Q8

## Table of Contents

### Chapter 1: Introduction

Precautions .....	3
Product .....	3
Power and Plug .....	3
Power Cord and Signal Cable .....	3
Use Environment .....	3
Cleaning .....	3
Hanging the TV Set on the Wall .....	3
Buttons on the TV .....	4
Sockets .....	5
Remote Control Functions .....	6
How to Pair Remote Control with the TV.....	7

### Chapter 2: General Operation

Switching on .....	8
Switching off .....	8
Network connection .....	9
TV - Initial Setup .....	10

### Chapter 3: Home Features

Homepage Operation .....	11
--------------------------	----

### Chapter 4: Using your TV

Accessing channels .....	12
Watching connected devices .....	12
Volume.....	12
Using Quick Access Menu.....	12
Display & Sound .....	12
TV .....	12
Using TV Settings.....	13
Channels Setup .....	13
Picture & Display .....	14
Sound .....	14
Smart Zone .....	15
System .....	15

### Chapter 5: Other Information

Smart Player .....	16
Attention and Frequently Asked Questions.....	16
Troubleshooting .....	17
Base Installation .....	17

## Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

## Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

## Power and Plug

- Unplug the set under the following conditions:
  - If the set will not be used for a long period of time.
  - If the power cord or the power outlet/plug is damaged.
  - Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
  - If the set is subject to impact or has been dropped to have the cabinet damaged.

## Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

## Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set near dust place.

## Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

## Hanging the TV Set on the Wall

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:


- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Note:  
Illustrations within this publication are provided for reference only.

## Buttons on the TV

**Note:** The location and names of the function buttons and power button on the TV may vary according to TV model. And some buttons may not be available for some models.

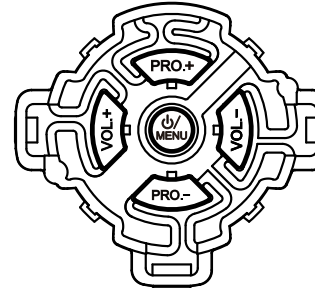

### 1. PROGRAM(CHANNEL) UP/DOWN button

Scans up/down through the channel list. In the menu system, they act like the up/down direction buttons on the remote and adjust menu controls.

### 2. VOLUME UP/DOWN button

Increases/decreases the volume. In the menu system, they act like the right/left direction buttons on the remote and adjust menu controls.

### 3. ⏻/MENU button

Turns the TV on or standby. The TV is on, short press it to confirm items, and long press it, brings up the NAV menu.

**Note:** The location and names of the function buttons and power button on the TV may vary according to TV model.

## Sockets


Note: The location and names of the sockets on the TV may vary according to TV model, and some sockets may not be available for some models.

USB	USB sockets (input) These sockets can be used to connect an USB device. Note: The number of USB sockets on the TV may vary according to TV model.
LAN	LAN RJ45 plug for connecting to external modem or network access equipment.
SATELLITE IN	SATELLITE IN socket (input) This socket can be used to connect the satellite receiver pot.
ANTENNA IN	ANTENNA IN socket (input) This socket can be used to connect the outside aerial or cable network.
SPDIF	SPDIF socket This output can be used to connect a compatible digital audio receiver.
HDMI	HDMI socket (input) The HDMI (High-Definition Multimedia Interface) socket can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.
EARPHONE OUT	EARPHONE socket (output) Allow you to connect earphones to listen to the sound coming from the TV. Note: Excessive sound pressure from earphones can cause hearing loss.
AV IN	<b>Video + audio mini sockets(input)</b> The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles. The VIDEO IN socket provides composite video connection.

## Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

Note: Figures and illustrations on this operation manual are provided for reference only and may differ from the actual product appearance. Certain function may not be available for some models, e.g.

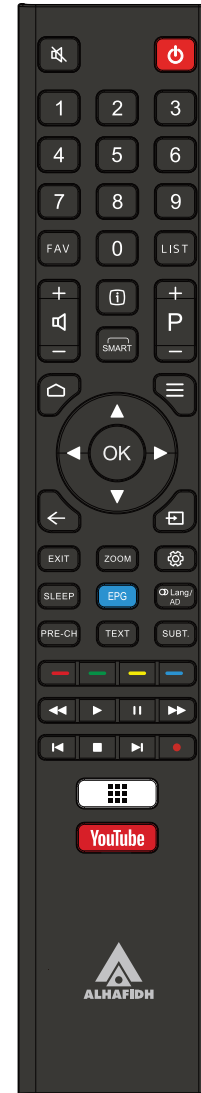

<b>MUTE</b>	To mute and un-mute the sound.
	Turns the TV on or off.
<b>0-9 buttons</b>	To enter channel numbers.
<b>FAV</b>	To bring up the favorite channel list menu.
<b>LIST</b>	To display the channel list.
<b>+</b>	To control the volume.
<b>P +/-</b>	To adjust channels.
<b>Info. (i)</b>	To display program information, if available.
<b>SMART</b>	To enter SMART function interface.
<b>HOME</b>	To enter Homepage.
<b>MENU</b>	Enter into Quick Access Menu.
<b>OK</b>	Confirms your selection.
<b>▲ ▼</b>	To navigate through the menus; to select menu options; to switch to the previous or next photo, song or video in USB function.
<b>◀ ▶</b>	To navigate through the menus; to set functions and change values. ▶ can also be used to open the corresponding submenu.
<b>BACK</b>	To go back to the previous menu or interface; to exit a running app.
<b>SOURCE</b>	To enter source selection interface.
<b>EXIT</b>	To go back to the previous menu or interface; to exit a running app.
<b>ZOOM</b>	To select the picture format.
	Enter into Using TV System menu.
<b>SLEEP</b>	To set the TV to turn off after a given amount of time.
<b>EPG</b>	To toggle the Electronic Program Guide on or off under DTV source.
<b>Lang/AD</b>	To select a sound type available for selected analogue TV program;
<b>PRE-CH</b>	To return to the previous channel.
<b>TEXT</b>	To toggle Teletext on or off.
<b>SUBT.</b>	To select a subtitle language available for selected digital TV program.
<b>Colored buttons</b>	To select tasks or Teletext pages.
<b>◀▶</b>	To start fast reverse or fast forward.
<b>▶</b>	To start playback.
<b>  </b>	To pause playback.
<b>◀▶</b>	To select the previous or the next photo, music or video.
<b>■</b>	To stop playback.
<b>● REC</b>	To record programs under DTV source.
	Goes to the Google App Drawer.
<b>YouTube</b>	Goes to the YouTube homepage.



### Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

- POWER** (On/Off button) Turns the TV on or off.
- To mute and un-mute the sound.
- Enter into Using TV System menu.
- To enter SMART function interface.
- To enter source selection interface.
- (up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls. buttons can up or down to through the current channel list under TV source.
- OK** Confirms your selection.
- Exit the menu and return to the previous menu.
- Goes to the smart TV homepage.
- Enter into Quick Access Menu.
- To Enter into virtual keyboard.
- Increases or decreases the TV's volume.
- YouTube** Goes to the YouTube homepage.
- Goes to the Google Play store homepage.
- (Mic)Click to interact with Google Assistant of the TV.  
(Available only when the network connection is normal.)

### How to Pair Remote Control with the TV

This is a Bluetooth remote control, and before using it, please pair it with the TV firstly. The following steps are for your reference:

- Step 1: Press button to enter the home page.
- Step 2: Press button to enter the "RC pairing".
- Step 3: Follow the "Settings tips page", Press OK and together.
- Step 4: The screen will display "Pairing...", Pair finished the screen will display "Success!".

**NOTE:** If you wait more than 2 minutes and it can't pair, please repeat the above steps for pairing again.

If you want to unpair the Bluetooth remote, As follow:

- Step 1: Press button to enter the home page.
- Step 2: Press to choose , and then press OK to enter.
- Step 3: Press to select "Remotes & Accessories" and then to choose the Bluetooth remote name to enter next steps.
- Step 4: Press unpair and then choose OK button.



Please press OK and HOME at the same time.



Keep RC and TV within 1 meter.

### Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two batteries in the remote control.

Precautions on using batteries:

- Only use the battery types specified.
  - Make sure you use the correct polarity.
  - Do not mix new and used batteries.
  - Do not use rechargeable batteries.
  - Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
  - Remove the batteries from the remote control if you are not using it for a long period of time.
2. Connect the power cable **FIRST** to the television, **THEN** to a mains socket.  
(Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)
  - If your TV is connected to an AC supply  
Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
  - If your TV is connected to a DC supply  
Your TV set should only be connected to a DC supply. It must not be connected to an AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
  3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.
  4. When powered on, the TV will be turned on directly or be in standby.  
Note: For some models, switch the TV on by pressing the power button.
- If the power indicator lights up, the TV set is in standby mode. Press the button on the remote control or on the TV set to turn on the TV.

### Switching off

- To put the TV set into standby mode, press the button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.  
Note: For some models, press the power button to switch off the TV set.

## Network Connection

To access the Internet, you must subscribe to high speed broadband Internet service with your Internet service provider (ISP).

Your TV can be connected to your home network in two ways:


- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless and your home wireless network.

**Note:** Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP.

### Connecting to a wired network

To connect to a wired network:


1. Ensure you have:
  - An Ethernet cable long enough to reach your TV
  - A router or modem with an available Ethernet port
  - A high-speed Internet connection
  - An Ethernet (LAN) port on the back of the TV
2. Connect your Ethernet cable to the router and to the Ethernet port on the back of the TV.
3. Use the **Network** menu to configure the TV.

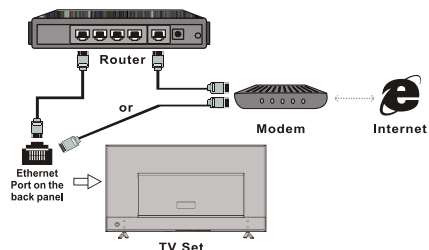

### Connecting to a wireless network

To connect to a wireless network:

1. Ensure you have:
  - A router broadcasting a high-speed wireless signal
  - A high-speed Internet connection
2. Use the **Network** menu to configure the TV.

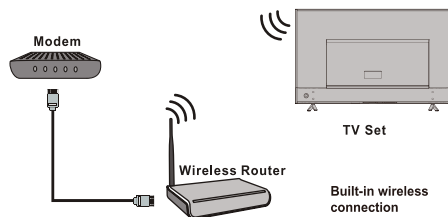

## TV - Initial Setup

Initial setup involves selecting all the settings required to be able to search for and store all the analogue channels you can receive.

Make sure that the television is switched on and follow all the steps in turn specified hereafter.

Note: If the channel search retrieved only few channels it could be caused by poor broadcasting and therefore is not covered by manufacturer warranty. Manufacturers cannot be held responsible for lack of or poor broadcasting in some areas.

The first time you switch the set on, the Initial Setup wizard opens, which guides you through the initial setup process.

### Step 1: Environment

Press ▲/▼ to select your environment. Then press OK to enter next step.

Home Mode: You Would be able to view the standard settings for Picture and sound modes.

Shop Mode: You can enjoy enhanced setting for Picture and Sound modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

### Step 2: Where are you?

Press ▲/▼ to select your Country/Region. Press OK to confirm and move to next step.

### Step 3: Terms & Conditions

Use ▲/▼ to read Terms & Conditions, then press OK to confirm and move to next step.


### Step 4: Channel installation

Use ▲/▼ to select Tuner mode: Antenna, Cable or Satellite; Type: Digital, Analogue and All, then press OK to confirm and move to next step.


### Step 5: Please check settings

When all setup is done, the [ Please check settings] interface displays on the screen, and press OK to finish the initial setup. You can also go back to former step and make any changes by using ← button.


Step 1:

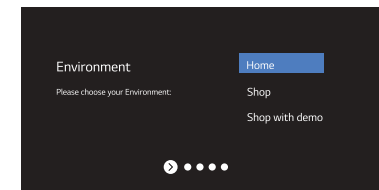


Step 2:

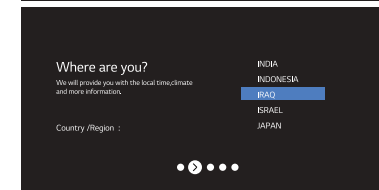


Step 3:

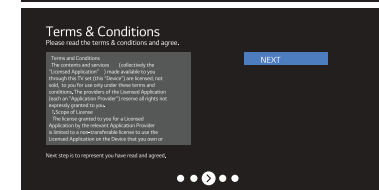

Step 4:

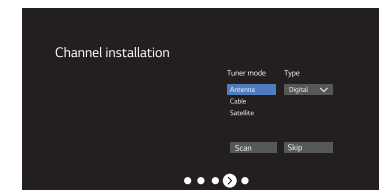


Step 5:

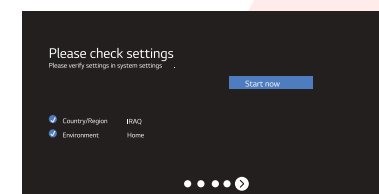

## Homepage Operation

Note: This manual is for common use. Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. And for some models, certain options are not available.


You can select all the features from homepage.

Press  to display homepage.

Press /// to select icons from the screen list.

Press OK to enter each option.

To exit the menu, press .

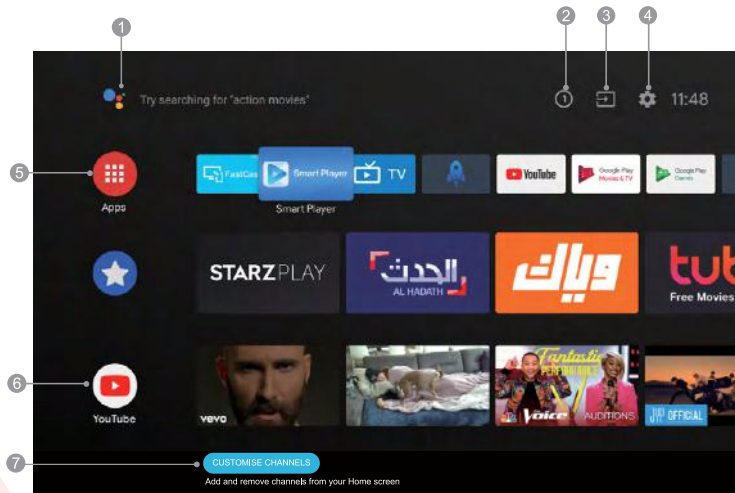



**Note:** The picture is only for reference

- 1. Google Assistant:** Click to interact with Google Assistant of the TV.
- 2. Notifications:** Remind you of system-critical information, such as low disk space, Google sign in or account errors, network connectivity issues, etc.
- 3. Input:** Select the input source.
- 4. Settings:** Access the system setting.
- 5. Apps:** Show the list of favorite applications, or access the application center.
- 6. Youtube:** Browse this application to watch a wide variety of online videos.
- 7. CUSTOMISE CHANNELS:** Add and remove channels from your Home screen.



**Note:**


- 1) The functions and contents of "Home Page" may vary by different countries or models.
- 2) Before using network functions in home page like network applications and so on, please connect the TV to the network firstly.
- 3) Icon copyrights are owned by the application providers.

## Accessing channels

/ buttons can up or down to switching channel. or open virtual keyboard and select digital switching channel

## Watching connected device


Press SOURCE then press / to select your desired source, and then press OK to confirm.

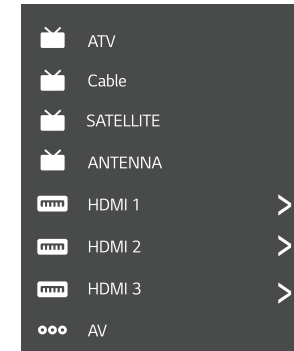

Note: The available source might differ depending on the model.

## Volume









Volume control: press the VOL +/- buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the  button to temporarily mute the sound. Press this button again or the vol + button to restore the sound.

## Using Quick Access Menu

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

This section explores the menus and settings of your TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

1. In TV mode, press  on the remote control to display the quick access list.
2. Press / to select the desired item, then press OK to open the corresponding submenu.
3. In submenu, use / and OK buttons to make the adjustments, or use / to select an item, use OK to enter and operate according to the on-screen display or guide.
4. Press  to return to the previous menu.

Display & Sound	TV
Info	Scan channels
Picture adjustments	Channel organizer
Screen	
Sound adjustments	
Speakers	
HDMI Settings	

## Display &amp; Sound

**Info:** Select this option to view TV information.

**Picture adjustments:** Enter to adjust picture mode or Advanced settings.

**Screen:** Select this option to adjust the picture size.

**Sound adjustments:** Select this option to set the sound adjustments.

**Speakers:** To enter TV speaker settings.

**HDMI Settings:** Enter to set up HDMI devices for streamlined control.

## TV


**Scan channels:** To setup Analogue or Digital channels.

**Channel Organizer:** Highlight the channels you want to move, then press the right arrow key. You can use the arrow keys to move the channel. If you want to delete the highlighted channel, press OK key.

## Using TV Settings

The Settings menu allows you to configure the TV with your preferences.


Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

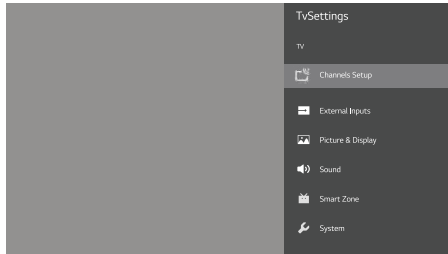

TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:


1. Press ▲/▼ to select the desired item, then press OK to open the corresponding submenu.
2. In submenu, use ▲/▼ and OK buttons to make the adjustments, or use ▲/▼ to select an item, use OK to enter and operate according to the on-screen display or guide.
3. Press ← to return to the previous menu.

## Channels Setup

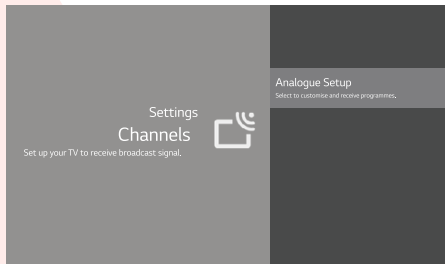

### Analogue Setup

- Analogue Auto Tuning: Press OK to start the automatic search process. The search may take a few minutes. During the process, you can press OK to abort.
- Analogue Manual Tuning: Press OK to enter the interface. Press ▲/▼ to set program, TV system or color system item, then Press ▲/▼ select Frequency and press OK to search channel.
- Channel Organizer: Highlight the channels you want to move, then press the right arrow key. You can use the arrow keys to move the channel. If you want to delete the highlighted channel, press OK key.
- Program Labels: To set the program labels.

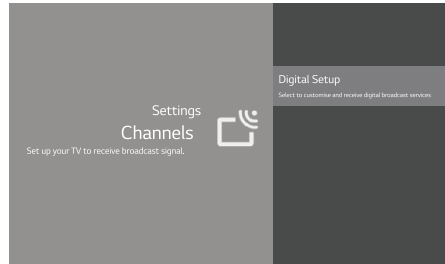

### Digital Setup

- Digital Antenna Tuning: Press OK to start the automatic search process. The search may take a few minutes. During the process, you can press ← and choose YES to exit.

- Subtitle Setup:

(1) Subtitle Setting: Include off, Basic, Hearing impaired.

(2) Primary Preferred Language:

Press OK and then use ▲/▼ to select Primary Preferred Language.

(3) Second Preferred Language:

Press OK and then use ▲/▼ to select Second Preferred Language.

- Teletext Setup

(1) Preferred teletext: Press OK and then use ▲/▼ to select Preferred teletext.

(2) Decoding page language: Press OK and then use ▲/▼ to select Decoding page language.

- Audio Setup

(1) Audio Description: Include Off and On.

(2) Audio Description Mixing Level:

Press OK and then use ◀/▶ to set Audio Description Mixing Level.

(3) Audio Type: Include Normal, Hearing impaired and Visual impaired


(4) Primary Preferred Language:

Press OK and then use ▲/▼ to select Primary Preferred Language.

(5) Second Preferred Language:

Press OK and then use ▲/▼ to select Second Preferred Language.

## Picture & Display

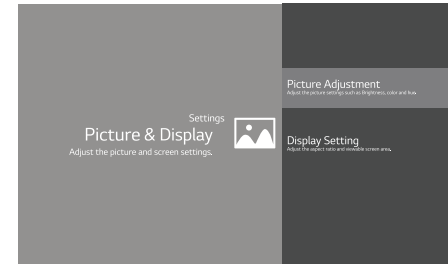


### Picture Adjustment:

- Picture Mode: Optimize picture quality for general content. Use ▲/▼ to scroll through the Picture preset settings: Standard, Dynamic, Movie, Sport and Personal.
- Advanced Settings: Access advanced picture enhancing options.
- Brightness: Adjusts the brightness of the picture.
- Color: Adjusts the color saturation.
- Clarity: Advanced technique for picture enhancement.
- Reset: To reset picture adjustment.

### Display Setting:

- Screen mode: Adjust the picture size. Use ▲/▼ to scroll through the Screen mode preset settings.
- Auto screen: Automatically adjusts screen mode based on the signal. Include On and Off.

## Sound

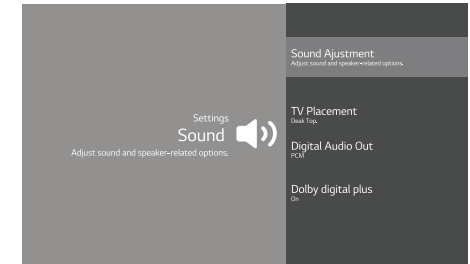

Sound Adjustment: Adjust sound and speaker-related options.

- Sound Mode: Optimize sound quality for general content. Use ▲/▼ to scroll through the sound preset settings: Sports, Standard, Cinema, Music and News.
- Surround: Reproduces life-like surround sound when playing -5.1 channel audio sources. Include On and Off.
- Advanced Setting: Access advanced sound enhancing options.

Volume Setting:

- 1) Auto Volume: Keeps the volume level constant for all programs and inputs. Include On and Off.
- 2) Balance: Adjust the speaker balance.
- 3) Digital Audio Out Volume: Applied for PCM only. The volume levels between PCM and compressed audio will differ.
- 4) Digital Audio Out Delay: Set the delay time for Digital Audio.
- 5) Volume offset: Adjust the sound level of the current input relative to other inputs.

Sound mode related:

1) Surround effect: Use ◀/▶ to scroll through Surround effect.

2) Equalizer: Use ◀/▶ ▲/▼ to scroll through Equalizer.

Reset: To return all sound settings to factory default.


TV Placement: Select how TV SET placed. Include Desk Top and Wall Mount.

Digital Audio Out: Optical out for audio signals from the Digital Audio Out.

Dolby Digital Plus: Include On and Off.



Smart Zone



**Enjoy Music:** Select this option to enter into Audio Only mode.

**Fast Cast:** An app that quickly delivers mobile content to TV, allowing users to quickly deliver multimedia content such as photos, videos, music and more to TV terminals.

**Fast Cast Step:**

1. Download Fast Cast mobile App.
2. Mobile and TV are connect the Same Wi-Fi.
3. Search device and connect TV.

**Note:**

1. This function may be unavailable for some mobile devices, and it subject to chipset support the files format.
2. Recommendations of working environments:


**A:** Local Area Network Speed recommendations on 1M/S-2M/S.  
**B:** Files required :MP4、AVI、TS、FLV、f4v、m3u8 (subject to chipset supported).

**Sleep Timer:** The options include: Off, 10min, 20min, 30min, 60min, 90min, 120min, and 180min.

**World clock:** Enter to add World clock.

**Night mode:** Turn on to Keep brightness to prevent disturb others. Clear brightness at a low level.

System

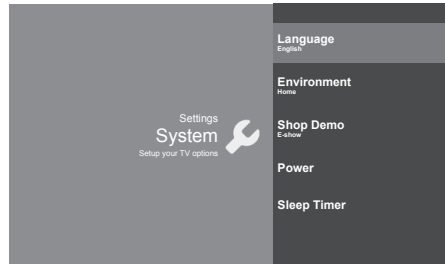

**Language:** Use ▲/▼ to scroll through Language.

**Environment:** Enter to set Home or shop mode.

-Home Mode: You Would be able to view the standard settings for Picture and Sound Modes.

-Shop Mode: You can enjoy enhanced setting for Picture and Sound Modes.

**Note:** Picture menu settings will not be accessible when you select Shop Mode.

**Shop Demo:** Enter to set E-sticker.

**Note:** E-sticker is not available for certain model.

**Power:** Enter to set Power mode.


- Wake on Wifi: Enable wake on WIFI Settings.

- Network stand by: Enable STR Settings.

**Sleep Timer:** Set the TV to turn off automatically.

Smart Player

Connect a USB device to a USB socket, the screen will show USB file name and then press OK to enter. If no USB device connected, the USB interface will be not displayed.

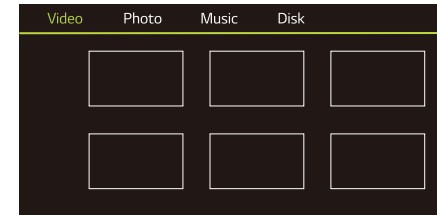

**Video:**

1. Select Video icon, then press OK button to view movie file.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. While playing a Video, press OK Menu of remote to display the play console. For the Play console, Press Ok key of remote to Play and Pause the video file. Left key of remote to Fast backward. Right key of remote to Fast forward.
4. Use ≡ key to see more option: Photo Scale, Looping mode, Subtitle, Audio track, info, setting.
5. Press Return key of remote to Stop playing and Press Return to Exit.

**Photo:**

1. Select Picture icon, then press OK button to view the picture.
2. Press Up, Down, Left or Right direction button to select your desired picture file and press OK to show.
3. While showing picture, press OK to display the play console. For Previous and Next use remote left and Right key.
4. Use OK key to see more option: Manual play, Information, Play mode, BGM: on or off.

**Music:**

1. Select Music icon, then press OK button to listen to Music.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. The Play console includes Previous, Play/Pause, Fast backward/Fast forward, Next. Press ≡ key to see PlayList.
4. Press Return key of remote to Stop playing.

**Disk:**

1. Select Disk icon, then press OK button to choose folder.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. Press Return key of remote to Stop playing.

Attention and Frequently Asked Questions

**Attention:**

Some non-standard mobile storage device may not be recognized. Please change to use the standard device.

**Note:** For coding files, there are many kinds non-standard coding method, so this system can not be guaranteed to support the file formats using any coding method.

**Frequently Asked Questions:**

1. Under the following conditions, this system cannot decode the file and the file cannot be play normally:
  - The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
  - The format of file is not matched or the file is harmed.
2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.
3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
4. The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..
5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.
6. When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
7. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage.

## Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture, no sound

1. Press the Vol+ button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed


1. Press the Power button to turn off TV, then press the Power button a gain to reset TV.
2. Unplug the power cord, then press the Power button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

## Base Installation

To fix the double support base on the unit by screws, the installation is completed.

Note: Illustrations below are provided for reference only and may differ from actual product appearance.

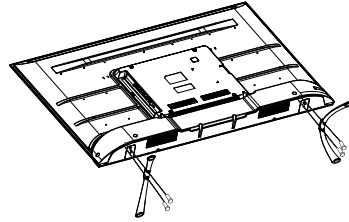

## الإشعال

الإشعال  
ظهور بقع سوداء أو خطوط أفقية، أو تهتز الصورة. يحدث ذلك عادة بسبب تداخل نظام الإشعال أو مصابيح النيون أو المنافذ الكهربائية أو أجهزة كهربائية أخرى.

## الصورة الشبحية

تحدثت الصورة الشبحية بسبب إشارات التلفاز التي تتخذ مسارين. أحدهم المسار المباشر والآخر ينعكس من المباني الطويلة أو التلال أو الأجسام الأخرى. قد يؤدي تغيير اتجاه الهوائي أو موقعه إلى تحسين الاستقبال.

## تداخل الترددات اللاسلكية


ينتج عن التداخل موجات متحركة أو خطوط مائلة أو خلل في تباين الصورة في بعض الحالات. اعثر على مصدر التداخل وقم بإزالته.

في حال توقف التلفاز عن العمل

1. اضغط على زر الطاقة Power لإغلاق التلفاز، وبعدها اضغط على زر الطاقة Power مرة أخرى لإعادة ضبط التلفاز.
  2. افصل سلك التلفاز عن مصدر الكهرباء، وبعدها اضغط على زر الطاقة Power لإعادة ضبط التلفاز.
- ملاحظة: إذا لم يتم حل المشكلة بعد اتباع الطريقتين أعلاه، يرجى التواصل مع مركز الخدمة المعتمد للمساعدة.

## الإشتركيب القاعدة

يكتتمل التركيب مع تثبيت القاعدة ذات الدعائم المزدوجة بواسطة البراغي.  
ملاحظة: الرسوم التوضيحية الواردة أدناه هي فقط لغرض التوضيح والاطلاع، وقد يختلف المنتج الفعلي.

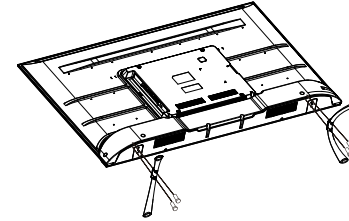

## استكشاف الأخطاء وإصلاحها

يمكن إصلاح معظم الأخطاء التي تواجهها بالتلفاز الخاص بك عن طريق الرجوع إلى قائمة استكشاف الأخطاء وإصلاحها التالية.

بدون صورة، وبدون صوت

1. تأكد من عمل الصمام الكهربائي أو قاطع الدائرة الكهربائية.
2. قم بتوصيل جهاز كهربائي آخر بالمنفذ لتأكد من أنه يعمل أو قيد التشغيل.
3. الاتصال ضعيف بين قابس الطاقة والمنفذ.
4. تحقق من مصدر الإشارة.

لا توجد ألوان

1. قم بتغيير نظام الألوان.
2. قم بضبط التشبع اللوني.
3. جرب قناة أخرى. قد يتم استقبال برنامج الأبيض والأسود.

وحدة التحكم عن بعد لا تعمل

1. استبدل البطاريات.
2. البطاريات غير مركبة بشكل صحيح.
3. مصدر الطاقة الأساسي غير متصل.

لا توجد صورة، الصوت طبيعي

1. اضبط السطوع والتباين.
2. قد يكون هناك خلل في البث.

الصورة طبيعية، لا يوجد صوت

1. اضغط على الزر +Vol لرفع الصوت.
2. مستوى الصوت مضبوط على وضع الكتم، اضغط على زر الكتم لاستعادة الصوت.
3. قم بتغيير نظام الصوت.
4. قد يكون هناك خلل في البث.

موجات غير منظمة تظهر على الصورة

عادة ما يحدث ذلك بسبب تداخل محلي مثل السيارات أو المصابيح أو مجففات الشعر. اضبط الهوائي للحد من التداخل.

نقاط بيضاء وتداخل

إذا كان الهوائي موضوع في منطقة بعيدة عن إشارة التلفاز مما يؤدي إلى ضعف الإشارة، قد تظهر النقاط على الصورة. إذا كانت الإشارة ضعيفة جداً، قد يكون من الضروري تركيب هوائي خاص لتحسين الاستقبال.

1. اضبط موضع واتجاه الهوائي الداخلي/ الخارجي.
2. تحقق من توصيل الهوائي.
3. اضبط القناة.
4. جرب قناة أخرى. قد يكون هناك خلل في البث.

## المنطقة الذكية



استمع بالموسيقى: اختر هذه الميزة للدخول في وضع الصوت فقط.

تطبيق فاست كاست (Fast Cast): أحد التطبيقات التي تقوم بربط محتوى الهاتف المتحرك مع التلفاز بسرعة، مما يتيح للمستخدمين عرض محتوى الوسائط المتعددة بسرعة على التلفاز، مثل الصور، ومقاطع الفيديو، والموسيقى، وغيرها الكثير.


1. قم بتحميل تطبيق فاست كاست على الهاتف المتحرك.
2. اربط الهاتف المتحرك والتلفاز بنفس شبكة الواي فاي.
3. قم بالبحث والربط مع التلفاز.

1. قد تكون هذه الوظيفة غير متاحة لبعض الأجهزة المحمولة، وأنها تخضع لشرائح دعم تنسيق الملفات.
  2. توصيات بيانات العمل:
- A: توصيات سرعة الشبكة المحلية على: 1M / S - 2M / S.
- B: الملفات المطلوبة: MP4 , AVI , TS , FLV , f4v , m3u8 (تخضع لشرائح مدعومة).

مؤقت النوم: تتضمن الخيارات: إيقاف التشغيل و10 دقائق و20 دقيقة و30 دقيقة و60 دقيقة و90 دقيقة و120 دقيقة و180 دقيقة، الساعة العالمية: لإضافة الساعة العالمية.

الوضع الليلي: شغل للحفاظ على السطوع لمنع إزعاج الآخرين. سطوع نقي بمستوى منخفض.

## النظام

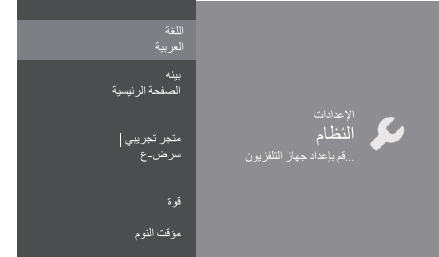

اللغة: استخدم ▲▼ للتنقل بين اللغات، البيئة: لضبط الصفحة الرئيسية أو وضع المتجر.

- وضع المنزل: ستكون قادراً على عرض إعدادات الوقوف لأوضاع الصورة والصوت.

- وضع التسوق: يمكنك الاستمتاع بالإعداد المحسن لأوضاع الصورة والصوت.

ملاحظة: لن تكون إعدادات قائمة الصور قابلة للوصول عند اختيار وضع التسوق.

تسوق تجربي: أدخل لضبط المصق الالكتروني.

ملاحظة: المصق الالكتروني غير متوفر في بعض الطرازات.

الطاقة: أدخل لضبط نمط الطاقة.


استيقظ على Wifi: تمكين الاستيقاظ على إعدادات WIFI.

- نمط استعداد الشبكة: تمكين إعدادات STR.

مؤقت النوم: اضبط التلفاز على الإغلاق التلقائي.

## المشغل الذكي

اربط جهاز USB بمنفذ USB، وسيظهر على الشاشة اسم ملف USB، وبعدها اضغط على OK للدخول. في حال عدم ربط جهاز USB، لن تظهر واجهة USB على الشاشة.

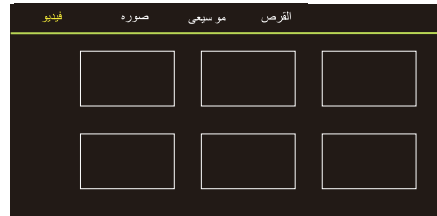

## الفيديو:

1. اختر أيقونة الفيديو، وبعدها اضغط على زر OK لعرض ملف الفيلم.
2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم اضغط على OK لبدء التشغيل.
3. أثناء تشغيل الفيديو، اضغط على OK لعرض أزرار التحكم. يمكنك من خلال الأزرار التشغيل وإيقاف التشغيل والتقديم والتأخير السريع.
4. استخدم زر xx لعرض المزيد من الخيارات: مقياس الصورة، النمط المتكبر، الترجمة المكتوبة، تعقب الصوت، المعلومات، والإعدادات.
5. اضغط على زر الرجوع Return لإيقاف التشغيل واضغط على Return مرة أخرى للخروج.

## الصور:

1. اختر أيقونة الصور، وبعدها اضغط على زر OK لعرض الصور.
2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار ملف الصور المطلوب، وثم اضغط على OK لبدء العرض.
3. أثناء عرض الصور، اضغط على OK لعرض أزرار التحكم. يمكنك من خلال أزرار الاتجاهات لليسار واليمين عرض الصورة السابقة واللاحقة.
4. استخدم زر OK لعرض المزيد من الخيارات: تشغيل يدوي، المعلومات، نمط التشغيل، BGM: تشغيل أو إيقاف.

## الموسيقى:

1. اختر أيقونة الموسيقى، وبعدها اضغط على زر OK للاستماع للموسيقى.
2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم اضغط على OK لبدء التشغيل.
3. تتضمن أزرار التشغيل الملف السابق، تشغيل/إيقاف، تقديم سريع/تأخير سريع، وتشغيل الملف اللاحق.
4. اضغط على زر الرجوع Return لإيقاف التشغيل.

## القرص:

1. اختر أيقونة القرص، وبعدها اضغط على زر OK لاختيار ملف ما.
2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم اضغط على OK لبدء التشغيل.
3. اضغط على زر الرجوع Return لإيقاف التشغيل.

## التنبيهات والأسئلة الشائعة

## تنبيه:

قد لا يتم التعرف على بعض الأجهزة المحمولة غير القياسية، يُرجى استخدام الجهاز القياسي.


**ملاحظة:** بالنسبة لملفات الترميز، هناك أنواع عديدة من طرق الترميز غير القياسية، لذلك لا يمكن ضمان دعم هذا النظام لتنسيقات الملفات باستخدام أي طريقة ترميز

## الأسئلة الشائعة:

1. في الحالات التالية، لا يمكن لهذا النظام فك تشفير الملف ولا يمكن تشغيل الملف بشكل طبيعي:
- إذا تجاوزت معلومات الملف، مثل بكسل الصورة ومعدل الترميز لملف الصوت والفيديو، ومعدل الإعتيان من الملف الصوتي حدود النظام.
- صيغة الملف غير متطابقة أو أن الملف متضرر.
2. المنفذ الساخن: لا تقم بقطع الاتصال أثناء قراءة النظام أو نقله للبيانات لتجنب تلف النظام أو الجهاز.
3. انتبه إلى مصدر الطاقة الخاص بالجهاز عند استخدام قرص ثابت محمول أو كاميرا رقمية. إذا كان مصدر الطاقة غير كاف أو غير مستقر، فقد تواجه مشكلات أثناء التشغيل أو قد لا يعمل النظام على الإطلاق. في هذه الحالة، يرجى إعادة تشغيل الجهاز، أو فصل الجهاز وتوصيله مرة أخرى، والتأكد من أن مصدر الطاقة على حالته الطبيعية.
4. يدعم النظام أجهزة USB 2.0 وUSB 1.1 القياسية، مثل الأقراص الصلبة، ومشغلات MP3، والأقراص الصلبة المحمولة، وما إلى ذلك.
5. للحصول على جودة صوت وفيديو أفضل، يُقترح استخدام الجهاز الخارجي الذي يتوافق مع معيار USB 2.0.
6. عند تشغيل الفيديو بنسبة ضغط عالية، يكون من الطبيعي ظهور الظواهر غير الطبيعية، مثل توقف الصور واستغراق القائمة وقتاً طويلاً.
- 7- بالنسبة لبعض أجهزة USB المزودة بالطاقة، مثل القرص الثابت بالحجم الكبير، MP4 وما إلى ذلك، يقترح استخدامها مع الطاقة لتجنب نقص الطاقة الكهربائية.


استخدام إعدادات التلفاز

تسمح لك قائمة الإعدادات بضبط جهاز التلفاز حسب تفضيلاتك. ملاحظة: قد تكون بعض الوظائف غير متاحة في بعض المصادر، وقد لا تتوفر خيارات معينة في بعض الطرازات.

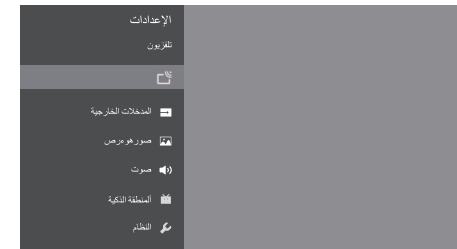


- التلفاز. تم تحديد كل قائمة وتفصيلها لمساعدتك في الحصول على أقصى استفادة من جهاز التلفاز. للوصول إلى نظام القائمة:
1. اضغط على **▼▲** لاختيار العنصر المطلوب، ثم اضغط على **OK** لفتح القائمة الفرعية المتوافقة.
  2. في القائمة الفرعية، استخدم أزرار **▼▲** و **OK** لإجراء التعديلات، أو استخدم **▼▲** لاختيار العنصر المطلوب، استخدم **OK** للدخول والعمل وفقاً للشاشة أو الدليل على الشاشة.
  3. اضغط على **←** للعودة إلى القائمة السابقة.

إعداد القنوات

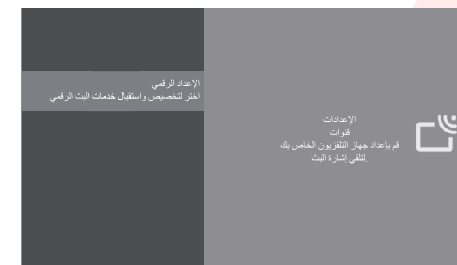

الإعداد التناظري

- ضبط تناظري تلقائي: اضغط على **OK** لبدء عملية البحث التلقائي. قد يستغرق البحث بضع دقائق. أثناء هذه العملية، يمكنك الضغط على **OK** للإلغاء.
- ضبط تناظري يدوي: اضغط على **OK** للدخول للواجهة. اضغط على **▼▲** لضبط البرنامج أو نظام التلفاز أو عنصر نظام الألوان، ثم اضغط على **▼▲** واختر التردد واضغط على **OK** ليبحث القنوات.
- منظم القنوات: اختر القنوات التي تريد نقلها، ثم اضغط على مفتاح السهم الأيمن. يمكنك استخدام مفاتيح الأسهم لتحريك القنوات. إذا كنت تريد حذف القنوات المختارة، اضغط على مفتاح **OK**.
- تسميات البرامج: لضبط تسميات البرنامج.

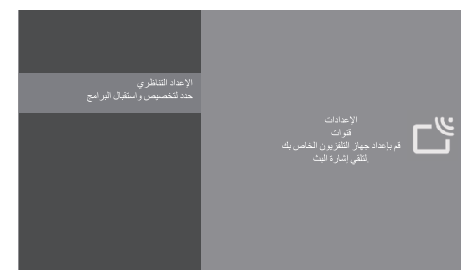

الإعداد الرقمي

- ضبط الهوائي الرقمي: اضغط على **OK** لبدء عملية البحث التلقائي. قد يستغرق البحث بضع دقائق. أثناء هذه العملية، يمكنك الضغط على **OK** واختيار **YES** للخروج.
- إعداد الترجمة المكتوبة:

  - (1) ضبط الترجمة المكتوبة: تشمل إيقاف، ضعيف السمع.
  - (2) اللغة المفضلة الأساسية:
  - (3) اللغة المفضلة الثانية:
  - اضغط على **OK** ثم استخدم **▼▲** لاختيار اللغة المفضلة الثانية.
  - إعداد النص التلفزيوني

    - (1) النص التلفزيوني المفضل: اضغط على **OK** ثم استخدم **▼▲** لاختيار النص التلفزيوني المفضل.
    - (2) فك ترميز لغة الصفحة: اضغط على **OK** ثم استخدم **▼▲** لاختيار فك شفرة لغة الصفحة.

  - إعداد الصوت

    - (1) الوصف الصوتي: يتضمن تشغيل وإيقاف.
    - (2) مستوى خلط الوصف الصوتي:
    - اضغط على **OK** ثم استخدم **◀/▶** لضبط المستوى.
    - (3) نوع الصوت: يتضمن عادي، ضعاف السمع وضعاف البصر.
    - (4) اللغة المفضلة الأساسية:
    - اضغط على **OK** ثم استخدم **▼▲** لاختيار اللغة المفضلة الأساسية.
    - (5) اللغة المفضلة الثانية:
    - اضغط على **OK** ثم استخدم **▼▲** لاختيار اللغة المفضلة الثانية.

الصورة والعرض



ضبط الصورة:

- نمط الصورة: تحسين جودة الصورة للمحتوى العام. استخدم **▼▲** للتنقل بين إعدادات الصورة المثبتة مسبقاً: قياسي، ديناميكي، فيلم، رياضة وشخصي.
- إعدادات متقدمة، الوصول إلى خيارات تحسين الصورة المتقدمة. السطوع: لضبط سطوع الصورة. اللون: لضبط تشبع اللون. الوضوح: تقنية متقدمة لتحسين الصورة. إعادة تعيين: لإعادة ضبط الصورة.

ضبط العرض

- نمط الشاشة: لتعديل حجم الصورة. استخدم **▼▲** للتنقل بين إعدادات الصورة المثبتة مسبقاً.
- شاشة تلقائية: لضبط نمط الشاشة تلقائياً بحسب الإشارة. تتضمن تشغيل/ إيقاف.

الصوت



إعداد الصوت:

- ضبط الصوت: لضبط الصوت والخيارات المتعلقة بالساعات. - نمط الصوت: تحسين جودة الصوت للمحتوى العام. استخدم **▼▲** للتنقل بين إعدادات الصوت المثبتة مسبقاً: رياضة، قياسي، سينما، موسيقى، وأخبار.
- الصوت المحيطي: ستشعر بصوت محيطي آسر عند تشغيل مصادر الصوت. يتضمن تشغيل/ إيقاف.
- الإعداد المتقدم: للوصول إلى خيارات تحسين الصوت المتقدمة.
- إعداد الصوت:

  - (1) الصوت التلقائي: يحافظ على مستوى الصوت ثابتاً لجميع البرامج والمدخلات. يتضمن تشغيل/ إيقاف.
  - (2) التوازن: ضبط توازن مكبرات الصوت.
  - (3) حجم الصوت الرقمي: يتم تطبيقه على PCM فقط. ستختلف مستويات الصوت بين PCM والصوت المضغوط.
  - (4) تأخير إخراج الصوت الرقمي: اضبط وقت التأخير على الصوت الرقمي.
  - (5) إزاحة مستوى الصوت: ضبط المدخلات الحالية نسبةً إلى المدخلات الأخرى.


- نمط الصوت ذو الصلة:

  - (1) التأثير المحيطي: استخدم **◀/▶** لاختيار تأثير الصوت المحيطي.
  - (2) المعادل: Use **◀/▶** لاختيار المعادل.

- إعادة الضبط: لإعادة جميع إعدادات الصوت إلى إعدادات المصنع.
- موضع التلفاز: اختر كيفية وضع جهاز التلفاز. يتضمن الوضع المنضدي أو التعليق على الحائط.
- مخرج الصوت الرقمي: مخرج صوتي لإشارات الصوت من مخرج الصوت الرقمي.
- دولبي ديجيتال بلس: تتضمن تشغيل/ إيقاف.

تشغيل الصفحة الرئيسية

ملاحظة: هذا الدليل هو للاستخدام العام فقط. الأشكال والرسومات التوضيحية الواردة في هذا الدليل هي للتوضيح والاطلاع فقط. وقد يكون هناك اختلاف في المنتج الفعلي. كما أنه قد لا تتوفر خيارات معينة في بعض الطرازات. يمكنك اختيار جميع الخصائص من الصفحة الرئيسية. اضغط على لعرض الصفحة الرئيسية. اضغط على لاختيار الرموز من قائمة الشاشة. اضغط على OK لإدخال كل خيار. اضغط على للخروج من القائمة.

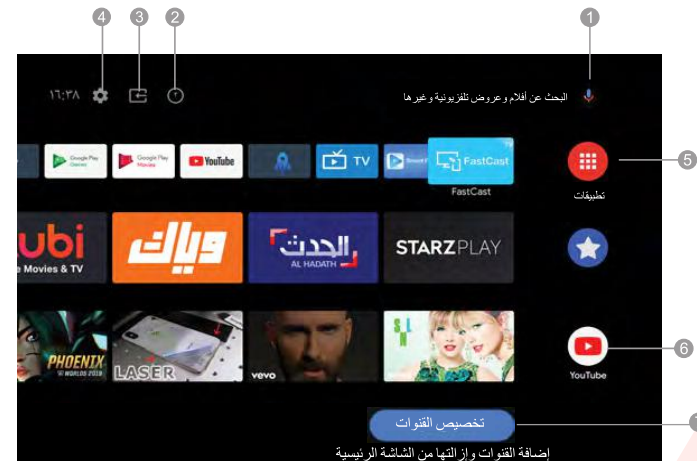

تشغيل ملاحظة: هذه الصورة للتوضيح فقط. لصفحة الرئيسية

1. مساعد غوغل (Google Assistant): اضغط للتفاعل مع مساعد غوغل على التلفاز.
2. الإشعارات (Notifications): تذكرك بالمعلومات الهامة للنظام، مثل انخفاض مساحة القرص، أخطاء تسجيل الدخول في غوغل أو أخطاء الحساب، مشاكل ربط الشبكة، الخ.
3. الإدخال (Input): اختيار مصدر الإدخال.
4. الإعدادات (Settings): الوصول إلى إعدادات النظام.
5. التطبيقات (Apps): عرض قائمة التطبيقات المفضلة أو الوصول إلى مركز التطبيقات.
6. اليوتيوب (YouTube): تصفح هذا التطبيق لمشاهدة مجموعة واسعة من مقاطع الفيديو عبر الإنترنت.
7. المحتوى المميز (Featured): عرض قائمة المحتويات المميزة من أفلام غوغل بلاي والتلفاز.

ملاحظة:

1. قد تختلف وظائف ومحتويات الصفحة الرئيسية (Home Page) باختلاف البلد أو طراز التلفاز.
2. قبل استخدام وظائف الشبكة في الصفحة الرئيسية مثل تطبيقات الشبكة وما إلى ذلك، يرجى ربط التلفاز بالشبكة أولاً.
3. حقوق التأليف والنشر للأيقونات مملوكة من قبل مزودي التطبيقات.

الوصول إلى القنوات

يمكن استخدام الأزرار لأعلى أو لأسفل لتغيير القناة، أو افتح لوحة المفاتيح الافتراضية واختر قناة التبديل الرقمية.

مشاهدة الجهاز المتصل

اضغط على SOURCE ثم اضغط على لاختيار المصدر المطلوب، وبعدها اضغط على OK للتأكيد.



الصوت

التحكم بالصوت: اضغط على أزرار VOL +/- في وحدة التحكم عن بُعد أو الأزرار المتوافقة على التلفاز لزيادة أو خفض مستوى الصوت. كتم الصوت: اضغط على الزر لكتم الصوت مؤقتاً. اضغط على هذا الزر مرة أخرى أو زر + لاستعادة الصوت.

استخدام قائمة الوصول السريع

ملاحظة: قد تكون بعض الوظائف غير متاحة في بعض المصادر. وقد لا تتوفر خيارات معينة في بعض الطرازات. يستعرض هذا القسم القوائم والإعدادات المتاحة في التلفاز، ويحتوي على عرض وتفصيل لكل قائمة لمساعدتك على الاستفادة من كافة مزايا الجهاز. للدخول إلى نظام القائمة يرجى إتباع الخطوات التالية:

1. في وضع التلفاز، اضغط على في وحدة التحكم عن بُعد لعرض قائمة الوصول السريع.
2. اضغط على لاختيار العنصر المطلوب، ثم اضغط على OK لفتح القائمة الفرعية المتوافقة.
3. في القائمة الفرعية، استخدم الأزرار و OK لإجراء التعديلات، أو استخدم لاختيار العنصر المطلوب، واستخدم OK للدخول في ذلك ولتشغيل وفقاً للشاشة أو الدليل على الشاشة.
4. اضغط على للعودة إلى القائمة السابقة.

تلفزيون	عرض وصوت
MTS الصوت قنوات المسح الضوئي	معلومات تعديلات الصورة شاشة تعديلات الصوت مكبرات الصوت إعدادات HDMI

العرض والصوت

المعلومات: لعرض معلومات التلفاز، ضبط الصورة: لتعديل نمط الصورة أو للإعدادات المتقدمة. الشاشة: لتعديل حجم الصورة. ضبط الصوت: لضبط وتعديل الصوت. مكبرات الصوت: لإدخال إعدادات مكبرات الصوت الخاصة بالتلفاز، إعدادات HDMI: لإعداد أجهزة HDMI للتحكم سلس.

التلفاز

البحث عن القنوات: لعرض خيارات البحث عن القنوات التماثلية أو الرقمية. منظم القنوات: قم باختيار القنوات التي تريد نقلها، ثم اضغط على مفتاح السهم الأيمن. يمكنك استخدام مفاتيح الأسهم لتحريك القناة، إذا كنت تريد حذف القناة المختارة، اضغط على زر OK.

ربط الشبكة

للدخول إلى شبكة الإنترنت، يجب أن تكون مشتركاً بخدمة الاتصال عريض النطاق وعالي السرعة من موفر خدمة الإنترنت الذي تتعامل معه.

يمكن ربط التلفاز بشبكة الإنترنت المنزلية من خلال إحدى الطريقتين:


- الاتصال السلكي: باستخدام وصلة (LAN RJ45) الموجودة على اللوحة الخلفية.
- الاتصال اللاسلكي: عبر وصل التلفاز بشبكتك اللاسلكية المنزلية.

**ملاحظة:** الإرشادات التالية هي مجرد الطرق المعتادة لربط التلفاز بالشبكات السلكية أو اللاسلكية. قد تختلف طريقة الربط تبعاً لإعدادات الشبكة الفعلية. يرجى العودة إلى موفر خدمة الإنترنت للإجابة على أي أسئلة حول شبكتك المنزلية.

الربط بشبكة سلكية

لربط التلفاز بشبكة سلكية، يرجى اتباع الخطوات التالية:


1. يجب ضمان توفر ما يلي:
  - كابل إيثرنت طويل بما يكفي للوصول إلى التلفاز.
  - راوتر أو مودم يتضمن منفذ إيثرنت.
  - اتصال عالي السرعة بالإنترنت.
2. قم بوصل كابل إيثرنت بالراوتر ومنفذ إيثرنت في الجزء الخلفي من التلفاز.
3. استخدم قائمة الشبكة Network لضبط إعدادات التلفاز.

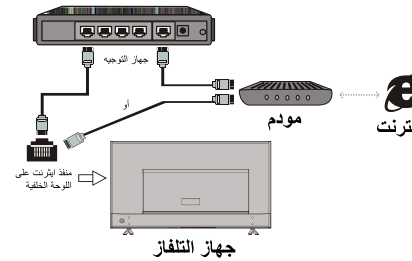

الربط بشبكة لاسلكية

لربط التلفاز بشبكة لاسلكية، يرجى اتباع الخطوات التالية:

1. يجب ضمان توفر ما يلي:
  - راوتر بيث إشارة لاسلكية عالية السرعة.
  - اتصال عالي السرعة بالإنترنت.
2. استخدم قائمة الشبكة Network لضبط إعدادات التلفاز.

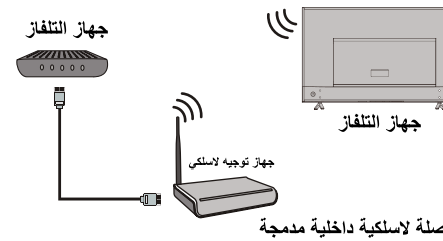

التلفاز - الإعداد الأولي

يتضمن الإعداد الأولي تحديد جميع الإعدادات المطلوبة لتكون قادراً على البحث عن جميع القنوات التناظرية التي يمكنك استقبالها وتخزينها.

تأكد من تشغيل التلفاز واتباع جميع الخطوات المحددة أدناه. ملاحظة: إذا كان البحث عن القناة يتجمد عنه عدداً قليلاً من القنوات، فقد يكون سبب ذلك هو البث السيئ، وبالتالي لا يتم تغطيته بضمان الشركة المصنعة. لا يمكن اعتبار الشركات المصنعة مسؤولة عن نقص البث أو سوء البث في بعض المناطق.

في المرة الأولى التي تقوم فيها بتشغيل المجموعة، يتم فتح معالج الإعداد الأولي، والذي يرشدك خلال عملية الإعداد الأولية.

Step 1: **البيئة**  
يرجى اختيار البيئة الخاصة بك.  
ASIA NONE  
EUROPE  
GAMBODIA  
KAZAKH-ISTAN

Step 2: **أين أنت؟**  
سوف نذكر الموقع المحلي والصالح وعلمه من الخطوات.

Step 3: **الشروط والأحكام**  
يرجى قراءة الشروط ووافق الشروط والالتزام.  
1. نطلب من جميع المستخدمين الموافقة على شروطنا الخاصة بالخدمة. إذا كنت متوافقاً، فسيتم تحميل شروطنا الخاصة بالخدمة على جهازك. إذا كنت غير متوافق، فسيتم إيقاف تشغيل الجهاز. يرجى قراءة شروطنا الخاصة بالخدمة في الموقع الإلكتروني أو في الوثيقة المطبوعة المرفقة مع الجهاز. 2. نطلب من جميع المستخدمين الموافقة على شروطنا الخاصة بالخدمة. إذا كنت متوافقاً، فسيتم تحميل شروطنا الخاصة بالخدمة على جهازك. إذا كنت غير متوافق، فسيتم إيقاف تشغيل الجهاز. يرجى قراءة شروطنا الخاصة بالخدمة في الموقع الإلكتروني أو في الوثيقة المطبوعة المرفقة مع الجهاز.

Step 4: **تثبيت القناة**  
يرجى تحديد نوع البث.  
القمر  
الهوائي  
القمر  
الهوائي

Step 5: **يرجى التحقق من الإعدادات**  
يرجى التحقق من الإعدادات في إعدادات النظام.  
اللغة  
اللغة  
اللغة

الخطوة 1: البيئة

اضغط على ▲▼ للاختيار بين تلك. ثم اضغط على موافق للدخول إلى الخطوة التالية.

الوضع المنزلي (Home Mode): ستكون قادراً على عرض الإعدادات القياسية لأوضاع الصورة والصوت.

وضع التسوق (Shop Mode): يمكنك الاستمتاع بالإعداد المحسن لأوضاع الصورة والصوت.

ملاحظة: لن تكون إعدادات قائمة الصور قابلة للوصول عند اختيار وضع التسوق.

الخطوة 2: أين أنت؟

اضغط على ▲▼ للاختيار البلد/المنطقة. اضغط على OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 3: الشروط والأحكام

استخدم ▲▼ لقراءة الشروط والأحكام، ثم اضغط على OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 4: تثبيت القناة

استخدم ▲▼ للاختيار وضع Tuner: الهوائي أو الكابل أو القمر الصناعي؛ النوع: رقمي، تماثلي، الكل، ثم اضغط على OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 5: يرجى التحقق من الإعدادات

عند الانتهاء من الإعداد، ستظهر واجهة الرجاء التحقق من الإعدادات على الشاشة، واضغط على OK لإنهاء عملية الإعداد الأولي. يمكنك أيضاً الرجوع إلى الخطوة السابقة وإجراء أية تغييرات باستخدام زر ←.

## وظائف وحدة التحكم عن بُعد

إن أغلب وظائف التلفاز متاحة على القوائم التي تظهر على الشاشة. يمكن استخدام جهاز التحكم عن بعد الذي يأتي مع هذا التلفاز للتنقل بين القوائم ولضبط جميع الإعدادات العامة.

POWER (زر التشغيل/الإغلاق) لتشغيل أو إغلاق التلفاز.

لكنم الصوت واستعادته مرة أخرى.

لعرض قائمة نظام التلفاز.

لعرض واجهة وظيفية SMART.

لعرض واجهة اختيار المصدر.

(أزرار الاتجاه للأعلى والأسفل واليسار واليمين) لاختيار العناصر المختلفة في نظام القائمة وضبط مفاتيح التحكم بالقائمة. يمكن استخدام أزرار للتنقل بين القائمة الحالية للقنوات.

لتأكيد الاختيار.

للخروج من القائمة والعودة للقائمة السابقة.

للذهاب للصفحة الرئيسية للتلفاز الذكي.

قائمة الوصول السريع.

للدخول للوحة المفاتيح الافتراضية.

لرفع أو خفض مستوى صوت التلفاز.

لعرض الصفحة الرئيسية لـ YouTube.

لعرض تطبيق متجر غوغل Google App Drawer.

(Mic) اضغط للتفاعل مع خاصية مساعد غوغل Google Assistant على التلفاز.

(تتوفر هذه الخاصية فقط عندما يكون ربط الشبكة طبيعي).



## كيفية إقران جهاز التحكم عن بُعد مع التلفاز


هذا جهاز تحكم بلوتوث، وقبل استخدامه، يرجى إقرانه مع التلفاز أولاً. يمكن الاطلاع على الخطوات التالية:

- الخطوة 1: اضغط على زر لعرض الصفحة الرئيسية.
- الخطوة 2: اضغط على زر لعرض إقران جهاز التحكم عن بعد "RC pairing".
- الخطوة 3: اتبع صفحة ملاحظات الضبط "setting tips page". اضغط OK و في الوقت ذاته.
- الخطوة 4: ستعرض الشاشة "Pairing...". وبعد انتهاء الإقران ستعرض الشاشة "Success!".

ملاحظة: إذا انتظرت أكثر من دقيقتين ولم يحدث الإقران، يرجى إعادة الخطوات أعلاه لإجراء عملية الإقران مرة أخرى.

إذا رغبت بعدم إقران جهاز تحكم البلوتوث، يمكن اتباع الخطوات التالية:

- الخطوة 1: اضغط على زر لعرض الصفحة الرئيسية.
- الخطوة 2: اضغط على أزرار لاختيار ، وبعدها اضغط OK للدخول.
- الخطوة 3: اضغط على زر لاختيار أجهزة التحكم عن بعد والملحقات "Remotes & Accessories" وبعدها اختر اسم جهاز تحكم البلوتوث للدخول للخطوات التالية.
- الخطوة 4: اضغط على عدم الإقران وبعدها اضغط على OK.

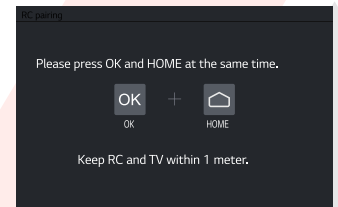

## التشغيل

اتبع التعليمات الموضحة في هذه الصفحة حول كيفية تشغيل جهاز التلفاز وجهاز التحكم عن بعد الخاصين بك قبل الانتقال للصفحات التالية التي تتعلق بتعليمات ضبط القنوات.

1. ركب بطاريتين في وحدة التحكم عن بُعد.

احتياطات استخدام البطاريات:

– استخدم أنواع البطاريات المحددة فقط.

– تأكد من ضبط الأقطاب.

– لا تخلط بين البطاريات الجديدة والمستخدم.

– لا تستخدم البطاريات القابلة لإعادة الشحن.

– لا تعرض البطاريات لحرارة مفرطة مثل أشعة الشمس أو النار، ولا تلقها في النار أو تعدد شحنها أو تحاول فتحها لأن ذلك قد يؤدي إلى حدوث تسريب أو انفجار.

– اترك البطاريات من وحدة التحكم عن بُعد إذا لم تكن ستستخدمها لفترة طويلة.

2. قم بتوصيل كابل الطاقة بالتلفاز أولاً، ثم بمقيس الطاقة الرئيسي.

(ملاحظة: إذا كان كابل الطاقة خارجاً من التلفاز، فيرجى توصيله بمقيس الطاقة الرئيسي فقط).

• إذا كان جهاز التلفاز الخاص بك موصولاً بجهاز التيار المتناوب AC

يجب توصيل جهاز التلفاز فقط بمصدر طاقة تيار متناوب. يجب عدم توصيله بمصدر طاقة تيار مستمر. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقيس طاقة رئيسي تحت أي ظرف ممكن تجنباً لخطر حدوث صدمة كهربائية.

• إذا كان جهاز التلفاز الخاص بك موصولاً بجهاز التيار المستمر DC

يجب توصيل جهاز التلفاز فقط بمصدر طاقة تيار مستمر. يجب عدم توصيله بمصدر طاقة تيار متناوب. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقيس طاقة رئيسي تحت أي ظرف ممكن تجنباً لخطر حدوث صدمة كهربائية.

3. قم بتوصيل الهوائي الخارجي بمنفذ الهوائي الداخلي ANTENNA IN الموجود خلف التلفاز.

4. عندما تكون الكهرباء موصولة سيظل التلفاز في وضعية التشغيل، أو وضعية الاستعداد.

ملاحظة: في بعض الطرازات، يجب الضغط على زر الطاقة لتشغيل التلفاز.

إذا أضاء مؤشر الكهرباء، فإن الجهاز يكون في وضعية الاستعداد للتشغيل. اضغط على زر على جهاز التحكم عن بعد، أو التلفاز لتشغيل الجهاز.

## الإغلاق

• لتشغيل التلفاز في وضعية الاستعداد، اضغط على زر على جهاز التحكم عن بعد. سيظل جهاز التلفاز يعمل، ولكن من دون أن يستهلك الكثير من الطاقة.

• لإغلاق التلفاز، اسحب المقيس الرئيسي من مصدر الكهرباء الرئيسي.

ملاحظة: في بعض الطرازات، يجب الضغط على زر الطاقة لإغلاق التلفاز.


### وظائف وحدة التحكم عن بُعد

تظهر معظم خصائص التلفاز في القوائم على الشاشة، تُستخدم وحدة التحكم عن بُعد المتوفرة مع الجهاز للتنقل بين القوائم وضبط جميع الإعدادات العامة.

ملاحظة: الصور والرسومات الواردة في هذا الدليل هي لغرض الاطلاع والتوضيح فقط، وقد تختلف عن المنتج الفعلي. على سبيل المثال، بعض الوظائف قد لا تكون متوفرة في طرازات معينة.

- لكنم الصوت واستعادته مرة أخرى.
- لتشغيل التلفاز أو إيقاف تشغيله.
- لإدخال أرقام القنوات.
- لعرض قائمة القنوات المفضلة.
- لعرض قائمة القنوات.
- للتحكم بدرجة الصوت.
- للتنقل بين القنوات.
- لعرض معلومات البرنامج، إن توفرت.
- لدخول لواجهة وظيفة SMART.
- لعرض الصفحة الرئيسية.
- قائمة الوصول السريع.
- للتأكيد الاختيار.
- للتنقل بين القوائم، واختيار العناصر المختلفة في نظام القائمة، واختيار الصورة السابقة أو اللاحقة، واختيار الأغنية أو الفيديو في وظيفة USB.
- للتنقل بين القوائم، وضبط الوظائف وتغيير القيم. يمكن أيضاً استخدام ▶ لعرض القائمة الفرعية المتوافقة.
- للرجوع للقائمة أو الواجهة السابقة، وللخروج من تطبيق ما.
- لعرض واجهة اختيار المصدر.
- للرجوع للقائمة أو الواجهة السابقة، وللخروج من تطبيق ما.
- لاختيار نمط الصورة.
- لعرض قائمة نظام التلفاز.
- لضبط التلفاز لوقف تشغيله بعد مدة معينة من الزمن.
- لتشغيل أو إغلاق دليل البرامج الإلكتروني في مصدر تلفاز DTV.
- لاختيار نوع الصوت المتوفر.
- للرجوع للقائمة السابقة.
- لعرض أو وقف عرض النص التلفزيوني.
- لاختيار لغة النص المترجم (الحاشية).
- لاختيار الوظائف أو صفحات النص التلفزيوني.
- للتقديم أو التأخير السريع.
- للبدء بالتشغيل.
- لوقف التشغيل مؤقتاً.
- لاختيار الملف السابق أو اللاحق للصور والأغاني ومقاطع الفيديو.
- لوقف التشغيل.
- لتسجيل البرامج ضمن مصدر DTV.
- لعرض تطبيق متجر غوغل Google App Drawer.
- لعرض الصفحة الرئيسية ليوتيوب YouTube.

- كتم الصوت
- الازرار 0-9
- FAV
- LIST
- +
- 
- Info. (i)
- SMART
- HOME
- MENU
- OK
- ▲▼
- ◀▶
- BACK ←
- SOURCE
- EXIT
- ZOOM
- Lang/AD
- SLEEP
- EPG
- Lang/AD
- PRE-CH
- TEXT
- SUBT.
- الازرار الملونة
- ◀▶
- ▶
- ||
- ◀▶
- 
- REC
- Google App Drawer
- YouTube

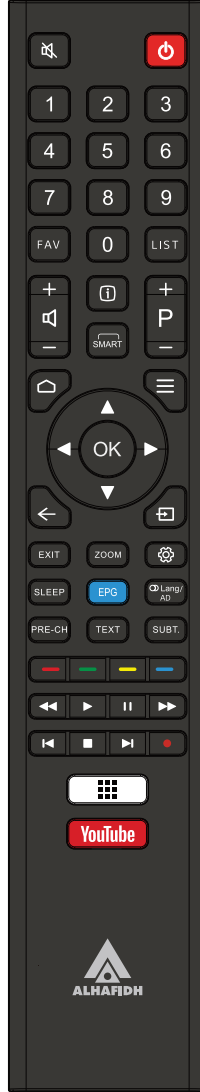

### المنافذ

ملاحظة: قد يختلف موقع المقابس وأسمائها على التلفاز وفقاً للطراز، وقد لا تتوفر بعض المقابس في طرازات معينة.

- USB**  
منافذ USB (مدخل)  
يمكن استخدام هذا المنفذ لتوصيل جهاز USB.  
ملاحظة: يختلف عدد منافذ USB في التلفاز بحسب الطراز.
- LAN**  
LAN  
قابس RJ45 لربط جهاز التلفاز بموديم خارجي أو أداة الوصول للشبكة.
- SATELLITE**  
منفذ SATELLITE IN (مدخل)  
يمكن استخدام هذا المنفذ لربط رسيفر الاستلايت.
- ANTENNA IN**  
منفذ توصيل الهوائي ANTENNA IN (مدخل)  
يمكن استخدام هذا المنفذ لتوصيل الهوائي الخارجي أو التوصيل بشبكة تلفاز الكابل.
- SPDIF**  
منفذ SPDIF  
يمكن استخدام هذا المنفذ لتوصيل التلفاز بمستقبل صوتي متوافق.
- HDMI**  
منفذ HDMI (مدخل)  
يستخدم منفذ HDMI واجهة متعدد الوسائط عالي الوضوح) لتوصيل الحاسوب الشخصي ذو بطاقة رسومات متوافقة أو توصيل مشغلات أقراص DVD معينة، أو جهاز رقمي متوافق، لفك شفرات القمر الصناعي. يوفر هذا المنفذ وصلة رقمية غير مضغوطة تنقل بيانات الفيديو والصوت من خلال كابل موصل صغير متكامل.
- EARPHONE OUT**  
منفذ السماعَة EARPHONE (مخرج)  
يمكن استخدام هذا المنفذ لربط السماعات والاستماع للصوت الصادر من جهاز التلفاز.  
ملاحظة: ضغط الصوت العالي من السماعات قد يحدث ضرر في الأذن أو فقدان السمع.
- AV IN**  
منافذ الصوت AV (مدخل)  
يمكن استخدام منافذ AV IN لربط جهاز التلفاز بمجموعة من الأجهزة، بما في ذلك أجهزة الفيديو، والفيديو الرقمي، والديكودر، وريسيفر الاستلايت، ومشغل DVD، والألعاب. ويعمل منفذ الفيديو VIDEO IN عكس توصيل الفيديو.



### الاحتياطات

يرجى قراءة جميع التعليمات قبل تشغيل الجهاز. يرجى الاحتفاظ بهذه التعليمات للرجوع إليها مستقبلاً عند الحاجة.

### المنتج

- لا تسد فتحات التهوية في الغطاء الخلفي أو تغطيتها.
- لا تدفع أي جسم داخل الجهاز من خلال فتحات لوحة التلفاز لأنها قد تمس أجزاء ناقلة للتيار أو قد تسبب قصراً في الدائرة الكهربائية مؤدية إلى حدوث حريق أو صدمة كهربائية أو تلف للجهاز.
- لا تحاول فتح لوحة التلفاز لأنها قد تتلف. ليس هناك أي أجزاء داخلية يمكنك إصلاحها بنفسك. ارجع إلى فني مؤهل فيما يتعلق بجميع أعمال الصيانة.
- لا تلمس سطح الشاشة بأصابعك لأنها قد تخدش شاشة التلفاز أو تشوهها.
- لا تضع ضغطاً كبيراً على شاشة التلفاز، حيث قد يسبب أضراراً بالغة لها.

### الكهرباء والتوصيل

- أفضل الكهرباء عن الجهاز في الحالات التالية:
  - في حال عدم استخدام الجهاز لفترة زمنية طويلة.
  - في حال تلف سلك الكهرباء أو منفذ الطاقة/ القابس.
  - اتبع التعليمات التالية لتكيب المنتج وضبط إعداداته. اضبط جميع عناصر التحكم المذكورة في تعليمات التشغيل لأن أي إعدادات غير سليمة لادوات التحكم الأخرى قد تتلف الجهاز، وفي حال حدوث ذلك، أفضل الكهرباء عن الجهاز واتصل بمركز الخدمة المعتمد.
  - في حال تعرض الجهاز لأي اصطدام أو في حال سقوطه مؤدياً إلى تلفه.

### سلك الكهرباء وكابل الإشارة

- لا تضع أو تدحرج أي شيء فوق سلك الطاقة وكابل الإشارة.
- احرص على حماية سلك الطاقة وكابل الإشارة من دهسه بالأقدام.
- لا تزد الحمل على سلك الكهرباء أو منفذ الطاقة.
- لا تعرض سلك الكهرباء وكابل الإشارة لأيطوبة.

### بيئة الاستخدام

- لا تضع الجهاز على عربة أو قاعدة أو طاولة مهزوزة.
- ضع الجهاز في مكان به تهوية جيدة.
- لا تستخدم الجهاز بجانب الأماكن الرطبة والباردة. احرص على حماية الجهاز من الحرارة الزائدة.
- احفظ الجهاز بعيداً عن أشعة الشمس المباشرة.
- يجب ألا يتعرض الجهاز للتقشير أو الرش، أو ألا توضع عليه أجسام ممتلئة بالسوائل، مثل المزهريات.
- لا تستخدم الجهاز بجانب الأماكن المتربة.

### التنظيف

- انفض الغبار عن الجهاز بمسح الشاشة واللوحة بقطعة قماش طرية ونظيفة باستخدام منظف سائل خاص.
- لا تضغط على الشاشة بقوة عند تنظيفها.
- لا تستخدم المياه أو أي منظفات كيميائية لتنظيف الشاشة لأن ذلك قد يتلف سطح شاشة التلفاز.

### تثبيت التلفاز على الحائط


- تحذير: تتطلب هذه العملية شخصين.
- لضمان التركيب الآمن، يرجى مراعاة ملاحظات السلامة التالية:
  - تحقق من قدرة الحائط على تحمل وزن التلفاز وحامل التثبيت.
  - اتبع تعليمات التثبيت القادمة مع حامل التثبيت.
  - يجب تركيب الجهاز رأسياً على الحائط.
  - احرص على استخدام البراغي المناسبة فقط لمادة تكوين الحائط.
  - احرص على وضع كابلات التلفاز في مكان بعيد عن حركة الأقدام لتجنب التعثر فيها.

جميع تعليمات السلامة لأجهزة التلفاز الأخرى الخاصة بنا تنطبق على هذا الطراز.

ملاحظة:  
الرسومات المبينة في هذا الدليل هي لغرض التوضيح فقط.

### أزرار التلفاز

ملاحظة: قد يختلف موقع الأزرار الوظيفية وأزرار الطاقة وأسمائها على التلفاز وفقاً لطراز الجهاز. كما أن بعض الأزرار قد لا تكون موجودة في طرازات معينة.

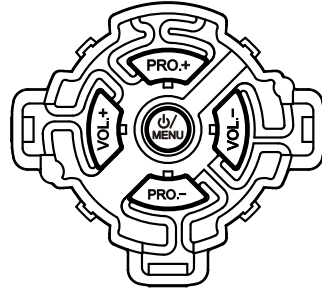

#### 1- زر PROGRAM UP/DOWN

يبحث في قائمة القنوات للأعلى/ للأسفل. يعمل هذان الزران في نظام القائمة كزري توجيه للأعلى والأسفل في وحدة التحكم عن بُعد وزي تحكم لضبط القائمة.

#### 2- زر VOLUME UP/DOWN

رفع أو خفض مستوى الصوت. يعمل هذان الزران في نظام القائمة كزري توجيه لليمين واليسار في وحدة التحكم عن بُعد ولضبط التحكم في القائمة.

#### 3- زر MENU / ⏻

يعمل على تشغيل التلفزيون أو وضع الاستعداد. بعد تشغيل الجهاز، قم بضغط قصيرة لتأكيد الاختيار و بضغط طويلة لفتح قائمة التصفح

ملاحظة: قد يختلف موقع الأزرار الوظيفية وأزرار الطاقة وأسمائها على التلفاز وفقاً لطراز الجهاز.

الفصل الأول: مقدمة

3	الاحتياطات .....
3	المنتج .....
3	الكهرباء والتوصيل .....
3	سلك الكهرباء وكابل الإشارة .....
3	بيئة الاستخدام .....
3	التنظيف .....
3	تثبيت التلفاز على الحائط .....
5	أزرار التلفاز .....
6	وظائف وحدة التحكم عن بُعد .....
7	كيفية إقران جهاز التحكم عن بُعد مع التلفاز .....

الفصل الثاني: التشغيل العام

8	التشغيل .....
8	الإغلاق .....
9	ربط الشبكة .....
10	التلفاز - الإعداد الأولي .....

الفصل الثالث: الخصائص الرئيسية

11	تشغيل الصفحة الرئيسية .....
----	-----------------------------

الفصل الرابع: استخدام التلفاز

12	الوصول للقنوات .....
12	مشاركة أجهزة موصولة .....
12	الصوت .....
12	استخدام قائمة الوصول السريع .....
12	العرض & الصوت .....
12	التلفاز .....
13	استخدام إعدادات التلفاز .....
13	ضبط القنوات .....
14	الصورة & العرض .....
14	الصوت .....
15	المنطقة الذكية .....
15	النظام .....

الفصل الخامس: معلومات أخرى

16	المشغل الذكي .....
16	التنبيهات والأسئلة الشائعة .....
17	استكشاف الأخطاء وإصلاحها .....
17	تركيب القاعدة .....



Models: 50Q8  
55Q8  
65Q8