



QLED TV

دليل المستخدم

الموديل :
86Q9 ▲

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الجهاز ،
واحتفظ به للرجوع إليه مستقبلا

هذه التصاميم ومواصفات عرضة للتغيير بهدف إدخال تحسينات عليها
وذلك دون إشعار مسبق

ISO9001 CB



QLED TV

User's Manual

Model:
▲ 86Q9

Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change for improvement
without prior notice.

ISO9001 CB





Model: 86Q9

Table of Contents

Chapter 1: Introduction

Precautions	3
Product	3
Power and Plug	3
Power Cord and Signal Cable	3
Use Environment	3
Cleaning	3
Hanging the TV Set on the Wall	3
Buttons on the TV	4
Sockets	5
Remote Control Functions	6
How to Pair Remote Control with the TV.....	7

Chapter 2: General Operation

Switching on	8
Switching off	8
Network connection	9
TV - Initial Setup	10

Chapter 3: Home Features

Homepage Operation	11
--------------------------	----

Chapter 4: Using your TV

Accessing channels	12
Watching connected devices	12
Volume.....	12
Using Quick Access Menu.....	12
Display & Sound	12
TV	12
Using TV Settings.....	13
Channels Setup	13
Picture & Display	14
Sound	14
Smart Zone	15
System	15

Chapter 5: Other Information

Smart Player	16
Attention and Frequently Asked Questions.....	16
Troubleshooting	17
Base Installation	17

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

Power and Plug

- Unplug the set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
- If the set is subject to impact or has been dropped to have the cabinet damaged.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

Hanging the TV Set on the Wall

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:


- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Note:
Illustrations within this publication are provided for reference only.

Buttons on the TV

Note: The location and names of the function buttons and power button on the TV may vary according to TV model. And some buttons may not be available for some models.

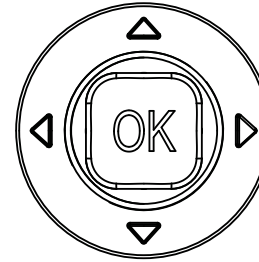

1. button

Scans up/down through the channel list. In the menu system, they act like the up/down direction buttons on the remote and adjust menu controls.

2. button

Increases/decreases the volume. In the menu system, they act like the right/left direction button on the remote and adjust menu controls.

3. button

Turns the TV on or standby. The TV is on, short press it to confirm items, and long press it, brings up the NAV menu.

Note: The location and names of the function buttons and power button on the TV may vary according to TV model.

Sockets


Note: The location and names of the sockets on the TV may vary according to TV model, and some sockets may not be available for some models.

USB	USB sockets (input) These sockets can be used to connect an USB device. Note: The number of USB sockets on the TV may vary according to TV model.
LAN	LAN RJ45 plug for connecting to external modem or network access equipment.
SATELLITE	SATELLITE IN socket (input) This socket can be used to connect the satellite receiver pot.
ANTENNA IN	ANTENNA IN socket (input) This socket can be used to connect the outside aerial or cable network.
SPDIF	SPDIF socket This output can be used to connect a compatible digital audio receiver.
HDMI	HDMI socket (input) The HDMI (High-Definition Multimedia Interface) socket can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.
EARPHONE	EARPHONE socket (output) Allow you to connect earphones to listen to the sound coming from the TV. Note: Excessive sound pressure from earphones can cause hearing loss.
AV IN	Video + audio mini sockets (input) The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles. The VIDEO IN socket provides composite video connection.

Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.



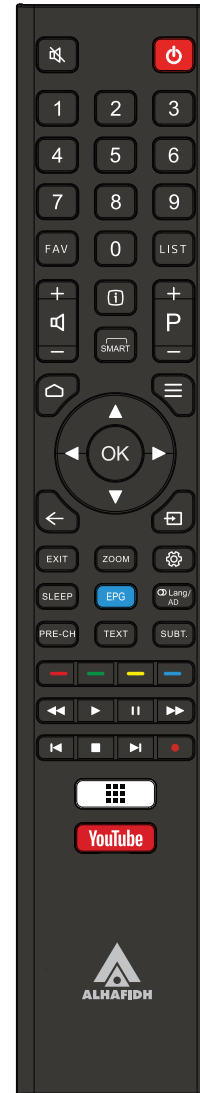










Note: Figures and illustrations on this operation manual are provided for reference only and may differ from the actual product appearance. Certain function may not be available for some models, e.g.



MUTE	To mute and un-mute the sound.
	Turns the TV on or off.
0-9 buttons	To enter channel numbers.
FAV	To bring up the favorite channel list menu.
LIST	To display the channel list.
	To control the volume.
P +/-	To adjust channels.
Info. (i)	To display program information, if available.
SMART	To enter SMART function interface.
HOME	To enter Homepage.
MENU	Enter into Quick Access Menu.
OK	Confirms your selection.
	To navigate through the menus; to select menu options.
	To navigate through the menu; to set functions and change values.
BACK	To go back to the previous menu or interface; to exit a running app.
SOURCE	To enter source selection interface.
EXIT	To go back to the previous menu or interface; to exit a running app.
ZOOM	To select the picture format.
	Enter into Using TV System menu.
SLEEP	To set the TV to turn off after a given amount of time.
EPG	To toggle the Electronic Program Guide on or off under DTV source.
Lang/AD	To select a sound type available for selected analogue TV program; to select an audio language available for selected digital TV program.
PRE-CH	To return to the previous channel.
TEXT	To toggle Teletext on or off.
SUBT.	To select a subtitle language available for selected digital TV program.
Colored buttons	To select tasks or Teletext pages.
	To start fast reverse or fast forward.
	To start playback.
	To pause playback.
	To select the previous or the next photo, music or video.
	To stop playback.
	To record programs under DTV source.
	Goes to the Google App Drawer.
YouTube	Goes to the YouTube homepage.

Remote Control Functions




Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

- POWER**  (On/Off button) Turns the TV on or off.
-  To mute and un-mute the sound.
-  Enter into Using TV System menu.
- SMART**  To enter SMART function interface.
-  To enter source selection interface.
- ▲▼◀▶** (up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls. **▲▼** buttons can up or down to through the current channel list under TV source.
- OK** Confirms your selection.
-  Exit the menu and return to the previous menu.
-  Goes to the smart TV homepage.
-  Enter into Quick Access Menu.
-  To Enter into virtual keyboard.
-  Increases or decreases the TV's volume.
- YouTube**  Goes to the YouTube homepage.
-  Goes to the Google Play store homepage.
-  (Mic)Click to interact with Google Assistant of the TV. (Available only when the network connection is normal.)





How to Pair Remote Control with the TV


This is a Bluetooth remote control, and before using it, please pair it with the TV firstly. The following steps are for your reference:

- Step 1: Press  button to enter the home page.
- Step 2: Press  button to enter the "RC pairing".
- Step 3: Follow the "Settings tips page", Press **OK** and  together.
- Step 4: The screen will display "Pairing...", Pair finished the screen will display "Success!".

NOTE: If you wait more than 2 minutes and it can't pair, please repeat the above steps for pairing again.

If you want to unpair the Bluetooth remote, As follow:

- Step 1: Press  button to enter the home page.
- Step 2: Press **▲/▼◀/▶** to choose , and then press **OK** to enter.
- Step 3: Press **▼** to select "Remotes & Accessories" and then to choose the Bluetooth remote name to enter next steps.
- Step 4: Press unpair and then choose **OK** button.

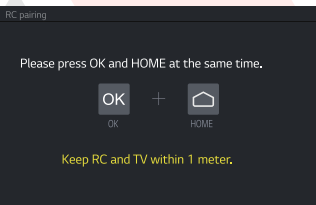

Switching on


Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two batteries in the remote control.


Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable **FIRST** to the television, **THEN** to a mains socket. (Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)
 - If your TV is connected to an AC supply
Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
 - If your TV is connected to a DC supply
Your TV set should only be connected to a DC supply. It must not be connected to a AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.
4. When powered on, the TV will be turned on directly or be in standby.
Note: For some models, switch the TV on by pressing the power button.

If the power indicator lights up, the TV set is in standby mode. Press the  button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the  button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.
Note: For some models, press the power button to switch off the TV set.

Network Connection

To access the Internet, you must subscribe to high speed broadband Internet service with your Internet service provider (ISP).

Your TV can be connected to your home network in two ways:


- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless and your home wireless network.

Note: Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP.

Connecting to a wired network

To connect to a wired network:


1. Ensure you have:
 - An Ethernet cable long enough to reach your TV
 - A router or modem with an available Ethernet port
 - A high-speed Internet connection
 - An Ethernet (LAN) port on the back of the TV
2. Connect your Ethernet cable to the router and to the Ethernet port on the back of the TV.
3. Use the **Network** menu to configure the TV.

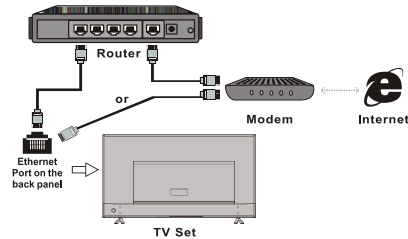

Connecting to a wireless network

To connect to a wireless network:

1. Ensure you have:
 - A router broadcasting a high-speed wireless signal
 - A high-speed Internet connection
2. Use the **Network** menu to configure the TV.

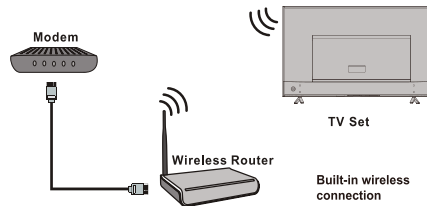

TV - Initial Setup

Initial setup involves selecting all the settings required to be able to search for and store all channels you can receive. Make sure that the television is switched on and follow all the steps in turn specified hereafter.

Note: If the channel search retrieved only few channels it could be caused by poor broadcasting and therefore is not covered by manufacturer warranty. Manufacturers cannot be held responsible for lack of or poor broadcasting in some areas.

The first time you switch the set on, the Initial Setup wizard opens, which guides you through the initial setup process.

Step 1: Environment

Press ▲/▼ to select your environment. Then press OK to enter next step.

Home Mode: You Would be able to view the standard settings for Picture and sound modes.

Shop Mode: You can enjoy enhanced setting for Picture and Sound modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

Step 2: Where are you?

Press ▲/▼ to select your Country/Region. Press OK to confirm and move to next step.

Step 3: Terms & Conditions

Use ▲/▼ to read Terms & Conditions, then press OK to confirm and move to next step.


Step 4: Channel installation

Use ▲/▼ to select Tuner mode: Antenna, Cable or Satellite; Type: Digital, Analogue and All, then press OK to confirm and move to next step.


Step 5: Please check settings

When all setup is done, the [Please check settings] interface displays on the screen, and press OK to finish the initial setup. You can also go back to former step and make any changes by using ←-button.


Step 1:

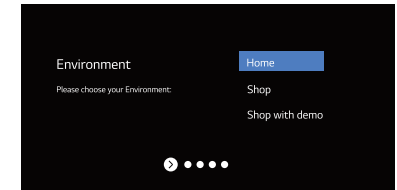


Step 2:

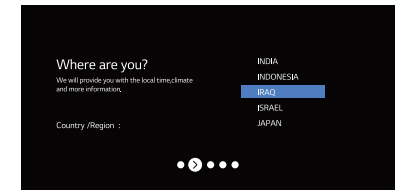


Step 3:

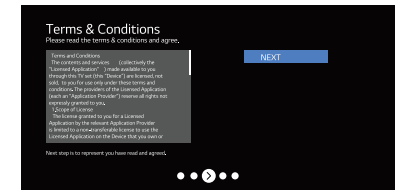

Step 4:

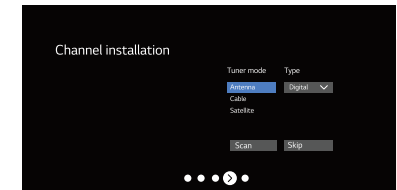

Step 5:

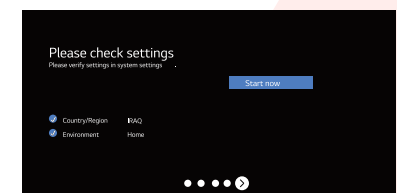

Homepage Operation

Note: This manual is for common use. Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. And for some models, certain options are not available.


You can select all the features from homepage.

Press to display homepage.

Press to select icons from the screen list.

Press **OK** to enter each option.

To exit the menu, press .

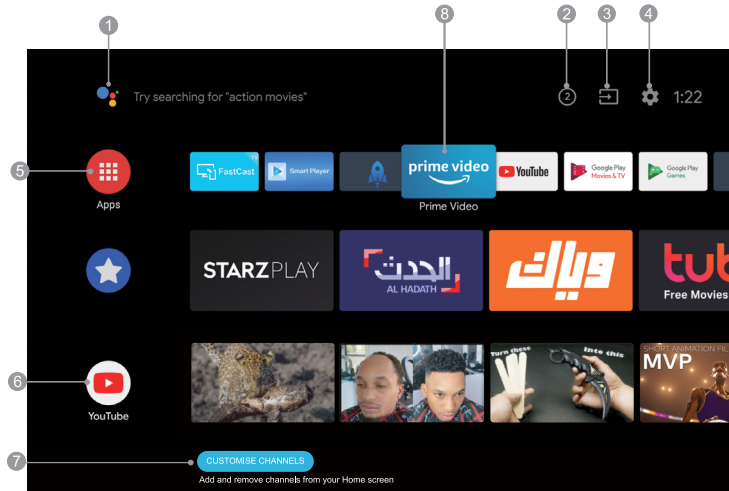

Note: The picture is only for reference

- 1. Google Assistant:** Click to interact with Google Assistant of the TV.
- 2. Notifications:** Remind you of system-critical information, such as low disk space, Google sign in or account errors, network connectivity issues, etc.
- 3. Input:** Select the input source.
- 4. Settings:** Access the system setting.
- 5. Apps:** Show the list of favorite applications, or access the application center.
- 6. Youtube:** Browse this application to watch a wide variety of online videos.
- 7. CUSTOMISE CHANNELS:** Add and remove channels from your Home screen.
- 8. Amazon prime video:** Open Amazon prime video app.

Note:


- 1) The functions and contents of "Home Page" may vary by different countries or models.
- 2) Before using network functions in home page like network applications and so on, please connect the TV to the network firstly.
- 3) Icon copyrights are owned by the application providers.

Accessing channels


buttons can up or down to switching channel or open virtual keyboard and select digital switching channel

Watching connected device

Press then press to select your desired source, and then press **OK** to confirm.

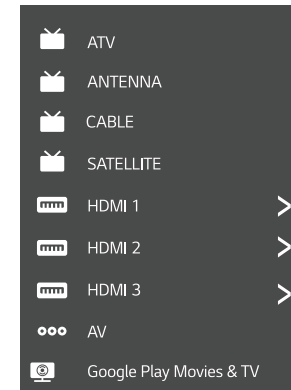

Note: The available source might differ depending on the model.



Volume


Volume control: press the VOL +/- buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.
Sound mute: press the button to temporarily mute the sound. Press this button again or the vol + button to restore the sound.
Pure Sound Mode : press to select the Pure sound mode that you like .

Using Quick Access Menu

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

This section explores the menus and settings of your TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

1. In TV mode, press on the remote control to display the quick access list.
2. Press to select the desired item, then press **OK** to open the corresponding submenu.
3. In submenu, use and **OK** buttons to make the adjustments, or use to select an item, use **OK** to enter and operate according to the on-screen display or guide.
4. Press to return to the previous menu.

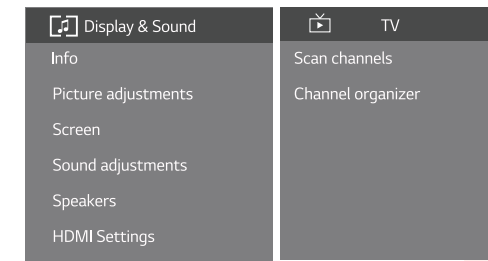

Display & Sound

Info: Select this option to view TV information.
Picture adjustments: Enter to adjust picture mode or Advanced settings.
Screen: Select this option to adjust the picture size.
Sound adjustments: Select this option to set the sound adjustments.
Speakers: To enter TV speaker settings when connect ARC device.
HDMI Settings: Enter to set up HDMI devices for streamlined control.

TV

Scan channels: To setup Analogue or Digital channels.
Channel Organizer: Highlight the channels you want to edit, then use the arrow keys to edit the channel.









your preferences.

Using TV Settings


The Settings menu allows you to configure the TV with your preferences.

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.


TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:



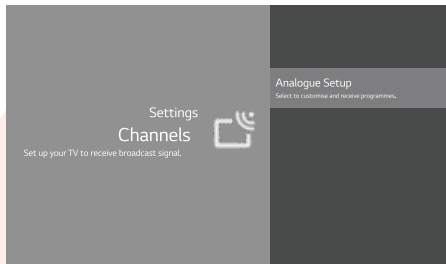

1. In TV mode, press  on the remote control to display the quick access list.
2. Press  /  to select the desired item, then press OK to open the corresponding submenu.
3. In submenu, use  /  and OK buttons to make the adjustments, or use  /  to select an item, use OK to enter and operate according to the on-screen display or guide.
4. Press  to return to the previous menu.


Channels Setup




Analogue Setup

- Analogue Auto Tuning: Press OK to start the automatic search process. The search may take a few minutes. During the process, you can press  / EXIT to abort.



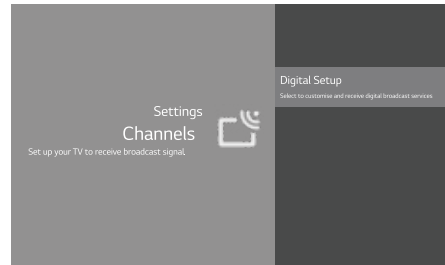

- Analogue Manual Tuning: Press OK to enter the interface. Press  /  to set program, TV system or color system item, then Press  /  select Frequency and press OK to search channel.







Digital Setup

- Digital Antenna Tuning: Press OK to start the automatic search process. The search may take a few minutes. During the process, you can press  and choose YES to exit.







- Subtitle Setup:

- (1) Subtitle Setting: Include off, Basic, Hearing impaired.
- (2) Primary Preferred Language: Press OK and then use  /  to select Primary Preferred Language.
- (3) Second Preferred Language: Press OK and then use  /  to select Second Preferred Language.

- Teletext Setup

- (1) Preferred teletext: Press OK and then use  /  to select Preferred teletext.
- (2) Decoding page language: Press OK and then use  /  to select Decoding page language.



- Audio Setup

- (1) Audio Description: Include Off and On.
- (2) Audio Description Mixing Level: Press OK and then use  /  to set Audio Description Mixing Level.
- (3) Audio Type: Include Normal, Hearing impaired.
- (4) Primary Preferred Language: Press OK and then use  /  to select Primary Preferred Language.
- (5) Second Preferred Language: Press OK and then use  /  to select Second Preferred Language.



Picture & Display




Picture Adjustment:

- Picture Mode: Optimize picture quality for general content. Use  /  to scroll through the Picture preset settings: Standard, Dynamic, Movie, Sport and Personal.
- Advanced Settings: Access advanced picture enhancing options.
 - Brightness: Adjusts the brightness of the picture.
 - Color: Adjusts the color saturation.
 - Clarity: Advanced technique for picture enhancement.
 - Motion: Adjust MEMC function Motion compensation level, include smooth, middle, off.
 - Reset: To reset picture adjustment.



Display Setting:

- Screen mode: Adjust the picture size. Use  /  to scroll through the Screen mode preset settings.
- Auto screen: Automatically adjusts screen mode based on the signal. Include On and Off.
- Overscan: Adjust overscan display, include on/off

Sound

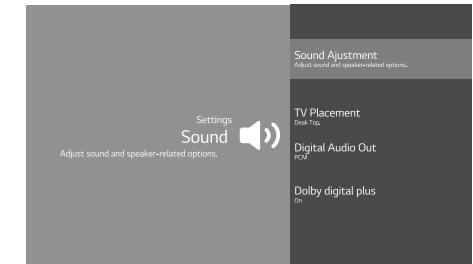







Sound Adjustment: Adjust sound and speaker-related options.

- Sound Mode: Optimize sound quality for general content. Use  /  to scroll through the sound preset settings: Sports, Standard, Cinema, Music and News.
- Surround: Reproduces life-like surround sound when playing 5.1 channel audio sources. Include On and Off.
- Advanced Setting: Access advanced sound enhancing options.


Volume Setting:

- 1) Auto Volume: Keeps the volume level constant for all programs and inputs. Include On and Off.
- 2) Balance: Adjust the speaker balance.
- 3) Digital Audio Out Volume: Applied for PCM only. The volume levels between PCM and compressed audio will differ.
- 4) Digital Audio Out Delay: Set the delay time for Digital Audio.
- 5) Volume Offset: Adjust the sound level of the current input relative to other inputs.

Sound mode related:

- 1) Surround effect: Use  /  to scroll through Surround effect.
 - 2) Equalizer: Use  /  /  /  to scroll through Equalizer. Reset: To return all sound settings to factory default.
- TV Placement:** Select how TV SET placed. Include Desk Top and Wall Mount.
- Digital Audio Out:** Optical out for audio signals from the Digital Audio Out. Include Auto, PCM, Passthrough.
- Dolby Digital Plus:** Include On and Off.

Smart Zone



Enjoy Music: Select this option to enter into Audio Only mode.

Fast Cast: An app that quickly delivers mobile content to TV, allowing users to quickly deliver multimedia content such as photos, videos, music and more to TV terminals.

Fast Cast Step:

1. Download Fast Cast mobile App.
2. Mobile and TV are connect the Same Wi-Fi.
3. Search device and connect TV.

Note:

1. This function may be unavailable for some mobile devices, and it subject to chipset support the files format.
2. Recommendations of working environments:

A: Local Area Network Speed recommendations on: 1M/S-2M/S.


B: Files required :MP4、AVI、TS、FLV、f4v、m3u8 (subject to chipset supported).

Sleep Timer: The options include: Off, 10min, 20min, 30min, 60min, 90min, 120min, and 180min.

World clock: Enter to add World clock.

Night mode: Turn on to Keep brightness to prevent disturb others. Clear brightness at a low level.

System

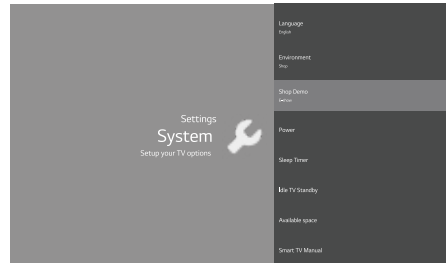

Language: Use ▲/▼ to scroll through Language.

Environment: Enter to set Home or shop mode.

-Home Mode: You Would be able to view the standand settings for Picture and Sound Modes.

-Shop Mode: You can enjoy enhanced setting for Picture and Sound Modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

Shop Demo: Enter to set E-show or E-sticker.

Note: E-sticker is not availbale for certain model.

Power: Enter to set Power mode.

- Wake on Wifi: Enable wake on WIFI Settings.

- Network stand by: Enable wake on WIFI Settings.

Sleep Timer: Set the TV to turn off automatically.


Idle TV Standby: Select the inactivity time that TV enter standby.

Available space: Show the system storage size and Memory size.

Smart TV manual : Show the guide to get smart TV manual by smartphone

Smart Player

Connect a USB device to a USB socket, the screen will show USB file name and then press OK to enter .If no USB device connected, the USB interface will be not displayed.

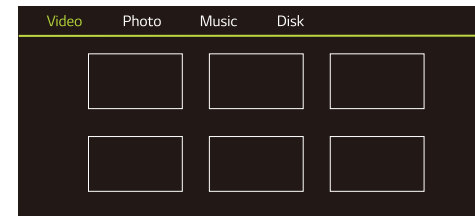

Video:

1. Select Video icon, then press OK button to view movie file.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. While playing a Video, Press OK of remote to Play and Pause the video file. Press ◀ of remote to Fast backward. Press ▶ of remote to Fast forward.
4. Use ≡ to see more option: Photo Scale, Looping mode, Subtitle, Audio track, info, settings.
5. Press Return key of remote to Stop playing and Press Return to Exit.

Photo:

1. Select Picture icon, then press OK button to view the picture.
2. Press Up, Down, Left or Right direction button to select your desired picture file and press OK to show.
3. While showing picture, For Previous and Next use remote ◀ ▶ Press OK to display the play console.
4. Use OK key to see more option: Manual play, Information, Play mode, Left Rotation, Right Rotation, BGM: on or off.

Music:

1. Select Music icon, then press OK button to listen to Music.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. The Play console includes Previous, Play/Pause, Fast backward/Fast forward, Next.
4. Press ≡ key to see PlayList.
5. Press Return key of remote to Stop playing.

Disk:

1. Select Disk icon, then press OK button to choose folder.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. Press Return key of remote to Stop playing.

Attention and Frequently Asked Questions

Attention:

Some non-standard mobile storage device may not be recognized. Please change to use the standard device.

Note: For coding files, there are many kinds non-standard coding method, so this system can not be guaranteed to support the file formats using any coding method.

Frequently Asked Questions:

1. Under the following conditions, this system cannot decode the file and the file cannot be play normally:
 - The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
 - The format of file is not matched or the file is harmed.
2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.
3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
4. The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..
5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.
6. When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
7. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage.

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture, no sound

1. Press the Vol+ button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed


1. Press the Power button to turn off TV, then press the Power button a gain to reset TV.
2. Unplug the power cord, then press the Power button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation

To fix the double support base on the unit by screws, the installation is completed.

Note: Illustrations below are provided for reference only and may differ from actual product appearance.

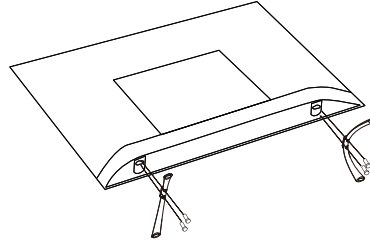

الإشعال

يمكن إصلاح معظم الأخطاء التي تواجهها بالتلفاز الخاص بك عن طريق الرجوع إلى قائمة استكشاف الأخطاء وإصلاحها التالية.

استكشاف الأخطاء وإصلاحها

يمكن إصلاح معظم الأخطاء التي تواجهها بالتلفاز الخاص بك عن طريق الرجوع إلى قائمة استكشاف الأخطاء وإصلاحها التالية.

بدون صورة، وبدون صوت

1. تأكد من عمل الصمام الكهربائي أو قاطع الدائرة الكهربائية.
2. قم بتوصيل جهاز كهربائي آخر بالمنفذ للتأكد من أنه يعمل أو قيد التشغيل.
3. الاتصال ضعيف بين قابس الطاقة والمنفذ.
4. تحقق من مصدر الإشارة.

لا توجد ألوان

1. قم بتغيير نظام الألوان.
2. قم بضبط التشبع اللوني.
3. جرب قناة أخرى. قد يتم استقبال برنامج الأبيض والأسود.

وحدة التحكم عن بُعد لا تعمل

1. استبدل البطاريات.
2. البطاريات غير مركبة بشكل صحيح.
3. مصدر الطاقة الأساسي غير متصل.

لا توجد صورة، الصوت طبيعي

1. اضبط السطوع والتباين.
2. قد يكون هناك خلل في البث.

الصورة طبيعية، لا يوجد صوت

1. اضغط على الزر Vol+ لرفع الصوت.
2. مستوى الصوت مضبوط على وضع الكتم، اضغط على زر الكتم لاستعادة الصوت.
3. قم بتغيير نظام الصوت.
4. قد يكون هناك خلل في البث.

موجات غير منظمة تظهر على الصورة

عادة ما يحدث ذلك بسبب تداخل محلي مثل السيارات أو المصابيح أو مجففات الشعر. اضبط الهوائي للحد من التداخل.

نقاط بيضاء وتداخل

إذا كان الهوائي موضوع في منطقة بعيدة عن إشارة التلفاز مما يؤدي إلى ضعف الإشارة، قد تظهر النقاط على الصورة. إذا كانت الإشارة ضعيفة جداً، قد يكون من الضروري تركيب هوائي خاص لتحسين الاستقبال.

1. اضبط موضع واتجاه الهوائي الداخلي/ الخارجي.
2. تحقق من توصيل الهوائي.
3. اضبط القناة.
4. جرب قناة أخرى. قد يكون هناك خلل في البث.

الصورة الشبحية

تحدث الصورة الشبحية بسبب إشارات التلفاز التي تتخذ مسارين. أحدهم المسار المباشر والآخر ينعكس من المباني الطويلة أو التلال أو الأجسام الأخرى. قد يؤدي تغيير اتجاه الهوائي أو موقعه إلى تحسين الاستقبال.


تداخل الترددات اللاسلكية

ينتج عن التداخل موجات متحركة أو خطوط مائلة أو خلل في تباين الصورة في بعض الحالات. اعثر على مصدر التداخل وقم بإزالته.

الإشتركيب القاعدة

يكتمل التركيب مع تثبيت القاعدة ذات الدعائم المزودة بواسطة البراغي.

ملاحظة: الرسوم التوضيحية الواردة أدناه هي فقط لغرض التوضيح والاطلاع، وقد يختلف المنتج الفعلي.

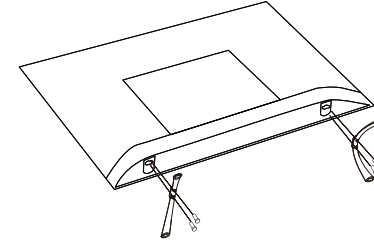

المنطقة الذكية



استمع بالموسيقى؛ اختر هذه الميزة للدخول في وضع الصوت فقط.

تطبيق فاست كاست (Fast Cast): أحد التطبيقات التي تقوم بربط محتوى الهاتف المتحرك مع التلفاز بسرعة، مما يتيح للمستخدمين عرض محتوى الوسائط المتعددة بسرعة على التلفاز، مثل الصور، ومقاطع الفيديو، والموسيقى، وغيرها الكثير.

1. قم بتحميل تطبيق فاست كاست على الهاتف المتحرك.
2. اربط الهاتف المتحرك والتلفاز بنفس شبكة الواي فاي.
3. قم بالبحث والربط مع التلفاز.

1. قد تكون هذه الوظيفة غير متاحة لبعض الأجهزة المحمولة، وأنها تخضع لشرائح دعم تنسيق الملفات.
 2. توصيات بيانات العمل:
- A: توصيات سرعة الشبكة المحلية على: 1M / S - 2M / S .
B: الملفات المطلوبة: MP4 ، AVI ، TS ، FLV ، F4v ، m3u8 (تخضع لشرائح مدعومة).

مؤقت النوم: تتضمن الخيارات: إيقاف التشغيل و10 دقائق و20 دقيقة و30 دقيقة و60 دقيقة و90 دقيقة و120 دقيقة و180 دقيقة. الساعة العالمية؛ لإضافة الساعة العالمية.
الوضع الليلي: شغل للحفاظ على السطوع لمنع إزعاج الآخرين، سطوع نقي بمستوى منخفض.

النظام



اللغة: استخدم الأزرار ▲ ▼ لتغيير عبر اللغة، البيئة: لضبط الوضع الرئيسي Home ووضع المتجر Shop. - الوضع الرئيسي: يمكنك عرض الإعدادات القياسية لأوضاع

الصورة والصوت. - وضع المتجر: يمكنك الاستمتاع بإعدادات معززة لأوضاع الصورة والصوت.

ملاحظة: لن يمكن الوصول إلى إعدادات قائمة الصورة عند اختيار وضع المتجر Shop

استعراض المتجر: اضغط لضبط العرض الإلكتروني E-show أو الملصق الإلكتروني E-sticker. ملاحظة: الملصق الإلكتروني غير متوفر في بعض الطرز.

الطاقة: ضبط وضع الطاقة (Power). - تفعيل شبكة واي- فاي: ضبط إعدادات تفعيل شبكة واي- فاي.

- وضع الاستعداد للشبكة: تفعيل الاستيقاظ من إعدادات الإيثرنت.


مؤقت النوم: اضبط التلفاز لإيقاف التشغيل تلقائياً. التلفاز في وضع الاستعداد: حدد وقت السكون الذي يدخل فيه التلفاز في وضع الاستعداد.

المساحة المتوفرة: عرض حجم مساحة تخزين النظام وحجم الذاكرة.

دليل التلفاز الذكي: انظر إلى الدليل للحصول على دليل التلفاز الذكي باستخدام الهاتف الذكي.

المشغل الذكي

قم بتوصيل جهاز USB بمنفذ USB، وستقوم الشاشة بعرض اسم ملف USB ثم اضغط على زر OK لفتح الملف. إذا لم تقم بتوصيل جهاز usb، لن يتم عرض واجهة USB.

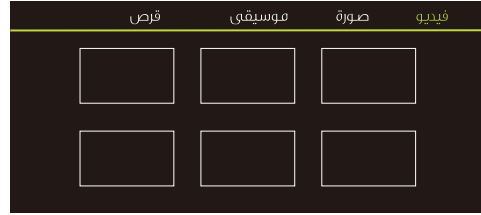

مقطع فيديو:

1. اختر أيقونة (Video)، ثم اضغط على الزر (OK) لعرض ملف الفيلم.
2. اضغط على أزرار الاتجاهات أعلى أو أسفل أو يسار أو يمين لاختيار الملف الذي تريده، ثم اضغط على الزر (OK) للتشغيل.
3. أثناء تشغيل مقطع فيديو، اضغط على الزر (OK) في وحدة التحكم عن بُعد لتشغيل ملف الفيديو أو إيقافه. اضغط على وحدة التحكم عن بُعد للرجوع إلى الخلف بسرعة. اضغط على وحدة التحكم عن بُعد للتحكم عن بُعد للتحكم عن بُعد بسرعة.
4. استخدم الزر [] لعرض المزيد من الخيارات: صورة Photo، تغيير الحجم Scale، وضع التكرار Looping، ترجمة مصاحبة Subtitle، مسار صوت Audio track، معلومات info، إعدادات Settings.
5. اضغط على زر العودة Return في وحدة التحكم عن بُعد لإيقاف التشغيل ثم اضغط على Return للخروج.

الصورة:

1. اختر أيقونة الصور، ثم اضغط على زر OK لعرض الصورة.
2. اضغط على زر الاتجاهات أعلى أو أسفل أو يسار أو يمين لاختيار ملف الصورة المطلوب، ثم اضغط OK لعرضه.
3. أثناء عرض الصورة يمكنك الانتقال إلى الصورة السابقة أو التالية: عن طريق الضغط على زر [] في جهاز التحكم عن بُعد.
4. اضغط OK للذهاب لوحدة التحكم في التشغيل، اضغط على زر OK للاطلاع على المزيد من الخيارات، مثل التشغيل اليدوي والمعلومات، ووضع التشغيل، والتدوير إلى اليسار، والتدوير إلى اليمين، وتشغيل أو إيقاف الموسيقى الخلفية.

الموسيقى:

1. اختر أيقونة الموسيقى، وبعدها اضغط على زر OK للاستماع للموسيقى.
2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم اضغط على زر OK لبدء التشغيل.
3. تتضمن أزرار التشغيل الملف السابق، تشغيل، إيقاف، تقديم سريع، تأخير سريع، وتشغيل الملف اللاحق.
4. اضغط على زر الرجوع Return لإيقاف التشغيل.

القرص:

1. اختر أيقونة القرص، وبعدها اضغط على زر OK لاختيار ملف ما.
2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم اضغط على زر OK لبدء التشغيل.
3. اضغط على زر الرجوع Return لإيقاف التشغيل.

التنبيهات والأسئلة الشائعة

تنبيه:

قد لا يتم التعرف على بعض الأجهزة المحمولة غير القياسية، يُرجى استخدام الجهاز القياسي.

ملاحظة: بالنسبة لمعاملات الترميز، هناك أنواع عديدة من طرق الترميز غير القياسية، لذلك لا يمكن ضمان دعم هذا النظام لتنسيقات الملفات باستخدام أي طريقة ترميز

الأسئلة الشائعة:

1. في الحالات التالية، لا يمكن لهذا النظام فك تشفير الملف ولا يمكن تشغيل الملف بشكل طبيعي:
 - إذا تجاوزت معاملات الملف، مثل يكسل الصورة ومعدل الترميز لملف الصوت والفيديو، ومعدل الإعتيان من الملف الصوتي حدود النظام.
 - صيغة الملف غير متطابقة أو أن الملف متضرر.
2. المنفذ الساخن: لا تقم بقطع الاتصال أثناء قراءة النظام أو نقله للبيانات لتجنب تلف النظام أو الجهاز.
3. انتبه إلى مصدر الطاقة الخاص بالجهاز عند استخدام قرص ثابت محمول أو كاميرا رقمية. إذا كان مصدر الطاقة غير كاف أو غير مستقر، فقد تواجه مشكلات أثناء التشغيل أو قد لا يعمل النظام على الإطلاق. في هذه الحالة، يرجى إعادة تشغيل الجهاز، أو فصل الجهاز وتوصيله مرة أخرى، والتأكد من أن مصدر الطاقة على حالته الطبيعية.
4. يدعم النظام أجهزة USB 1.1 و USB 2.0 القياسية، مثل الأقراص ب القياسية، ومشغلات MP3، والأقراص الصلبة المحمولة، وما إلى ذلك.
5. للحصول على جودة صوت وفيديو أفضل، يُنصح استخدام الجهاز الخارجي الذي يتوافق مع معيار USB2.0.
6. عند تشغيل الفيديو بنسبة ضغط عالية، يكون من الطبيعي ظهور الظواهر غير الطبيعية، مثل توقف الصور واستغراق القائمة وقتاً طويلاً.
- 7- بالنسبة لبعض أجهزة USB المزودة بالطاقة، مثل القرص الثابت بالحجم الكبير، MP4 وما إلى ذلك، يُنصح استخدامها مع الطاقة لتجنب نقص الطاقة الكهربائية.

تفضيلاتك.

إعدادات استخدام التلفاز

تسمح لك قائمة الإعدادات بضبط التلفاز حسب تفضيلاتك. ملاحظة: قد لا تتوفر بعض الخصائص في مصادر معينة. وفي بعض الطرز، لا تتوفر بعض الاختيارات

التلفاز. كل القوائم موضحة إيجازاً وتفصيلاً لمساعدتك في الحصول على أقصى ما يمكن من التلفاز. للوصول إلى نظام القائمة:

1. في وضع التلفاز tv، اضغط على زر على وحدة التحكم عن بعد لعرض قائمة الوصول السريع.
2. اضغط على لاختيار العنصر المرغوب فيه، ثم اضغط على زر لفتح القائمة الفرعية المقابلة.
3. في القائمة الفرعية، استخدم الأزرار و لاختيار عنصر، واستخدم للانتقال والتشغيل وفقاً لشاشة العرض أمامك أو الدليل.
4. اضغط على زر للرجوع إلى القائمة السابقة.

إعداد القنوات



الإعداد التناظري

– الضبط التلقائي التناظري: اضغط على لبدء عملية البحث التلقائي. قد تستغرق عملية البحث بضع دقائق. خلال هذه العملية، يمكنك الضغط على زر للإنتهاء. – الضبط اليدوي التناظري: اضغط على للانتقال إلى الواجهة. اضغط على الزر لضبط البرنامج أو نظام التلفاز أو نظام الألوان، ثم اضغط على لاختيار التردد، ثم اضغط على على للبحث عن القنوات.

الصورة والعرض



ضبط الصورة:

– وضع الصورة: تحسين جودة الصورة للمحتوى العام. استخدم الأزرار و للتمرير عبر إعدادات الضبط المسبق للصورة: قياسي، ديناميكي، سينمائي، رياضي، شخصي.

– إعدادات متقدمة: الوصول إلى الخيارات المتقدمة لتحسين الصورة. السطوع: ضبط سطوع الصورة. اللون: ضبط تشبع اللون. الوضع، تقنية متقدمة لتحسين الصورة. الحركة: ضبط خاصية MEMC ومستوى تعويض الحركة ويتضمن "سلس" و"متوسط" و"إيقاف". إعادة الضبط: لإعادة ضبط الصورة.

إعدادات شاشة العرض:

– وضع الشاشة: اضبط حجم الصورة باستخدام و للتمرير عبر إعدادات الوضع المسبق للشاشة.

– الشاشة التلقائية: ضبط تلقائي لوضع الشاشة وفقاً للإشارة؛ يتضمن "الإيقاف" و"التشغيل".

– المسح الكلي: اضبط شاشة عرض المسح الكلي، يتضمن التشغيل / الإيقاف

الصوت



ضبط الصوت: لضبط الصوت والخيارات المتعلقة بالسماعات. – نمط الصوت: تحسين جودة الصوت للمحتوى العام. استخدم و للتحرك بين إعدادات الصوت المثبتة مسبقاً: رياضة، قياسي، سينما، موسيقى، وأخبار.

– الصوت المحيطي: ستشعر بصوت محيطي آسر عند تشغيل مصادر الصوت. ه. يتضمن تشغيل / إيقاف.

– الإعداد المتقدم: للوصول إلى خيارات تحسين الصوت المتقدمة.

إعداد الصوت:

- 1) الصوت التلقائي: يحافظ على مستوى الصوت ثابتاً لجميع البرامج والمدخلات. يتضمن تشغيل / إيقاف.
 - 2) التوازن: ضبط توازن مكبرات الصوت.
 - 3) حجم الصوت الرقمي: يتم تطبيقه على PCM فقط. ستختلف مستويات الصوت بين PCM والصوت المضغوط.
 - 4) تأخير إخراج الصوت الرقمي: اضبط وقت التأخير على الصوت الرقمي.
 - 5) إزاحة مستوى الصوت: ضبط المدخلات الحالية نسبة إلى المدخلات الأخرى.
- نمط الصوت ذو الصلة:
- 1) التأثير المحيطي: استخدم و لاختيار تأثير الصوت المحيطي.
 - 2) المعادل: Use و لاختيار المعادل.
 - إعادة الضبط: لإعادة جميع إعدادات الصوت إلى إعدادات المصنع.
 - موضع التلفاز: اختر كيفية وضع جهاز التلفاز. يتضمن الوضع المنضدي أو التعليق على الحائط.
 - مخرج الصوت الرقمي: مخرج صوتي لإشارات الصوت من مخرج الصوت الرقمي.
 - دولبي ديجيتال بلس: تتضمن تشغيل / إيقاف.


الإعداد الرقمي

– ضبط الهوائي الرقمي: اضغط على لبدء عملية البحث التلقائي. قد يستغرق البحث بضع دقائق. أثناء هذه العملية، يمكنك الضغط على واختيار YES للخروج.

- 1) ضبط الترجمة المكتوبة: تشمل إيقاف، ضعيف السمع.
- 2) اللغة المفضلة الأساسية: اضغط على ثم استخدم لاختيار اللغة المفضلة الأساسية.
- 3) اللغة المفضلة الثانية: اضغط على ثم استخدم لاختيار اللغة المفضلة الثانية.
- إعداد النص التلفزيوني
- 1) النص التليفزيوني المفضل: اضغط على ثم استخدم لاختيار النص التلفزيوني المفضل.
- 2) فك ترميز لغة الصفحة: اضغط على ثم استخدم لاختيار فك شفرة لغة الصفحة.
- إعداد الصوت
- 1) الوصف الصوتي: يتضمن تشغيل وإيقاف.
- 2) مستوى خلط الوصف الصوتي: اضغط على ثم استخدم لضبط المستوى.
- 3) نوع الصوت: يتضمن "عادي" و"ضعاف السمع".
- 4) اللغة الأولية المفضلة: اضغط على ثم استخدم لاختيار اللغة الأولية المفضلة.
- 5) اللغة الثانوية المفضلة: اضغط على ثم استخدم لاختيار اللغة الثانوية المفضلة.

تشغيل الصفحة الرئيسية

ملاحظة: هذا الدليل هو للاستخدام العام فقط. الأشكال والرسومات التوضيحية الواردة في هذا الدليل هي للتوضيح والاطلاع فقط، وقد يكون هناك اختلاف في المنتج الفعلي. كما أنه قد لا تتوفر خيارات معينة في بعض الطرازات. يمكنك اختيار خصائص من الصفحة الرئيسية. اضغط على لعرض الصفحة الرئيسية. اضغط على لاختيار الرموز من قائمة الشاشة. اضغط على OK لإدخال كل خيار. اضغط على للخروج من القائمة.

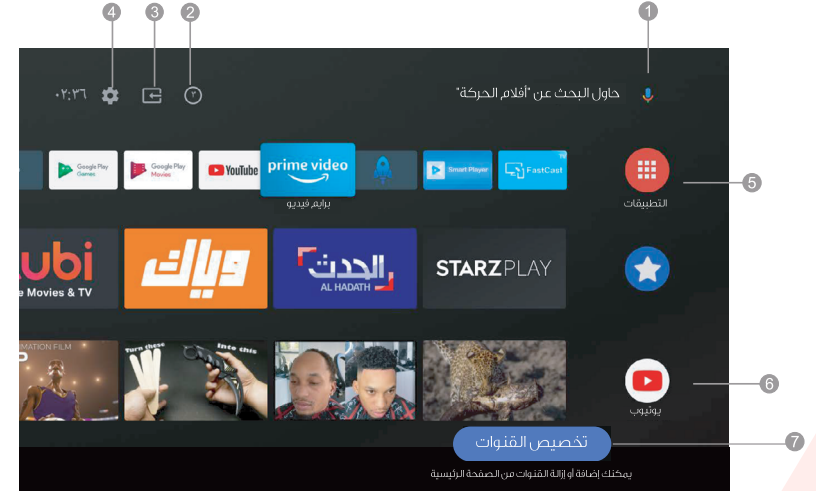

تشغيل ملاحظة: هذه الصورة للتوضيح فقط. لصفحة الرئيسية

1. مساعد غوغل (Google Assistant): اضغط للتفاعل مع مساعد غوغل على التلفاز.
2. الإشعارات (Notifications): تذكر بالمعلومات الهامة للنظام، مثل انخفاض مساحة القرص، أخطاء تسجيل الدخول في غوغل أو أخطاء الحساب، مشاكل ربط الشبكة، الخ.
3. الإدخال (Input): اختيار مصدر الإدخال.
4. الإعدادات (Settings): الوصول إلى إعدادات النظام.
5. التطبيقات (Apps): عرض قائمة التطبيقات المفضلة أو الوصول إلى مركز التطبيقات.
6. اليوتيوب (YouTube): تصفح هذا التطبيق لمشاهدة مجموعة واسعة من مقاطع الفيديو عبر الإنترنت.
7. تخصيص القنوات: إضافة القنوات أو إزالتها من الشاشة الرئيسية.
8. تطبيق Amazon prime video: فتح تطبيق Amazon prime video.

ملاحظة:

1. قد تختلف وظائف ومحتويات الصفحة الرئيسية (Home Page) باختلاف البلد أو طراز التلفاز.
2. قبل استخدام وظائف الشبكة في الصفحة الرئيسية مثل تطبيقات الشبكة وما إلى ذلك، يرجى ربط التلفاز بالشبكة أولاً.
3. حقوق التأليف والنشر للايقونات مملوكة من قبل مزودي التطبيقات.

استخدام قائمة الوصول السريع

ملاحظة: قد لا تتوفر بعض الخصائص في مصادر معينة. وفي بعض الطراز، لا تتوفر بعض الاختيارات.

يتناول هذا القسم القوائم وإعدادات التلفاز. كل القوائم موضحة إيجاباً وتفصيلاً لمساعدتك في الحصول على أقصى ما يمكن من التلفاز. للوصول إلى نظام القائمة:

1. في وضع TV، اضغط على في جهاز التحكم عن بُعد لعرض قائمة الوصول السريع.
2. اضغط على لتحديد الخيار المطلوب، ثم اضغط OK لفتح القائمة الفرعية المقابلة.
3. في القائمة الفرعية، استخدم زر / وزر OK لإجراء التعديلات أو استخدم لتحديد خيار. استخدم OK للدخول والتشغيل وفقاً لشاشة العرض أو الدليل، والتشغيل وفقاً لشاشة العرض أمامك أو الدليل.
4. اضغط على زر للرجوع إلى القائمة السابقة.

التلفاز	شاشة العرض والصوت
مسح القنوات	معلومات
منظم القنوات	ضبط الصورة
	الشاشة
	مكبرات الصوت
	ضبط الصوت
	إعدادات HDMI

شاشة العرض والصوت

معلومات: حدد هذا الخيار لعرض معلومات التلفاز. ضبط الصورة: حدد هذا الخيار لضبط وضع الصورة أو للإعدادات المتقدمة.

الشاشة: حدد هذا الخيار لتعديل حجم الصورة. ضبط الصوت: حدد هذا الخيار لضبط إعدادات الصوت. مكبرات الصوت: لإدخال إعدادات مكبر الصوت الخاص بالتلفاز عند الاتصال بجهاز ARC. إعدادات HDMI: حدد هذا الخيار لضبط أجهزة HDMI والتحكم المبسط بها.

التلفاز

مسح القنوات: إعداد القنوات التناظرية أو الرقمية. منظم القنوات: حدد القنوات التي ترغب في تعديلها ثم استخدم مفاتيح الأسهم لتعديل القناة.

الوصول إلى القنوات


يمكنك الانتقال بهذه الأزرار للأعلى والأسفل للتحويل بين القنوات أو لفتح لوحة مفاتيح افتراضية واختيار تحويل القنوات الرقمية.

مشاهدة الأجهزة المتصلة

اضغط على ثم اضغط على لاختيار المصدر الذي ترغب بعرضه ثم اضغط على OK للتأكيد.



ملاحظة: قد يختلف المصدر المتاح وفقاً للطراز.



مستوى الصوت

التحكم بمستوى الصوت: اضغط على الأزرار +/- VOI الموجودة في وحدة التحكم عن بُعد أو اضغط على الأزرار المماثلة لها على جهاز التلفاز لرفع مستوى الصوت أو خفضه.

كتم الصوت: اضغط على زر كتم الصوت مؤقتاً. اضغط على هذا الزر مرة أخرى لإلغاء كتم الصوت أو على زر + لاسترجاع الصوت.

وضع الصوت النقي: اضغط على لتحديد وضع الصوت النقي الذي ترغب به.

ربط الشبكة

للوصول إلى الإنترنت، عليك التسجيل في خدمة إنترنت واسعة النطاق وعالية السرعة من خلال مزود خدمة الإنترنت الخاص بك (ISP).

يمكن ربط التلفاز بشبكة الإنترنت المنزلية من خلال إحدى الطريقتين:


- الاتصال السلكي: باستخدام وصلة (LAN RJ45) الموجودة على اللوحة الخلفية.
- الاتصال اللاسلكي: عبر وصل التلفاز بشبكتك اللاسلكية المنزلية.

ملاحظة: الإرشادات التالية هي مجرد الطرق المعتادة لربط التلفاز بالشبكات السلكية أو اللاسلكية. قد تختلف طريقة الربط تبعاً لإعدادات الشبكة الفعلية. يرجى العودة إلى موفر خدمة الإنترنت للإجابة على أي أسئلة حول شبكتك المنزلية.

الربط بشبكة سلكية

لربط التلفاز بشبكة سلكية، يرجى اتباع الخطوات التالية:


1. يجب ضمان توفر ما يلي:
 - كابل إيثرنت طويل بما يكفي للوصول إلى التلفاز.
 - راوتر أو مودم يتضمن منفذ إيثرنت.
 - اتصال عالي السرعة بالإنترنت.
2. منفذ إيثرنت (LAN) في الجزء الخلفي من التلفاز.
 - قم بوصل كابل إيثرنت بالراوتر ومنفذ إيثرنت في الجزء الخلفي من التلفاز.
 - استخدم قائمة الشبكة Network لضبط إعدادات التلفاز.

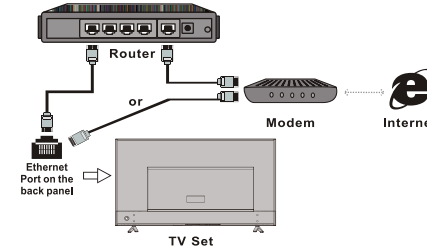

الربط بشبكة لاسلكية

لربط التلفاز بشبكة لاسلكية، يرجى اتباع الخطوات التالية:

1. يجب ضمان توفر ما يلي:
 - راوتر بيت إشارة لاسلكية عالية السرعة.
 - اتصال عالي السرعة بالإنترنت.
2. استخدم قائمة الشبكة Network لضبط إعدادات التلفاز.

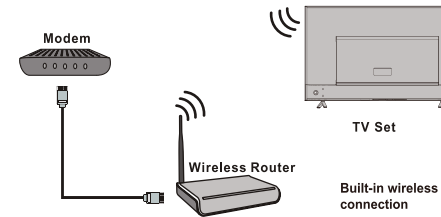

الإعداد الأولي للتلفاز

يتضمن الإعداد الأولي للجهاز تحديد جميع الإعدادات اللازمة للتمكن من البحث عن جميع القنوات التي يمكنك استقبالها وتخزينها. تأكد من تشغيل التلفاز، واتباع جميع الخطوات بالترتيب كما هو موضح.

ملاحظة: إذا نتج عن البحث عن القنوات استرجاع القليل من القنوات فقط، فقد يكون ذلك بسبب سوء البث، ولهذا فإن ضمان جهة التصنيع لا يغطي هذا البند. لا تتحمل جهات التصنيع فشل البث أو سوء جودته في بعض المناطق.

في المرة الأولى التي تقوم فيها بتشغيل المجموعة، يتم فتح معالج الإعداد الأولي، والذي يرشدك خلال عملية الإعداد الأولية.

الخطوة 1: البيئة
اضغط على ▲ ▼ لاختيار بيئتك. ثم اضغط على موافق للدخول إلى الخطوة التالية.
الوضع المنزلي (Home Mode): ستكون قادراً على عرض الإعدادات القياسية لأوضاع الصورة والصوت.
وضع التسوق (Shop Mode): يمكنك الاستمتاع بالإعدادات المحسنة لأوضاع الصورة والصوت.
ملاحظة: لن تكون إعدادات قائمة الصور قابلة للوصول عند اختيار وضع التسوق.

الخطوة 2: أين أنت؟

اضغط على ▲ ▼ لاختيار البلد/المنطقة. اضغط على OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 3: الشروط والأحكام
استخدم ▲ ▼ لقراءة الشروط والأحكام، ثم اضغط على OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 4: تثبيت القناة
استخدم ▲ ▼ لاختيار وضع Tuner: الهوائي أو الكابل أو القمر الصناعي؛ النوع: رقمي، تماثلي، الكل، ثم اضغط على OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 5: التحقق من الإعدادات
عند الانتهاء من الإعداد، ستظهر واجهة الرجاء التحقق من الإعدادات على الشاشة، واضغط على OK لإنهاء عملية الإعداد الأولي. يمكنك أيضاً الرجوع إلى الخطوة السابقة وإجراء أية تغييرات باستخدام زر ←.

الخطوة الأولى:

الخطوة الثانية:

الخطوة الثالثة:

الخطوة الرابعة:

الخطوة الخامسة:

وظائف وحدة التحكم عن بُعد

إن أغلب وظائف التلفاز متاحة على القوائم التي تظهر على الشاشة. يمكن استخدام جهاز التحكم عن بعد الذي يأتي مع هذا التلفاز للتنقل بين القوائم ولضبط جميع الإعدادات العامة.

POWER (زر التشغيل، الإغلاق) لتشغيل أو إغلاق التلفاز.

لكنم الصوت واستعادته مرة أخرى.

لعرض قائمة نظام التلفاز.

لعرض واجهة وظيفة SMART.

لعرض واجهة اختيار المصدر.

(أزرار الاتجاه للأعلى والأسفل واليسار واليمين) لاختيار العناصر المختلفة في نظام القائمة وضبط مفاتيح التحكم بالقائمة. يمكن استخدام أزرار للتنقل بين القائمة الحالية للقنوات.

للتأكيد الاختيار.

للخروج من القائمة والعودة للقائمة السابقة.

للذهاب للصفحة الرئيسية للتلفاز الذكي.

قائمة الوصول السريع.

للدخول للوحة المفاتيح الافتراضية.

لرفع أو خفض مستوى صوت التلفاز.

لعرض الصفحة الرئيسية ليوتيوب YouTube.

لعرض تطبيق متجر غوغل Google App Drawer.

(Mic) اضغط للتفاعل مع خاصية مساعد غوغل Google Assistant على التلفاز. (تتوفر هذه الخاصية فقط عندما يكون ربط الشبكة طبيعي).



كيفية إقران جهاز التحكم عن بُعد مع التلفاز


هذا جهاز تحكم بلوتوث، وقبل استخدامه، يرجى إقرانه مع التلفاز أولاً. يمكن الاطلاع على الخطوات التالية:

- الخطوة 1: اضغط على زر لعرض الصفحة الرئيسية.
- الخطوة 2: اضغط على زر لعرض إقران جهاز التحكم عن بعد "RC pairing".
- الخطوة 3: اتبع صفحة ملاحظات الضبط "setting tips page"، اضغط OK و في الوقت ذاته.
- الخطوة 4: ستعرض الشاشة "Pairing...". وبعد انتهاء الإقران ستعرض الشاشة "Success!".

ملاحظة: إذا انتظرت أكثر من دقيقتين ولم يحدث الإقران، يرجى إعادة الخطوات أعلاه لإجراء عملية الإقران مرة أخرى.

إذا رغبت بعدم إقران جهاز تحكم البلوتوث، يمكن اتباع الخطوات التالية:

- الخطوة 1: اضغط على زر لعرض الصفحة الرئيسية.
- الخطوة 2: اضغط على أزرار لاختيار ، وبعدها اضغط OK للدخول.
- الخطوة 3: اضغط على زر لاختيار أجهزة التحكم عن بعد & الملحقات "Remotes & Accessories" وبعدها اختر اسم جهاز تحكم البلوتوث للدخول للخطوات التالية.
- الخطوة 4: اضغط على عدم الإقران وبعدها اضغط على OK.

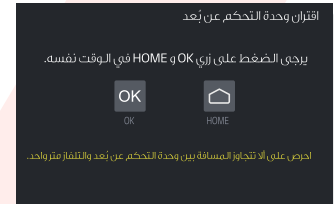

التشغيل

اتبع التعليمات الموضحة في هذه الصفحة حول كيفية تشغيل جهاز التلفاز وجهاز التحكم عن بعد الخاصين بك قبل الانتقال للصفحات التالية التي تتعلق بتعليمات ضبط القنوات.

1. رُكِّب بطاريتين في وحدة التحكم عن بُعد.

احتياطات استخدام البطاريات:

- استخدم أنواع البطاريات المحددة فقط.

- تأكد من ضبط الأقطاب.

- لا تخلط بين البطاريات الجديدة والمستخدمة.

- لا تستخدم البطاريات القابلة لإعادة الشحن.

- لا تعرض البطاريات لحرارة مفرطة مثل أشعة الشمس أو النار، ولا تلمسها في النار أو تعد شحنها أو تحاول فتحها لأن ذلك قد يؤدي إلى حدوث تسريب أو انفجار.

- اترع البطاريات من وحدة التحكم عن بُعد إذا لم تكن ستستخدمها لفترة طويلة.

2. قم بتوصيل كابل الطاقة بالتلفاز أولاً، ثم بمقبس الطاقة الرئيسي.

(ملاحظة: إذا كان كابل الطاقة خارجاً من التلفاز، فيرجى توصيله بمقبس الطاقة الرئيسي فقط).

• إذا كان جهاز التلفاز الخاص بك موصولاً بجهاز التيار المتناوب AC

يجب توصيل جهاز التلفاز فقط بمصدر طاقة تيار متناوب. يجب عدم توصيله بمصدر طاقة تيار مستمر. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسي تحت أي ظرف ممكن تجنباً لخطر حدوث صدمة كهربائية.

• إذا كان جهاز التلفاز الخاص بك موصولاً بجهاز التيار المستمر DC

يجب توصيل جهاز التلفاز فقط بمصدر طاقة تيار مستمر. يجب عدم توصيله بمصدر طاقة تيار متناوب. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسي تحت أي ظرف ممكن تجنباً لخطر حدوث صدمة كهربائية.

3. قم بتوصيل الهوائي الخارجي بمنفذ الهوائي الداخلي ANTENNA IN الموجود خلف التلفاز.

4. عندما تكون الكهرباء موصولة سيظل التلفاز في وضعية التشغيل، أو وضعية الاستعداد.

ملاحظة: في بعض الطرازات، يجب الضغط على زر الطاقة لتشغيل التلفاز.

إذا أضاء مؤشر الكهرباء، فإن الجهاز يكون في وضعية الاستعداد للتشغيل. اضغط على زر على جهاز التحكم عن بعد، أو التلفاز لتشغيل الجهاز.

الإغلاق

• لتشغيل التلفاز في وضعية الاستعداد، اضغط على زر على جهاز التحكم عن بعد. سيظل جهاز التلفاز يعمل، ولكن من دون أن يستهلك الكثير من الطاقة.

• لإغلاق التلفاز، اسحب المقبس الرئيسي من مصدر الكهرباء الرئيسي.

ملاحظة: في بعض الطرازات، يجب الضغط على زر الطاقة لإغلاق التلفاز.

وظائف وحدة التحكم عن بُعد

تظهر معظم خصائص التلفزيون في القوائم على الشاشة. تُستخدم وحدة التحكم عن بُعد المتوفرة مع الجهاز للتنقل بين القوائم وضبط جميع الإعدادات العامة.

ملاحظة: الصور والرسومات الواردة في هذا الدليل هي لغرض الاطلاع والتوضيح فقط، وقد تختلف عن المنتج الفعلي. على سبيل المثال، بعض الوظائف قد لا تكون متوفرة في طرازات معينة.

- MUTE لكتم الصوت أو إلغاء كتّمه.
- تشغيل التلفزيون أو التشغيل في وضع الاستعداد.
- أزرار 0-9 لإدخال أرقام القنوات.
- FAV لإحضار قائمة القنوات المفضلة.
- LIST لعرض قائمة القنوات.
- للتحكم في مستوى الصوت.
- لضبط القنوات.
- لعرض معلومات البرنامج إن وجدت. INFO.
- للاتصال إلى واجهة الخصائص الذكية SMART.
- HOME للانتقال إلى الصفحة الرئيسية.
- MENU للانتقال إلى قائمة الوصول السريع.
- OK لتأكيد اختيارك.
- للبحث في القوائم وتحديد خيارات القائمة.
- للبحث في القائمة وتحديد الخصائص وتغيير القيم.
- BACK للعودة إلى القائمة السابقة أو الواجهة، وللخروج من تطبيق نشط.
- SOURCE للانتقال إلى واجهة اختيار مصدر العرض.
- EXIT للعودة إلى القائمة السابقة أو الواجهة، وللخروج من تطبيق أثناء عمله.
- ZOOM لتحديد تنسيق الصورة.
- الدخول لاستخدام قائمة نظام التلفزيون.
- SLEEP لإعداد الجهاز لإيقاف تشغيله بعد مرور مدة محددة.
- EPG لتشغيل أو إغلاق دليل البرامج الإلكتروني في مصدر تلفاز DTV.
- Lang/AD لتحديد نوع الصوت المتوفر للبرنامج التلفزيوني التناظري، ولتحديد لغة الصوت المتوفرة للبرنامج التلفزيوني الرقمي المحدد.
- PRE-CH للرجوع إلى القائمة السابقة.
- TEXT لتشغيل النص المرئي أو إيقافه.
- SUBT لتحديد لغة الترجمة المصاحبة المتوفرة لبرنامج التلفزيون الرقمي المحدد.
- الأزرار الملونة لتحديد المهام أو صفحات النص المرئي.
- لتشغيل الإرجاع السريع أو التقديم السريع.
- لبدء التشغيل مجدداً.
- لإيقاف التشغيل مؤقتاً.
- لتحديد الصورة أو الموسيقى أو مقطع الفيديو السابق أو التالي.
- لإيقاف التشغيل.
- REC لتسجيل البرامج من مصدر التلفزيون الرقمي DTV.
- لذهاب إلى التطبيقات Google App Drawer.
- YouTube للانتقال إلى الصفحة الرئيسية لتطبيق يوتيوب.

- كتم الصوت
- الازرار 0-9
- FAV
- LIST
- +/-
- P +/-
- Info. (i)
- SMART
- HOME
- MENU
- OK
- BACK
- SOURCE
- EXIT
- ZOOM
- SLEEP
- EPG
- Lang/AD
- PRE-CH
- TEXT
- SUBT.
- Colored buttons
- REC
- YouTube



المنافذ

ملاحظة: قد يختلف موقع المقابس وأسمائها على التلفزيون وفقاً للطراز، وقد لا تتوفر بعض المقابس في طرازات معينة.

- USB منافذ USB (مدخل) يمكن استخدام هذا المنفذ لتوصيل جهاز USB. ملاحظة: يختلف عدد منافذ USB في التلفزيون بحسب الطراز.
- USB قابس RJ45 لربط جهاز التلفزيون بموديم خارجي أو أداة الوصول للشبكة.
- SATELLITE منفذ SATELLITE IN (مدخل) يمكن استخدام هذا المنفذ لربط رسيقر الاستلايت.
- ANTENNA IN منفذ توصيل الهوائي ANTENNA IN (مدخل) يمكن استخدام هذا المنفذ لتوصيل الهوائي الخارجي أو التوصيل بشبكة تلفاز الكابل.
- SPDIF منفذ SPDIF يمكن استخدام هذا المنفذ لتوصيل التلفزيون بمستقبل صوتي متوافق.
- HDMI منفذ HDMI (مدخل) يُستخدم منفذ HDMI (واجهة متعدد الوسائط عالي الوضوح) لتوصيل الحاسوب الشخصي ذو بطاقة رسومات متوافقة أو توصيل مشغلات أقراص DVD معينة، أو جهاز رقمي متوافق لفك شفرات القمر الصناعي. يوفر هذا المنفذ وصلة رقمية غير مضغوطة تنقل بيانات الفيديو والصوت من خلال كابل موصل صغير متكامل.
- EARPHONE منفذ السماعة EARPHONE (مخرج) يمكن استخدام هذا المنفذ لربط السماعات والاستماع للصوت الصادر من جهاز التلفزيون. ملاحظة: ضغط الصوت العالي من السماعات قد يحدث ضرر في الأذن أو فقدان السمع.
- AV IN منافذ الصوت AV (مدخل) يمكن استخدام منافذ AV لربط جهاز التلفزيون بمجموعة من الأجهزة، بما في ذلك أجهزة الفيديو، والفيديو الرقمي، والديكودر، وريسيقر الاستلايت، ومشغل DVD، والألعاب. ويعمل منفذ الفيديو VIDEO IN عكس توصيل الفيديو.

الاحتياطات

يرجى قراءة جميع التعليمات قبل تشغيل الجهاز.
يرجى الاحتفاظ بهذه التعليمات للرجوع إليها مستقبلاً عند الحاجة.

المنتج

- لا تسد فتحات التهوية في الغطاء الخلفي أو تغطيتها.
- لا تدفع أي جسم داخل الجهاز من خلال فتحات لوحة التلفاز لأنها قد تمس أجزاء ناقلة للتيار أو قد تسبب قصراً في الدائرة الكهربائية مؤدية إلى حدوث حريق أو صدمة كهربائية أو تلف للجهاز.
- لا تحاول فتح لوحة التلفاز لأنها قد تتلف. ليس هناك أي أجزاء داخلية يمكنك إصلاحها بنفسك. ارجع إلى فني مؤهل فيما يتعلق بجميع أعمال الصيانة.
- لا تلمس سطح الشاشة بأصابعك لأنها قد تخدش شاشة التلفاز أو تشوهها.
- لا تضع ضغطاً كبيراً على شاشة التلفاز، حيث قد يسبب أضراراً بالغة لها.

الكهرباء والتوصيل


- أفضل الكهرباء عن الجهاز في الحالات التالية:
- في حال عدم استخدام الجهاز لفترة زمنية طويلة.
- في حال تلف سلك الكهرباء أو منفذ الطاقة/ القابس.
- اتبع التعليمات التالية لترتيب المنتج وضبط إعداداته. اضبط جميع عناصر التحكم المذكورة في تعليمات التشغيل لأن أي إعدادات غير سليمة لأدوات التحكم الأخرى قد تتلف الجهاز. وفي حال حدوث ذلك، أفضل الكهرباء عن الجهاز واتصل بمركز الخدمة المعتمد.
- في حال تعرض الجهاز لأي اصطدام، أو في حال سقوطه مؤدياً إلى تلفه.

سلك الكهرباء وكابل الإشارة

- لا تضع أو تدحرج أي شيء فوق سلك الطاقة وكابل الإشارة.
- احرص على حماية سلك الطاقة وكابل الإشارة من دهنه بالأقدام.
- لا تزد الحمل على سلك الكهرباء أو منفذ الطاقة.
- لا تعرض سلك الكهرباء وكابل الإشارة لأي طوية.

أضرار التلفاز

ملاحظة: قد يختلف موقع الأضرار الوظيفية وأضرار الطاقة وأسمائها على التلفاز وفقاً لطراز الجهاز. وقد يكون هناك أضرار غير متاحة للطراز الأخرى.

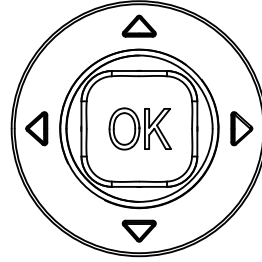

1. زر ∇/\triangle : البحث في قائمة القنوات للأعلى/ للأسفل. في نظام القائمة، يعملان كزري توجيه للأعلى والأسفل على وحدة التحكم عن بُعد وزري تحكم لضبط القائمة.

2. زر \leftarrow/\rightarrow : يعمل هذان الزران في نظام القائمة كزري توجيه لليمين واليسار في وحدة التحكم عن بُعد ولضبط التحكم في القائمة.

3. زر OK: تشغيل التلفاز أو التشغيل في وضع الاستعداد. عند تشغيل التلفاز، اضغط على الزر ضغطة بسيطة لتأكيد العناصر، وضغطه طويلاً لتظهر قائمة "NAV".

ملاحظة: قد يختلف موقع الأضرار الوظيفية وأضرار الطاقة وأسمائها على التلفاز وفقاً لطراز الجهاز.

الفصل الأول: مقدمة

3 الاحتياطات
3 المنتج
3 الكهرباء والتوصيل
3 سلك الكهرباء وكابل الإشارة
3 بيئة الاستخدام
3 التنظيف
3 تثبيت التلفاز على الحائط
5 أزرار التلفاز
6 المنافذ
7 خصائص وحدة التحكم عن بُعد
7 كيفية إقران وحدة التحكم عن بُعد بالتلفاز

الفصل الثاني: التشغيل العام

8 التشغيل
8 إيقاف التشغيل
9 الاتصال بالشبكة
10 الإعداد الأولي للتلفاز

الفصل الثالث: خصائص الصفحة الرئيسية

11 تشغيل الصفحة الرئيسية
----	-----------------------------

الفصل الرابع: استخدام التلفاز

12 الوصول إلى القنوات
12 مشاهدة الأجهزة المتصلة
12 مستوى الصوت
12 استخدام قائمة الوصول السريع
12 شاشة العرض والصوت
12 التلفاز
13 إعدادات استخدام التلفاز
13 إعداد القنوات
14 الصورة وشاشة العرض
14 الصوت
15 المنطقة الذكية
15 النظام

الفصل الخامس: معلومات أخرى

16 المشغل الذكي
16 التنبيهات والأسئلة المتكررة
17 اكتشاف الأعطال وإصلاحها
17 تركيب القاعدة



الطراز: 86Q9