



LED TV

دليل المستخدم

الموديل:
70U5 ▲

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الجهاز ،
واحتفظ به للرجوع إليه مستقبلا

هذه التصميمات ومواصفات عرضة للتغيير بهدف إدخال تحسينات عليها
وذلك دون إشعار مسبق

ISO9001 CB



LED TV

User's Manual

Models:
▲ 70U5

Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change for improvement
without prior notice.

ISO9001 CB





Model: 70U5

Table of Contents

Chapter 1: Introduction

Precautions	3
Product	3
Power and Plug	3
Power Cord and Signal Cable	3
Use Environment	3
Cleaning	3
Hanging the TV Set on the Wall	3
Buttons on the TV	4
Sockets	5
Remote Control Functions	6
How to Pair Remote Control with the TV.....	6

Chapter 2: General Operation

Switching on	7
Switching off	7
Network connection	8
TV - Initial Setup	9

Chapter 3: Home Features

Homepage Operation	10
--------------------------	----

Chapter 4: Using your TV

Accessing channels	11
Watching connected device	11
Volume.....	11
Using Quick Access Menu.....	11
Display & Sound	11
TV	11
Using TV Settings.....	12
Channels Setup	12
Picture & Display	13
Sound	13
Smart Zone	14
System	14

Chapter 5: Other Information

Smart Player	15
Attention and Frequently Asked Questions.....	15
Troubleshooting	16
Base Installation	16

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

Power and Plug

- Unplug the set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
 - Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
 - If the set is subject to impact or has been dropped to have the cabinet damaged.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

Hanging the TV Set on the Wall

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:


- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Note:
Illustrations within this publication are provided for reference only.

Buttons on the TV

Note: The location and names of the function buttons and power button on the TV may vary according to TV model. And some buttons may not be available for some models.

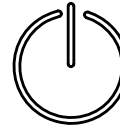

⏻ button

1. Turn on the TV.
2. The TV is on, press it to display Button menu.
3. In the Button menu, Short press it to select the menu, long press it to confirm the selection.

Note: The location and names of the function buttons and power button on the TV may vary according to TV model.
















Sockets


Note: The location and names of the sockets on the TV may vary according to TV model, and some sockets may not be available for some models.

USB	<p>USB sockets (input) These sockets can be used to connect a USB device. Note: The number of USB sockets on the TV may vary according to TV model.</p>
LAN	<p>LAN RJ45 plug for connecting to external modem or network access equipment.</p>
ANTENNA IN	<p>ANTENNA IN socket (input) This socket can be used to connect the outside aerial or cable network.</p>
SPDIF	<p>SPDIF socket This output can be used to connect a compatible digital audio receiver.</p>
HDMI	<p>HDMI socket (input) The HDMI (High-Definition Multimedia Interface) socket can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.</p>
EARPHONE OUT	<p>EARPHONE socket (output) Allow you to connect earphones to listen to the sound coming from the TV. Note: Excessive sound pressure from earphones can cause hearing loss.</p>
AV IN	<p>Video + audio mini sockets(input) The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles. The VIDEO IN socket provides composite video connection.</p>

Remote Control Functions




Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

	POWER	(On/Off button) Turns the TV on or off.
		To mute and un-mute the sound.
		Enter into Using TV System menu.
	SMART	To enter SMART function interface.
		To enter source selection interface.
		(up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls. ▲▼ buttons can up or down to through the current channel list under TV source.
	OK	Confirms your selection.
		Exit the menu and return to the previous menu.
		Goes to the smart TV homepage.
		Enter into Quick Access Menu.
		To Enter into virtual keyboard.
		Increases or decreases the TV's volume.
	NETFLIX	Goes to the Netflix homepage.
	YouTube	Goes to the YouTube homepage.
		(Mic)Click to interact with Google Assistant of the TV. (Available only when the network connection is normal.)

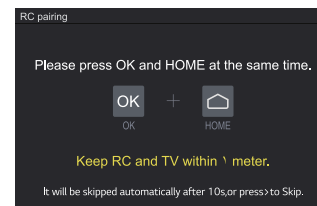





How to Pair Remote Control with the TV

This is a Bluetooth remote control, and before using it, please pair it with the TV firstly. The following steps are for your reference:

- Step 1: Press  button to enter the home page.
- Step 2: Press  button to enter the "RC pairing".
- Step 3: Follow the "Settings tips page", Press OK and  together.
- Step 4: The screen will display "Pairing...", Pair finished the screen will display "Success!".

NOTE: If you wait more than 2 minutes and it can't pair, please repeat the above steps for pairing again.

If you want to unpair the Bluetooth remote, As follow:

- Step 1: Press  button to enter the home page.
- Step 2: Press  to choose , and then press OK to enter.
- Step 3: Press  to select "Remotes & Accessories" and then to choose the Bluetooth remote name to enter next steps.
- Step 4: Press unpair and then choose OK button.


Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.


1. Insert two batteries in the remote control.

Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable FIRST to the television, THEN to a mains socket. (Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)
 - If your TV is connected to an AC supply
Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
 - If your TV is connected to a DC supply
Your TV set should only be connected to a DC supply. It must not be connected to a AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.
4. When powered on, the TV will be turned on directly or be in standby.
Note: For some models, switch the TV on by pressing the power button.
If the power indicator lights up, the TV set is in standby mode. Press the  button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the  button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.
Note: For some models, press the power button to switch off the TV set.

Network Connection

To access the Internet, you must subscribe to high speed broadband Internet service with your Internet service provider (ISP).

Your TV can be connected to your home network in two ways:


- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless and your home wireless network.

Note: Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP.

Connecting to a wired network

To connect to a wired network:


1. Ensure you have:
 - An Ethernet cable long enough to reach your TV
 - A router or modem with an available Ethernet port
 - A high-speed Internet connection
 - An Ethernet (LAN) port on the back of the TV
2. Connect your Ethernet cable to the router and to the Ethernet port on the back of the TV.
3. Use the **Network** menu to configure the TV.

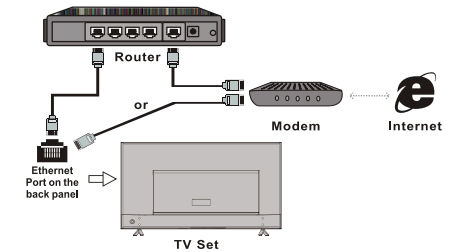

Connecting to a wireless network

To connect to a wireless network:

1. Ensure you have:
 - A router broadcasting a high-speed wireless signal
 - A high-speed Internet connection
2. Use the **Network** menu to configure the TV.

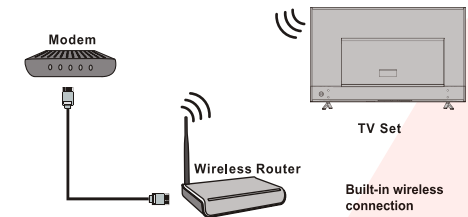

TV - Initial Setup

Initial setup involves selecting all the settings required to be able to search for and store all channels you can receive.

Make sure that the television is switched on and follow all the steps in turn specified hereafter.

Note: If the channel search retrieved only few channels it could be caused by poor broadcasting and therefore is not covered by manufacturer warranty. Manufacturers cannot be held responsible for lack of or poor broadcasting in some areas.

The first time you switch the set on, the Initial setup screen appears, which guides you through the initial setup process. Follow the on-screen instructions to finish the initial setup process. Here are some examples of initialization.

Step 1: Environment

Press ▲/▼ to select your environment. Then press OK to enter next step.

Home Mode: You Would be able to view the standard settings for Picture and sound modes.

Shop Mode: You can enjoy enhanced setting for Picture and Sound modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

Step 2: Where are you?

Press ▲/▼ to select your Country/Region. Press OK to confirm and move to next step.

Step 3: Terms & Conditions






Use ▲/▼ to read Terms & Conditions, then press OK to confirm and move to next step.

Step 4: Channel installation

Use ▲/▼ to select Tuner mode: Antenna, Cable or Satellite; Type: Digital, Analogue and All, then press OK to confirm and move to next step.

Step 5: Please check settings

When all setup is done, the [Please check settings] interface displays on the screen, and press OK to finish the initial setup. You can also go back to former step and make any changes by using ← button

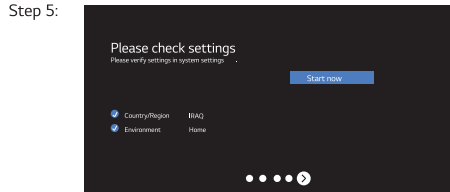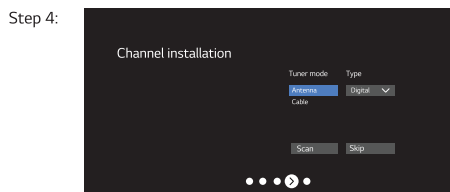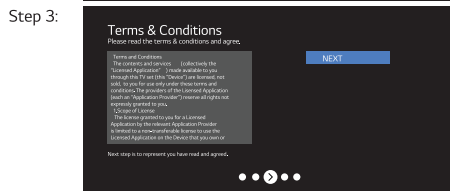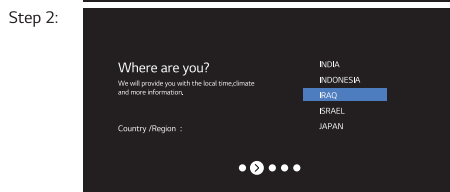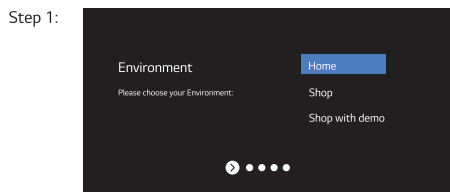

Homepage Operation

Note: This manual is for common use. Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. And for some models, certain options are not available.


You can select all the features from homepage.

Press Home icon to display homepage.

Press ▲/▼/◀/▶ to select icons from the screen list.

Press OK to enter each option.

To exit the menu, press ←.

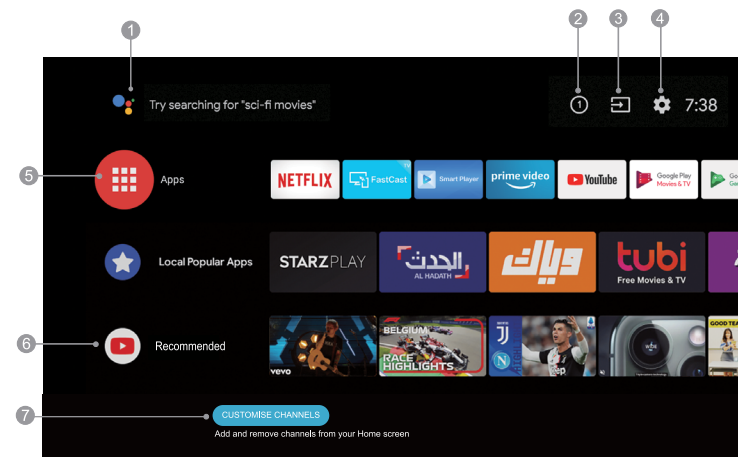

Note: The picture is only for reference

1. **Google Assistant:** Click to interact with Google Assistant of the TV.
2. **Notifications:** Remind you of system-critical information, such as low disk space, Google sign in or account errors, network connectivity issues, etc.
3. **Input:** Select the input source.
4. **Settings:** Access the system setting.
5. **Apps:** Show the list of favorite applications, or access the application center.
6. **Youtube:** Browse this application to watch a wide variety of online videos.
7. **CUSTOMISE CHANNELS:** Add and remove channels from your Home screen.

Note:


- 1) The functions and contents of "Home Page" may vary by different countries or models.
- 2) Before using network functions in home page like network applications and so on, please connect the TV to the network firstly.
- 3) Icon copyrights are owned by the application providers.

Accessing channels

▼/▲ buttons can up or down to switching channel or open virtual keyboard and select digital switching channel

Watching connected device

Press SOURCE then press ▲/▼ to select your desired source, and then press OK to confirm.

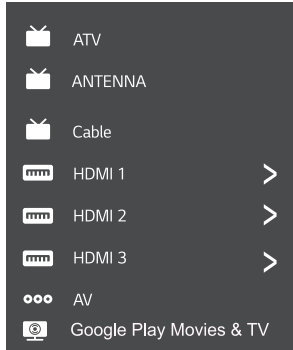

Note: The available source might differ depending on the model.

Volume


Volume control: press the VOL +/- buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.
Sound mute: press the button to temporarily mute the sound. Press this button again or the vol + button to restore the sound.

Using Quick Access Menu

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

This section explores the menus and settings of your TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

1. In TV mode, press on the remote control to display the quick access list.
2. Press ▲/▼ to select the desired item, then press OK to open the corresponding submenu.
3. In submenu, use ◀/▶ and OK buttons to make the adjustments, or use ▲/▼ to select an item, use OK to enter and operate according to the on-screen display or guide.
4. Press ◀ to return to the previous menu.

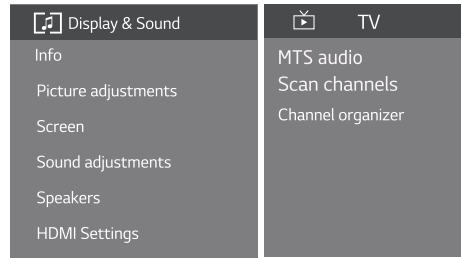

Display & Sound

Info: Select this option to view TV information.

Picture adjustments: Enter to adjust picture mode or Advanced settings.

Screen: Select this option to adjust the picture size.

Sound adjustments: Select this option to set the sound adjustments.

Speakers: To enter TV speaker settings.

HDMI Settings: Enter to set up HDMI devices for streamlined control.

TV

MTS audio: Enter to check MTS audio (Only in ATV mode).

Scan channels: To setup Analogue or Digital channels.

Channel Organizer: Highlight the channels you want to move, then press the right arrow key. You can use the arrow keys to move the channel. If you want to delete the highlighted channel, press OK key.

Using TV Settings


The Settings menu allows you to configure the TV with your preferences.

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

1. Press ▲/▼ to select the desired item, then press OK to open the corresponding submenu.
2. In submenu, use ▲/▼ and OK buttons to make the adjustments, or use ▲/▼ to select an item, use OK to enter and operate according to the on-screen display or guide.
3. Press ◀ to return to the previous menu.

Channels Setup

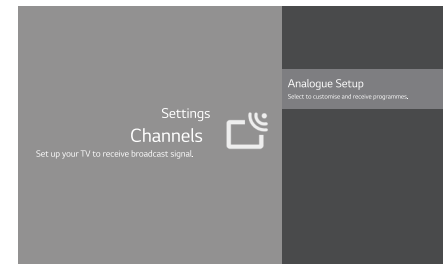

Analogue Setup


- **Analogue Auto Tuning:** Press OK to start the automatic search process. The search may take a few minutes. During the process, you can press OK to abort.

- **Analogue Manual Tuning:** Press OK to enter the interface. Press ▲/▼ to set program, TV system or color system item, then Press ▲/▼ select Frequency and press OK to search channel.

- Teletext Setup

(1) **Preferred teletext:** Press OK and then use ▲/▼ to select Preferred teletext.

(2) **Decoding page language:** Press OK and then use ▲/▼ to select Decoding page language.

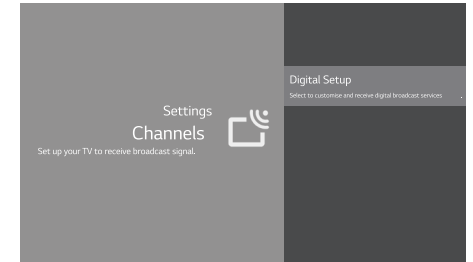

Digital Setup

- **Digital Antenna Tuning:** Press OK to start the automatic search process. The search may take a few minutes. During the process, you can press ◀ and choose YES to exit.

- Subtitle Setup:

(1) **Subtitle Setting:** Include off, Basic, Hearing impaired.
 (2) **Primary Preferred Language:**

Press OK and then use ▲/▼ to select Primary Preferred Language.
 (3) **Second Preferred Language:**

Press OK and then use ▲/▼ to select Second Preferred Language.
 - **Teletext Setup**

(1) **Preferred teletext:** Press OK and then use ▲/▼ to select Preferred teletext.

(2) **Decoding page language:** Press OK and then use ▲/▼ to select Decoding page language.

- Audio Setup

(1) **Dialogue Enhancement:** Include Off and On.

(2) **Dialogue Enhancement Level:** Press OK and then use ◀/▶ to set Dialogue Enhancement Level.

(3) **Audio Description:** Include Off and On.


(4) **Audio Description Mixing Level:** Press OK and then use ◀/▶ to set Audio Description Mixing Level.

(5) **Audio Type:** Include Normal, Hearing impaired and Visual impaired

(6) **Primary Preferred Language:** Press OK and then use ▲/▼ to select Primary Preferred Language.

(7) **Second Preferred Language:** Press OK and then use ▲/▼ to select Second Preferred Language.

Picture & Display

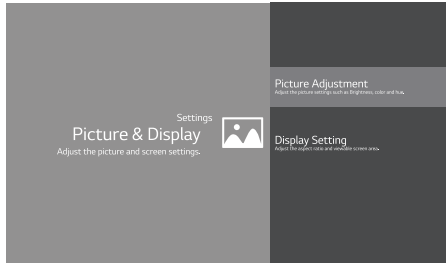


Picture Adjustment:

- Picture Mode: Optimize picture quality for general content. Use ▲/▼ to scroll through the Picture preset settings: Standard, Dynamic, Movie, Sport and Personal.
- Advanced Settings: Access advanced picture enhancing options.
- Brightness: Adjusts the brightness of the picture.
- Color: Adjusts the color saturation.
- Clarity: Advanced technique for picture enhancement.
- Reset: To reset picture adjustment.

Display Setting:

- Screen mode: Adjust the picture size. Use ▲/▼ to scroll through the Screen mode preset settings.
- Auto screen: Automatically adjusts screen mode based on the signal. Include On and Off.
- Overscan: Adjust overscan display, include on/off.

Sound

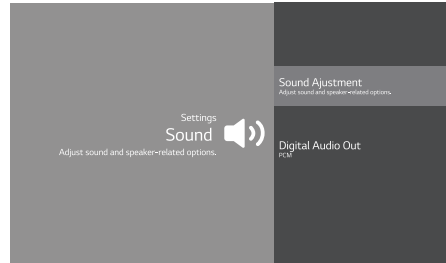

Sound Adjustment: Adjust sound and speaker-related options.

- Sound Mode: Optimize sound quality for general content. Use ▲/▼ to scroll through the sound preset settings: Sports, Standard, Cinema, Music and News.
- Surround: Reproduces life-like surround sound when playing 5.1 channel audio sources. Include On and Off.
- Advanced Setting: Access advanced sound enhancing options.

Volume Setting:


- 1) Auto Volume: Keeps the volume level constant for all programs and inputs. Include On and Off.
- 2) Balance: Adjust the speaker balance.
- 3) Digital Audio Out Volume: Applied for PCM only. The volume levels between PCM and compressed audio will differ.
- 4) Digital Audio Out Delay: Set the delay time for Digital Audio.
- 5) Volume offset: Adjust the sound level of the current input relative to other inputs.

Sound mode related:

- 1) Surround effect: Use ◀/▶ to scroll through Surround effect.
 - 2) Equalizer: Use ◀/▶ ▲/▼ to scroll through Equalizer.
- Reset: To return all sound settings to factory default.

Digital Audio Out: Optical out for audio signals from the Digital Audio Out.

Smart Zone



Enjoy Music: Select this option to enter into Audio Only mode.

Fast Cast: An app that quickly delivers mobile content to TV, allowing users to quickly deliver multimedia content such as photos, videos, music and more to TV terminals.

Fast Cast Step:

1. Download Fast Cast mobile App.
2. Mobile and TV are connect the Same Wi-Fi.
3. Search device and connect TV.

Note:

1. This function may be unavailable for some mobile devices, and it subject to chipset support the files format.
2. Recommendations of working environments:

A: Local Area Network Speed recommendations on: 1M/S~2M/S.


B: Files required: MP4, AVI, TS, FLV, f4v, m3u8 (subject to chipset supported).

Sleep Timer: The options include: Off, 10min, 20min, 30min, 60min, 90min, 120min, and 180min.

World clock: Enter to add World clock.

Night mode: Turn on to Keep brightness to prevent disturb others. Clear brightness at a low level.

System

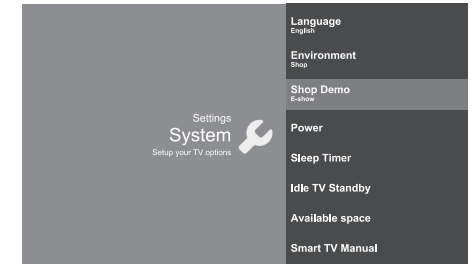

Language: Use ▲/▼ to scroll through Language.

Environment: Enter to set Home or shop mode.

- Home Mode: You Would be able to view the standard settings for Picture and Sound Modes.

- Shop Mode: You can enjoy enhanced setting for Picture and Sound Modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

Shop Demo: Enter to set E-show or E-sticker.

Note: E-sticker is not available for certain model.

Power: Enter to set Power mode.

- Wake on Wifi: Enable wake on WIFI Settings.

- Network stand by: Enable wake on Ethernet Settings.

Sleep Timer: Set the TV to turn off automatically.


Idle TV Standby: Select the inactivity time that TV enter standby.

Available space: Show the system storage size and Memory size.

Smart TV manual: Show the guide to get smart TV manual by smartphone

Smart Player

Connect a USB device to a USB socket, the screen will show USB file name and then press OK to enter. If no USB device connected, the USB interface will be not displayed.

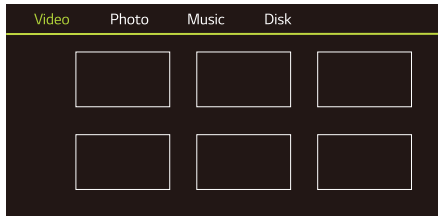

Video:

1. Select Video icon, then press OK button to view movie file.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. While playing a Video, press OK Menu of remote to display the play console. For the Play console, Press Ok key of remote to Play and Pause the video file. Left key of remote to Fast backward. Right key of remote to Fast forward.
4. Use key to see more option: Photo Scale, Looping mode, Subtitle, Audio track, info, setting.
5. Press Return key of remote to Stop playing and Press Return to Exit.

Photo:

1. Select Picture icon, then press OK button to view the picture.
2. Press Up, Down, Left or Right direction button to select your desired picture file and press OK to show.
3. While showing picture, press OK to display the play console. For Previous and Next use remote left and Right key.
4. Use OK key to see more option: Manual play, Information, Play mode, BGM on or off.

Music:

1. Select Music icon, then press OK button to listen to Music.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. The Play console includes Previous, Play/Pause, Fast backward/Fast forward, Next. Press key to see PlayList.
4. Press Return key of remote to Stop playing.

Disk:

1. Select Disk icon, then press OK button to choose folder.
2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
3. Press Return key of remote to Stop playing.

Attention and Frequently Asked Questions

Attention:

Some non-standard mobile storage device may not be recognized. Please change to use the standard device.

Note: For coding files, there are many kinds non-standard coding method, so this system can not be guaranteed to support the file formats using any coding method.

Frequently Asked Questions:

1. Under the following conditions, this system cannot decode the file and the file cannot be play normally:
 - The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
 - The format of file is not matched or the file is harmed.
2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.
3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
4. The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..
5. For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.
6. When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
7. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage.

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture, no sound

1. Press the Vol+ button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed


1. Press the Power button to turn off TV, then press the Power button a gain to reset TV.
2. Unplug the power cord, then press the Power button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation


To fix the double support base on the unit by screws, the installation is completed.

Note: Illustrations below are provided for reference only and may differ from actual product appearance.

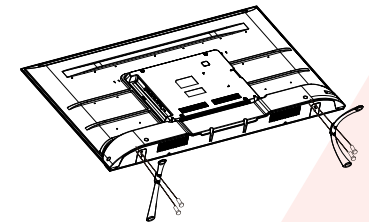

المشغل الذكي

قم بتوصيل جهاز USB بمنفذ USB، وستقوم الشاشة بعرض اسم ملف USB ثم اضغط على زر OK لفتح الملف. إذا لم تقم بتوصيل جهاز USB، لن يتم عرض واجهة USB.

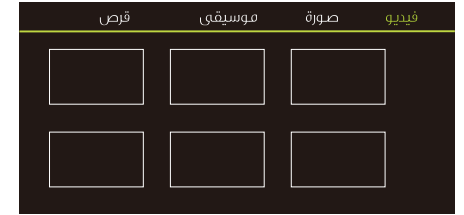

مقطع فيديو:

1. اختر أيقونة الفيديو (Video) ثم اضغط على زر OK لعرض ملف الفيلم.
2. اضغط على أزرار الاتجاهات أعلى أو أسفل أو يسار أو يمين لاختيار الملف الذي تريده، ثم اضغط على زر OK للتشغيل.
3. أثناء تشغيل مقطع فيديو، اضغط على زر OK في وحدة التحكم عن بُعد لتشغيل ملف الفيديو أو إيقافه. اضغط على الزر الأيسر في وحدة التحكم عن بُعد لإرجاع إلى الخلف بسرعة. اضغط على الزر الأيمن في وحدة التحكم عن بُعد لتقديم إلى الأمام بسرعة.
4. استخدم زر لعرض المزيد من الخيارات: صورة Photo، تغيير الحجم Scale، وضع التكرار Looping، ترجمة مصاحبة Subtitle، مسار صوت Audio track، معلومات info، إعدادات Settings.
5. اضغط على زر العودة Return في وحدة التحكم عن بُعد لإيقاف التشغيل ثم اضغط على Return للخروج.

الصورة:

1. اختر أيقونة الصورة (Picture) ثم اضغط على زر OK لعرض الصورة.
2. اضغط على أزرار الاتجاهات أعلى أو أسفل أو يسار أو يمين الصورة التي تريدها، ثم اضغط على زر OK لعرضها.
3. أثناء عرض الصور، اضغط على زر OK لعرض وحدة التحكم في التشغيل، للانتقال بين الصور اللاحقة والسابقة اضغط على أزرار اليمين واليسار.
4. استخدم زر OK لعرض المزيد من الخيارات: التشغيل اليدوي، معلومات، وضع التشغيل أو وضع BGM التشغيل أو إيقاف.

الموسيقى:

- 1- اختر أيقونة (Music) ثم اضغط على زر OK لاستماع إلى الموسيقى.
- 2- اضغط على أزرار الاتجاهات أعلى أو أسفل أو يسار أو يمين لاختيار الملف الذي تريده، ثم اضغط على زر OK للتشغيل.
- 3- تتضمن وحدة التحكم في التشغيل السابق Previous، تشغيل Play/إيقاف مؤقت Pause، الرجوع السريع إلى الخلف Fast backward /التقدم السريع إلى الأمام Fast forward، التالي Next. اضغط على الزر لعرض قائمة التشغيل.
- 4- اضغط على زر العودة (Return) في وحدة التحكم عن بُعد لإيقاف التشغيل.

القرص:

1. اختر أيقونة القرص (Disk) ثم اضغط على زر OK لاختيار الملف.
2. اضغط على أزرار الاتجاهات أعلى أو أسفل أو يسار أو يمين لاختيار الملف الذي تريده، ثم اضغط على زر OK للتشغيل.
3. اضغط على زر العودة (Return) في وحدة التحكم عن بُعد لإيقاف التشغيل.

تنبيهات وأسئلة متكررة

تنبيهات:

قد يتعذر التعرف على بعض أجهزة التخزين المحمولة غير القياسية. يُرجى استخدام الجهاز القياسي. ملاحظة: بالنسبة لملفات الترميز، هناك أنواع متعددة من طرق الترميز غير القياسية لذلك لا يمكن ضمان دعم النظام لتتسيقات الملفات باستخدام طريقة الترميز.

الأسئلة المتكررة:

1. لا يمكن فك رموز الملف ولا يمكن تشغيل الملف بصورة طبيعية في الظروف التالية:
 - تخطي محددات الملفات، مثل تنسيق بكسل للصورة، ومعدل رمز الصوت وملف الفيديو، ومعدل تحليل الملف الصوتي- حدود النظام.
 - تنسيق الملف غير متناسق أو الملف متضرر.
 - 2. التوصيل الساخن: لا تقم بقطع الاتصال أثناء قراءة النظام أو نقله للبيانات لتجنب تلف النظام، أو الجهاز.
 - 3. انتبه إلى مصدر الطاقة الخاص بالجهاز عند استخدام قرص صلب محمول أو كاميرا رقمية. إذا كان مصدر الطاقة غير كافٍ أو غير مستقر، قد تواجه بعض المشكلات أثناء التشغيل أو لا يمكنك تشغيل الجهاز على الإطلاق. في هذه الحالة، يُرجى إعادة تشغيل الجهاز أو فصل الكهرباء عن الجهاز وإعادة توصيله بالكهرباء مرة أخرى، وتأكد من أن مصدر الطاقة الخاص بالجهاز يعمل بشكل جيد.
 - 4. يدعم النظام أجهزة USB 1.1 وUSB 2.0 المعيارية مثل أقراص U المعيارية، ومشغلات MP3، والأقراص الصلبة المحمولة، إلخ.
 - 5. للحصول على جودة أفضل لمقاطع الفيديو والصوت، يُنصح باستخدام أجهزة خارجية تتوافق مع المعيار USB 2.0.
 - 6. عند تشغيل مقطع الفيديو بمعدل ضغط عالٍ فإن حدوث ظواهر مثل ثبات الصورة أو طول مدة استجابة القائمة أمر طبيعي.
 - 7. بالنسبة لبعض أجهزة USB المزودة بمصدر طاقة مثل القرص الصلب كبير الحجم وMP4، إلخ، يُنصح باستخدامه بالطاقة الكهربائية لتجنب نقص الطاقة الكهربائية.

اكتشاف الأعطال وإصلاحها

يمكن حل معظم المشكلات التي تواجهها بخصوص التلفاز عن طريق مراجعة القائمة التالية لاكتشاف الأعطال وإصلاحها.

لا توجد صورة، لا يوجد صوت

1. تحقق من عمل المصهر أو قاطع الدائرة الكهربائية.
2. قم بتوصيل قابس جهاز كهربائي آخر بمنفذ الطاقة للتأكد من عمله.
3. قابس الطاقة غير متصل جيداً بمنفذ الطاقة.
4. تحقق من مصدر الإشارة.

لا توجد ألوان

1. غيّر نظام الألوان.
2. اضبط تشبع الألوان
3. جرب اختيار قناة أخرى. قد يجري استقبال برنامج الأبيض والأسود.

وحدة التحكم عن بُعد لا تعمل

1. استبدل البطاريات.
2. البطاريات غير مكمية بشكل صحيح.
3. مصدر الطاقة الرئيسي غير متصل.

لا توجد صورة، الصوت طبيعي

1. اضبط السطوع والتباين.
2. قد يكون هناك فشل في البث.

صورة طبيعية، لا يوجد صوت

1. اضغط على الزر +Vol لزيادة مستوى الصوت.
2. مستوى الصوت مضبوط على وضع الكتم، اضغط على زر الكتم لاستعادة الصوت.
3. غيّر نظام الصوت.
4. قد يكون هناك عطل في البث.

موجات غير منظمة تظهر على الصورة

عادة ما يحدث ذلك بسبب تداخل محلي مثل السيارات أو المصابيح أو مجففات الشعر، اضبط الهوائي للحد من التداخل.

نقاط بيضاء وتداخل

- إذا كان الهوائي موضوعاً في منطقة هامشية بعيدة عن إشارة التلفاز مما يؤدي إلى ضعف الإشارة، قد تظهر النقاط على الصورة، إذا كانت الإشارة ضعيفة جداً، قد يكون من الضروري تركيب هوائي خاص لتحسين الاستقبال.
1. اضبط موقع وتوجيه الهوائي الداخلي / الخارجي.
 2. تحقق من توصيل الهوائي.
 3. اضبط توليف القناة.
 4. جرب اختيار قناة أخرى. قد يكون هناك فشل في البث.

الإشعال

ظهور بقع سوداء أو خطوط أفقية، أو اهتزاز الصورة. يحدث ذلك عادة بسبب تداخل نظام الإشعال أو مصابيح النيون أو المثاقب الكهربائية أو أجهزة كهربائية أخرى.

الصورة الشبكية

تحدث الصورة الشبكية بسبب إشارات التلفاز التي تتخذ مسارين. أحدهم المسار المباشر والآخر ينعكس من المياني الطويلة أو التلال أو الأجسام الأخرى. قد يؤدي تغيير اتجاه الهوائي أو موقعه إلى تحسين الاستقبال.

تداخل الترددات اللاسلكية


ينتج عن التداخل موجات متحركة أو خطوط مائلة أو خلال في تباين الصورة في بعض الحالات. اعثر على مصدر التداخل وقم بإزالته.

في حالة تعطل التلفاز

1. اضغط على زر الطاقة (Power) لإيقاف تشغيل التلفاز، ثم اضغط على زر الطاقة مرة أخرى لإعادة ضبط التلفاز.
 2. افصل سلك الكهرباء، ثم اضغط على زر الطاقة لإعادة ضبط التلفاز.
- ملاحظة: إذا لم تنجح الطريقتان في حل المشكلة، اتصل بخدمة ما بعد البيع لحل المشكلة.

تركيب القاعدة

بمجرد تثبيت قاعدة الدعم المضاعف على الوحدة بواسطة البراغي تكون قد انتهيت من تركيب القاعدة. ملاحظة: الرسم التوضيحي أدناه هو لغرض الاطلاع فقط، وقد يختلف عن الشكل الفعلي للمنتج.

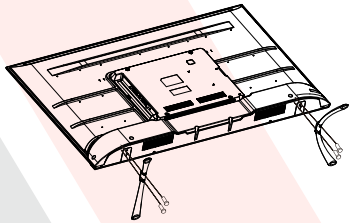



اللغة: استخدم الأزرار ▲▼ للتمرير عبر اللغة.
البيئة: لضبط الوضع الرئيسي Home أو وضع المتجر Shop.
– الوضع الرئيسي: يمكنك عرض الإعدادات القياسية لأوضاع الصورة والصوت.
– وضع المتجر: يمكنك الاستمتاع بإعدادات معززة لأوضاع الصورة والصوت.
ملاحظة: لن يمكن الوصول إلى إعدادات قائمة الصورة عند اختيارك وضع المتجر.
استعراض المتجر: اضغط لضبط العرض الإلكتروني E-show أو المصق الإلكتروني E-sticker. ملاحظة: المصق الإلكتروني غير متوفر في بعض الموديلات.
الطاقة: ضبط وضع الطاقة (Power).
– تفعيل شبكة واي فاي: ضبط إعدادات تفعيل شبكة واي فاي.
– وضع الاستعداد للشبكة: ضبط إعدادات تفعيل الإيثرنت.
مؤقت النوم: ضبط التلفاز ليتوقف عن التشغيل تلقائياً.
التلفاز في وضع الاستعداد: حدد وقت السكون الذي يدخل فيه التلفاز في وضع الاستعداد.
المساحة المتوفرة: عرض حجم مساحة تخزين النظام وحجم الذاكرة.
دليل التلفاز الذكي: انظر إلى الدليل للحصول على دليل التلفاز الذكي باستخدام الهاتف الذكي.

الصوت



استمع بالموسيقى: حدد هذا الخيار للانتقال إلى وضع الصوت فقط (Audio Only).
فاست كاست (Fast Cast): تطبيق ينقل محتوى الهاتف المتحرك إلى التلفاز بصورة سريعة مما يسمح للمستخدمين بنقل محتوى الوسائط المتعددة بسرعة مثل: الصور، ومقاطع الفيديو، الموسيقي، وغير ذلك إلى وصلات التلفاز الطرفية. خطوات استخدام التطبيق:
1- نزل تطبيق Fast Cast على هاتفك المتحرك.
2- وصل الهاتف المتحرك والتلفاز بشبكة واي فاي واحدة.
3- ابحث عن الجهاز وقم بتوصيل التلفاز. ملاحظة:
1. قد لا تتوفر هذه الخاصية لبعض أجهزة الهاتف المتحرك، ويخضع ذلك لمجموعة الشرائح التي يدعمها تنسيق الملفات.
2- توصيات بيئات العمل:
أ: توصيات سرعة الشبكة المحلية على: 1M/S ~ 2M/S.
ب: الملفات المطلوبة m3u8, FLV, f4w, TS, AVI, MP4 (وفقاً لمجموعة الشرائح المدعومة)
مؤقت النوم: تضمن الخيارات ما يلي: يقاف، 10 د، 20 د، 30 د، 60 د، 90 د، 120 د، 180 د.
الساعة العالمية: اضغط لإضافة الساعة العالمية. الوضع الليلي: قم بتشغيله للحفاظ على السطوع دون إزعاج الآخرين، واضبط السطوع على مستوى منخفض.

الصوت



ضبط الصوت: ضبط خيارات الصوت ومكبر الصوت.
– وضع الصوت: تحسين جودة الصوت للمحتوى العام. استخدم الأزرار ▲▼ للتمرير عبر إعدادات الضبط المسبق للصوت: رياضي (Sports)، وقياسي (Standard)، وسينما (Cinema)، وموسيقى (Music)، وأخبار (News).
– الصوت المحيطي: ينتج صوت محيطي حي عند تشغيل المصادر الصوتية قناة 5.1. يتضمن وضع التشغيل والإيقاف.
– إعدادات متقدمة: الوصول إلى الخيارات المتقدمة لتحسين الصورة.
إعدادات مستوى الصوت:
1) ضبط تلقائي لمستوى الصوت: المحافظة على ثبات مستوى الصوت لجميع البرامج والمداخلات. يتضمن وضع التشغيل والإيقاف.
2) التوازن: ضبط توازن مكبر الصوت.
3) مخرج الصوت الرقمي: ينطبق على PCM فقط. سوف تختلف مستويات الصوت بين PCM والصوت المضغوط.
4) تأخير مخرج الصوت الرقمي: ضبط وقت تأخير الصوت الرقمي.
5) موازنة مستوى الصوت: ضبط مستوى الصوت الخاص بالمُدخل الحالي مقارنة بالمداخلات الأخرى.
1) التأثير المحيطي: استخدم ▲/▼ للتمرير عبر وضع التأثير المحيطي.
2) المعادل: استخدم الأزرار ▲/▼ للتمرير عبر المعادل.
إعادة الضبط: لإعادة جميع إعدادات الصوت إلى إعدادات المصنع الافتراضية.
مخرج الصوت الرقمي: مخرج ضوئي للإشارات الصوتية الآتية من مخرج الصوت الرقمي.

الوصول إلى القنوات




ضبط الصورة
– وضع الصورة: تحسين جودة الصورة للمحتوى العام. استخدم الأزرار ▲▼ للتمرير عبر إعدادات الضبط المسبق للصورة: ديناميكي، سينمائي، رياضي، شخصي.
– إعدادات متقدمة:
الوصول إلى الخيارات المتقدمة لتحسين الصورة. السطوع: ضبط سطوع الصورة. اللون: ضبط تشبع اللون.
الوضوح: تقنية متقدمة لتحسين الصورة. إعادة الضبط: لإعادة ضبط الصورة.
إعدادات شاشة العرض:
– وضع الشاشة: اضبط حجم الصورة باستخدام ▲▼ للتمرير عبر إعدادات الوضع المسبق للشاشة.
– الشاشة التلقائية: ضبط تلقائي لوضع الشاشة وفقاً للإشارة: يتضمن التشغيل والإيقاف.
– المسح الكلي: اضبط شاشة عرض المسح الكلي، يتضمن التشغيل/الإيقاف.

الوصول إلى القنوات

يمكنك الانتقال بهذه الأزرار **↖** للأعلى والأسفل للتحويل بين القنوات أو لفتح لوحة مفاتيح افتراضية واختيار تحويل القنوات الرقمية.

مشاهدة الأجهزة المتصلة

اضغط على SOURCE ثم اضغط على **▶▶** لاختيار المصدر الذي ترغب بعرضه ثم اضغط على OK للتأكيد.

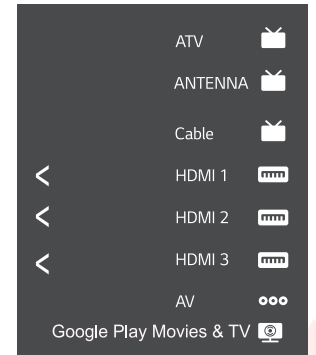

ملاحظة: قد يختلف المصدر المتاح وفقاً لموديل التلفاز.

مستوى الصوت

التحكم بمستوى الصوت: اضغط على الأزرار VOL +/- الموجودة في وحدة التحكم عن بُعد أو اضغط على الأزرار المماثلة لها على جهاز التلفاز لرفع مستوى الصوت أو خفضه. كتم الصوت: اضغط على زر **🔇** لكتم الصوت مؤقتاً. اضغط على هذا الزر مرة أخرى لإلغاء كتم الصوت أو على زر **vol +** لاسترجاع الصوت.

استخدام قائمة الوصول السريع

ملاحظة: قد لا تتوفر بعض الخصائص في مصادر معينة. وقد لا تتوفر بعض الاختيارات في طرازات معينة. يتناول هذا القسم القوائم وإعدادات التلفاز. كل القوائم موضحة إيجازاً وتفصيلاً لمساعدتك في الحصول على أقصى ما يمكن من التلفاز. للوصول إلى نظام القائمة: 1. في وضع التلفاز TV، اضغط على زر **≡** على وحدة التحكم عن بُعد لعرض قائمة الوصول السريع. 2. اضغط على **▶▶** لاختيار العنصر المرغوب فيه، ثم اضغط على زر OK لفتح القائمة الفرعية المقابلة. 3. في القائمة الفرعية، استخدم الأزرار **◀▶** و OK لإجراء أي تعديلات، أو استخدم **▶▶** لاختيار عنصر، واستخدم OK للانتقال والتشغيل وفقاً لشاشة العرض أمامك أو الدليل. 4. اضغط على زر **←** للرجوع إلى القائمة السابقة.

إعدادات استخدام التلفاز


تسمح لك قائمة الإعدادات بضبط التلفاز حسب تفضيلاتك.

ملاحظة: قد لا تتوفر بعض الخصائص في مصادر معينة. وقد لا تتوفر بعض الاختيارات في موديلات معينة.

التلفاز. كل القوائم موضحة إيجازاً وتفصيلاً لمساعدتك في الحصول على أقصى ما يمكن من التلفاز. للوصول إلى نظام القائمة:

1. اضغط على **▶▶** لاختيار العنصر المرغوب فيه، ثم اضغط على زر OK لفتح القائمة الفرعية المقابلة.
2. في القائمة الفرعية، استخدم الأزرار **▶▶** و OK لإجراء أي تعديلات، أو استخدم **▶▶** لاختيار عنصر، واستخدم OK للانتقال والتشغيل وفقاً لشاشة العرض أمامك أو الدليل.
3. اضغط على زر **←** للرجوع إلى القائمة السابقة.

إعداد القنوات

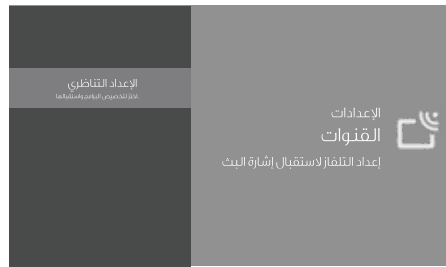

الإعداد التناظري

- الضبط التلقائي التناظري: اضغط على OK لبدء عملية البحث التلقائي. قد تستغرق عملية البحث بضع دقائق. خلال هذه العملية، يمكنك الضغط على زر OK لإنهاء. - الضبط اليدوي التناظري: اضغط على OK للانتقال إلى الواجهة. اضغط على الزر **▶▶** لضبط البرنامج أو نظام التلفاز أو نظام الألوان، ثم اضغط على **▶▶** لاختيار التردد، ثم اضغط على OK على للبحث عن القنوات.

- إعداد الترجمة المصاحبة

- (1) اللغة المفضلة: اضغط على OK ثم استخدم **▶▶** لاختيار اللغة المفضلة.
- (2) فك شفرة لغة الصفحة: اضغط على OK ثم استخدم **▶▶** لاختيار فك شفرة لغة الصفحة.



الإعداد الرقمي - ضبط الهوائي الرقمي: اضغط على OK لبدء عملية البحث التلقائي. قد تستغرق عملية البحث بضع دقائق. خلال هذه العملية، يمكنك الضغط على زر **←** واختيار YES للخروج.

- إعداد الترجمة المصاحبة:

- (1) إعدادات الترجمة المصاحبة: تتضمن "إيقاف"، "الأساسي" و "ضعف السمع".
- (2) اللغة الأولية المفضلة: اضغط على OK ثم استخدم **▶▶** لاختيار اللغة الأولية المفضلة.
- (3) اللغة الثانوية المفضلة: اضغط على OK ثم استخدم **▶▶** لاختيار اللغة الثانوية المفضلة.

- إعدادات النص المرئي

- (1) النص المرئي المفضل: اضغط على OK ثم استخدم **▶▶** لاختيار النص المرئي المفضل.
- (2) فك شفرة لغة الصفحة: اضغط على OK ثم استخدم **▶▶** لاختيار فك شفرة لغة الصفحة.

- الإعداد السمعي




- (1) محسن الحوار: يتضمن الإيقاف "Off" والتشغيل "On".
- (2) مستوى محسن الحوار: اضغط على OK واستخدم **◀▶** لضبط مستوى محسن الحوار.
- (3) الوصف السمعي: يتضمن الإيقاف "Off" والتشغيل "On".
- (4) مستوى النقاء في الوصف السمعي: اضغط على OK واستخدم **◀▶** لضبط مستوى النقاء في الوصف السمعي.


- (5) نوع الصوت: يتضمن "عادي"، و "ضعف السمع" و "ضعف البصر".
- (6) اللغة الأولية المفضلة: اضغط على OK ثم استخدم **▶▶** لاختيار اللغة الأولية المفضلة.
- (7) اللغة الثانوية المفضلة: اضغط على OK ثم استخدم **▶▶** لاختيار اللغة الثانوية المفضلة.

ملاحظة: قد لا تتوفر بعض الخصائص في مصادر معينة. وقد لا تتوفر بعض الاختيارات في طرازات معينة. يتناول هذا القسم القوائم وإعدادات التلفاز. كل القوائم موضحة إيجازاً وتفصيلاً لمساعدتك في الحصول على أقصى ما يمكن من التلفاز. للوصول إلى نظام القائمة:

1. في وضع التلفاز TV، اضغط على زر **≡** على وحدة التحكم عن بُعد لعرض قائمة الوصول السريع.
2. اضغط على **▶▶** لاختيار العنصر المرغوب فيه، ثم اضغط على زر OK لفتح القائمة الفرعية المقابلة.
3. في القائمة الفرعية، استخدم الأزرار **◀▶** و OK لإجراء أي تعديلات، أو استخدم **▶▶** لاختيار عنصر، واستخدم OK للانتقال والتشغيل وفقاً لشاشة العرض أمامك أو الدليل.
4. اضغط على زر **←** للرجوع إلى القائمة السابقة.

تشغيل الصفحة الرئيسية

ملاحظة: هذا الدليل للاستخدام العام. الأشكال والرسوم التوضيحية في الدليل هي للاطلاع فقط، وقد تختلف عن الشكل الفعلي للمنتج. وقد لا تتوفر اختيارات معينة في بعض الموديلات. يمكنك اختيار جميع الخصائص من الصفحة الرئيسية. اضغط على زر  لعرض الصفحة الرئيسية. اضغط على الأزرار  لاختيار الأيقونات من قائمة الشاشة. اضغط على OK للانتقال إلى أي اختيار. للخروج من القائمة، اضغط على 

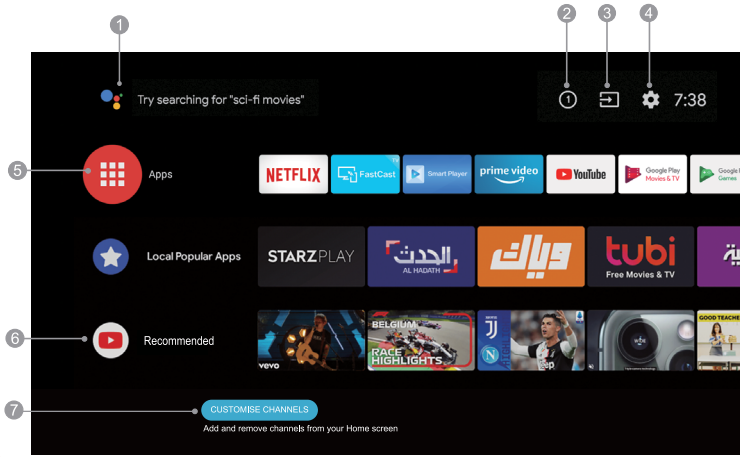

ملاحظة: الصورة للاطلاع فقط.

1. خاصية Google Assistant: انقر للتفاعل مع خاصية المساعد جوجل.
2. الإشعارات: تذكرك بالمعلومات المهمة للنظام مثل صغر مساحة القرص، أو تسجيل دخول Google أو خطأ في الحساب، أو مشكلات خاصة بالاتصال بشبكة الإنترنت، أو غير ذلك.
3. المدخل: تحديد مصدر المدخل.
4. الإعدادات: الوصول إلى إعدادات النظام.
5. التطبيقات: إظهار قائمة بالتطبيقات المفضلة أو الوصول إلى مركز التطبيقات.
6. Youtube: تصفح تطبيق يوتيوب لمشاهدة مقاطع فيديو متنوعة على الإنترنت.
7. تخصيص القنوات: إضافة القنوات أو إزالتها من الشاشة الرئيسية.

ملاحظة:

- (1) قد تختلف خصائص ومحتويات "الصفحة الرئيسية" حسب الدولة وموديل التلفاز.
- (2) قبل استخدام خصائص الشبكة في الصفحة الرئيسية من تطبيقات الشبكة وما إلى ذلك، يرجى توصيل التلفاز بشبكة الإنترنت أولاً.
- (3) حقوق نشر الأيقونات محفوظة لدى مزودي التطبيقات.

الإعداد الأولي للتلفاز

يتضمن الإعداد الأولي للجهاز تحديد جميع الإعدادات اللازمة للتمكن من البحث عن جميع القنوات التي يمكنك استقبالها وتخزينها. تأكد من تشغيل التلفاز، واتبع جميع الخطوات بالترتيب كما هو موضح. ملاحظة: إذا نتج عن البحث عن القنوات ظهور القليل من القنوات فقط، فقد يكون ذلك بسبب سوء البث، ولهذا فإن ضمان جهة التصنيع لا يغطي هذا البند. لا تتحمل جهات التصنيع فشل البث أو سوء جودته في بعض المناطق.

عند تشغيل الجهاز للمرة الأولى، ستظهر شاشة الإعداد الأولي، التي ستوجهك خلال عملية الإعداد الأولي. اتبع التعليمات على الشاشة على الظاهرة على الشاشة لإكمال عملية الإعداد الأولي. فيما يلي بعض الأمثلة.




الخطوة الأولى:



الخطوة الثانية:



الخطوة الثالثة:

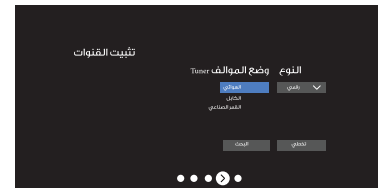


الخطوة الرابعة:




الخطوة الخامسة:


الخطوة 1: البيئة


يرجى الضغط على  لتحديد البيئة الخاصة بك. ثم اضغط على زر OK للانتقال إلى الخطوة التالية. الوضع الرئيسي Home: يمكنك عرض الإعدادات القياسية لأوضاع الصورة والصوت.

وضع المتجر Shop: يمكنك الاستمتاع بإعدادات معززة لأوضاع الصورة والصوت. ملاحظة: لن يمكن الوصول إلى إعدادات قائمة الصورة عند اختيارك وضع المتجر Shop. الخطوة 2: أين نقيم؟

يرجى الضغط على  لتحديد البيئة لديك/ منطقتك. اضغط على زر OK للانتقال إلى الخطوة التالية.

الخطوة 3: الشروط والأحكام استخدم زر  لقراءة الشروط والأحكام ثم اضغط على زر OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 4: تثبيت القنوات استخدم الأزرار  لتحديد وضع الموالف: هوائي، كابل أو ستلايت، النوع: رقمي، تناظري، الجميع، ثم اضغط على زر OK للتأكيد والانتقال إلى الخطوة التالية.

الخطوة 5: يرجى التحقق من الإعدادات عند الانتهاء من الإعدادات، تظهر واجهة [يرجى التحقق من الإعدادات] على الشاشة، ثم اضغط على زر OK للانتهاء من الإعدادات الأولية. يمكنك العودة إلى الخطوة السابقة وإجراء أي تغييرات باستخدام زر 

الاتصال بشبكة الإنترنت

للوصول إلى الإنترنت، عليك التسجيل في خدمة إنترنت واسعة النطاق وعالية السرعة من خلال مزود خدمة الإنترنت الخاص بك (ISP).

يمكن توصيل التلفاز بشبكة منزلك من خلال طريقتين:

- متصلة بالأسلاك، باستخدام موصل (LAN) RJ45 في اللوحة الخلفية.
- لاسلكية، باستخدام وحدة لاسلكية داخلية وباستخدام شبكة الاتصال اللاسلكي الخاص بمنزلك.

ملاحظة: تتضمن التعليمات المذكورة أدناه الطرق المعتادة لتوصيل التلفاز بشبكة الاتصال السلكي أو اللاسلكي. قد تختلف طريقة التوصيل وفقاً للتهيئة الفعلية للشبكة. إذا كانت لديك أي أسئلة عن شبكتك، يرجى الرجوع الاستفسار من مزود خدمة الإنترنت الخاص بك.

الاتصال بشبكة سلكية

للاتصال بشبكة سلكية:

1. تأكد أن لديك:



- كابل إيثرنت طويل بصورة كافية للوصول إلى التلفاز.
 - جهاز راوتر أو مودم مزود بمنفذ إيثرنت.
 - اتصال بالإنترنت عالي السرعة.
 - منفذ إيثرنت (LAN) في الجانب الخلفي للتلفاز.
2. وصل كابل الإيثرنت بالراوتر وبمنفذ الإيثرنت الموجود خلف التلفاز.
3. استخدم قائمة "الشبكة" لتهيئة التلفاز.

الاتصال بشبكة لاسلكية

للاتصال بشبكة لاسلكية:

1. تأكد أن لديك:

- راوتر يرسل إشارة لاسلكية عالية السرعة.
- اتصال بالإنترنت عالي السرعة.
- استخدم قائمة "الشبكة" لتهيئة التلفاز.

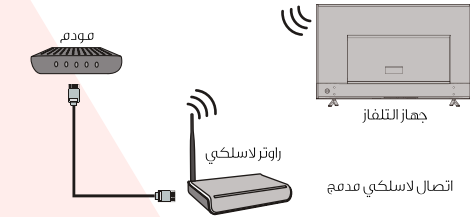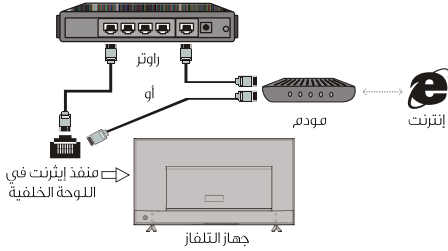

التشغيل

اتبع التعليمات في هذه الصفحة عن كيفية تشغيل التلفاز ووحدة التحكم عن بُعد قبل الانتقال إلى الصفحات التالية التي توضح كيفية اتباع إجراءات ضبط القنوات.

1. ركب بطاريتين في وحدة التحكم عن بُعد.

احتياطات استخدام البطاريات:

- استخدم أنواع البطاريات المحددة فقط.
- تأكد من استخدام القطبية الصحيحة.
- لا تخلط بين البطاريات الجديدة والمستخدمة.
- لا تستخدم البطاريات القابلة لإعادة الشحن.
- لا تعرض البطاريات لحرارة مفرطة مثل أشعة الشمس أو النار، ولا تلمسها في النار أو تعدد شحنها أو تحاول فتحها؛ لأن ذلك قد يؤدي إلى حدوث تسريب أو انفجار.
- انزع البطاريات من وحدة التحكم عن بُعد إذا لم تكن تستخدمها لمدة طويلة.

2. وصل كابل الطاقة بالتلفاز أولاً ثم بمقبس الطاقة الكهربائية الرئيسية. (ملاحظة: إذا كان كابل الطاقة خارجاً من التلفاز، فيرجى توصيله بمقبس الطاقة الكهربائية الرئيسية).

• إذا كان التلفاز متصلاً بمصدر طاقة تيار متردد

يجب توصيل جهاز التلفاز بالكامل بمصدر طاقة تيار متردد فقط. يجب عدم توصيله بمصدر طاقة تيار مستمر. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسة تحت أي ظرف ممكن؛ تجنباً لخطر حدوث صدمة كهربائية.

• إذا كان التلفاز متصلاً بمصدر طاقة تيار مستمر

يجب توصيل جهاز التلفاز بالكامل بمصدر طاقة تيار مستمر فقط. يجب عدم توصيله بمصدر طاقة تيار متردد. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسة تحت أي ظرف ممكن؛ تجنباً لخطر حدوث صدمة كهربائية.

3. وصل الهوائي الخارجي بمنفذ ANTENNA IN في خلف جهاز التلفاز.

4. عند تشغيل التلفاز، سيعمل الجهاز تلقائياً أو يدخل في وضع الاستعداد.

ملاحظة: بالنسبة لبعض الموديلات، شغل التلفاز بالضغط على زر الطاقة.

إذا أضاء مصباح مؤشر الطاقة، يعني ذلك أن الجهاز في وضع الاستعداد. اضغط على زر على وحدة التحكم عن بُعد أو على الجهاز لتشغيل التلفاز.

إيقاف التشغيل

• لتشغيل الجهاز في وضع الاستعداد، اضغط على زر في وحدة التحكم عن بُعد أو في الجهاز، وسيظل الجهاز في وضع التشغيل ولكن باستهلاك منخفض للطاقة.

• لإيقاف تشغيل الجهاز، افصل مقبس الطاقة الرئيسية عن منفذ الطاقة الرئيس. ملاحظة: في بعض الموديلات، اضغط على زر الطاقة لإيقاف تشغيل الجهاز.

خصائص وحدة التحكم عن بُعد

تظهر معظم خصائص التلفاز في القوائم التي تظهر على الشاشة. تُستخدم وحدة التحكم عن بُعد المتوفرة مع الجهاز للتنقل بين القوائم وضبط جميع الإعدادات العامة.

- POWER (زر التشغيل/إيقاف التشغيل) لتشغيل التلفاز أو إيقاف تشغيله.
- الصوت أو إلغاء كتمه.
- الدخول لاستخدام قائمة نظام التلفاز.
- SMART الانتقال إلى واجهة الوظائف الذكية SMART.
- الانتقال إلى واجهة اختيار مصدر العرض.
- ▲▼ (أزرار الاتجاه للأعلى والأسفل واليسار واليمين) لتمييز عناصر مختلفة في نظام القائمة وضبط مفاتيح التحكم بالقائمة. تبحث أزرار أعلى وأسفل في قائمة القنوات الحالية ضمن مصدر التلفاز.
- OK تأكيد اختيارك.
- ← الخروج من القائمة والعودة إلى القائمة السابقة.
- الذهاب إلى الصفحة الرئيسية الذكية للتلفاز.
- ☰ الانتقال إلى قائمة الوصول السريع.
- ☷ الانتقال إلى لوحة المفاتيح الافتراضية.
- +/- رفع/ خفض مستوى صوت التلفاز.
- NETFLIX الانتقال إلى الصفحة الرئيسية لتطبيق نتفلكس.
- YouTube الانتقال إلى الصفحة الرئيسية لتطبيق يوتيوب.
- (مايك) انقر للتفاعل الصوتي مع خاصية المساعد جوجل للتلفاز. (متوفرة فقط عندما يكون هناك اتصال بشبكة الانترنت)



كيفية إقران وحدة التحكم عن بُعد بالتلفاز


هذه وحدة تحكم تعمل بالبلوتوث، وقبل استخدامها قم أولاً بإقرانها بالتلفاز. يرجى اتباع الخطوات التالية:

- الخطوة 1: اضغط على زر ☷ للانتقال إلى الصفحة الرئيسية.
 - الخطوة 2: اضغط على زر ● للدخول إلى "إقران وحدة التحكم عن بُعد".
 - الخطوة 3: اتبع "صفحة تعليمات الإعدادات" ثم اضغط على زر OK ☷ في الوقت ذاته.
 - الخطوة 4: ستعرض الشاشة "إقران..."، وبعد انتهاء الإقران ستعرض الشاشة "نجاح!".
- ملاحظة: إذا انتظرت مدة دقيقتين ولم يتم الإقران بنجاح، يرجى إعادة الخطوات السابقة للإقران مرة أخرى.

إذا رغبت في إلغاء الإقران بوحدة التحكم عن بُعد التي تعمل بالبلوتوث، اتبع الخطوات التالية:

- الخطوة 1: اضغط على زر ☷ للانتقال إلى الصفحة الرئيسية.
- الخطوة 2: اضغط على الأزرار ▲/▼/☷/☰، ثم اضغط OK للدخول.
- الخطوة 3: اضغط على زر ▼ لاختيار "وحدات التحكم والملحقات"، ثم اختر اسم وحدة التحكم عن بُعد التي تعمل بالبلوتوث للانتقال إلى الخطوات التالية.

الخطوة 4: اضغط على "إلغاء الإقران" ثم اضغط على OK.

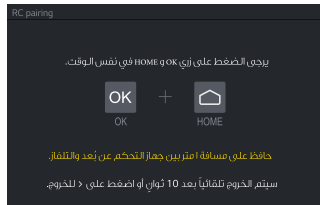

المقاييس

ملاحظة: قد يختلف موقع المقاييس وأسمائها على التلفاز وفقاً للموديل، وقد لا تتوفر بعض المقاييس في موديلات معينة.

USB

منافذ USB (مدخل)

تُستخدم هذه المقاييس لتوصيل أجهزة USB. ملاحظة: يختلف عدد منافذ USB بحسب موديل التلفاز.

LAN

شبكة LAN

يُستخدم قابس RJ45 لتوصيل المودم الخارجي أو معدات الوصول للشبكة.

ANTENNA IN

منفذ توصيل الهوائي (مدخل)

يُستخدم هذا المنفذ في توصيل الهوائي الخارجي أو التوصيل بشبكة تلفاز الكابل.

SPDIF

منفذ SDDIF

يُستخدم هذا المخرج لتوصيل مستقبل صوتي رقمي متوافق.

HDMI

منفذ HDMI (مدخل)

يُستخدم منفذ HDMI (واجهة متعددة الوسائط عالية الوضوح) لتوصيل الكمبيوتر ذي طاقة رسومات متوافقة أو توصيل مشغلات أقراص DVD معينة، أو جهاز رقمي متوافق لفك شفرات القمر الصناعي. يوفر هذا المنفذ توصيلاً رقمياً غير مضغوط يحمل بيانات الفيديو والصوت من خلال كابل موصل صغير متكامل.

EARPHONE OUT

منفذ السماعات (مخرج)

يسمح بتوصيل سماعات الأذن للاستماع إلى الصوت الخارج من التلفاز. ملاحظة: الضغط المفرط للصوت الصادر من سماعات الأذن قد يتسبب في فقدان السمع.


AV IN

فيديو + منافذ صوت صغيرة (مدخل)

تُستخدم منافذ AV IN لتوصيل عدد من المعدات، بما فيها أجهزة تسجيل الفيديو، وكاميرات الفيديو، ومشغلات DVD، ووحدات التحكم بالألعاب. يوفر منفذ VIDEO IN توصيل فيديو مركب.

أضرار التلفاز

ملاحظة: قد يختلف موقع الأضرار الوظيفية وأضرار الطاقة وأسمائها على التلفاز وفقاً لموديل الجهاز، وقد تكون هناك أضرار غير متاحة لبعض الموديلات.

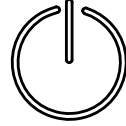

زر

1. شغل التلفاز.
2. بعد تشغيل التلفاز، اضغط على الزر لعرض القائمة.
3. اضغط زر ضغط بسيطة لاختيار القائمة، ووضعة طويلة لتأكيد الاختيار.

ملاحظة: قد يختلف موقع الأضرار الوظيفية وأضرار الطاقة وأسمائها على التلفاز وفقاً لموديل الجهاز.

بيئة الاستخدام

- لا تضع الجهاز على سطح أو حامل غير ثابت أو طاوله غير مستقرة.
- ضع الجهاز في مكان به تهوية جيدة.
- لا تستخدم الجهاز بالقرب من الأماكن الرطبة والباردة، واحرص على حماية الجهاز من الحرارة الزائدة.
- احفظ الجهاز بعيداً عن أشعة الشمس المباشرة.
- لا تعرض الجهاز للماء، ولا تضع عليه أجساماً ممتلئة بالسوائل، مثل المزهريات.
- لا تستخدم الجهاز بالقرب من الأماكن المترتبة.

التنظيف

- انفض الغبار عن الجهاز بمسح الشاشة واللوحة بقطعة قماش طرية ونظيفة باستخدام منظف سائل خاص.
- لا تضغط على الشاشة بقوة عند تنظيفها.
- لا تستخدم الماء أو أي منظفات كيميائية لتنظيف الشاشة؛ لأن ذلك قد يتلف سطح شاشة التلفاز.

تثبيت التلفاز على الحائط

تحذير: تتطلب هذه العملية شخصين.

- لضمان التركيب الآمن، يرجى مراعاة ملاحظات السلامة التالية:
- تحقق من قدرة الحائط على تحمل وزن التلفاز وحامل التثبيت.
- اتبع تعليمات التثبيت القادمة مع حامل التثبيت.
- يجب تركيب الجهاز على حائط عمودي.
- احرص على استخدام البراغي المناسبة لمادة تكوين الحائط.
- احرص على وضع كابلات التلفاز في مكان بعيد عن حركة الأقدام لتجنب التعثر فيها.
- تنطبق جميع تعليمات السلامة الأخرى لأجهزة التلفاز الأخرى الخاصة بنا على هذا الموديل.
- ملاحظة: جميع التوضيحات الواردة في هذا الدليل هي لغرض الاطلاع فقط.

الاحتياطات

اقرأ هذه التعليمات بعناية قبل استخدام الجهاز. يرجى الاحتفاظ بهذه التعليمات لاستخدامها مستقبلاً عند الحاجة.

المنتج

- لا تسد أو تغطي فتحات التهوية على الغطاء الخلفي.
- لا تدفع أي جسم داخل الجهاز من خلال فتحات لوحة التلفاز؛ لأنها قد تمس أجزاء ناقلة للتيار أو قد تسبب قصراً في الدائرة الكهربائية مؤدية إلى حدوث حريق أو صدمة كهربائية أو تلف للجهاز.
- لا تحاول فتح لوحة التلفاز لأنها قد تتلف. ليس هناك أي أجزاء داخلية يمكنك إصلاحها بنفسك. استعن بفني مؤهل فيما يتعلق بجميع أعمال الصيانة.
- لا تلمس سطح الشاشة بأصابعك لأنها قد تخدش شاشة التلفاز أو تشوهها.
- لا تضع ضغطاً كبيراً على شاشة التلفاز؛ لأن ذلك قد يسبب أضراراً بالغة لها.

الكهرباء والتوصيل

- افصل الكهرباء عن الجهاز في الحالات التالية:
 - في حال عدم استخدام الجهاز لمدة زمنية طويلة.
 - في حال تلف سلك الكهرباء أو منفذ الطاقة/ القابس.
- اتبع التعليمات التالية لتركيب المنتج وضبط إعداداته. اضبط جميع عناصر التحكم المذكورة في تعليمات التشغيل لأن أي إعدادات غير سليمة لأدوات التحكم الأخرى قد تتلف الجهاز، وفي حال حدوث ذلك، افصل الكهرباء عن الجهاز واتصل بمركز الخدمة.
- في حال تعرض الجهاز لأي اصطدام أو في حال سقوطه مؤدياً إلى تلف اللوحة.

سلك الكهرباء وكابل الإشارة

- لا تضع أو تدحرج أي شيء فوق سلك الطاقة وكابل الإشارة.
- احرص على حماية سلك الطاقة وكابل الإشارة من الدهس بالأقدام.
- لا تزد الحمل على سلك الكهرباء أو منفذ الطاقة.
- لا تعرض سلك الكهرباء وكابل الإشارة لأي رطوبة.

الفصل الأول: مقدمة

3	الاحتياطات
3	المنتج
3	الكهرباء والتوصيل
3	سلك الكهرباء وكابل الإشارة
3	بيئة الاستخدام
3	التنظيف
4	تثبيت التلفاز على الحائط
5	أضرار التلفاز
6	المنافذ
6	خصائص وحدة التحكم عن بُعد
6	كيفية إقران وحدة التحكم عن بُعد بالتلفاز

الفصل الثاني: التشغيل العام

7	التشغيل
7	إيقاف التشغيل
8	الاتصال بشبكة الإنترنت
9	الإعداد الأولي للتلفاز

الفصل الثالث: خصائص الصفحة الرئيسية

10	تشغيل الصفحة الرئيسية
----	-----------------------------

الفصل الرابع: استخدام التلفاز

11	الوصول للقنوات
11	مشاهدة الأجهزة المتصلة
11	مستوى الصوت
11	استخدام قائمة الوصول السريع
11	شاشة العرض والصوت
11	التلفاز
12	إعدادات استخدام التلفاز
12	إعداد القنوات
13	الصورة وشاشة العرض
13	الصوت
14	المنطقة الذكية
14	النظام

الفصل الخامس: معلومات أخرى

15	المشغل الذكي
15	التنبيهات والأسئلة المتكررة
16	اكتشاف الأعطال وإصلاحها
16	تركيب القاعدة



الطرز: 70U5