



QLED TV

<mark>د</mark>ليل المستخدم

الموديل:

50Q8 ⁴

55Q8 ⁴

65Q8 ⁴

الرجا<mark>ء قراءة هذا الدليل بعناية قبل تشغي</mark>ل الجهاز ، واحتفظ به للرجوع إليه مستقبلاً

هذه التصافيم والمو<mark>اصفات عرضة للتغيير بهدف إدخال ت</mark>حسينات عليها وذلك دون إشعار فسبق

1809001 (B



QLED TV

User's Manual

Models:

⁴ 50Q8

△ 65Q8

Please read this manual carefully before operating your set.

Retain it for future reference.

Designs and specifications are subject to change for improvement without prior notice.

ISO9001

CB





Models: 50Q8

55Q8

65Q8

Table of Contents

Chapter 1: Introduction

Product	
Power and Plug	
Power Cord and Signal Cable	
Use Environment	
Cleaning	
Hanging the TV Set on the Wall Buttons on the TV	
Sockets	
Remote Control Functions	
How to Pair Remote Control with the TV	
Chapter 2: General Operation	
Switching on	
Switching off	
Network connection	•
TV - Initial Setup	
Chapter 3: Home Features	
napter 3. Home reatures	
Homepage Operation	1
Homepage Operation	
Homepage Operation	111111
Homepage Operation	



© Alhafidh Group Trading fzco. 2020 Reproduction in whole or in part is strictly prohibited

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



HIGH-GEPHENTON MULTIMEDIAL INTERPRACE

IN THE GENERAL PROPERTIES AND THE HIGH THE PAGE AND THE HIGH TH

Chapter 1 Introduction

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

Power and Plug

- Unplug the set under the following conditions:
- If the set will not be used for a long period of time.
- If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
- If the set is subject to impact or has been dropped to have the cabinet damaged.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- · Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- . Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen

Hanging the TV Set on the Wall

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:


- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount
- · The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Note:

Illustrations within this publication are provided for reference only.

Note: The location and names of the function buttons and power button on the TV may vary according to TV model. And some buttons may not available for some models.

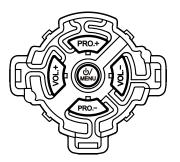

1. PROGRAM(CHANNEL) UP/DOWN button

Scans up/down through the channel list. In the menu system, they act like the up/down direction buttons on the remote and adjust menu controls.

Y. VOLUME UP/DOWN button

© Alhafidh Group Trading fzco. 2020

Buttons on the TV

Increases/decreases the volume.In the menu system,they act like the right/left direction buttons on the remote and adjust menu controls.

۳. ம்/MENU button

Turns the TV on or standby. The TV is on, short press it to comfirm items, and long press it, brings up the NAV menu.

Note: The location and names of the function buttons and power button on the TV may vary according to TV model.

Introduction

Sockets

Note: The location and names of the sockets on the TV may vary according to TV model, and some sockets may not available for some models.

USB sockets (input)

USB These sockets can be used to connect an USB device.

Note: The number of USB sockets on the TV may vary according to TV model.

LAN D

RJ45 plug for connecting to external modem or network access equipment.

SATELLITE IN SATELLITE IN socket (input)

This socket can be used to connect the satellite receiver pot.

ANTENNA IN socket (input)

ANTENNA IN This socket can be used to connect the outside aerial or cable network.

SPDIF SPDIF socket

This output can be used to connect a compatible digital audio receiver.

HDMI HDMI socket (input)

The HDMI (High-Definition Multimedia Interface) socket can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug

cable.

EARPHONE Socket (output)

Allow you to connect earphones to listen to the sound coming from the TV.

Note: Excessive sound pressure from earphones can cause hearing loss.

Video + audio mini sockets(input)

AV IN The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or

games consoles. The VIDEO IN socket provides composite video connection.

Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

Note: Figures and illustrations on this operation manual are provided for reference only and may differ from the actual product appearance. Certain function may not be available for some models, e.g.



- MUTE & To mute and un-mute the sound.
 - Turns the TV on or off
- 0-9 buttons To enter channel numbers.
 - **FAV** To bring up the favorite channel list menu.
 - LIST To display the channel list.

 - P+/- To adjust channels.
 - TV To access TV mode.
 - SMART To enter SMART function interface.

HOME \triangle To enter Homepage.

MENU Enter into Quick Access Menu.

OK Confirms your selection.

To navigate through the menus; to select menu options; to switch to the previous or next photo, song or video in USB function.

To navigate through the menus; to set functions and change values. ▶ can also be used to open the corresponding submenu.

BACK ← To go back to the previous menu or interface; to exit a running app.

SOURCE To enter source selection interface.

EXIT To go back to the previous menu or interface; to exit a running app.

ZOOM To select the picture format.

Enter into Using TV System menu.

NFO To display program information, if available.

PG To toggle the Electronic Program Guide on or off under DTV source.

① Lang/AD To select a sound type available for selected analogue TV program;

USB To enter USB mode.

SUBT. To select a subtitle language available for selected digital TV program.

TEXT To toggle Teletext on or off.

Colored buttons To select tasks or Teletext pages.

★ To start fast reverse or fast forward.

To start playback.

To pause playback.

I◀ ► To select the previous or the next photo, music or video.

To stop playback.

REC To record programs under DTV source.

NETFLIX Goes to the Netflix homepage.

YouTube Goes to the YouTube homepage.

NETFLIX YouTube ALHAFIDH

Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

(On/Off button) Turns the TV on or off. POWER (1)

> 双 To mute and un-mute the sound.

Enter into Using TV System menu.

To enter SMART function interface.

To enter source selection interface.

^∨<>(**▲▼∢▶**) (up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls. ▲ ▼ buttons can up or down to through the current channel list under TV source.

> OK Confirms your selection.

 \leftarrow Exit the menu and return to the previous menu.

△ Goes to the smart TV homepage.

= Enter into Quick Access Menu.

w To Enter into virtual keyboard.

Increases or decreases the TV's volume.

NETFLIX Goes to the Netflix homepage.

Goes to the YouTube homepage. YouTube

> (Mic)Click to interact with Google Assistant of the TV. (Available only when the network connection is normal.)

How to Pair Remote Control with the TV

This is a Bluetooth remote control, and before using it, please pair it with the TV firstly. The following steps are for vour reference:

Step 1: Press button to enter the home page.

Step 2: Press • button to enter the "RC pairing".

Step 3: Follow the "Settings tips page", Press OK and \(\sigma\) together.

Step 4: The screen will display "Pairing...", Pair finished the screen will

display "Success!".

www.alhafidh.com

NOTE: If you wait more than 2 minutes and it can't pair,

please repeat the above steps for pairing again.

If you want to unpair the Bluetooth remote, As follow:

Step 1: Press button to enter the home page

Step 2: Press $\blacktriangle/\blacktriangledown \blacktriangleleft/\blacktriangleright$ to choose \bigodot , and then press OK to enter.

Step 3: Press ▼to select "Remotes & Accessories" and then to chooe

the Bluetooth remote name to enter next steps.

Step 4: Press unpair and then choose OK button.

Switching on

Chapter 2

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up

1. Insert two batteries in the remote control.


Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.
- 2. Connect the power cable FIRST to the television, THEN to a mains socket. (Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)
- If your TV is connected to an AC supply Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect i to o a mains socket, as there is a risk of electric shock.
- If your TV is connected to a DC supply Your TV set should only be connected to a DC supply. It must not be connected to a AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
- 3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.
- 4. When powered on, the TV will be turned on directly or be in standby. Note: For some models, switch the TV on by pressing the power button.

If the power indicator lights up, the TV set is in standby mode. Press the O button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the \circ button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet. Note: For some models, press the power button to switch off the TV set.



To access the Internet, you must subscribe to high speed broadband Internet service with your Internet service provider (ISP).

Your TV can be connected to your home network in two ways:

- · Wired, using the RJ45 (LAN) connector on the back panel.
- · Wireless, using the internal wireless and your home wireless network.

Note: Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP.

Connecting to a wired network


To connect to a wired network:


- 1. Ensure you have:
 - An Ethernet cable long enough to reach your TV
 - · A router or modem with an available Ethernet port
 - · A high-speed Internet connection
 - An Ethernet (LAN) port on the back of the TV
- 2. Connect your Ethernet cable to the router and to the Ethernet port on the back of the TV.
- 3. Use the Network menu to configure the TV.

Connecting to a wireless network

To connect to a wireless network:

- 1. Ensure you have:
 - A router broadcasting a high-speed wireless signal
 - · A high-speed Internet connection
- 2. Use the Network menu to configure the TV.

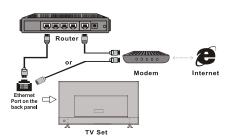



General Operation

TV - Initial Setup

Initial setup involves selecting all the settings required to be able to search for and store all channels you can receive.

Make sure that the television is switched on and follow all the steps in turn specified hereafter.

Note: If the channel search retrieved only few channels it could be caused by poor broadcasting and therefore is not coverd by manufacturer warranty. Manufacturers cannot be held responsible for lack of or poor broadcasting in some areas.

The first time you switch the set on, the Initial Setup wizard opens, which guides you through the initial setup process.

Step 1: Environment

Press $\blacktriangle/\blacktriangledown$ to select your environment.Then press OK to enter next step.

Home Mode: You Would be able to view the standard settings for Picture and sound modes.

Shop Mode: You can enjoy enhanced setting for Picture and Sound modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

Step 2: Were are you?

Press ▲/▼ to select your Country/Region Press OK to comfirm and move to next step.

Step 3: Terms & Conditions

Use $\blacktriangle/\blacktriangledown$ to read Terms & Conditions, then press OK to comfirm and move to next step.

Step 4: Channel installation

Use ▲/▼ to select Tunner mode:Antenna,Cable or Satellite; Type:Digital,Analogue and All, then press OK to comfirm and move to next step.

Step 5: Please check settings

© Alhafidh Group Trading fzco. 2020

When all setup is done, the [Please check settings] interface displays on the screen, and press OK to finish the initial setup. You can also go back to former step and make any changes by using ← button.

Step 1:



Step 2:



Step 3:



Step 4:



Step 5:



Chapter 3 Home Features

Homepage Operation


Note: This manual is for common use. Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. And for some models, certain options are not available.

You can select all the features from homepage.

Press to display homepage.

Press $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ to select icons from the screen list.

Press OK to enter each option. To exit the menu, press

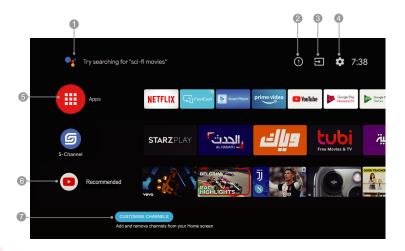

Note: The picture is only for reference

- 1. Google Assistant: Click to interact with Google Assistant of the TV.
- 2. Notifications: Remind you of system-critical information, such as low disk space, Google sign in or account errors, network connectivity issues, etc.
- 3. Input: Select the input source.
- 4. Settings: Access the system setting.
- **5. Apps:** Show the list of favorite applications, or access the application center.
- 6. Youtube: Browse this application to watch a wide variety of online videos.
- 7. CUSTOMISE CHANNELS: Add and remove channels from your Home screen.

Note:

1) The functions and contents of "Home Page" may vary by different countries or models.

www.alhafidh.com

- 2) Before using network functions in home page like network applications and so on, please connect the TV to the network firstly.
- 3) Icon copyrights are owned by the application providers.

Accessing channels

✓/ Abuttons can up or down to switching channel. or open virtual keyboard and select digital switching channel

Watching connected device

Press SOURCE then press ▲/▼ to select your desired source, and then press OK to confirm.



Note: The available source might differ depending on the model.

Volume

Volume control: press the VOL +/- buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the **★** button to temporatily mute the sound. Press this button again or the vol + button to restore the sound.

Using Quick Access Menu

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

This section explores the menus and settings of your TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

- 1. In TV mode, press=on the remote control to display the quick access list.
- 2. Press ▲/▼ to select the desired item, then press OK to open the corresponding submenu.
- 3. In submenu, use
 ✓/▶ and OK buttons to make the adjustments, or use ▲/▼ to select an item, use OK to enter and operate according to the onscreen display or quide.
- Press ← to return to the previous menu.

© Alhafidh Group Trading fzco. 2020



Display & Sound

Info: Select this option to view TV infomation. Picture adjustments: Enter to ajust picture mode or Advanced settings.

Screen: Select this option to ajust the picture size. Sound adjustments: Select this option to set the sound adjustments.

Speakers: To enter TV speaker settinghs. HDMI Settings: Enter to set up HDMI devices for streamlined control.

TV

Scan channels: To setup Analogue or Digital channels. Channel Organizer: Hightlight the channels you want to move, then press the right arrow key. You can use the arrow keys to move the channel. If you want to delete the hightlighted channel, press OK key.

Using TV Settings

The Settings menu allows you to configure the TV with your preferences.

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

- Press ▲/▼ to select the desired item, then press
 OK to open the corresponding submenu.
- In submenu, use ▲/▼ and OK buttons to make the adjustments, or use ▲/▼ to select an item, use OK to enter and operate according to the on-screen display or quide.
- 3. Press to return to the previous menu.

Channels Setup



Analogue Setup

- Analogue Auto Tuning: Press OK to start the automatic search process. The search may take a few minutes.

 During the process, you can press OK to abort.
- Analogue Manual Tuning: Press OK to enter the interface.Press ▲/▼ to set program,TV system or color system item, then Press ▲/▼ select Frequency and press OK to search channel.
- Teletext Setup
- (1)Preferred teletext: Press OK and then use ▲/▼ to select Preferred teletext.
- (2)Decoding page language:Press OK and then use ▲/▼ to select Decoding page language.

www.alhafidh.com



Digital Setup

- Digital Antenna Tuning:Press OK to start the automatic search process.The search may take a few minutes.

During the process, you can press
and chosse YES to exit.

- Subtitle Setup:
- (1)Subtitle Setting: Include off,Basic,Hearing impaired. (2)Primary Preferred Language:

Press OK and then use $\blacktriangle/\blacktriangledown$ to select Primary Preferred Language.

(3)Second Preferred Language:

Press OK and then use \triangle/∇ to select Sencond Preferred Language.

- Teletext Setup
- (1)Preferred teletext: Press OK and then use $\blacktriangle/\blacktriangledown$ to select Preferred teletext.
- (2)Decoding page language:Press OK and then use $\blacktriangle/\blacktriangledown$ to select Decoding page language.
- Audio Setup
- (1) Dialogue Enhancemen : Include Off and On.
- (2) Dialogue Enhancement Level :

 Press OK and th e n use

 Extra Dialogue Enhancement

Press OK and th e n use Moset Dialogue Enhancemen

(3) Audio Description: Include Off and On.

(4) Audio Description Mixing Level:

Press OK and then use **◄/▶** to set Audio Description Mixing Level

(5)Audio Type: Include Normal, Hearing impaired and Visual impaired


(1) Primary Preferred Language:

Press OK and then use $\blacktriangle/\blacktriangledown$ to select Primary Preferred Language.

(v) Second Preferred Language:

Press OK and then use $\blacktriangle/\blacktriangledown$ to select Sencond Preferred Language.

Picture & Display

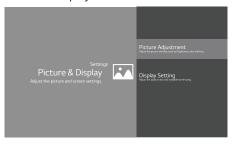

Picture Adjustment:

- Picture Mode:Optimize picture quality for general content.Use ▲/▼ to scroll through the Picture preset settings:Standard,Dynamic,Movie,Sport and Personal.
- Advanced Settings:

Access advanced picture enhancing options. Brightness: Adjusts the brightness of the picture. Color: Adjusts the color saturation. Clarity:Advanced technique for picture enhancement. Reset: To reset picture ajustment.

Display Setting:

- Screen mode: Ajust the picture size.Use ▲/▼ to scroll through the Screen mode preset settings.
- Auto screen: Automatically adjusts screen mode based on the signal.Include On and Off.
- Overscan: Adjust ovescan display , incluede on/off

Sound



Sound Ajustment: Adjust sound and speaker-related options.

- Sound Mode:Optimize sound quality for general content.Use ▲/▼ to scroll through the sound preset settings:Sports,Standard,Cinema,Music and News.
- Surround:Reproduces life-like surround sound when playing -5.1 channel audio sources.Include On and Off. Advanced Setting:Access advanced sound enhancing options.

Volume Setting:

- 1)Auto Volume:Keeps the volume level constant for all programs and inputs. Include On and Off.
- 2)Balance:Adjust the speaker blance.
- 3)Digital Audio Out Volume:Applied for PCM only.The volume levels between PCM and compressed audio will differ
- 4)Digital Audio Out Delay:Set the delay time for Digital
- 5)Volume offset:Adjust the soundlever of the current input relative to other inputs.

Sound mode related:

1)Surround effect: Use **◄/▶** to scroll through Surround

2)Equalizer: Use ◀/▶ ▲/▼ to scroll through Equalizer. Reset: To return all sound settings to factory default.

Digital Audio Out: Optical out for audio signals from the Digital Audio Out.

Smart Zone



Enjoy Music: Select this option to enter into Audio Only mode

Fast Cast: An app that quickly delivers mobile content to TV,allowing users to quickly deliver multimedia content such as photos, videos, music and more to TV terminals. Fast Cast Step:

- 1 Download Fast Cast mobile App.
- 2. Mobile and TV are connect the Same Wi-Fi.
- 3. Search device and connect TV.

Note:

- 1. This function may be unavailable for some mobile devices, and it subject to chipset support the files format. 2. Recommendations of working environments:
- A: Local Area Network Speed recommendations on: 1M/S~2M/S.
- B: Files required:MP4 \ AVI \ TS \ FLV \ f4v \ m3u8 (subject to chipset supported).

Sleep Timer: The options inJude: Off, 10min, 20min, 30min, 60min.90min.120min.and 180min.

World clock: Enter to add World clock.

Night mode: Turn on to Keep brightness to prevent disturb others.Clear brightness at a low level.

System



Language: Use ▲/▼ to scroll through Language. **Environment:** Enter to set Home or shop mode.

-Home Mode: You Would be able to view the standand settings for Picture and Sound Modes.

-Shop Mode: You can enjoy enhanced setting for Picture and Sound Modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

Shop Demo: Enter to set E-show or E-stiker. Note: E-sticker is not availbale for certain model. Power: Enter to set Power mode.

- Wake on Wifi:Enable wake on WIFI Settings.
- Network stand by: Enable wake on Ethernet Settings.

Sleep Timer: Set the TV to turn off automatically. Idle TV Standby: Select the inactivity time that TV enter standby.


Available space: Show the system storage size and Memory size.

Smart TV mannual: Show the guide to get smart TV manual by smartphone

Chapter 5 Other Information

Smart Player

Connect a USB device to a USB socket, the screen will show USB file name and then press OK to enter .If no USB device connected, the USB interface will be not displayed.



- 1. Select Video icon, then press OK button to view movie file.
- 2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
- 3. While playing a Video, Press OK of remote to Play and Pause the video file Press ◀ of remote to Fast backward. Press of remote to Fast forward.
- 4. Use to see more option:Photo Scale,Looping mode, Subtitle, Audio track, info, settings,
- 5. Press Return key of remote to Stop playing and Press Return to Exit.

Photo:

- 1. Select Picture icon, then press OK button to view the picture.
- 2. Press Up, Down, Left or Right direction button to select your desired picture file and press OK to show.
- 3. While showing picture, For Previous and Next use remote 5. For obtaining better audio and video quality, suggests ♣/▶ .Press OK to display the play console.
- 4. Use OK key to see more option: Manual play, Information Play mode, Left Rotation, Right Rotation, BGM: on or off.

Music:

- 1. Select Music icon, then press OK button to listen to Music.
- 2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
- 3. The Play console includes Previous, Play/Pause, Fast backward/Fast forward,Next.

Press \(\exists \) key to see PlayList.

4. Press Return key of remote to Stop playing.

Disk:

- 1. Select Disk icon, then press OK button to choose folder.
- 2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
- 3. Press Return key of remote to Stop playing.

Attention and Frequently Asked Questions

Attention:

Some non-standard mobile storage device may not be recognized. Please change to use the standard device.

Note: For coding files, there are many kinds nonstandard coding method, so this system can not be guaranteed to support the file formats using any coding

Frequently Asked Questions:

- 1. Under the following conditions, this system cannot decode the file and the file cannot be play normally:
- -The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
- -The format of file is not matched or the file is harmed.
- 2. Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.
- 3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
- 4. The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc.,
- to use the external device which accords with USB2.0 standard.
- 6. When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
- 7. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage.

Other Information

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

- 1. Check if the fuse or circuit breaker is working.
- Plug another electrical device into the outlet to make sure it is working or turned on.
- 3. Power plug is in a bad contact with the outlet.
- 4. Check the signal source.

No color

- 1. Change the color system.
- 2. Adjust the saturation.
- Try another channel. Black-white program may be received.

Remote control does not work

- 1. Change the batteries.
- Batteries are not installed correctly.
- 3. Main power is not connected.

No picture, normal sound

- 1. Adjust the brightness and contrast.
- 2. Broadcasting failure may happen.

Normal picture, no sound

- 1. Press the Vol+ button to increase volume.
- Volume is set to mute, press the mute button to restore sound.
- 3. Change the sound system.
- 4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, dayl ight lamps a nd hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

- 1. Adjust the position and orientation of the indoor/outdoor
- 2. Check the connection of antenna.
- 3. Fine tune the channel.
- 4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed

- 1. Press the Power button to turn off TV, then press the Power button a gain to reset TV.
- 2. Unplug the power cord, then press the Power button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation

To fix the double support base on the unit by screws, the installation is completed.

Note: Illustrations below are provided for reference only and may differ from actual product appearance.



معلومات أخرى

الاشعال

شعال

ظهور بقع سوداء أو خطوط أفقية، أو تهتز الصورة. يحدث ذلك عادة بسبب تداخل نظام, الإشعال أو مصابيح النيون أو المثاقب الكهربائية أو أجهزة كهربائية أخرى.

الصورة الشبحية

تحدث الصورة الشبحية بسبب إشارات التلفاز التي تتخذ مسارين. أحدهم المسار المباشر والأخر ينعكس من المباني الطويلة أو التلال أو الأجسام الأخرى، قد يؤدي تغيير اتجاه الهوائي أو موقعه إلى تحسين الاستقبال.

تداخل الترددات اللاسلكية

ينتج عن التداخل موجات متحركة أو خطوط مائلة أو خلل في تباين الصورة في بعض الحالات. اعثر على مصدر التداخل وقم بإزالته.

في حال توقف التلفاز عن العمل

1. آضغط على زر الطاقة Power لإغلاق التلفاز، وبعدها اضغط على زر الطاقة Power مرة أخرى لإعادة ضبط التلفاز. 2. افصل سلك التلفاز عن مصدر الكهرباء، وبعدها اضغط على زر

الطاقة Power لإعادة ضبط التلفاز. ملاحظة: اذا لم يتم, حل المشكلة بعد اتباع الطريقتين أعلاه، يرجى التواصل مع مركز الخدمة المعتمد للمساعدة.

الاشتركيب القاعدةال

يكتمل التركيب مع تثبيت القاعدة ذات الدعائم المزدوجة بواسطة البراغي. مردخة قال السمو التعضيمة العابدة أخلوهم فقط الخبض التعضيم

ملاحظّة: الرسوم, التوضيحية الواردة أدناه هي فقط لغرض التوضيع والاطلاع، وقد يختلف المنتج الفعلى.

استكشاف الأخطاء وإصلاحها

يمكن إصلاح معظم، الأخطاء التي تواجهها بالتلفاز الخاص بك عن طريق الرجوع إلى قائمة استكشاف الأخطاء وإصلاحها التالية.

بدون صورة، وبدون صوت

1. تأكد من عمل الصمام الكهربائي أو قاطع الدائرة الكهربائية. 2. قم بتوصيل جهاز كهربائي آخر بالمنفذ للتأكد من أنه يعمل أو قند التشغيل ..

3. الاتصال ضُعيف بين قابس الطاقة والمنفذ.

4. تحقق مَن مصدر الْإنشارةُ.

لا توجد ألوان

1. قم بتغيير نظام الألوان.

2. قم بضبطُ التشبع اللُوني.

3. جرب قناة أخرى. قد يتم استقبال برنامج الأبيض والأسود.

وحدة التحكم عن يُعد لا تعمل

1. استبدل البطاريات.

البطاريات غير فركبة بشكل صحيح.
 مصدر الطاقة الأساسى غير فتصل.

ه. منحدر انتفاقه الاساسي غير منتخر

لا توجد صورة، الصوت طبيعي 1. اضبط السطوع والتباين

1. اطبط السطوع والنباين 2. قد يكون هناك خلل فى البث.

الصورة طبيعية، لا يوجد صوت

1. اضغط على الزر Vol+ لرفع الصوت.

2. مستوى الصوت مضبوط على وضع الكتم، اضغط على زر الكتم. لا<mark>س</mark>تعادة الصوت.

<mark>3. قم</mark> بتغيير نظام الصوت.

<mark>4. قد ي</mark>كون هناك خلل في البث.

<mark>موجِّات غير</mark> منظمة تظهر على الصورة

<mark>عادةً ما يحدَّث</mark> ذلك بسبب تداخَّل محلَّي مثل السيارات أو المصابيح. <mark>أو مجففات الش</mark>عر، اضبط الهوائي للحد من التداخل.

نقاط بيضاء وتداخل

إ<mark>ذا كان الهوائي مو</mark>ضوع في منطقة بعيدة عن إشارة التلفاز مما <mark>يؤدي إلى ضعف الإشارة</mark>، قد تظهر النقاط على الصورة، إذا كانت الإشارة ضعيفة جداً، قد يكون من الضروري تركيب هوائي خاص لتحسين الاستقبال.

<mark>1. اضبط موضع واتجاه الهوا</mark>ئي الداخلي/الخارجي.

2. تحقق من توصيل الهوائي. 3. اضبط القناة.

4. جرب قناة أخرى. قد يكون هناك خلل في البث.

www.alhafidh.com

استخدام التلفاز الخاص بك

المنطقة الذكبة







استمتع بالموسيقى: اختر هذه الميزة للدخول في وضع الصوت فقط.

تطبيق فاست كاست (Fast Cast): أحد التطبيقات التي تقوم, بربط محتوى الهاتف المتحرك مع التلفاز بسرعة، مما يتيم للمستخدمين عرض محتوى الوسائط المتعددة بسرعة على التلفاز، مثل الصور، ومقاطع الفيديو، والموسيقى، وغيرها الكثير، خطوات المتخدلة تعلية فاست كاست.

خطوات استخدام تطبيق فاست كاست:

1. قم بتحميل تطبيق فاست كاست على الهاتف المتحرك. 2. اربط الهاتف المتحرك والتلفاز بنفس شبكة الواي فاي. 3. قم بالبحث والربط مع التلفاز.

1. قد تكون هذه الوظيفة غير متاحة لبعض الأجهزة المحمولة، وأنها تخضع لشرائح دعم تنسيق الملفات.

2. توصيات بيئات العمل:

A: توصيات سرعة الشبكة المحلية على: 1M / S ~ 2M / S. B: الملفات المطلوبة: MP4 ، AVI ، TS ،FLV ، f4v ، m3u8 (تخضع لشرائح مدعومة).

مؤقت النوم; تتضمن الخيارات; إيقاف التشغيل و10 دقائق و20 دقيقة و30 دقيقة و60 دقيقة و90 دقيقة و120 دقيقة و180 دقيقة الساعة العالمية: لإضافة الساعة العالمية.

الوضع الليلي: شَغُّل للحفاظ على السطُّوع لمنع إزعاج الأخرين. سطوع نقى بمستوى منخفض.

النظام



اللغة: استخدم, الأزرار ▲ \ ▼ للتمرير عبر اللغة. البيئة: لضبط الوضع الرئيسي Home ووضع المتجر Shop. – الوضع الرئيسي: يمكنك عرض الإعدادات القياسية لأوضاع الصورة والصوت.

– وضع المتجر: يمكنك الاستمتاع بإعدادات معززة لأوضاع الصورة والصوت.

مُلاحظُة: لن يمكن الوصول إلى إعدادات قائمة الصورة عند اختيارك وضع المتجر Shop

استَعُراضُ المَّتجر: اضَّغُط لضبط العرض الإلكتروني E-show أو الملصق الإلكتروني E-sticker . ملاحظة: الملصق الإلكتروني غير متوفر في بعض الطرز.

الطاقة: ضّبط وضع الطاقة (Power). – تفعيل شبكة واي– فاي: ضبط إعدادات تفعيل شبكة واي–

حي. – وضع الاستعداد للشبكة: تفعيل الاستيقاظ من إعدادات الاشنت.

، بير رحب. مؤقت النوم: اضبط التلفاز لإيقاف التشغيل تلقائياً. التلفاز في وضع الاستعداد: حدد وقت السكون الذي يدخل فيه

التلفاز في وضع الاستعداد. المساحة المتوفرة: عرض حجم مساحة تخزين النظام وحجم. الذاكرة

الحاصرة. دليل التلفاز الذكي: انظر إلى الدليل للحصول على دليل التلفاز الذكى باستخدام, الهاتف الذكى .

المشغل الذكى

الفصل الخافس

اربط جهاز USB بمنفذ USB، وسيظهر على الشاشة اسم، ملف USB، وبعدها اضغط على OK للدخول. في حال عدم, ربط جهاز USB، لن تظهر واجهة USB على الشاشة.



الفيديو:

1. اختر ايقونة الفيديو، وبعدها اضغط على زر OK لعرض ملف لفيلم.

2. أضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم أضغط على OK لبدء التشغيل. 3. أثناء تشغيل الفيديو، اضغط على OK لعرض أزرار التحكم. يمكنك من خلال الأزرار التشغيل وإيقاف التشغيل والتقديم, والتأخير السريع.

4. استُخدم, زر xx لعرض المزيد من الخيارات؛ مقياس الصورة، النمط المتكرر، الترجمة المكتوبة، تعقب الصوت، المعلومات، والإعدادات. 5. اضغط على زر الرجوع Return لإيقاف التشغيل واضغط على Retum مرة آخرى للخروج.

الصور:

1. اختر أيقونة الصور، وبعدها اضغط على زر OK لعرض الصور. 2. اضغط على أزرار الاتجاهات أعلى واسفل ويسار ويمين لاختيار ملف الصور المطلوب، وثم اضغط على OK لبدء العرض. 3. أثناء عرض الصور، اضغط على OK لعرض أزرار التحكم. يمكنك من خلال أزرار الاتجاهات لليسار واليمين عرض الصورة السابقة واللاحقة.

4. استخدم زر OK لعرض المزيد من الخيارات: تشغيل يدوي، المعلومات، نمط التشغيل، BGM: تشغيل أو إيقاف

الموسيقى:

1. اختر أيقونة الموسيقى، وبعدها اضغط على زر OK للاستماع للموسيقى. 2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم اضغط على OK لبدء التشغيل. 3. تتضمن أزرار التشغيل الملف السابق، تشغيل/ إيقاف، تقديم سريع، تأخير سريع، وتشغيل الملف اللاحق.

4. اُضْغَط عَلَى زَرَ الرَّجوع Return لإيقاف التشغيل.

القرص:

 1. اختر أيقونة القرص، وبعدها اضغط على زر OK لاختيار ملف ما.
 2. اضغط على أزرار الاتجاهات أعلى وأسفل ويسار ويمين لاختيار الملف المطلوب، وثم اضغط على OK لبدء التشغيل.
 3. اضغط على رز الرجوء Return لإيقاف التشغيل.

التنبيهات والأسئلة الشائعة

يە:

قد لا يتم التعرف على بعض الأجهزة المحمولة غير القياسية. يُرجى استخدام الجهاز القياسي.

معلومات أخرى

ملاحظة: بالنسبة لملفات الترقيز، هناك أنواع عديدة من طرق الترميز غير القياسية، لذلك لا يمكن ضمان دعم هذا النظام لتنسيقات الملفات باستخدام, أي طريقة ترميز

الأسئلة الشائعة:

 أ في الحالات التالية، لا يمكن لهذا النظام، فك تشفير الملف ولا يمكن تشغيل الملف بشكل طبيعي:

– إذا تجاوزت معلمات الملف، مثل بكّسل الصورة ومعدل الترميز لملف الصوت والفيديو، ومعدل الإعتيان من الملف الصوتي حدود النظام.

– صُيغة الملف غير متطابقة أو أن الملف متضرر. 2. المنفذ الساخن: لا تقم بقطع الاتصال أثناء قراءة النظام أو

ع. الشقد الشاكل؛ لا فقم بقطح الانتقال الناء قراءه نقله للبيانات لتجنب تلف النظام أو الجهاز.

3. انتبه إلى مصدر الطاقة الخاص بالجهاز عند استخدام, قرص ثابت محمول أو كاميرا رقمية. إذا كان مصدر الطاقة غير كاف أو غير مستقر، فقد تواجه مشكلات اثناء التشغيل أو قد لا يعمل النظام, على الإطلاق. في هذه الحالة، يرجى إعادة تشغيل الجهاز، أو فصل الجهاز وتوصيله مرة أخرى، والتأكد من أن مصدر الطاقة على حالته الطبيعية.

4. يدعم النظام أجهزة USB1.1 و USB2.0 القياسية، مثل الأقراص υ القياسية، ومشغلات MP3، والأقراص الصلبة المحمولة، وما إلى ذلك.

. . 5. للحصول على جودة صوت وفيديو أفضل، يُقترح استخدام. الجهاز الخارجي الذي يتوافق مع معيار ..USB2.

6. عند تشغيل الفيديو بنسبة ضغط عالية، يكون من الطبيع<mark>ي</mark> ظهور الظواهر غير الطبيعية، مثل توقف الصور واستغراق ا<mark>لقائمة</mark> وقتاً طملاً،

7–بالنسبة لبعض أجهزة USB المزودة بالطاقة، مثل ال<mark>قرص</mark> الثابت بالحجم, الكبير، MP4 وما إلى ذلك، يقترم اس<mark>تخدامها مع</mark> الطاقة لتجنب نقص الطاقة الكهربائية.

استخدام التلفاز الخاص بك

استخدام إعدادات التلفاز

تسمح لك قائمة الإعدادات بضبط جهاز التلفاز حسب تفضيلاتك.

ملاحظّة: قد تكون بعض الوظائف غير متاحة في بعض المصادر, وقد لا تتوفر خيارات معينة في بعض الطرازات.



الإعداد الرقمى

إعداد الترحمة المكتوبة:

(3) اللغة المفضلة الثانية:

– اعداد النص التلفزيوني

لاختيار النص التلفزيوتي المفضل.

(2) مستوى خلط الـوَّصف الصوتي:

(1) الوصف الصوتى: يتضمن تشغيل وإيقاف.

اضغط علَىٰى ox ثم أستخدم. ﴿ أَ ۗ لَضبط المستوى. (3) نوع الصوت: يتضمن عادى، ضعاف السمع وضعاف البصر.

اضغط على ٥κ ثم استخدم ▲ \ ▼ لاختيار اللغة المفضلة

اضغط على OK ثم استخدم ▲ \ ▼ لاختيار اللغة المفضلة

لَاخْتِيارِ فَكُ شُّفِرةَ لَغَةَ الصَفَحَةَ.

(4) اللغة المفضلة الأساسية: ُ

(5) اللغة المفضلة الثانية:

– إعداد الصوت

الأساسية.

(2) اللغة المفضلة الأساسية:

– ضبط الهُوائيُّ ، الرقمي : اضغط على ok ليدء عملية البحث

التلقائي. قد يستَّغرق البَّحث بضع دقائق. أثناء هذه العملية ،

(1) ضبط التُرحمة المكتُوبة: تشمل إيقاف، ضعيف السمع.

اضغط على ٥κ ثم استخدم ▲ \ ▼ لاختيار اللغة المفضلة

اضغط على oĸ ثم استخدم ▲ \ ▼ لاختبار اللغة المفضلة

(1) النص التلَّيفزيوني المَّفضل: اضغط على ٥κ ثم استخدم▲\

(2) فك ترميز لغة الصفحة: اضغط على οκ ثم استخدم ▲ \

يمكنك ّ الضغُط على ® واختيار YES للخروج.

التلفاز. تم, تحديد كل قائمة وتفصيلها لمساعدتك في الحصول على أقصى استفادة من جهاز التلفاز. للوصول إلى نظام القائمة:

1. اضغط على ▲\▼ لاختيار العنصر المطلوب، ثم اضغط على OK لفته القائمة الفرعية المتوافقة.

2. في القائمة الفرعية، استخدم، أزرار ▲\▼ وOKg لإجراء التعديلات، أو استخدم، ▲\▼ لاختيار العنصر المطلوب، استخدم، OK للدخول والعمل وفقاً للشاشة أو الدليل على الشاشة.

3. اضغط على 👉 للعودة إلى القائمة السابقة.

إعداد القنوات



الإعداد التناظري

– <mark>ضبط تناظري تلقائي: اضغط على</mark> ox لبدء عملية البحث التلقائي. قد يستغرق البحث بضع دقائق. أثناء هذه العملية، بمكنك الضغط على OK للالغاء.

– ضبط تناظري يدوي: اضغط على OK للدخول للواجهة. اضغط على ▲\▼ لضبط البرنامج أو نظام التلفاز أو عنصر نظام الألوان، ثم اضغط على ▲\▼واختر التردد واضغط على OK لبحث القنوات.

– منظم القنوات: اختر القنوات التي تريد نقلها، ثم، اضغط على مفتاح السهم الايمن. يمكنك استخدام، مفاتيح الأسهم لتحريك القنوات، إذا كنت تريد حذف القنوات المختارة، اضغط على ، مفتاح OK.

– تسميات البرافج: لض<mark>بط تسميات البرنافج.</mark>

الصورة والعرض



استخدام التلفاز الخاص بك

ضبط الصورة:

– نمط الصورة: تحسين جودة الصورة للمحتوى العام. استخدم. ▲ \ ▼ للتنقل بين إعدادات الصورة المثبتة مسبقاً: قياسي، ديناميكي، فيلم، رياضة وشخصي.

– اعدادات متقدمة:

الوُصول إلى خيارات تحسين الصورة المتقدمة. السطوع: نضبط سطوع الصورة. اللون: لضبط تشبع اللون. الوضوء: تقنية متقدمة لتحسين الصورة. إعادة تعيين: لإعادة ضبط الصورة.

ضبط العرض

- نمط الشاشة: لتعديل حجم الصورة. استخدم. ▲\♥ للتنقل بين إعدادات الصورة المثبتة مسبقاً. شاشة تردقية لضروانه مسبقاً.

بين إحددت محورة المجهدة مسبعة. – شاشة تلقائية: لضبط نمط الشاشة تلقائياً بحسب الإشارة. تتضمن تشغيل/إلقاف.

الصوت



- ضبط الصوت: لضبط الصوت والخيارات المتعلقة بالسماعات. – نمط الصوت: تحسين حودة الصوت للمحتوى العام. استخدم.
 - ▲ \ ▼ للتنقَّل بين إعداًداتُ الصوتُ المثبتة مسبَّقاً: رياضة، قياسي ، سينما، موسيقي ، وأخيار.
- الصوّت المحيطي: ستشعر بصوت محيطي آسر عند تشغيل مصادر الصوت ۵.۱. يتّضمن تشغيل/إيقاف.
 - الإعداد المتقدم: للوصول إلى خَيارات تحسين الصوت المتقدمة.

إعداد الصوت:

اً) الصوت التلقائي: يحافظ على مستوى الصوت ثابتاً لجميع البرامج والمدخلات. يتضمن تشغيل/ إيقاف. 2) التوازن: ضبط توازن مكبرات الصوت.

2) انتوازل: طبط توازل تحبرات انطوت. 3) حجم الصوت الرقمي : يتم تطبيقه على PCM فقط. ستختلف

. مرحيدي. 5) إزاحة مستوى الصوت: ضبط المدخلات الحالية نسب<mark>ةً إلى</mark> المدخلات الأخرى.

نمط الصوت ذو الصلة:

2) المعادل: Use ﴿ ﴾ ﴿ ﴾ لاختيار المعادل. إعادة الضبط: لإعادة جميع إعدادات الصوت إلى إعدادات العمدية

موضع التلفاز: اختر كيفية وضع جهاز ال<mark>تلفاز. يتضمن الوضع</mark> المنضدي أو التعليق على الحائط.

مخرج الصّوت الرقمي: مخرج ضوئي <mark>لإشارات الصوت من مخرج</mark> الصوت الرقمي.

اصعوت الرحيدي. دولبي ديجيتال بلس: تتضمن <mark>تشغيل/إيقاف.</mark>

© Alhafidh Group Trading fzco. 2020

تشغيل الصفحة الرئيسية

ملاحظة؛ هذا الدليل هو للاستخدام العام فقط. الأشكال والرسوم التوضيحية الواردة في هذا الدليل هي للتوضيع والاطلاع فقط، وقد يكون هناك اختلاف في المنتج الفعلي. كما أنه قد لا تتوفر خيارات معينة في بعض الطرَّازات. بمكنك اختيار حميع الخّصائص من الصّفحة الرئيسية.

اضغط على 🛆 لعرض الصفحة الرئيسية.

اضغط على ▲ \▼ ﴿ \◄ لاختبار الرموز من قائمة الشاشة.

اضغط على OK لإدخال كل خيار.

اضغط على 👉 للخروج مَن القائمة.



تشغيل املاحظة: هذه الصورة للتوضيح فقط. لصفحة الرئيسية

1. مساعد غوغل (Google Assistant)؛ اضغط للتفاعل مع مساعد غوغل على التلفاز.

<mark>2. الإشعارات (Notifications): تذكرك بالمعلومات الهامة للنظام، مثل انخفاض مساحة القرص، أخطاء تسحيل الدخول في غوغل أو</mark> أخطاء الحساب، مشاكل ربط الشبكة، الخ.

3. الإدخال (Input)؛ اختيار فصدر الإدخال.

4. الإعدادات (Settings): الوصول إلى إعدادات النظام.

<mark>5. التطبيقات (Apps</mark>): عرض قائمة التطبيقات المفضلة أو الوصول إلى فركز التطبيقات.

6. اليوتيوب (YouTube): تَصفَع هذا التَطييق لمشاهدة محموعة واسعة من مقاطع الفيديو عبر الإنترنت.

7. المحتَّوي المميز (Featured): عرض قائمةً المحتويات المميزة من أفلام غُوغل بلاي والتلفاز.

ولاحظة:

1ً. قد تخت<mark>لف وظائف ومحتوبات الصفحة</mark> الرئيسية (Home Page) باختلاف البلد أو طراز التلفاز.

2. قُبل استُخدام وظائف الشبكة في الصفحة الرئيسية مثل تطبيقات الشبكة وما إلى ذلك، يرحى ربط التلفاز بالشبكة أولاً.

حقوق التأليف والنشر للأبقونات قملوكة من قبل فزودي التطبيقات.

الفصل الرابع

الوصول إلى القنوات

يمكن استخدام الأزرار لأعلى أو لأسفل ✔ ٨ لتغيير القناة. أو افتح ... لوحة المفاتيح الافتراضية واخْتر قناة التبديل الرقمية.

مشاهدة الحهاز المتصل

اضغط على SOURCE ثم اضغط على ▲ \ ▼ لاختيار المصدر المطلوب، وبعدها اضغط على OK للتأكيد.



الصوت

التحكم بالصوت: اضغط على أزرار VOL +/– في وحدة التحكم عن يُعد أو الأزرار المتوافقة على التلفاز لزيادة أو خفضٌ مستوى الصوت. كتم الصوت: اضغط على الزر 🎠 لكتم الصوت مؤقتًا. اضغط على هذا الزر مرة أخرى أو زر vol + لاستعادة الصوت.

استخدام قائمة الوصول السريع

ملاحظة؛ قد تكون بعض الوظائف غير متاحة في بعض المصادر. وقد لا تتوفر خبارات معينة في يعض الطرازات.

يستعرض هذا القسم القوائم والإعدادات المتاحة في التلفاز، ويحتوى على عرض وتفصيل لكل قائمة لمساعدتك على الاُستفاَّدة منَّ كافةً مزايا الجَهاز. للدخول إلى نظام القائمة يرجى إتباع الخطوات التالية:

1. في وضع التلفاز، اضغط على 🗲 في وحدة التحكم عن نُعد لعرضٌ قائمة الوصول السريع.

2. اضغط على ▲ \ ▼ لاختيار العنصر المطلوب، ثم اضغط على

OK لفتح القائمة الفرعية المتوافقة. 3. في الفائمة الفرعية، استخدم الأزرار ◄/◄ و OK لإجراء التعديلات، أو

استذده ▲ \ ▼ لاختبار العنصر المطلوب، واستذدم M للدخول دذ ول والتشغيل وفقاً للشاشة أو الدليل على الشاشة.

العرض والصوت

المعلومات: لعرض معلومات التلفاز. ضبط الصورة؛ لتعديل نمط الصورة أو للإعدادات المتقدمة. الشاشة: لتعديل حجم الصورة. ضبط الصوت: لُضبط وتعديلُ الصوت. مكبرات الصوت: لإدخال إعدادات مكبرات الصوت الخاصة بالتلفاز. إعدادات HDMI: لإعداد أحهزة HDMI لتحكم سلس.

التلفاز

البحث عن القنوات: لعرض خبارات البحث عن القنوات التماثلية أو

منَظمُ القنوات: قم باختيار القنوات التي تريد نقلها، ثم اضغط على مفتاح السهم الأيمن. يمكنك استخدام

مفاتيه الأسهم لتحريك القناة. إذا كنت تريد حذف القناة المختارة<mark>،</mark> اضغط على OK .ji

التشغيل العام

ربط الشبكة

للدخول إلى شبكة الإنترنت، يجب أن تكون مشتركاً بخدمة الاتصال عريض النطاق وعالي السرعة من موفّر خدمة الإنترنت الذي تتعامل معه.

يمكن ربط التلفاز بشبكة الإنترنت المنزلية من خلال إحدى الطريقتين:

- الاتصال السلكى: باستخدام، وصلة RJ45 (LAN) الموجودة على اللوحة الخلفية.
 - الاتصالُ اللاسلكُّوي: عبر وصل التلفاز بشبكتك اللاسلكية المنزليَّة.

ملاحظة: الإرشادات التالية هي مجرد الطرق المعتادة لربط التلفاز بالشبكات السلكية أو اللاسلكية. قد تختلف طريقة الربط تبعاً لإعدادات الشبكة الفعلية. يرجى العودة إلى موفر خدمة الإنترنت للإجابة على أي أسئلة حول شبكتك المنزلية.

e

إنترنت

حهاز التلفاز

اتصال لاسلكى فدفج

مودم

الربط بشبكة سلكية

لربط التلفاز بشبكة سلكية، يرجى اتبّاع الخطوات التالية:

- 1. يجب ضمان توفر ما يلى:
- كابل إيثرنت طُويلُ بما يُكفى للوصول إلى التلفاز. • كابل إيثرنت طُويلُ بما يُكفى للوصول إلى التلفاز.
 - راوتر أَو فودم يتضمن منفذ إيثرنت.
 - اتُصالُ عالي السرعة بالإنترنت.
 - منفذ ۗإيثرنتُ (LAN) في الجزء الخلفي من التلفاز.
- قم بوصل كابل الإيثرنت بالراوتر ومنّفذ الإيثرنت في الجزء الخلفي من التلفاز.
- ٣. استَخَّده ۖ قَائَمَة الشيكة Network لضبط إعدادات التلفاز.

الربط بشبكة لاسلكية

لربط التلفاز بشبكة لاسلكية، يرجى اتبًاع الخطوات التالية:

- 1. يجب ضمان توفر ما يلى:
- راوتر بيث إشارة لاسلكية عالية السرعة.
 - ا<mark>تصا</mark>لّ عالى السرعة بالإنترنت.
- 2. استخدم قائمة الشبكة Network لضبط إعدادات التلفاز.

الإعداد الأولي



الهند نوفر إليك الوقت المحلي والمناخ اندونسيا والمزيد من المعلومات. العراق امرائيل المنطقة: اليابان البناد المنطقة:







الإعداد الأولي للتلفاز

يتضمن الإعداد الأولي للجهاز تحديد جميع الإعدادات اللازمة للتمكن من البحث عن جميع القنوات التي يمكنك استقبالها وتخزينها.

تَّأَكَدُ مَن تَشْغَيْلَ التَّلْمَازُ، واتبعُ جميع الخطوات بالترتيب كما هو موضح.

ملاحظةً: إذا نتج عن البحث عن القنوات ظهور القليل من القنوات فقط، فقد يكون ذلك بسبب سوء البث، ولهذا فإن ضمان جهة التصنيع لا يغطي هذا البند. لا تتحمل جهات التصنيع فشل البث أو سوء جودته في بعض المناطق.

عند تشغيل الجهاز للمرة الأولى، ستظهر شاشة الإعداد الأولي، التي ستوجهك خلال عملية الإعداد الأولي. اتبع التعليمات على الظاهرة على الشاشة لإكمال عملية الإعداد الأولى، فيما يلى بعض الأمثلة.

الخطوة 1: البيئة يرجى الضغط على ▲\▼ لتحديد البيئة الخاصة بك. ثم, اضغطُ على زر OK للانتقال إلى الخطوة التالية. الوضع الرئيسي Home: يمكنك عرض الإعدادات القياسية لأوضاع الصورة والصوت. وضع المتحر Shop؛ يمكنك الاستمتاع باعدادات معززة

لأوضاع الصورة والصوت. ملاحظة: لن يمكن الوصول إلى إعدادات قائمة ا<mark>لصورة</mark> عند اختيارك وضع المتجر Shop.

الخطوة 2: أين تقيمً؟

www.alhafidh.com

الخطوة الثالثة:

يرجى الضغط على **▲ \▼** لتحديد البيئة بلدك<mark>/ منطقتك.</mark> اضغط على زر OK للانتقال إلى الخطوة <mark>التالية.</mark> الخطوة 3: الشروط والأحكام

استخدم زر ▲\▼ لقراءة الشروط والأحكام <mark>ثم اضغط</mark> على زر OK للتأكيد والانتقال إلى ا<mark>لخطوة التالية.</mark> الخطوة 4: تثبيت القنوات

استخدم الأزرار▲\▼لتحديد وضع ا<mark>لموالف: هوائي، كابل أو</mark> ستلايت، النوع: رقمي، تناظري<mark>، الجميع، ثم اضغط على زر</mark> OK للتأكيد والانتقال إلى الخطوة التالية.

ok تلاحيد والانتقال إدى الخطوة النائية.
الخطوة 5: يرجى التحقق <mark>من الإعدادات</mark>
عند الانتهاء من الإعدادات، تظهر واجهة [يرجى التحقق
من الإعدادات] على الشاشة، ثم اضغط على زر OK
للانتهاء من الإعدادات الأولية. يمكنك العودة إلى
الخطوة السابقة وإجراء أي تغييرات باستخدام زر←

راوتر

____ طلفذ إيثرنت في اللوحة الخلفية

مەدم

NETFLIX De YouTub

وظائف وحدة التحكم عن بُعد

ن أغلب وظائف التلفاز متاحة على القوائم التي تظهر على الشاشة. يمكن استخدام جهاز التحكم عن بعد الذي بأتي مع هذا التلفاز للتنقّل بين القوائم ولضبط حميع الإعدادات العامة.

> POWER (زر التشغيل/ الإغلاق) لتشغيل أو إغلاق التلفاز.

∅

(◄◄ ▼▲)<>>∧ (أزرار الاتجاه للأعلى والأسفل واليسار واليمين) لاختيار العناصر المختلفة في نظام لقائمة وضبط مفاتيح التحكم بالقائمة. يمكن استخدام أزرار ها للتنقل بيَّن القائمة

الحالية للقنوات.


للذهاب للصفحة الرئيسية للتلفاز الذكى.

للدخول للوحة المفاتيح الافتراضية.

لرفع أو خفض مستوى صوت التلفاز.

يذهب إلى الصفحة الرئيسية نيتفليكس. **NETFLIX**

(Mic) اضغط للتفاعل مع خاصية مساعد غوغل Google Assistant على التلفاز. •:



هذا جهاز تحكم بلوتوث، وقبل استخدامه، يرجى إقرانه مع التلفاز أولاً. يمكن الاطلاع على الخطوات التالية:

الخطوة 1: اضغط على زر 🛆 لعرض الصفحة الرئيسية. الخطوة 2: اضغط على زَر • ◘ لعرضُ إقران جهاز التحكم عن بعد "RC pairing".

الخطوة 3: اتبع صفحة فلاحظات الضبط "setting tips page"، اضغط OK و 🛆 في

الخُطوة 4: ستعرض الشاشة "Pairing..."، وبعد انتهاء الإقران ستعرض الشاشة

ملاحظة: اذا انتظرت أكثر من دقيقتين ولم يحدث الإقران، يرجى إعادة الخطوات أعلاه لإحراء عملية الإقران مرة أخرى.

إذا رغبت بعدم إقران جهاز تحكم البلوتوث، يمكن اتباع الخطوات التالية:

الخطوة 1: اضغط على زر 🛆 لعرض الصفحة الرئيسية.

الخطوة 2: اضغط على أزرار ح∕▶ ▼/▲ لاختيار 🏠 ، وبعدها اضغط ٥κ للدخول. الخطوة 3: اضغط على زر ▼ لاختيار أجهزة التحكم عن بعد & الملحقات "& Remotes Accessories" وبعدها آختر اسم جهاز تحكم البلوتوث للدخول للخطوات التالية. الخطوة 4: اضغط على عدم الإقران وبعدها اضغط على OK.

© Alhafidh Group Trading fzco, 2020

()

郊

 \leftarrow

≡

<u>w</u>



لكتم الصوت واستعادته مرة أخرى.

لعرض قائمة نظام التلفاز.

SMART لعرض واحهة وظيفة SMART.

لعرض واجهة اختيار المصدر. **₽**

لتأكيد الاختيار. ОК

للخروج من القائمة والعودة للقائمة السابقة.

قائمة الوصول السريع.

□ +/-

لعرض الصفحة الرئيسية ليوتيوب YouTube. YouTube

(تتوفر هذه الخاصية فقط عندما يكون ربط الشبكة طبيعي.)





التشغيل

اتبع التعليمات الموضحة في هذه الصفحة حول كيفية تشغيل حهاز التلفاز وجهاز التحكم عن بعد الخاصين بك قبل الانتقال للصفحات التالية التي تتعلق بتعليمات ضبط القنوات.

1. ركِّب بطاريتين في وحدة التحكم عن بُعد.

حتىاطات استخدام البطاريات:

– استخدم أنواع البطاريات المحددة فقط.

– تأكد من ضبط الأقطاب.

لا تخلط بين البطاريات الحديدة والمستخدمة.

– لا تستخدم البطاريات القابلة لإعادة الشحن.

– لا تعرض البطاريات لحرارة مفرطة مثل أشعة الشمس أو النار، ولا تلقها في النار أو تعد شحنها أو تحاول فتحها لأن ذلك قد يؤدي الي حدوث تسریب أو انفجار.

– انزع البطاريات من وحدة التحكم عن بُعد إذا لم تكن ستستخدمها لفترة طويلة.

2. قم بتوصيل كابل الطاقة بالتلفاز أولاً، ثم بمقبس الطاقة الرئيسي.

(ملاحظةُ: إذا كَان كَابِل الطاقة خارجاً مَن التلفاز، فيرجَى توصيله بمقبس الطاقة الرئيسي فقط).

• إذا كان حهاز التلفاز الخاص بك موصولاً بحهاز التبار المتناوب AC

يجب توصيل جهاز التلفاز فقط بمصدر طاقة تيار متناوب. يجب عدم توصيله بمصدر طاقة تيار مستمر. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسي تحت أي ظرف ممكن تجنباً لخطر حدوث صدمة كهربائية.

• إذا كان حهاز التلفاز الخاص بك موصولاً بحهاز التبار المستمر DC

بحب توصيل حهاز التلفاز فقط بمصدر طاقة تبار مستمر. بحب عدم توصيله بمصدر طاقة تبار متناوب. إذا كان القابس فنفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسي تحت أي ظرف ممكن تجنباً لخطر حدوث صدمة كهربائية.

3. قم بتوصيل الهواثي الخارجي بمنفذ الهوائي الداخلي ANTENNA IN الموجود خلف التلفاز.

4. عندما تكون الكهرباء موصولة سيظل التلفاز في وضعية التشغيل، أو وضعية الاستعداد.

ملاحظة: في بعض الطرازات، يجب الضغط على زر الَّطاقة لتَشغيل الْتَلْفَازُ.

إذا أضاء مؤشّر الكهرباء، فإن الجهاز يكون في وضعية الاستعداد للتشغيل. اضغط على زر 😃 على جهاز التحكم، عن بعد، أو التلف<mark>از</mark> لتشغيل الحهاز.

الاغلاق

• لتشغيل التلفاز في وضعية الاستعداد، اضغط على زر 🖰 على جهاز التحكم عن بعد. سيظل جهاز التلفاز يعمل، ولكن <mark>من دون أن</mark> يستهلك الكثير من الطاقة.

> • لإغلاق التلفاز، اسحب المقبس الرئيسي من مصدر الكهرباء الرئيسي. ملاحظة: في بعض الطرازات، يجب الضغَّط على زر الطاقة لإغلاق التلفَّاز.

مقدمة

USB

OUT

5

المنافذ

ملاحظة: قد يختلف موقع المقابس وأسمائها على التلفاز وفقاً للطراز، وقد لا تتوفر بعض المقابس في طرازات معينة.

منافذ USB (مدخل)

يمكن استخدام هذا المنفذ لتوصيل جهاز USB. ملاحظة: يختلف عدد منافذ USB في التلفاز بحسب الطراز.

> LAN LAN

قانس RJ45 لربط جهاز التلفاز بموديم خارجي أو أداة الوصول

منفذ SATELLITE IN (مدخل)

SATELLITE يمكن استخدام هذا المنفذ لربط رسيفر الستلايت.

منفذ توصيل الهوائى ANTENNA IN (مدخل) ANTENNA IN يمكن استُخدام هذا المنفذ لتوصيل الهوائي الخارجي أو

التوصيل بشبكة تلفاز الكابل.

SPDIF يمكن استخدام هذا المنفذ لتوصيل التلفاز بمستقبل

صوتى متوافق.

منفذ HDMI (مدخل)

نُستخدم منفُذ HDMI (واجهة متعدد الوسائط عالى الوضوع) لتوصيل الحاسوب الشخصى ذو بطاقة HDMI رسوميات متوافقة أو توصيل مشغلات أقراص DVD معينة، أو يحهاز رقمي متوافق لفك شفرات القمر الصناعي. يوفر هذا المنفذ وصلة رقمية غير مضغوطة تنقل بيانات الفيديو

والصوت من خلال كابل موصل صغير متكامل.

منفذ السماعة EARPHONE (مخرج) EARPHONE

بمكن استخدام هذا المنفذ لربط السماعات والاستماع للصوت الصادر من حماز التلفاز.

فلاحظة: ضغط الصوت العالق فن السماعات قد يحدث

ضرر في الأذن أو فقدان السمع. ُ

بمكن استخدام منافذ AV IN لربط حهاز التلفاز بمحموعة من الأُجهزة، بما في ذلك أجهزة الفيديو، والفيديو الرقمي، · والديكودر، وريسيفر الستلايت، ومشغّل DVD، والألعاب. أ وبعمل فنفذ الفيديو VIDEO IN عكس توصيل الفيديو.

منافذ الصوت AV (مدخل) AV IN

مقدمة

翼

6

LIST

Ð

₩

O Lang/

▶ II **▶**▶

NETFLIX

■ YouTube

ALHAFIDH

0

OK

وظائف وحدة التحكم عن يُعد

تظهر معظم خصائص التلفاز في القوائم على الشاشة. تُستخدم وحدة التحكم عن نُعد المتوفرة مع الحهاز للتنقل بين القوائم وضيط حميع الإعدادات العامة.

ملاحظة: الصور والرسومات الـواردة في هذا الدليل هي لغرض الاطلاع والتوضيح فقط، وقد تختلف عن المنتج الفعلي. على سبيل المثال، بعض الوظائف قد لا تكون متوفرة في طرازات معينة."

لإدخال أرقام القنوات.

لكتم الصوت واستعادته مرة أخرى. 🔏 كتم الصوت لتشغيل التلفاi أو ابقاف تشغيله.

الأزرار 9-0

لعرض قائمة القنوات المفضلة. لعرض قائمة القنوات.

للتحكم بدرجة الصوت. للتنقل بين القنوات.

للوصول إلى وضى التلفزيون للدخول لواحهة وظيفة SMART.

> لعرض الصفحة الرئيسية. HOME 🗅

قائمة الوصول السريع. MENU =

لتأكيد الاختيار.

للتنقل بين القوائم، واختيار العناصر المختلفة في نظام القائمة، واختيار الصورة السابقة أو اللاحقة، واختبار الأغنية أو الفيديو في وظيفة USB.

للتنقل بين القوائم، وضيط الوطائف وتُغيبر القيم. يمكن أيضاً استخدام ▶

لعرض القائمة الفرعية المتوافقة.

للرحوع للقائمة أو الواحهة السابقة، وللخروج من تطبيق ما.

لعرض واحهة اختبار المصدر.

للرحوع للقائمة أو الواحهة السابقة، وللخروج من تطبيق ما. لاختبار نمط الصورة.

لعرض قائمة نظام التلفاز.

لعرض معلومات البرنامج، إن توفرت.

لتشغيل أو إغلاق دليل البرامج الإلكتروني في مصدر تلفاز DTV.

لاختيار نوع الصوت المتوفر.

للدخول إلى وضي USB

لعرض أو وقف عرض النص التلفزيوني. لاختيار لغة النص المترحم (الحاشية).

لاختبار الوظائف أو صفحات النص التلفزيوني.

للتقديم أو التأخير السريع.

للبدء بالتشغيل. لـوقف التشغيلُ مؤقتاً.

لاختيار الملف السابق أو اللاحق للصور والأغ<mark>اني ومقاطع الفيديو.</mark>

لوقف التسغيل.

لتسحيل البرامج ضمن قصدر DTV. يذهب إلى الصفحة الرئيسية ن<mark>يتفليكس.</mark>

لعرض الصفحة الرئيسية ليوتيو<mark>ب YouTube.</mark>



© Alhafidh Group Trading fzco. 2020

الفصل الأول مقدمة

الاحتىاطات

يرجى قراءة جميع التعليمات قبل تشغيل الجهاز. يرجى الاحتفاظ بهذه التعليمات للرجوع إليها مستقبلاً عند الحاحة.

المنتج

- لا تسد فتحات التهوية في الغطاء الخلفي أو تغطيها. • لا تدفع أي جسم داخل الجهاز من خلال فتحات لوحة التلفاز لأنها قد تمس أجزاءً ناقلة للتيار أو قد تسبب قصراً في الدائرة الكهربائية مؤديةً إلى حدوث حريق أو صدمة كهربائية أو تلف الحهاز
- لا تحاول فتحة لوحة التلفاز لانها قد تتلف، ليس هناك أي أجزاء داخلية يمكنك إصلاحها بنفسك، ارجع إلى فني مؤهل فيما يتعلق بجميع أعمال الصيانة.
- . • لا تلمَس سُطح الشَّاشةُ بأصابِعك لأنها قد تخدش شاشة التلفاز أو تشوهها.
- لا تضُعُ ضغُطاً كبيراً على شاشة التلفاز، حيث قد يسبب أضراراً بالغة لها.

الكهرباء والتوصيل

- افصل الكهرباء عن الجهاز في الحالات التالية:
- في حال عدم استخدام الجهآز لفترة زمنية طويلة. – في حال تلف سلك الكهرباء أو منفذ الطاقة/القابس.
- تي حدى التعليمات التالية لتركيب المنتج وصبط إعداداته. اضبط جميع عناصر التحكم المذكورة في تعليمات التشغيل لأن أي إعدادات غير سليمة لأدوات التحكم الأذرى قد تتلف الجهاز. وفي حال حدوث ذلك، افصل الكهرباء عن الجهاز واتصل بمركز
 - <mark>الخدمة</mark> المعتمد. <mark>– في ح</mark>ال تعرض الجهاز لأي اصطدام أو في حال سقوطه <mark>مؤدنا إلى</mark> تلفه.

<mark>سلك الك</mark>هرباء وكابل الإشارة

- لا تضع أو تدحر<mark>ج</mark> أي شيء فوق سلك الطاقة وكابل الإشارة. • احرص على حماية سلك الطاقة وكابل الإشارة من دهسه
 - لا تزد الحمل على سلك الكهرباء أو منفذ الطاقة.
 - لا تعرض سلك الكهرباء وكابل الإشارة لأي رطوبة.

ىىئة الاستخدام

- لا تضع الجهاز على عربة أو قاعدة أو طاولة فهزوزة.
 - ضع الجهاز في مكان به تهوية جيدة.
- لا تستخدم الجّماز بجانب الأماكن الرطبة والباردة. احرص على حماية الجهاز من الحرارة الزائدة.
 - احفظ الجهاز بعيداً عُنُ أشُعة الشمس المباشرة.
 - يجب ألا يتعرضُ الجهازُ للتقطير أو الرشَّ، أو ألا تُوضع عليه أجسام ممتلئة بالسوائل، فثل المزهريات.
 - لا تستخدم الحهاز بحانب الأفاكن المتربة.

التنظيف

- انفض الغبار عن الجهاز بمسح الشاشة واللوحة بقطعة قماش طرية ونظيفة باستخدام فنظف سائل خاص.
 - لا تضَّغط على الشَّاشَّة بقوة عند تنظيفها.
- لا تستخدم المياه أو أي منظفات كيمياً ثية لتنظيف الشاشة . لأن ذلك قد يتلف سطح شاشة التلفاز.

تثبيت التلفاز على الحائط

تحذير: تتطلب هذه العملية شخصين.

لضمان التركيب الآمن، يرجى مراعاة ملاحظات السلامة التالية:

- تحقق من قدرة الحائط على تحمل وزن التلفاز وحامل التثبيت.
 - اتبع تَعليمات التثبيت القادمة مع حافل التثبيت.
 - يجب تركّيب الجهازّ رأسياً على الحائط. ۗ
- احرص على استخدام البراغي المناسبة فقط لمادة تكوين الحائط.
- احرص على وضع كابلات التلفاز في مكان بعيد عن حركة الاقدام لتحنب التعثر فيها.

جميع تعليمات السلامة لأجهزة التلفاز الأخرى الخاصة بنا تنطبق على هذا الطراز.

ملاحظة:

www.alhafidh.com

الرسومات المبينة في هذا الدليل هي لغرض التوضيح فقط.

مقدمة

أزرار التلفاز

ملاحظة: قد يختلف موقع الازرار الوظيفية وأزرار الطاقة وأسمائها على التلفاز وفقاً لطراز الجهاز. كما أن بعض الأزرار قد لا تكون موجودة فى طرازات معينة.



PROGRAM UP/DOWN ji -1

البحث في قائمة القنوات للأعلى/ للأسفل. يعمل هذان الزران في نظام القائمة كزري توجيه للأعلى والأسفل في وحدة التحكم عن بُعد وزرى تحكم لضبط القائمة.

VOLUME UP/DOWN ர் -2

رفع أو خفض فستوى الصوت. يعمل هذان الزران في نظام القائمة كزري توجيه لليمين واليسار في وحدة التحكم، عن بُعد ولضبط التحكم في القائمة.

MENU / **७** յj −3

يعمل على تشغيل التلفزيون أو وضع الاستعداد، بعد تشغيل الجهاز، قم بضغطة قصيرة لتأكيد الاختيار و بضغطة طويلة لفتح قائمة التصف<mark>ح</mark>

ملاحظة: قد يختلف موقع الأزرار الـوظيفية وأزرار الطاقة وأسمائها على التلفاز وفقاً لطراز الجهاز.

المحتويات

الفصل الأول: مقدمة

3	الاحتياطات
3	المنتَّج
3	الكهرباء والتوصيل
3	الكهرباء والتوصيل
3	بيئة الاستخدّام ُ ُ
3	
3	النظيف
=	
ر	أزرار التلفاز
2	وطائف وحده التحكم عن بعد
/	رررائف وحدة التحكم عن بُعد
	ala II (1.4.20 II. a.10 II. 1.4.4 II
	الفصل الثاني: التشغيل العام
3	التشغيل،
3	الإغلاق
ā	رجمي برطا شركة
'n	ربط الشبكة
9	المفقار = الإعتباد الدولاني

الفصل الثالث: الخصائص الرئيسية

تشغيل الصفحة الرئيسية

الفصل الرابع: استخدام التلفاز

2	 الوصول للقنوات
12	 مشاهدة أحهزة موصولة
12	 الصوت
12	 · ــــــــــــــــــــــــــــــــــــ
12	 الصوت
_	التلفاز
13	.معصر استخدام اعدادات التلفاز
เฉ	 استخدام إعدادات انتشار
14	عبية التدوات
i 4	الصوت
15	 ,
15	الهنطقة الذكية
را	 النظام

الفصل الخافس: فعلوقات أخرى

16	***************************************	المشغل الذكي
16		التنبيهات والأسئلة الشائعة
17		استكشاف الأخطاء واصلاحها
17		ترکیب القاعدة

Manufactured under license from Dolby Laboratories.
Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Models: 50Q8 55Q8 65Q8

© Alhafidh Group Trading fzco. 2020 Reproduction in whole or in part is strictly prohibited