



LED TV

دليل المستخدم

المو<mark>د</mark>يل:

43S2 ⁴

49S2 ⁴

55S2 ⁴

الر<mark>جاء قراءة هذا الدليل بعناية قبل تش</mark>غيل الجهاز، و احتفظ به للرجوع إليه فستقبلاً.

هذه التصاميم و الم<mark>واصفات عرضة للتغيير بهدف إدخال</mark> تحسينات عليها و <mark>ذلك دون إشعار مسبق.</mark>

1809001 (B



User's Manual

Model:

4 43S2

⁴ 49S2

△ 55S2

Please read this manual carefully before operating your set.

Retain it for future reference.

Designs and specifications are subject to change for improvement without prior notice.

ISO9001 (B







Models: 43S2

49S2

55S2

Table of Contents

© Alhafidh Group Trading fzco. 2019
Reproduction in whole or in part is strictly prohibited

Chapter 1: Introduction

Precautions	2
Product	2
Power and Plug	2
Power Cord and Signal Cable	2
Use Environment	2
Cleaning	Z
Hanging the TV Set on the WallButtons on the TV	∠ د
Sockets	
Remote Control Functions	
How to Pair Remote Control with the TV	
Chapter 2: General Operation	
Switching on	6
Switching off	
Network connection	
	,
Chapter 3: Home Features	
Homepage Operation	Ω
Tonepage operation	
Chapter 4: Using your TV	
Accessing channels	9
Watching connected devices	9
Volume	
Using Quick Access Menu	9
Display & Sound	
TV	
Using TV Settings	
Channels Setup	10
Picture & Display	11
Sound	11
Smart Zone	12
System	
-,	
Chapter 5: Other Information	
Smart Player	13
Attention and Frequently Asked Questions	
Troubleshooting	
Base Installation	
Dase instance of the second of	

Introduction

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Product

Do not block or cover the ventilation openings on the back cover.

Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.

Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.

Do not touch the screen surface with fingers as this may scratch or mar the TV screen.

Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

Power and Plug

Unplug the set under the following conditions:

- If the set will not be used for a long period of time.
- If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
- If the set is subject to impact or has been dropped to have the cabinet damaged.

Power Cord and Signal Cable

Do not allow anything to rest on or roll over the power cord and the signal cable.

Protect the power cord and the signal cable from being trampled.

Do not overload the power cord or the power outlet.

Do not expose the power cord and the signal cable to moisture.

Use Environment

Do not place the set on an unstable cart, stand, or table.

Place the set on a place that allows good ventilation.

Do not use the set near damp, and cold areas. Protect the set from overheating.

Keep the set away from direct sunlight.

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Do not use the set near dust place.

Cleaning

Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.

Do not apply excessive force to the screen when cleaning.

Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen

Hanging the TV Set on the Wall

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:

Check that the wall can support the weight of the TV set and wall mount assembly.

Follow the mounting instructions provided with the wall mount.

The TV set must be installed on a vertical wall.

Make sure to use only screws suitable for the material of the wall.

Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Note:

Illustrations within this publication are provided for reference only.

Introduction

Buttons on the TV

Note: The location and names of the function buttons and power button on the TV may vary according to TV model.

And some buttons may not available for some models.







Scans up/down through the channel list. In the menu system, they act like the up/down direction buttons on the remote and adjust menu controls.

2. **∢**≥ button

Increases/decreases the volume. In the menu system, they act like the right/left direction buttons on the remote and just menu controls

3. ७/≣ button

© Alhafidh Group Trading fzco. 2019

Turns the TV on or standby. The TV is on, short press it to confirm items, and long press it, brings up the NAV menu.

Note: The location and names of the function buttons and power button on the TV may vary according to TV model.

Introduction

USB

Sockets

Note: The location and names of the sockets on the TV may vary according to TV model, and some sockets may not available for some models.

USB sockets (input)

These sockets can be used to connect an USB device.

Note: The number of USB sockets on the TV may vary according to TV model.

LAN

RJ45 plug for connecting to external modem or network access equipment.

ANTENNA IN (RF IN)

RF IN socket (input)

Lets you connect a coaxial cable to receive the signal from your antenna, cable or box.

SPDIE

SPDIF socket

This output can be used to connect a compatible digital audio receiver.

HDMI socket (input)

HDMI

The HDMI (High-Definition Multimedia Interface) socket can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.

HEADPHONE

HEADPHONE socket (output)

Allow you to connect earphones to listen to the sound coming from the TV. Note: Excessive sound pressure from earphones can cause hearing loss.

AV audio + video mini sockets (input)

www.alhafidh.com

Mini AV IN

The AV IN sockets can be used to connect a range of equipment, including video recorders, camcorders, decoders, satellite receivers, DVD players, or games consoles. The VIDEO IN socket provides composite video connection.

Introduction



Remote Control Functions

Most of your television's functions are available via the menus that appear on the screen. The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings.

POWER () (On/Off button) Turns the TV on or off.

> 刻 To mute and un-mute the sound.

*ξ*όλ Enter into Using TV Settings menu.

To enter SMART function interface.

₽ To enter source selection interface.

▲▼◀▶

(up, down, left and right direction buttons) Highlights different items in the menu system and adjusts the menu controls. ▲ ▼ buttons can up or down to through the current channel list under TV source.

OK Confirms your selection.

Exit the menu and return to the previous menu. \leftarrow

Goes to the smart TV homepage. =Enter into Quick Access Menu.

w To Enter into virtual keyboard.

₵ +/-Increases or decreases the TV's volume.

YouTube Goes to the YouTube homepage.

Goes to the Google Play store homepage.

(Mic)Click to interact with Google Assistant of the TV. (Available only when the network connection is normal.)





How to Pair Remote Control with the TV

This is a Bluetooth remote control, and before using it, please pair it with the TV firstly. The following steps are for your reference:

Step 1: Press \triangle button to enter the home page.

Step 2: Press • button to enter the "RC pairing".

Step 3: Follow the "Settings tips page," Press OK and together.

Step 4: The screen will display "Pairing...", Pair finished the screen will

display "Success!".

NOTE: If you wait more than 2 minutes and it can't pair,

please repeat the above steps for pairing again.

If you want to unpair the Bluetooth remote, As follow:

Step 1: Press button to enter the home page.

Step 2: Press $\blacktriangle/\blacktriangledown \blacktriangleleft/\blacktriangleright$ to choose \bigodot , and then press OK to enter.

Step 3: Press ▼ to select "Remotes & Accessories" and then to chooe

the Bluetooth remote name to enter next steps.

Step 4: Press unpair and then choose OK button.

www.alhafidh.com

General Operation

Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two batteries in the remote control.

Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.
- Connect the power cable FIRST to the television, THEN to a mains socket. (Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)
- If your TV is connected to an AC supply
 Your TV set s hould only be connected to an AC supply. It must not be connected
 to a DC supply. If the plug is detached from the cable, do not, under any
 circumstances, connect it to a mains socket, as there is a risk of electric shock
- If your TV is connected to a DC supply
 Your TV set should only be connected to a DC supply. It must not be connected
 to a AC supply. If the plug is detached from the cable, do not, under any
 circumstances, connect it to a mains socket, as there is a risk of electric shock.
- 3. Connect an outside aerial to the ANTENNA IN socket at the back of the TV set.
- 4. When powered on, the TV will be turned on directly or be in standby.

 Note: For some models, switch the TV on by pressing the power button

If the power indicator lights up, the TV set is in standby mode. Press the () button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the Obutton on the remote control
 or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.
 Note: For some models, press the power button to switch off the TV set.

General Operation

Network Connection

To access the Internet, you must subscribe to high speed broadband Internet service with your Internet service provider (ISP).

Your TV can be connected to your home network in two ways:

- · Wired, using the RJ45 (LAN) connector on the back panel
- · Wireless, using the internal wireless and your home wireless network

Note: Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP.

Connecting to a wired network


To connect to a wired network:


- 1. Ensure you have:
- An Ethernet cable long enough to reach your TV
- A router or modem with an available Ethernet port
- · A high-speed Internet connection
- · An Ethernet (LAN) port on the back of the TV
- 2. Connect your Ethernet cable to the router and to the Ethernet port on the back of the TV.
- 3. Use the **Network** menu to configure the TV.

Connecting to a wireless network

To connect to a wireless network:

- 1. Ensure you have:
 - A router broadcasting a high-speed wireless signal
 - · A high-speed Internet connection
- 2. Use the Network menu to configure the TV.

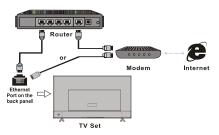



© محموعة الحافظ للتحارة .2019 fzco

الأستنساخ كليا أو جزئيا فمنوع منعا باتا

Home Features

Homepage Operation

Note: This manual is for common use. Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. And for some models, certain options are not available.


You can select all the features from homepage.

Press to display homepage.

Press $\triangle/\nabla/\triangle$ to select icons from the screen list.

Press OK to enter each option.

To exit the menu, press

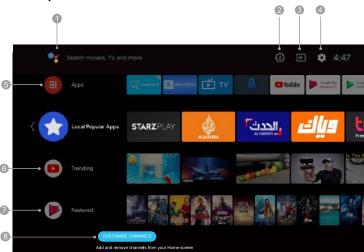

Note: The picture is only for reference

- 1. Google Assistant: Click to interact with Google Assistant of the TV.
- 2. Notifications: Remind you of system-critical information, such as low disk space, Google sign in or account errors, network connectivity issues, etc.
- 3. Input: Select the input source.
- 4. Settings: Access the system setting.
- **5. Apps:** Show the list of favorite applications, or access the application center.
- 6. Youtube: Browse this application to watch a wide variety of online videos.
- 7. Featured: Show the list of featured contents from Google Play Movies & TV.
- 8, CUSTOMISE CHANNELS: Add and remove channels from your Home screen.

- 1) The functions and contents of "Home Page" may vary by different countries or models.
- 2) Before using network functions in home page like network applications and so on, please connect the TV to the network firstly.
- 3) Icon copyrights are owned by the application providers.

Using your TV

Accessing channels

Using the numeric buttons: press the corresponding numeric buttons on the remote control to access the channels.

Using the CH ✓/ > buttons: press the CH ✓/ > buttons on the remote control or the corresponding buttons on the TV set to scroll through the channels.

Watching connected devices

Press SOURCE then press ▲ / ▼ to select your desired source, and then press OK to confirm.



Note: The available source might differ depending on the model

Volume

Volume control: press the VOL +/- buttons on the remote control or the corresponding buttons on the TV set to increase or decrease the volume.

Sound mute: press the no button to temporatily mute the sound. Press this button again or the vol + button to restore the sound.


Using Quick Access Menu

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

This section explores the menus and settings of your TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

- display the quick access list.
- 2. Press ▲/▼ to select the desired item, then press OK to open the corresponding submenu.
- 3. In submenu, use **◄/▶** and OK buttons to make the adjustments, or use ▲/▼ to select an item, use OK /▶ to enter and operate according to the onscreen display or quide.
- Press to return to the previous menu.

© Alhafidh Group Trading fzco, 2019

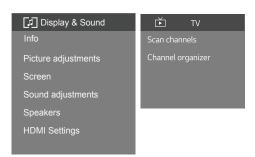

Display & Sound

Info: Select this option to view TV infomation.

Picture Off: Select this option to enter into Audio Only

Picture adjustments: Enter to ajust picture mode or Advanced settings.

Screen: Select this option to ajust the picture size. Sound adjustments: Select this option to set the sound adjustments.

Speakers: To enter TV speaker settinghs.

HDMI Settings: Enter to set up HDMI devices for streamlined control.

TV

Scan channels: To setup Analogue or Digital channels. Channel Organizer: Press ▲/▼ to select Channel and Press OK enter submenu, Press ▲/▼ to select Hide/Unhide, Swap, edit, Insert, delete channels, press OK to confirm.


Note: Display only under ATV source.

Using your TV

Using TV Settings

The Settings menu allows you to configure the TV with your preferences.

Note: Some of the functions might be unavailable in certain sources. And for some models, certain options are not available.

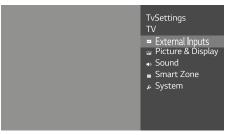

TV. Each menu is outlined and detailed to help you get the most from your TV. To access the menu system:

- Press ▲/▼ to select the desired item, then press OK/► to open the corresponding submenu.
- In submenu, use ▲/▼ and OK buttons to make the adjustments, or use ▲/▼ to select an item, use OK to enter and operate according to the on-screen display or quide.
- 3. Press \leftarrow to return to the previous menu.

Channels Setup



Analogue Setup

- Analogue Auto Tuning: Press OK to start the automatic search process. The search may take a few minutes.
 During the process, you can press OK to abort.
- Analogue Manual Tuning: Press OK to enter the interface.Press ◀/▼ to select your system,the press ▲/▼ select Frequency and press OK to search, fine tune or store the channel.



Digital Setup

- Digital Antenna Tuning:Press OK to start the automatic search process.The search may take a few minutes. During the process, you can press and chosse YES to exit.
- Subtitle Setup:
- (1)Subtitle Setting: Include off,Basic,hearing impaired. (2)Primary Preferred Language:

Press OK and than use $\blacktriangle/\blacktriangledown$ to select Primary Preferred Language.

(3)Sencond Preferred Language:

Press OK and than use $\blacktriangle/\blacktriangledown$ to select Sencond Preferred Language.

- Audio Setup
- (1) Audio Description: Include Off and On.
- (2) Audio Description Mixing Level:

Press OK and than use $\blacktriangleleft/\blacktriangleright$ to set Audio Description Mixing Level.

(3)Audio Type: Include Normal,hearing impaired,visual impatired. (4)Primary Preferred Language:

Press OK and than use ▲/▼ to select Primary Preferred Language.

(5)Sencond Preferred Language:

Press OK and than use $\blacktriangle/\blacktriangledown$ to select Sencond Preferred Language.

- Guide Set-up: Update Guide in stanby: Include Off and On.
- Technical Set-up:
- (1) Auto Service Update: Include Off and On.
- (2) Service Replacement: Include Off and On.
- (3)Programme list Transfer: To transfer Programme list.
- (4) Primary Preferred Language:

Press OK and than use ▲/▼ to select Primary Preferred.

Using your TV

Picture & Display



Picture Ajustment:

- Picture Mode:Optimize picture quality for general content.Use $\blacktriangle/\blacktriangledown$ to scroll through the Picture preset settings:Standard,Dynamic,Movie,Sport and Personal.
- Advanced Settings:

Access advanced picture enhancing options.
Brightness: Adjusts the brightness of the picture.
Color: Ajusts the color saturation.

Clarity:Advanced technique for picture enhancement. Reset: To reset picture ajustment.

Display Setting:

- Screen mode: Ajust the picture size.Use ▲/▼ to scroll through the Screen mode preset settings.
- Auto screen:Automatically adjusts screen mode based on the signal.Include On and Off.

Sound



Sound Ajustment: Adjust sound and speaker-related options.

- Sound Mode:Optimize sound quality for general content.Use ▲/▼ to scroll through the sound preset settings:Sports,Standard,Cinema,Music and News.
- Surround:Reproduces life-like surround sound when playing -5.1channel audio sources.Include On and Off. Advanced Setting:Access advanced sound enhancing

Volume Setting:

options.

- 1)Auto Volume:Keeps the volume level constant for all programs and inputs. Include On and Off.
- 2)Balance:Adjust the speaker blance.
- 3)Digital Audio Out Volume:Applied for PCM only.The volume levels between PCM and compressed audio will differ
- 4)Digital Audio Out Delay:Set the delay time for Digital Audio.
- 5)Volume offset:Adjust the soundlever of the current input relative to other inputs.

Sound mode related:

1)Surround effect: Use **◄/▶** to scroll through Surround

2)Equalizer: Use ◀/► ▲/▼ to scroll through Equalizer. Reset: To return all sound settings to factory default. TV Placement: Select how TV SET placed. Include Desk Top and Wall Mount.

Digital Audio Out: Optical out for audio signals from the Digital Audio Out.

Dolby Digital Plus: Include On and Off.

Using your TV

Smart Zone



Enjoy Music: Select this option to enter into Audio Only mode.

Fast Cast: An app that quickly delivers mobile content to TV, allowing users to quickly deliver multimedia content such as photos, videos, music and more to TV terminals. Fast Cast Steo:

- 1.Download Fast Cast mobile App.
- 2. Mobile and TV are connect the Same Wi-Fi.
- 3.Search device and connect TV.

Note

- 1. This function may be unavailable for some mobile devices, and it subject to chipset support the files format. 2. Recommendations of working environments:
- A: Local Area Network Speed recommendations on: 1M/S~2M/S.
- B: Files required :MP4 \(AVI \) TS \(FLV \) f4v \(m3u8 \) (subject to chipset supported).
- Sleep Timer: The options inlude: Off,10Min,20Min,30Min, 60Min,90Min,120Min,and 180Min.

World clock: Enter to add World clock.

Night mode: Turn on to Keep loudness and brightness to prevent disturb others.Clear sound and brightness at a low level.

System



Language: Use ▲/▼ to scroll through Language.

Environment: Enter to set Home or shop mode.

Home Mode: You Would be able to view the standar

- -Home Mode: You Would be able to view the standard settings for Picture and Sound Modes.
- -Shop Mode:You can enjoy enhanced setting for Picture and Sound Modes.

Note: Picture menu settings will not be accessible when you select Shop Mode.

Shop Demo: Enter to set E-sticker.


Note: E-sticker is not availbale for certain model. Power: Enter to set Power mode.

- Wake on Wifi:Enable wake on WIFI Settings.
- Network stand by:Enable STR Settings.
- Sleep Timer: Set the TV to turn off automatically.

Other information

Smart Player

Connect a USB device to a USB socket, the screen will show USB file name and then press OK to enter .If no USB device connected, the USB interface will be not displayed.



Video

- Select Video icon, then press OK button to view movie file.
 Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
- 3. While playing a Video, press OK Menu of remote to display the play console. For the Play console, Press Ok key of remote to Play and Pause the video file.Left key of remote to Fast backward.Right key of remote to Fast forward.
- 4. Use key to see more option:Photo,Scale,Looping mode,Subtitle,Audio track.
- 5. Press Return key of remote to Stop playing and Press Return to Exit.

Photo:

- 1. Select Picture icon, then press OK button to view the picture.
- 2. Press Up, Down, Left or Right direction button to select your desired $\,$ picture file and press $\,$ OK to show.
- 3. While showing picture, press OK to display the play console. For Previous and Next use remote left and Right key.
- 4. Use OK key to see more option: Leftrolation, rightrolation, Manual play, Information, Play mode, BGM: on or off.

Music:

- 1. Select Music icon, then press OK button to listen to Music. 2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
- 3. The Play console includes Previous, Play/Pause,Fast backward/Fast forward.Next.

Press **=** key to see PlayList.

4. Press Return key of remote to Stop playing.

Disk:

- 1. Select Disk icon, then press OK button to choose folder.
- 2. Press Up, Down, Left or Right direction button to select your desired file and press OK to Play.
- 3. Press Return key of remote to Stop playing.

© Alhafidh Group Trading fzco, 2019

Attention and Frequently Asked Questions

Attention:

Some non-standard mobile storage device may not be recognized. Please change to use the standard device.

Note: For coding files, there are many kinds nonstandard coding method, so this system c an not be guaranteed to support the file formats using any coding method

Frequently Asked Questions:

- Under the following conditions, this system cannot decode the file and the file cannot be play normally:
- -The parameters of file, such as the pixel of picture, code rate of audio and video file, sampling rate of audio file, exceed the limit of the system;
- -The format of file is not matched or the file is harmed.
- Hot plug: Do not disconnection when the system is reading or transmitting data, avoid damaging the system or the device.
- 3. Pay attention to the power supply of the device when you are using a mobile hard disk or a digital camera. If the power supply is not sufficient or not stable, you may encounter problems during operating or can not operate at all. In this case, please restart the device, or unplug the device and plug it again, and ensure that its power supply is normal.
- The system supports standard USB1.1 and USB2.0 devices, such as standard U-disks, MP3 players, mobile hard disks, etc..
- For obtaining better audio and video quality, suggests to use the external device which accords with USB2.0 standard.
- When playing the video with high compression ratio, these phenomenons, such as picture standstill and menu long time response, are normal.
- 7. For some USB device with power supply, such as large size hard disk, MP4, etc., suggests using it with power to avoid electric power shortage.

Other information

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

- 1. Check if the fuse or circuit breaker is working.
- 2. Plug another electrical device into the outlet to make sure it is working or turned on.
- 3. Power plug is in a bad contact with the outlet.
- 4. Check the signal source.

No color

- 1. Change the color system.
- 2. Adjust the saturation.
- Try another channel. Black-white program may be received.

Remote control does not work

- 1. Change the batteries.
- 2. Batteries are not installed correctly
- 3. Main power is not connected.

No picture, normal sound

- 1. Adjust the brightness and contrast.
- 2. Broadcasting failure may happen.

Normal picture, no sound

- 1. Press the Vol+ button to increase volume.
- Volume is set to mute, press the mute button to restore sound.
- 3. Change the sound system.
- 4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps a and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

- 1. Adjust the position and orientation of the indoor/outdoor
- 2. Check the connection of antenna.
- 3. Fine tune the channel.
- 4. Try another channel, Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in so me case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed

- 1. Press the Power button to turn off TV, then press the Power button again to rest TV.
- 2. Unplug the power cord, then press the Power button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve

Base Installation

To fix the double support base on the unit by screws, the installation is completed.

Note: Illustrations below are provided for reference only and may differ from actual product appearance.



استخدام التلفزيون

الإشعال

ظهور بقع سوداء أو خطوط أفقية، أو تهتز الصورة، يحدث ذلك عادة بسبب تداخل نظام، الإشعال أو مصابيح النيون أو المثاقب الكمربائية أو أجهزة كهربائية أخرى.

الصورة الشبحية

تحدث الصورة الشبحية بسبب إشارات التلفزيون التي تتخذ مسارين. أحدهم المشار المباشر والآخر ينعكس من المباني الطويلة أو التلال أو الأجسام, الأخرى. قد يؤدي تغيير اتجاه الهوائي أو موقعه إلى تحسين الاستقبال.

تداخل الترددات اللاسلكية

ينتج عن التداخل موجات متحركة أو خطوط مائلة أو خلل في تباين الصورة في بعض الحالات. اعثر على مصدر التداخل وقم بإزالته.

في حالة تعطل التلفزيون

1– اضغط على زر الطاقة Power لإيقاف تشغيل التلفزيون، ثم اضغط على زر الطاقة Power مرة أخرى لإعادة ضبط التلفزيون. 2– افصل سلك الكهرباء، ثم اضغط على زر الطاقة Power لإعادة ضبط التلفزيون.

ملاحظة: إذا لم تنجح الطريقتان في حل المشكلة، يُرجى الاتصال بمركز الخدمة المعتمد لحل المشكلة.

تركيب القاعدة

بمجرد تثبيت قاعدة الدعم المضاعف على الوحدة بواسطة البراغي تكون قد انتميت من تركيب القاعدة.

ملاحظة: الرسوم التوضيحية الموضحة فيما يلي لغرض الاطلاع فقط، وقد تختلف عن الشكل الفعلى للمنتج.



استكشاف الأخطاء واصلاحها

يمكن حل معظم المشكلات التي تواجهها بخصوص التلفزيون عن طريق مراجعة القائمة التالية لاستكشاف الأعطال وإصلاحها.

لا توجد صورة، لا يوجد صوت

- 1- تحقق من عمل المصهر أو قاطع الدائرة الكهربائية.
- 2- قم بتُّوصِّيل قابِّس جهازُ كُهربائي آخر بُمنفذ النَّطاَّقة للتأكد من عمله.
 - 3- قابس الطاقة غير متصل جيداً بمنفذ الطاقة.
 - 4- تحقق من مصدر الإشارة.

لا توجد ألوان

- 1- قم بتغيير نظام الألوان.
- 2- اضبط تشبع الألوان
- 3- جرب قناة أُخْرى. قد يتم استقبال برنامج الأبيض والأسود.

وحدة التحكم عن بُعد لا تعمل

- 1- استبدل البطاريات.
- 2- البطاريات غير مركبة بشكل صحيح.
- 3- مصدر الطاقة الرئيسي غير متصل.

لا توجد صورة، الصوت طبيعى

- 1- اضبط السطوع والتباين
- 2- قد يكون هناكُ فُشل فَى البث

صورة طبيعية، لا يوجد صوت

- 1- اضغط على الزر Vol+ لزيادة مستوى الصوت.
- 2- مستوى الصوت مضبوط على وضع الكتم، اضغط على زر
 - الكتم لاستعادة الصوت. 3- قم ىتغىير نظام الصوت.
 - 4- قد يكون هناك فشل في البث

<mark>موجات</mark> غير منظمة تظهر على الصورة

<mark>عادة ما يح</mark>دث ذلك بسبب تداخل محلي مثل السيارات أو المصابيح <mark>أو مجففات ال</mark>شعر. اضبط الهوائي للحد من التداخل.

<mark>نقاط بيضاء و</mark>تداخل

إذا كان الهوائي موضوعاً في منطقة بعيدة عن إشارة التلفزيون مما يؤدي إلى ضعف الإشارة، فقد تظهر النقاط على الصورة. إذا كانت الإشارة ضعيفة جداً، فقد يكون من الضروري تركيب هوائي خاص لتحسين الاستقبال.

- 1- اضبط موقع وتوجيه الهوائي الداخلي/ الخارجي.
 - 2– تحقق من توصيل الهوائي. "
 - 3 اضبط توليف القناة.

14

4 حرَّب قناةُ أُخْرى. فقد يكون هناك فشل في البث.

استخدام التلفزيون

المنطقة الذكبة







استمتع بالموسيقى: اختر ""Audio Only للدخول إلى وضع الصوت

تطبيق Fast Cast: تطبيق ينقل محتوى الهاتف المتحرك بسرعة ويسمح للمستخدمين بنقل محتوى الوسائط المتعددة بسرعة مثل الصور ومقاطع الفيديو والموسيقى وغيره إلى وصلات التلفزيون الطرفية. خطوات استخدام تطبيق Fast Cast:

1 – نزَّل تطبيق Fast Cast على هاتفك المتحرك.

2 – أوصل الهاتف المتحرك والتلفزيون بشبكة واي –فاي واحدة.

3 – الحث عن الحهاز وأوصل التلفزيون.

1-قد لا تتوفر هذه الخاصية ليعض أحهزة الهاتف المتحرك يسبب عدم دعم الشريحة لصبغ بعض الملفات.

2-توصيات بيئات العمل:

أ: توصيات سرعة الشبكة المحلية: 1 م/ ثانية ~ 2 م/ ثانية

ب: الملفات المطلوبة: MP4 وTSg AVIg MP4 وm3u8g f4vg FLVg TSg (وفقاً لدعم

– مؤقت النوم: تتضمن الخيارات: إيقاف التشغيل، و10 دقائق، و20 دُقيقة، و30 دقيقة، و60 دقيقة، و90 دقيقة، و120 دقيقة، و180

الساعة العالمية: لإضافة الساعة العالمية.

الوضع الليلى: قم بتشغيله لضبط ارتفاع نغمة الصوت والسطوع. لتجنب إزعاج الآخرين. صوت واضح وسطوع ذو مستوى منخفض.

www.alhafidh.com

النظام



اللغة: استخدم الأزرار ▼ / ▲ للمرور عبر الصوت المحبطي.

السئة: لضبط الوضع الرئيسي Home ووضع المتحر Shop. الوضع الرئيسي Home: يمكنك عرض الإعدادات القياسية لأوضاع الصورة والصوت.

- وضع المتحر Shop: بمكنك الاستمتاع بإعدادات فعززة لأوضاع الصورة والصوت.

فلاحظة؛ لن يمكن الوصول إلى إعدادات قائمة الصورة عند اختيارك وضع الهتجر Shop

استعراض المتجر: لضبط الملصق الإلكتروني

ملاحظة: الملصق الإلكتروني غير متوفر في بعض الموديلات. الطاقة: ضبط وضع الطاقة "Power".

الطاقة: ضبط وضع الطاقة "Power".

- تفعيل شبكة الواي-فاي: ضبط إعدادات تفعيل شبكة

- وضّع الاستعداد للشبكة: تفعيل إعدادات حهاز STR.

– مؤقت النوم: ضبط التلفزيون ليتوقف عن التشغيل تلقائياً.

سياسة الخصوصية: لعرض سياسة الخصوصية **ملاحظة:** سياسة الخصوصية غير متوفرة في بعض الموديلات.

المشغل الذكى التنسهات والأسئلة المتكررة

أوصل الذاكرة الوفضية USB بمقبس USB، وستعرض الشاشة اسم فلف USB ثُم اضغط على الزر (OK) لفته الملف. إذا لم يتم توصيل جهاز USB، فلن ىتم عرض واحهة USB.



مقطع فيديو:

1- اختر أيقونة مقطع فيديو "Video" ثم اضغط على الزر (oκ) لعرض 2- اضغط على أزرار الاتجاهات أعلى "UP" أو أسفل "Down" أو يسار

"Left" أو يمين "Right" لاختيار الملف الذي تريده ثمّ اضغط علىّ الزر

3- أثناء تشغيل مقطع الفيديو، اضغط على الزر (ok) في وحدة التحكم عن بُعد لعرض وحدة التحكم في التشغيل. بالنَّسبة لوحدة التحكم في التشغيل، اضغط على الزر (OK) في وحدة التحكم عن بُعد لتَشْغيَّل ملف الْفَيديو أو إيقافَه. اضْغط علَّى الزر الأيسر في وحدة التحكم عن بُعد للرَّجوع الق الخلف يسرعةً. اضغط علق الزر الأيمن في وحدة التحكم عن بُعد للتقدم إلى الأمام بسرعة.

4- استخدم الزر لعرض المزيد من الخيارات: صورة Photo، وتغيير الحجم Scale وضع التكرار Looping والترجمة المصاحبة Subtitle ومسار الصوت Audio track

5- اضغط على زر العودة Retum في وحدة التحكم عن يُعد لإيقاف التشغيل ثم اضغط على Return للّخروج.

الصورة:

1- اختر أيقونة صورة "Picture " ثم اضغط على الزر (OK) لعرض

2- اضغط على أزرار الاتجاهات أعلى "UP" أو أسفل "Down" أو يسار "Left" أو يمين "Right" الصورة التي تريدها ثم اضغط على الزّر (OK)

3- أثناء عرض الصورة، اضغط على الزر (OK) لعرض وحدة التحكم في التشغيل. لعرض الصورة السابقة أو التالية، اضغط على الزر

- " سَتُخُدمُ النِّر OK لعرض المزيد من الخيارات: تدوير إلى اليسار أو تدوير إلى اليميُّن أو التُشْغيل الَّيدويُّ أو مُعلوماتُ أُو وضَّع التشُغيل أو وُضُع BGM: وُضَعُ التشغيلُ أو وُضُعٌ الْإيقافُ.

الموسيقى:

- 1 اختر أيقونة موسيقى "Music " ثم اضغط على الزر (OK) للاستماع إلى الموسيقى.

-2 اضغط على أزرارُ الاتجاهات أعلى "UP" أو أسفل Down أو يسار Left أو يمين "Right" لاختيار الملف الذي تريده ثم اضغط على الزر (OK)

-3 تتضمَّن وحدة التحكم في التشغيل السابق Previous، تشغيل /Play/ إيقافَ مؤقت Pause، الرَّجوع السريع إلى الخلف Fast backward/ التقدم السريع إلى الأمام Fast forward، التالي Next. اضغط على الزر لعرض قائمة التشغيل.

-4 اضغط على زر 🗮 العودة Return في وحدة التحكم عن بُعد لإيقاف التشغيل.

القرص:

1- اختر أيقونة قرص "Disk" ثم اضغط على الزر (OK) لاختيار الملف. 2- اضغط على أزرار الاتجاهات أعلى "UP" أو أسفل Down أو يسار Left أو يمين "Right" لاَحْتيار الملف الذي تريده ثم اضغط على الزّر (OK)

3- اضغُطُ على زر العودة Retum في وحدة التحكم عن بُعد لإيقاف التشغيل.

قد يتعذر التعرف على بعض أجهزة التخزين المحمولة غير القياسية. يُرجى استخدام الجهاز القياسى.

ملاحظة: بالنسبة لملفات الترميز، هناك أنواع متعددة من طرق الترميز غير القياسية لذلك لا يمكن ضمان دعم النظام لصبغ الملفات باستخدام

الأسئلة المتكررة:

1- لا يمكن فك رموز الملف ولا يكن تشغيل الملف بصورة طبيعية في الظروف التالية:

محددات الملفات مثل بكسل الصورة، ومعدل رمز الصوت وملف الفيديو، وقعدل تحليل الملف الصوتي تتخطى حدود النظافى

تنسيق الملف غير متناسق أو الملف متضرر

2- التوصيل الساخن: لا تقم بقطع الاتصال أثناء قراءة النظام أو نقله للبياناُت لتَّجنب تلفُّ النظامُ أو الجَّهاز.

3- انتبه إلى قصدر الطاقة الخاص بالجهاز عند استخدام قرص صلب قحمول أو كاميراً رقَّمية. إذا كان مصدر الطَّاقة غير كاف أو غير مستقر، فقد تواجه بعض المشكّلات أثناءً التشغيل أو لا يمّكنكُ تشغيّل الجهاز على الإطلاق. فَى هَذه الحالة، يُرِجِي إعادة تشَعْيِلُ الجَهازِ أو فصل النَّكهرباء عن الجَهازِ ــ وإغَّادة توصيله بالنُّكُمَّرْباء مرة أخرى وتأكد من أن مصدر الطاقة الخاص بالجهاز يعمل بشكل جيد.

4- يدعم النظام وحدات الذاكرة الوفضية USB1.1 وUSB2.0 المعيارية وأقراص U المعيارية، ومشغلات MP3، والأقراص الصلبة المحمولة _إلخ.

5- للحصول على جودة أفضل لمقاطع الفيديو والصوت، يُنصح باستخدام أجهزة خارجية تتوافق مع المعيار USB2.0.

 6- عند تشغیل مقطع الفیدیو بمعدل ضغط عال، فإن حدوث ظواهر مثل ثبات الصورة أو طول قدة استجابة القَائمة أقر طبِّيعيّ.

7- بالنسبة ليعض أحهزة USB المزودة بمصدر طاقة فثل القرص ال<mark>صلب</mark> الكبير الحجم, وMP4 _إلخ، تُنصح باستخدافة بالطاقة الكهربائية لت<mark>حنب</mark> نقص الطاقة الكهربائية.

استخدام التلفزيون

إعدادات استخدام التلفزيون

تسمح لك قائمة الإعدادات بتهيئة التلفزيون حسب رغبتك.

ملاحظة: قد لا تتوفر بعض الخصائص في مصادر معينة. وفي بعض الموديلات، قد لا تتوفر بعض الاختيارات.



التلفزيون. كل القوائم موضحةً إيجازاً وتفصيلاً لمساعدتك في الحصول على أقصى ما يمكن من التلفزيون. للوصول إلى نظام القائمة:

1- اضغط على ▼/▲ لاختيار العنصر المرغوب فيه، ثم اضغط على زر ▼ ok لفتح القائمة الفراعية المقابلة.

2- في القائمة الفرعية، استخدم الأزرار ▼/▲ و OK لإجراء أي تعديلات، أو استخدم, ▼/▲ لاختيار أحد العناصر، واستخدم, OK للانتقال والتشغيل وفقاً لشاشة العرض أمامك أو الدليل.

3- اضغط على زر 👉 للرجوع إلى القائمة السابقة.

إعداد القنوات



الإعداد التناظري

- الض<mark>بط التلقائي التناظري: اضغط ع</mark>لى ٥٨ لبدء عملية البحث التلقائ<mark>ي. قد تستغرق عملية البحث بضع</mark> دقائق. خلال هذه العملية، يمكنك الضغط على زر ٥κ للإنهاء.
- الضبط الي<mark>دوي التناظري: اضغط على ٥٪ ل</mark>لانتقال إلى الواجهة. اضغط على ▼/▼ لتحديد النظام، ثم اضغط على ▼/▲ لتحديد التردد ثم اضغط <mark>على زر٥٪ للبحث عن القناة أو ض</mark>بطها بدقة أو حفظها
 - تصنيف البرامج: لت<mark>صنيف البرامج.</mark>
 - علامات البرامج: لض<mark>بط علامات البرامج</mark>

الصورة وشاشة العرض

استخدام التلفزيون



ضبط الصورة

- وضع الصورة: تحسين جودة الصورة للمحتوى العام, استخدم, الأزرار ▼/ ▲ للمرور عبر إعدادات الضبط المسبق للصورة: قياسي Standard"، وديناميكي "Dynamic"، وسينمائي "Movie"، ورياضي "Sport"، وشخصى "Persona".
 - اعدادات متقدمة:

ضبط الصورة.

الوصول إلى الخيارات المتقدمة لتحسين الصورة. السطوع: ضبط سطوع الصورة.

اللون: ضبط تشبع اللون. الوضوح: تقنية متقدمة لتحسين الصورة. إعادة الضبط: لإعادة

إعدادات شاشة العرض:

وضع الشاشة: لضبط حجم الصورة. استخدم, ▼/▲ للتمرير خلال الإعدادات لوضع الشاشة.

– الشاشة التلقائية: ضبط تلقائي لوضع الشاشة وفقاً للإشارة. يتضمن وضعى التشغيل والقاف التشغيل .

ضبط الصوت:

ضبط الصوت

وضع التلفزيون علو، سطه الطاولة

الصوت

ضبط خيارات الصوت ومكبر الصوت

– وضع الصوت: تحسين جودة الصوت للمحتوى العام. استخدم. الأزرار ▼ / ▲ للمرور عبر إعدادات الضبط المسبق للصوت: رياضية "Standard", وقياسي "Standard"، وسينما "Cinema"، وفوسيقي "Music" وللأخبار "News".

((1)

-ضيط خيارات الصوت وفكيرات الصوت

- الصوت المحيطي: صوت محيطي ديناميكي عند تشغيل المصادر الصوتية قناة ٥١، ويتضمن وضع التشغيل وإيقاف التشغيل.
- إعدادات متقدمة؛ الـوصـول إلى الخيارات المتقدمة لـتحسين الصـوت.

إعدادات مستوى الصوت:

 شبط تلقائي لمستوى الصوت: المحافظة على ثبات مستوى الصوت لجميع البرامج والمدخلات. يتضمن وضع التشغيل وإيقاف التشغيل.

2) التوازن: ضبط توازن مكبر الصوت.

3) مستوى صوت مخرّج الصوت الرقمي: ينطبق عل<mark>ى التضمين.</mark> النبضى المرمز (PCM) فقط.

سوف تُختلف مستويات الصوت بين PCM والص<mark>وت المضغوط.</mark> 4) مزامنة الصوت الرقمي: ضبط مزامنة الص<mark>وت الرقمي مع صورة</mark> الفيديو.

> 5)موازنة مستوى الصوت: ضبط مستوى <mark>الصوت الخاص</mark> بالمُدخل الحالي مقارنة بالمدخلات الأ<mark>خرى.</mark>

> > وضع الصوت ذو الصلة:

1) التأثير المحيطي: استخدم الأزرا<mark>ر ◄ / ◄ للمرور عبر الصوت</mark> المحيطة .

2) المعادِلَ: استخدم الأزرار ▼ / ▲ ▲ / ▶ للمرور عبر فعادٍل الصوت.

إعادة الضبط: لإعادة جميع <mark>إعدادات الصوت إلى إعدادات الم</mark>صنع الاساسية. مكبر الصوت: للدخول إلى إعدادات <mark>مكبر الصوت الخ</mark>اص

<mark>وضع التلفزيون: اختيار كيفية وضع جهاز التلفزيون</mark>، يتضمن وضع سطح الم<mark>كتب ووضع التثبيت على الحائط</mark>. **مخرج الصوت الرقمى: مخرج ضوئي للإشارات** الصوتية الآتية من

تقنية دو<mark>لبي الرقميّة: يتضمن وضع التش</mark>غيل وإيقاف التشغيل.

- ضبط الهوائق الرقمق: اضغط على ox لبدء عملية البحث

خلال هذه العملية، يمكنك الضغط على زر واختيار YES للخروج.

اضغط على ٥κ ثم استخدم ▼ / ▲ لاختيار اللغة الأولية المفضلة.

اضغط على ακ ثم استخدم ▼ / ▲ لاختيار اللغة الثانوية المفضلة.

(1) إعدادات الترجمة: يشمل ، إيقاف، عادى، ضعيف السمع.

(1)وصف سماعى: تتضمن الإيقاف "O#" والتشغيل "On".

اضغط على οκ واستخدم ◄/◄ لضبط فستوى النقاء في

(3)نوع الصوت: وتشمل عادى ، ضعف السمع ، وضعف البصر.

اضغط على ٥κ ثم استخدم ▼ / ▲ لاختيار اللغة الأولية المفضلة.

اضغط على OK ثم استخدم ▼/▲ لاختبار اللغة الثانوية المفضلة.

- إعداد الدليل: تحديث الدليل في وضع الاستعداد، يتضمن الإيقاف

رً1) تحديث الخدمة التلقائي، يتضمن الإيقاف "On" والتشغيل "On".

(2) استبدال الخدمة: بتضمرّن الإيقاف "Off" والتشغيل "on".

ضغط على "موافق" ، ثم استخدم ▼/▲ لتحديد " المفضلة

(3) نقل قائمة البرامج: لنقل قائمة البرامج.

(2)مستوى النقاء في الوصف السماعي:

التلقائي. قد تستغرق عملية البحث بضع دقائق.

- اعداد الترحمة المصاحبة:

(2)اللغة الأولية المفضلة:

(3) اللغة الثانوية المفضلة:

- الإعداد السمعى

الوصف السماعى

(4)اللغة الأولية المفضلة:

(5) اللغة الثانوية المفضلة؛

4) اللغة الرئيسية المفضلة

لأساسىة.

Off" والتشغيل "On". - الإعداد الفنى:

مخرج الصو<mark>ت الرقمى .</mark>

خصائص الصفحة الرئيسية

تشغيل الصفحة الرئيسية

ملاحظة: هذا الدليل للاستخدام العام. الأشكال والشرع الموضحة في دليل المستخدم بغرض المرجعية فقط وقد تختلف عن الشكل الفعلى للمنتج. وفي بعض الموديلات، قد لا تتوفر بعض الاخْتيارات.


بمكنك اختيار حميع الخصائص من الصفحة الرئيسية.

اضغط على زر 🛆 لعرض الصفحة الرئيسية.

اضغط على الأزرار ▲ \ ▼ \ ◄ \ لاختبار الأيقونات من قائمة الشاشة.

اضغط على OK للانتقال إلى أي اختيار.

للخروج من القائمة، اضغط على .

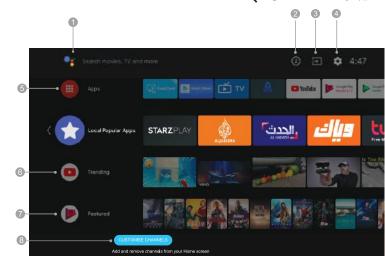

<u> ملاحظة: هذه</u> الصورة للمرجعية فقط

- 1 خاص: Google Assistant انقر للتفاعل مع خاصية Google Assistant الخاصة بالتلفزيون.
- 2_ اشعارات: تذكرك بالمعلومات المهمة للنظام مثل صغر مساحة القرص ، أو تسحيل دخول Google أو الخطأ <mark>في الحساب، أو المش</mark>كلات الخاصة بالاتصال بالشبكة، أو غير ذلك.
 - 3 –المدخل: تحديد المصدر المدخل···
 - 4 الإعدادات: الوصول إلى إعدادات النظام.
 - 5 التطبيقات: إظهار قائمة بالتطبيقات المفضلة أو الوصول إلى مركز التطبيقات.
 - Youtube: –6 تصفح التطبيق لمشاهدة مقاطع فيديو متنوعة على الانترنت.
 - 7– المحتوى البارز: عرض قائمة بالمحتويات البارزة من تطبيق الأفلام وبرامج التلفزيون على Google Play.
 - <mark>8– تخصيص القنوات: إضافة الق</mark>نوات أو إزالتها من الشاشة الرئيسية.

- 1 خ<mark>صائص ومحتوبات "الصفحة الرئي</mark>سية" قد تختلف حسب الدولة والموديل.
- ذلك، يرحق توصيل التلفزيون بالشبكةُ أولاً.

 - 3 حقُّوقَ ن<mark>شر الأيقُّونات مُحفُّوظة لصالح م</mark>زودي التطبيقات.

استخدام التلفزيون

الوصول إلى القنوات

باستخدام الأزرار الرقمية: اضغط على الأزرار الرقمية المقابلة في وحدة التحكمُ عُن نُعِدُ للوصولِ إلَى القُنُواتُ.

باستخدام الأزرار ٨/٧ : اضغط على الأزرار ٨/٧ الموجودة في وحدة التحكم عن بُعد أو اضغط على الأزرار المماثلة لها على جهاز التلفزيون للتنقل بين القنوات.

مشاهدة الأحهزة المتصلة

اضغط على المصدر source ثم اضغط على ▲/✔ لاختبار المصدر الذي ترغب في عرضه ثم اضغط علق ox للتأكيد. `



فلاحظة: فلأحظة: قد يختلف المصدر المتاح وفقاً للموديل.

مستوى الصوت

التحكم بمستوى الصوت: اضغط على الأزرار vor +/– الموجودة في وحدة التحكم عن بُعد أو اضغط علَّى الأزرار المماثلة لها على حِمَّازِ التَلْفُرْيُونِ لَرَفَعَ فَسَتَوَى الْصُوتَ أَوْ خَفْضُهُ.

كتم الصوت: اضغط على زر 🍂 لكتم الصوت مؤقتاً. اضغط على هذا الزر مرة أخرى لإلغاء كتم الصوت أو على vol jj + vol

استخدام قائمة الوصول السريع

ملاحظة: قد لا تتوفر بعض الخصائص في مصادر معينة. وفي بعض الموديلات، قد لا تتوفر بعض الاختيّارات.

يتناول هذا القسم القوائم وإعدادات التلفزيون. كل القوائم قُوضُحَة إبحازاً وتفصيلاً لمساعدتك في الحُصُول علَى أقصى ما بمكن من التلفزيون. للوصول إلى نظّام القائمة:

- 1- في وضع التلفزيون Tv، اضغط على j 💳 على وحدة التحكم عن بُعَّد لعرض قائمة الوصول السريع.
- 2- اضغط على √ / ♦لاختيار العنصر المرغوب فيه، ثم اضغط على jز ox لفتح القائمة الفرعية المقابلة.
- 3- فَيُّ القَائِمةُ الفرعية، استَحْدَمَ الأزرار ﴿ اللَّهِ وَ ٥κ وَ إِجِراء أَي تعديلات، أو استخدم ▼ / ▲لاختيار عنصر، واستخدم ٨٥٨ ◄ للانتقال والتشَّغيل وفقاً لشاشة العرض أمامك أو الدليل.
 - 4- اضغط على زر 👉 للرجوع إلى القائمة السابقة

شاشة العرض والصوت 🔃

شاشة العرض والصوت

معلومات: حدد هذا الخيار لعرض معلومات التلفزيون. إخفاء الصورة: حدد هذا الخبار للانتقال إلى وضع الصوت فقط

ضبط الصورة؛ حدد هذا الخيار لضبط وضع الصورة أو للإعدادات

الشاشة: حدد هذا الخيار لتعديل حجم الصورة. ضبط الصوت: حدد هذا الخيار لضبط إعدادات الصوت.

مكبرات الصوت: لإدخال إعدادات مكبر الصوت الخاص

إعدادات нрмı: حدد هذا الخيار لضبط أجهزة нрмı والتحكم الميشط بها.

التلفزيون

www.alhafidh.com

اعداد القنوات: لإعداد القنوات التناظرية أو الرقمية.

منظم القنوات: اضغط لأعلق / لأسفل لتحديد قناة وا<mark>ضغط</mark> على "موافق" وأدخل القائمة الفرعية ، واضغط لأعلى / لأسفل لاختيار "إخفاء /اظهار، تبديل، تعديل، إدراج، حذف ال<mark>قنوات ثم</mark> اضغط "موافق" للتأكيد.

ملاحظة: العرض فقط تحت مصدرالتلفزيون ا<mark>لتناظري و ليس الرقمي .</mark>

التشغيل العام

التشغيل

اتبع التعليمات في هذه الصفحة عن كيفية تشغيل التلفزيون ووحدة التحكم, عن بُعد قبل الانتقال إلى الصفحات التالية مع شرح كيفية استخدام إجراءات ضبط القنوات.

1- رحُّب بطاريتين في وحدة التحكم عن بُعد.

- استخدم أنواع البطاريات المحددة فقط.
- تأكد من التوصيل بالقطبية الصحيحة.
- لا تخلط بين البطاريات الجديدة والمستعملة.
- لا تستخدم البطاريات القابلة لإعادة الشحن.
- . – لا تعرض البطاريات لحرارة مفرطة مثل أشعة الشمس أو النار، ولا تلقها في النار أو تكرر شحنها أو
 - تحاول فتحها لأن ذلك قد پؤدي إلى حدوث تسرب أو انفجار.
 - انزُعُ البطارياتُ من وحدةً التَّحَكُمُ عن بُعد إذا لُمْ تُستخُدفُها لفترة طويلة.

2- صل كابل الطاقة بالتلفزيون أولاً ثم بمقبس الطاقة الكهربائية الرئيسية. (ملاحظة: إذا كان كابل الطاقة متصلاً بالتلفزيون، يرجى توصيل كابل الطاقة بمقبس الطاقة الكهربائية الرئيسية).

- إذا كان التلفزيون متصلاً بمصدر طاقة تيار متردد
- يجب توصيل جهاز التلفزيون بالكامل بمصدر طاقة تيار متردد فقط. يجب عدم توصيله بمصدر طاقة تيار مستمر. إذا كان القابس منفصلاً عن الكابل، لا تقم بتوصيله بمقبس طاقة رئيسية تحت أي ظرف تجنباً لخطر حدوث الصعق الكهربائي.
 - إذا كان التلفزيون متصلاً بمصدر طاقة تيار مستمر
- يجب توصيل جهاز التلفزيون بالكامل بمصدر طاقة تيار مستمر فقط. يجب عده, توصيله بمصدر طاقة تيار متردد. إذا كان القابس منفصلاً عن الكابل، لا توصله بمقبس طاقة رئيسية تحت أي ظرف ممكن تجنباً لخطر حدوث الصعق الكهربائه ،
 - 3- صل الهوائي الخارجي بمقبس ANTENNA IN خلف لوحة التلفزيون.
- 4- عند تشغيل التلفزيون، سيعمل الجهاز تلقائياً في وضع الاستعداد. ملاحظة؛ بالنسبة لبعض الموديلات، يتم, تشغيل التلفزيون بالضغط على إز الطاقة.
 - إذا أضاء مصباح مؤشر الطاقة، معني ذلك أن الجهاز في وضع الاستعداد. اضغط على زر الطاقة في وحدة التحكم عن بُعد أو الجهاز لتشغيل التلفزيون.

<mark>إيقا</mark>ف التشغيل

<mark>لوضع ال</mark>جهاز في وضع الاستعداد، اضغط على زر ى على وحدة التحكم عن بُعد أو على التلفزيون. سيظل ا<mark>لتلفزيون</mark> في وضع التشغيل ولكن باستهلاك منخفض للطاقة.

<mark>لإيقاف تشغيل</mark> الجهاز، افصل التيار الـواصل بيرن مقبس الطاقة منفذ الطاقة الرئيسي. ملاحظة: في بعض ا<mark>لموديلات، اضغ</mark>ط على زر الطاقة لإيقاف تشغيل الجهاز.

مقدمة

الاتصال بالشبكة

للوصول إلى الإنترنت، عليك التسجيل في خدمة إنترنت واسعة النطاق وعالية السرعة من خلال مزود خدمة الإنترنت الخاص بك. يمكن توصيل التلفزيون بشبكة منزلك من خلال طريقتين:

- متصلة بالأسلاك، باستخدام موصل عربة (شبكة LAN) في اللوحة الخلفية.
- لاسلكية، باستخدام، مهايئ USB لاسلكي داخلي أو خارجيّ وشبكة الاتصال اللاسلكي الخاص بمنزلك.

ەلادظة.

هذه الخاصية غير متوفرة في بعض الموديلات. تتضمن التعليمات المذكورة أدناه الطرق المعتادة لتوصيل التلفزيون بشبكة الاتصال السلكية أو اللاسلكية. قد تختلف طريقة التوصيل وفقاً للتهيئة الفعلية للشبكة. إذا كانت لديك أي أسئلة عن الشبكة المنزلية، يرجى الرجوع إلى مزود خدمة الإنترنت الخاص بك.

الاتصال بشبكة سلكية

للاتصال بشبكة سلكية:

- 1- تأكد أن لديك:
- كابل إيثرنت طويل بصورة كافية للوصول إلى التلفزيون.
 - جهاز راوتر أو مودم مزود بمنفذ إيثرنت
 - اتصال بالإنترنت عالى السرعة
- منفذ إيثرنت (شبكة เมลง في الجانب الخلفي للتلفزيون.

2- صل كابل الإيثرنت بالراوتر وبمنفذ الإيثرنت الموجود خلف التلفزيون.


3- استخدم إعدادات الشبكة لتهيئة التلفزيون.

الاتصال بشبكة لاسلكية

للاتصال بشبكة لاسلكية:

- 1- تأكد أن لديك:
- راوتر پرسل إشارة لاسلكية عالية السرعة
 - اتصال بالإنترنت عالي السرعة
- مهایئ USB لاسلکي (لیس هناك حاجة لاتصال لاسلکي مدمج).
 - 2- جهاز تلفزيون مزود بخاصية واي-فاي.
 - 3- استخدم قائمة "الشبكة" لتهيئة التلفزيون.

ملاحظة: قد تحتوي بعض الموديلات على وحدة لاسلكية داخلية، وبذلك يصبح مهايئ USB غير ضروري. بعض المهابئات اللاسلكية الخارجية غير متوافقة مع التلفزيون.

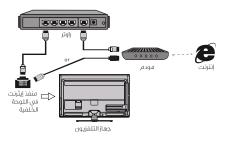



7

مقدمة

HDMI

المقانس

ملاحظة: قد يختلف موقع المقايس وأسمائها على التلفزيون وفقاً للموديل، وقد لا تتوفر بعض المقايس في موديلات معينة.

مقىس USB (مدخل)

تُستخدم هذه المقايس لتوصيل الذاكرة الوفضية USB. USB ملاحظة؛ قد يختلف عدد مقابس USB على التلفزيون وفقاً لموديل التلفزيون.

> شىكة LAN داخلىة LAN

قابس RJ45 لتوصيل المودم الخارجي أو معدات الوصول للشبكة.

مقىس RF IN (مدخل) ANTENNA IN (RF IN) يتيح توصيل كابل فحوري لاستقبال الإشارة من هوائي الاستقبال أو الكابل أو صندوق الكابلات.

مقىس SPDIF **SPDIF**

يُستخدم هذا المخرج لتوصيل مستقبل صوتى رقمى متوافق.

يُستخدم مقبس HDMI (واجهة متعددة الوسائط عالية الوضوم) لتوصيل الحاسوب الشخصى . ببطاقة فيديو مثّبتة متوافقة أو بمشغلات أقراص DVD معينة أو بجهاز رقمى متوافق لفك شفرآت

القمر الاصطناعي. يوفر هذا المقبس توصيلاً رقمياً غير مضغوط يحمِّل بيانات الفيديو والصوت من خلال كابل

موصل صغير متكامل.

مقبس HDMI (مدخل)

مقبس سماعات الأذن (مخرج) HEADPHONE

يسمح بتوصيل سماعات الأذن للاستماع إلى الصوت الخارج من التلفزيون. مُلاحظةً: الضّغط المفرط للصّوت الصادر منّ سماعات الأذن قد يتسببُ في فقدان السمع.

> مقانس مصغرة AV صوت + فنديو (مدخل) Mini AV IN

تُستخدم مقانس AV IN لتوصيل أحهزة تسحيل الفيديو وكافيرات الفيديو ومشغلات DVD ووحدات التحكم بالألعاب وغيرها. يوفر مقيس VIDEO IN توصيل وحدة الفيديو .

YouTube ##

مقدمة



خصائص وحدة التحكم عن نُعد

تتوفر معظم خصائص التلفزيون من خلال القوائم التي تظهر على الشاشة. تُسْتَخُدهِ وحِدَة التَحِكُمِّ عَن نُعَدُ الْمِزُودَة فَعَ الحُهَازِ لَلبَحَثُّ فَي الْقَوَاتُمْ وتَهبئة حميع الاعدادات العامة.

- Φ)زر التشغيل/ الإيقاف) لتشغيل التلفزيون أو إيقاف تشغيله.
 - 刻 كتم الصوت أو إعادة تشغيله.
 - € الدخول البي قائمة إعداد التلفزيون

الانتقال الى واحهة الخاصية الذكية SMART.

- **₽** الانتقال إلى واجهة اختبار فصدر العرض.
- ▶ ▼ ♦ (أزرار الاتجاه، أعلى، أسفل، يسار ويمين) ترمز الى عناصر مختلفة في نظام القائمة وتقوم بضبط عناصر التحكم في القائمة.

استخدام الأزرار لأعلى أو لأسفل يمَّكنك من الانتقال من خلال قائمة القنوات الحالية تحت مصدر التلفزيون

- OK تأكيد اختيارك.
- الخروج من القائمة والعودة إلى القائمة السابقة. \leftarrow
- الذهاب إلى الصفحة الرئيسية الذكية للتلفزيون.
 - \equiv الانتقال الي قائمة الوصول السريع.
 - W الانتقال إلى لوحة المفاتيح الافتراضية.
 - **1** +/-رفع/ خفض فستوى الصوت.

YouTube الانتقال إلى الصفحة الرئيسية الذكية للتلفزيون.

- الانتقال إلى الصفحة الرئيسية لمتحر Google Play.
- (فيكروفون) انقر للتفاعل فع خاصية Google Assistant الخاصة بالتلفزيون. •• (متوفرة فقط عندما بكون اتصال الشبكة طبيعياً)

كيفية إقران وحدة التحكم عن يُعد بالتلفزيون

هذه وحدة تحكم تعمل بالبلوتوث، وقبل استخدامها قم أولاً بإقران<mark>ها بالتلفزيون.</mark> فيما يلق خطوات للرجوع إليها:

الخطوة الأولى: اضغط على زر 🖒 للانتقال إلى الصفحة ال<mark>رئيسية.</mark> الخطوة الثانية: اضغط على زر 🗣 للانتقال إلى "اقتران وحدة التحكم عن بُعد". الخطوة الثالثة: اتبع "صفحة تعليمات الإعدادات" ثم اض<mark>غط على زر OK و</mark> في

الخطوة الرابعة: بظهر على الشاشة "اقتران..."، وبع<mark>د انتهاء الاقتران بظهر على ا</mark> الشاشة "تمت العملية ينحام".

ملاحظة: إذا انتظرت لمدة تزيد على دقيقتين و<mark>لم تتمكن من إقران الـوحدة .</mark> بالتلفزيون، يرجى إعادة خطوات الإقران المذ<mark>كورة آنفاً.</mark>

إذا رغبت في إلغاء الاقتران بوحدة التحكم <mark>عن بُعد التي تعمل بالبلوتوث،</mark> فاتبع الخطوات التالية:

الخطوة الأولى: اضغط على زر 🛆 ال<mark>انتقال إلى الصفحة الرئيسية.</mark>

الخطوة الثانية: اضغط على الأزرار حال ▼ الملاكم الأختيار 👩 ,ثم اضغط على ٥κ

الخطوة الثالثة: اضغط على ز<mark>ر ▼ لاختيار "وحدات التحكم والمل</mark>حقات" ثم اختر اسم وحدة التحكم عن بعد التي <mark>تعمل بالبلوتوث للانتقال إلى ال</mark>خطوات التالية.

الخطوة الرابعة: اضغط ع<mark>لى "إلغاء الاقتران" ثم اضغط عل</mark>ى jox ji.





مقدمة

الاحتىاطات

اقرأ هذه التعليمات يعناية قبل استخدام الجهاز. احفظ هذه التعليمات حيداً لاستخدافها في المستقبل.

المنتج

- لا تسد أو تغطى فتحات التهوية على الغطاء الخلفي.
- لا تدخل أي شيء إلى داخل الوحدة من خلال فتحات لوحِة التلفزيون لأنَّها قدَّ تمس أحزاءً ناقلة للتبار أو قد تسبب قصراً في . الدائرة الكهربائية يسبب الحريق أو الصعق الكهربائي أو تلف
- لا تحاول فتح لـوحة التلفزيون فقد تتلفها. ليس هناك أي أحزاء داخُلُية بمُكنُك إصلاحُهَا ينفسك. استعن يُفنى مختَّص لإجراء جميع أعمال الصيانة.
- لا تلمس سطح الشاشة بأصابعك لأنها قد تخدش شاشة التلفزيون أو بلطخها.
- لا تضغط على شاشة التلفزيون بشدة فقد تسبب أضراراً

الكهرباء والتوصيل

- افصل الجهاز عن الكهرباء في الحالات التالية:
- في حال عدم استخدام الجهاز لفترة زمنية طويلة.
- في حال تلف سلك الكهرباء أو منفذ الطاقة/ القابس.
- أتبع التعليمات التالية لتركيب المنتج وضبط إعداداته. اضبط جميع عناصر التحكم المذكورة في تعليمات التشغيل لأن أي إعدادات غير سليمة لأدوات التحكم الأخرى قد تتلف ا<mark>لحهاّز. و</mark>في حال حدوث ذلك، افصل الكهرباء عن الحهاز . واتصل بمشؤولي الخدمة.
 - في حال تعرض الجهاز لأي اصطدام أو في حال سقوطه، فقد يُؤدي ذلك إلى تلفُ اللَّوحة.

<mark>سلك الكهربا</mark>ء وكابل الإشارة

- لا تدهس سلك الط<mark>ا</mark>قة وكابل الإشارة أو تدحرج أي شيء
- احرص على حماية سلك الطاقة وكابل الإشارة من الدهس
- لا توصل أجهزة أخرى على نفس سلك الكهرباء أو منفذ
 - لا <mark>تعرض سلك الكهرباء وكابل الإ</mark>شارة لأى رطوبة.

ىىئة الاستخدام

- لا تضع الجهاز على عربة أو قاعدة أو طاولة غير مثبتة حيداً.
 - ضع الجهاز في مكان جيد التهوية.
- لا تستخدم الحهاز بحانب الأماكن الرطبة والباردة. احرص على حماية الحهاز من الحرارة الزائدة.
 - استخدم الحهاز بعيداً عن أشعة الشمس المباشرة.
- يجب ألا يتعرض الجهاز لرذاذ الماء أو الطرطشة أو توضع عليه أجسام بها سوائل، مثل المزهريات.
 - لا تستخدم الجهاز بجانب الأماكن المتربة.

التنظيف

- انفض الغيار عن الحهاز بمسح الشاشة واللوحة يقطعة قماش ناعمة ونظيفة مع منظف سائل خاص.
 - لا تضغط على الشاشة بقوة عند تنظيفها.
- لا تستخدم المياه أو أي منظفات كيميائية لتنظيف الشاشة لأن ذلك قد يتلف سطح شاشة التلفزيون.

تثبيت التلفزيون على الحائط تحذير: تتطلب هذه العملية شخصين.

- لضمان التركيب الآمن، يرجى مراعاة ملاحظات السلامة التالية:
- تحقق من قدرة الجدار على تحمل وزن التلفزيون ودعامة التثبيت.
 - اتبع تعليمات التثبيت المزودة مع دعامة التثبيت الجدارية.
 - يجب تركيب الجاهز على جدار سطحه فستو.
- احرص على استخدام البراغي المناسبة للمادة المكونة للجدار.
- احرص على وضع كابلات التلفزيون في مكان بعيد عن حركة الأقدام لتحنب التعثريها.

جميع تعليمات السلامة الأخرى عن جهاز التلفزيون مذكورة هنا.

www.alhafidh.com

- جميع التوضيحات في هذه النشرة لغرض الاطلاع فقط.

مقدمة

أزرار التلفزيون

ملاحظة؛ قد يختلف موقع الأزرار الوظيفية وأزرار الطاقة وأسماؤها على التلفزيون وفقاً لموديل الجهاز. وقد تكون هناك أزرار غير متاحة لبعضّ الموديلاتُ الأخُرُى.









AIVIj-1

البحث في قائمة القنوات للأعلى/ للأسفل. في نظام القائمة، يعملان كزري توجيه للأعلى والأسفل على وحدة التحكم عن نُعد وزرى تُحكم لضبط القائمة.

⟨****)j-2

رفع/ خفض مستوى الصوت. في نظام القائمة، يعملان كزري توجيه لليمين واليسار على وحدة التحكم عن بُعد وزري تحكم لضبط القائمة.

ம்/= ј −3

يقوم بتشغيل التلفزيون أو وضع الاستعداد ، حين يكون التلفزيون قيد التشغيل ، اضغط على المفتاح لفترة قصيرة لتأكيد العناصر ، ثم أضغط لفترة طويلة للولوج الي قائمة التنقل.

ملاحظة: قد يختلف موقع الأزرار الوظيفية وأزرار الطاقة وأسماؤها على التلفزيون وفقاً لموديل الجهاز.

قائمة المحتويات

الفصل الأول: مقدمة

	الفطن الاون: فقدفه
22222234	لاحتياطات
2	المنتج
2	الكهرباء والتوصيل
2	سلك الكهرباء وكابل الإشارة
2	بيئة الاستخدام
2	التنظيف
2	تثبيت التلفزيون على الحائط
3	أزرار التلفزيون
4	المقابس
5	خصائص وحدة التحكم عن بُعد
5	كيفية إقران وحدة التحكم عن بُعد بالتلفزيون
	الفصل الثانى: التشغيل العام
6	التشغيلالتشغيل
	القاف التشغيل
7	إيعاق الشعين الاتصال بالشكة
,	
	الفصل الثالث: خصائص الصفحة الرئيسية
8	تشغيل الصفحة الرئيسية
	الفصل الرابع: استخدام التلفزيون
9	الوصول إلى القنوات
	مشاهدة الأجهزة المتصلة
9	مستوى الصوت ····································
9	ـــــــــــــــــــــــــــــــــــــ
9	
	شاشة العرض والصوت
9	التلفزيون
0	استخدام إعدادات النظام
0	عداد القنوات
	رحدر: تعتورت الصورة وشاشة العرض
1	الصوت
3	المنطقة الذكية
3	النظام
_	
	الفصل الخامس: معلومات أخرى
3	التنبيهات والأسئلة المتكررة
_	العبيسات وردشته المتحددة
	انونساط انهنعده استکشاف الأعطال واصلاحها



الطراز: 43S2 49S2 55S2

تركيب القاعدة