



الغسالة (فل أوتوماتيك) دليل المستخدم

Washing Machine (Fully Automatic) User's Manual

الموديل:

▲ WMHA-1560STL

Model:

▲ WMHA-1560STL

الرجاء قراءة هذا الدليل بعناية قبل تشغيل الجهاز،
و احتفظ به للرجوع إليه مستقبلا.

هذه التصاميم و المواصفات عرضة للتغيير بهدف إدخال تحسينات عليها
و ذلك دون إشعار مسبق.

Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change for improvement
without prior notice.

CONTENTS

Safety and precautions.....	2
Installation of the washer.....	6
Preparation before washing.....	7
Parts identification of the washer.....	8
Instruction of the washer operation panel.....	9
Quick start.....	11
The main wash.....	12
Special features.....	13
About the procedure of full automatic wash program.....	15
Cleaning and Maintenance of the washing machine.....	17
Identify usual trouble of washer.....	18
Malfunction display and solutions.....	19
Technical specifications.....	20

SAFETY AND PRECAUTIONS

Observe the following items in order to prevent from injuring yourself, others and the damage of property:

	Warning	This indicates serious injury or death to human being may be caused.
	Caution	This will remind you that injury to people and damage to property may occur.

Please observe following contents of graphics.

	This graphics represents(cause attention), and detailed cautions will be displayed inside the graphics. 
	This graphics represents (operation prohibited), and detailed prohibitive items will be displayed inside the graphics. 
	This graphic represents (forcible execution), and detailed forcible execution items will be displayed inside the graphics. 

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The new hose-sets supplied with the appliance are to be used and the old hose-sets should not be reused.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The openings must not be obstructed by a carpet.
- This appliance is for indoor use only.
- Do not put washing machine at humid place.
- Hands shall not be inserted into running spin-dry tub .
- If the spin-dry tub does not stop within 15 seconds after opening the cover , please stop using the machine and have it repaired.

SAFETY AND PRECAUTIONS

Warning

Please do not disassembly and assembly the machine without authorization.




No dismantling



Please do not insert your hand and take out clothes inside the spin barrel before it is fully stopped.



No touching

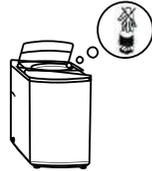

Please do not install the machine in damp and raining environment to avoid electric shocking, catching fire, faults and distortion accidents.



No dampness



Please do not directly rinse the machine with water when cleaning.




No rinsing



Please do not let children climb the machine or peer into the rotating spin barrel to avoid accidents.



Prohibited

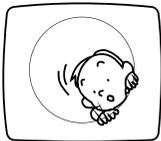

It is prohibited to wash the clothes touching with kerosene, gasoline, alcohol and other flammable materials.



Prohibited



Please do not damage power flexible cord and power plug to avoid electric shocking, short circuit and catching fire.



Prohibited



Regularly clean the power plug to remove dust and dirt to avoid contact failure.




SAFETY AND PRECAUTIONS

Warning

Please pull out plug from the socket if the machine is not in use.



Pull out the plug

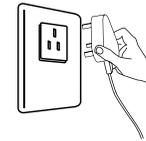


Please well connect the earth line of socket to avoid electric shocking by accidental leakage.

(earthing)



Earthing

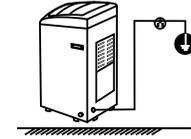

Please insert the power plug tightly.




Please do not place on the washer burning candle, mosquito-repellent incense, cigarette and other flammable things, as well as electric stove, air heating fan and other heating sources.



Smoke and fire prohibited



Please use correct power source.

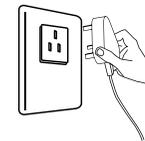

Please do not pull out or insert the plug with wet hands to avoid electric shocking.



Wet hands are prohibited



Warning

Please ensure that the water inlet pipe is connected and the tap is opened before washing clothes.



Please do not wash down jacket, raincoat, fishing coat and similar clothes in the washer.



Prohibited



Do not replace power cord by yourself.



Prohibited



It is strictly prohibited to place children or lay weights on the washer.



Prohibited



Please do not pull the electric cord when pulling out the plug.



Do not fill the tub with water manually.




Prohibited



Installation of the washer


Remove package

- Remove package and take out the bottom board of the cabinet on the foam cover.
- Open the lid of washer's door and take out accessories.
- A trial operation or washing on the foamed cushion is strictly forbidden.

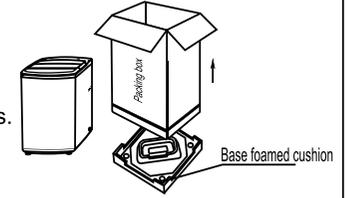


Placement of upper water drain hose

- The height of drain hose ("a") should be between 86-100 cm.
- Diameter of "b" should not be less than 3 cm, and flow capacity not less than 40 L/Min.
- Before washing machine starts, user should hang up the drain pipe 86-100cm height from the floor.

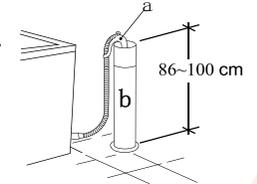


Installation of water inlet pipe

- Put the water inlet pipe (which has a metallic filtering bag) screw on to the tap.
 - Tightly screw another end of the water inlet hose on the water inlet valve (with a rubber seal ring inside).
- Note: When tightening the clamping nut, evenly apply the force and do not twist the water inlet valve to avoid breaking of the water inlet valve joint.

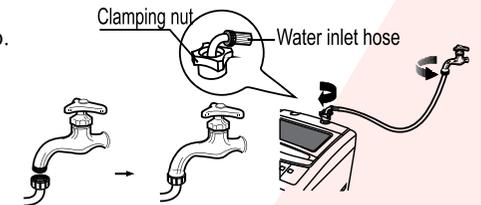

1 Adjust the adjustable foot to make the washer be placed stable.

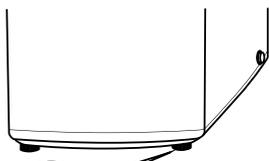


Adjustable foot (extend when clockwise rotating and shorten when counterclockwise rotating)

(Slightly incline the washer first and loosen the adjustable foot knob. Adjust the adjustable foot so as to ensure four corners of washer be steadily contacted with the ground. Then tighten the adjustable foot knob and lock it. If the ground is obviously not flat, correction should be made on the ground surface, otherwise the washer barrel will incline and knock the cabinet)

2 Install the water inlet hose.

Cold (blue) Hot (red)

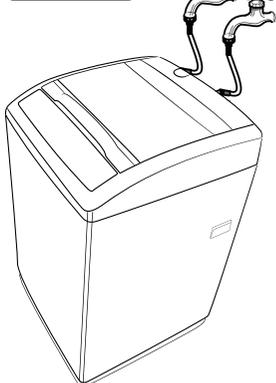


3 Connect with to power source.



5 Put down the drain hose.

Note:
Before washing machine starts, user should fix drain pump at the outlet place about 86-100cm high to hang the pipe.

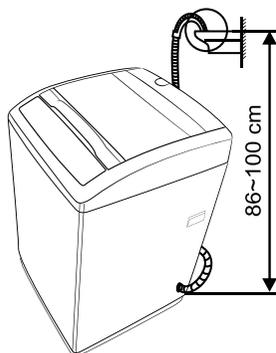

6 Put in clothes and suitable amount of washing powder.


4 Turn on the water supply.




NOTICE Before washing, please do take out coins, keys and other hard goods, and zip up clothes tightly to prevent them and barrel from damage.



Name Of Parts

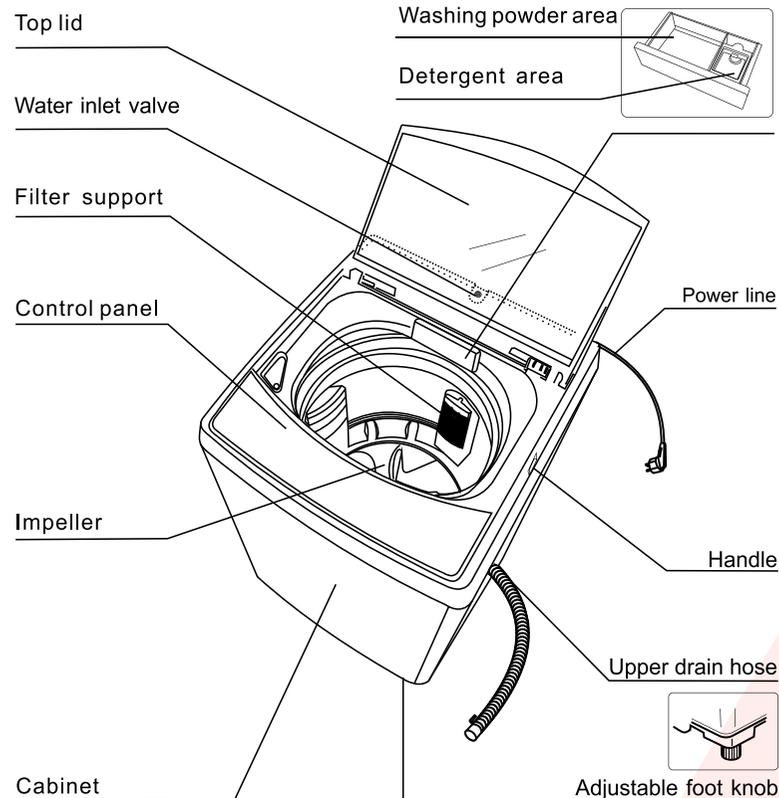

Accessories

 <p>Water inlet hose assembly</p>	 <p>Self-tapping screw</p>  <p>Base cover</p>
--	---

Please refer to the real material as the attachment

6.Delay:

Long press "Delay" button, every 1s will increase 1 hour, and also have a beep once, when after reach to 24 hours, it will return to the initial state. After "delay" starts (do not press "child lock" button), consumer can review the set programs when press "delay" button again. When "delay" starts, there will be an "delay alarm" if consumer open the lid, and if consumer close the lid, this alarm will be released. But while the machine is running, if consumer open the lid, there will be "E3" alarm. Detailed usage, consumer can refer to the description of "special function-delay function".

7.Program Selection:

Before starting, continuously press this button to select the corresponding program: [Normal], [Soft], [Soak], [Strong], [Quick], [Memory], [Air dry], [Tub Clean].

8.FCS function


FCS (Fast Clean System)
Start up Fast Clean System: Power on, select "Normal", "Soft", "Soak", "Strong" program, then press FCS button. then press "Start/Pause" button. FCS function starts up. The relative figures will be showed after FCS function starts up.
Cancellation of FCS function: when the FCS function was selected, The function can be cancelled by pressing any button except "Temperature", "Water level", "Delay", or power off.

9.Temperature:

Press the button to select different temperature water for wash.

5.Child Lock

Press [Start/Pause] button to start the program, then press [Wash] & [Rinse] button at same time to start the child lock function, it can lock the selected program to avoid any unnecessary troubles while children made the faulty operation. If consumer wants to close this function, they can re-press [Rinse]&[Wash] button at the same time.

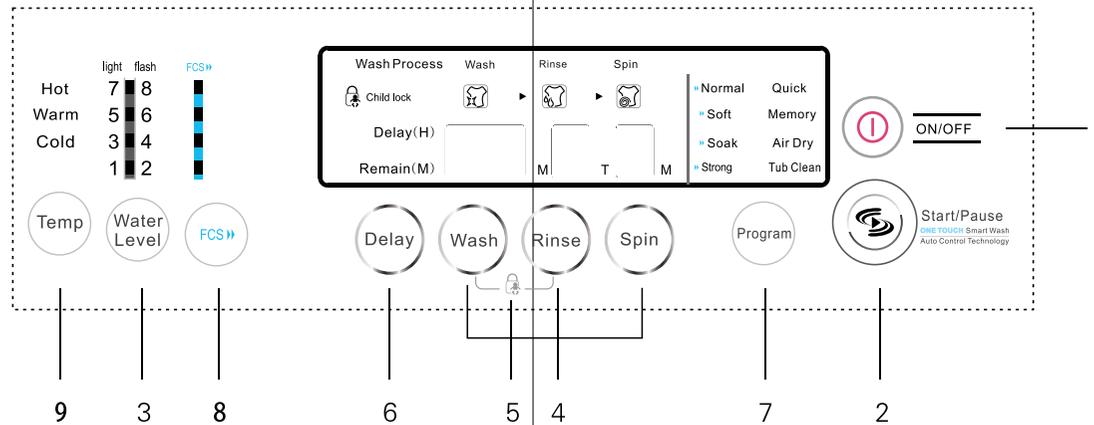

1.Power Supply:

[ON/OFF] button has function of open or close the power supply.

4.Function

After start, one light will flash among the function of wash, rinse and spin according to real process.


3.WaterLevel Selection:

Before washing, consumer can select the water level according to the dirty degree, material or weight of clothes. The detailed usage, consumer can refer to "The relationship between the water level and load."

2.Start / Pause

[Start / Pause] button has both function of start and pause. Continuously press this button, the machine will be switched between start and pause mode.

* If the drawing is changed, no information anymore.
⚠ To protect the control panel, the interval time of power on and off should be not less than 30 seconds.

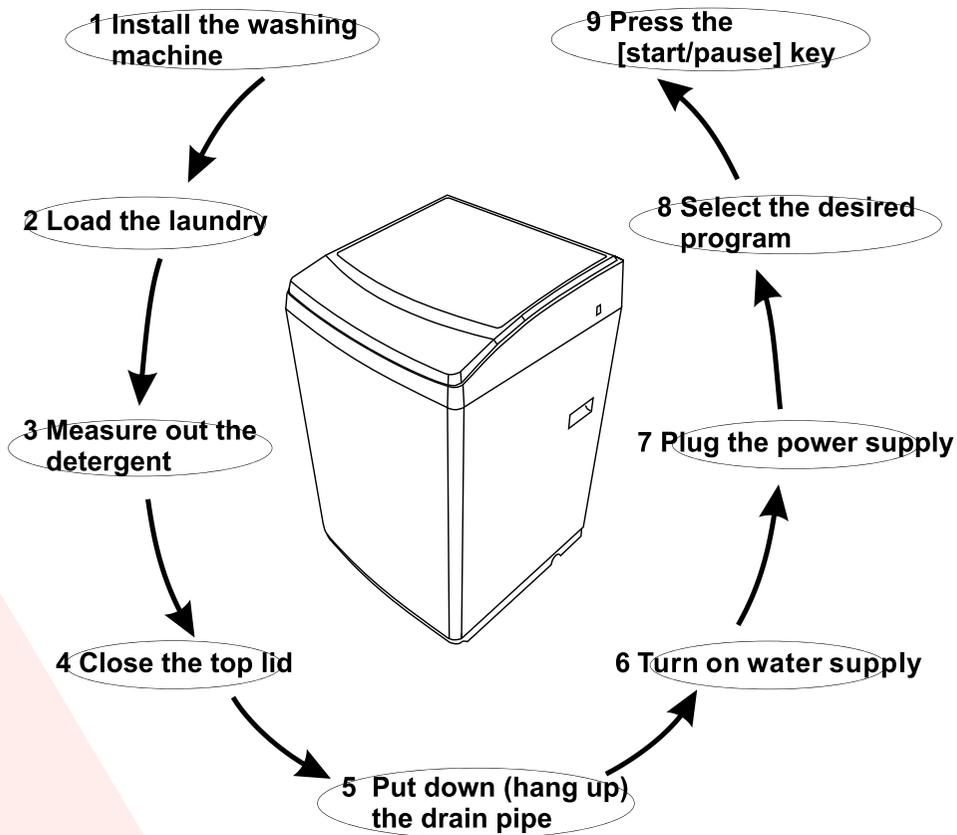

Main Functions:

Preparation:

1. Put down the drain pipe;
2. Connect the inlet pipe, turn on the tap;
3. Put the plug of the power strip into the socket;
4. Take out the coins and other things from the pocket, shake off the sediment of the clothes.

Detailed Steps:

1. Press [ON/OFF] button;
2. Select the water level according to the washing load;
3. Press [Start/Pause] button.

Program Selection:

1. Press [ON/OFF] button;
2. Select the water level and program;
3. Press [Start/Pause] button.

When washing process finished:

1. The buzzer will buzz continuously for 6 times and then the power will be automatically cut off;
2. Turn off the water tap.
3. Although the power can be cut off automatically, the power plug must be pulled out as well for the safety.

Alarm function when door opened:

1. When washing or spinning, there will be E3 alarm while consumer opens the lid, and if consumer closes the lid, the alarm will be released, and to continue to run the previous program which was before consumer opened the lid.
2. When "Delay" starts, there will be "Delay" E3 alarm while consumer opens the lid, and if consumer closes the lid, the alarm will be released, and to continue the "Delay" function. But while the machine is running, if consumer opens the lid, there will be no alarm.

Clothes Washing Skills:

1. While washing the clothes which are easily damaged, consumer can put those clothes into the mesh bag, and then take the washing process;
2. For the big size or easily floated clothes, should be put into the tub first;
3. For the easily pilling clothes, consumer should turn inside out the reverse side clothes, and then take the washing process;
4. While washing the clothes which have strap or zipper, consumer should tie the strap and zip the zipper well.
5. Remove the sediment before washing;
6. For the especially dirty parts, consumer can scrub with detergent first.



- ! .Close the top lid when machine is running during spin process, otherwise, it will automatically pause for working and send out abnormal warning.
- ! .The washer will not work when the filled water does not reach the set water level.

Delay:**Delay time program**

Delay time means the preset beginning time of washing.

1. Switch on the power .
2. Open the tap and lay the drain hose.
3. Put in the laundry and detergent.
4. Select the proper water level according to the quantity of clothes.
5. Select the functions and programs.
6. Press "DELAY" button to select the beginning time of washing.
7. Close the lid and press "START/PAUSE" button

Confirmation of the delay and inspection

1. After the delay function is started, digital tube will display the flashing of delay time, and other lights are turned off.
2. After the delay function is started , press " Delay" button continuously , you may inspect the preset program and function . Loose the button , the program return to delay status.

Cancel the delay time, or alternate the delay time


1. Press "Power" button to cancel the delay time.
2. To change the delay time , cancel the delay time first, and then press "Delay" button to reset.

Instruction to single wash procedure

1. User may freely select any single procedure, or any combination of procedures among WASH, RINSE and SPIN according to the actual requirements. It is only required to turn off any one or two of these three indicators that not needed by the user. And keep the indicator be on showing the process needed by the user.
2. Single wash – after switching on the power, turn off RINSE and SPIN two indicators by pressing function button. The operation for single rinse and single spin is similar.
3. Single wash-spin – after switching on the power, turn off RINSE indicator by pressing function button. The operation for single rinse-spin and single wash-rinse is similar.

Child Lock:

1. This function is effective only after program starts;
2. Press [Start/Pause]button to start the program, then press [Rinse] & [Wash] button at same time to start the child lock function. If consumer wants to close this function, they can re-press [Rinse]&[Wash]button at the same time.
3. When "child lock"started,if open the lid during the running process, there will be an alarm. Open the lid within 20s,there will be a "E3"alarm,if close the lid within 20s,the alarm will be released, and continue to run the previous program which before opening the lid. If the lid opened after 20s,the display will show"CL" alarm named "normal failure alarm",the drain valve will be opened. after the water drained lasting for 90s,the drain valve will be closed. During this process, the alarm still can not be released. The normal alarm will be happened every 15 mins, consumer can power off the machine or unplug to release this alarm.

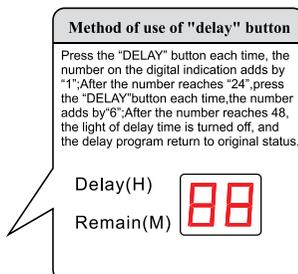**Fuzzy weighting function:**

1. Press "ON/OFF" button.
2. Turn on the tap, put down the drain pipe.
3. Put in the washing load and detergent(Do not sprinkle the detergent on the clothes directly, to avoid the clothes' color fading),close the lid.
4. Select "Normal"、"Soft"、"Strong" program. The washing machine will select the water level automatically according to the load weight.
5. Press [Start/Pause] button to run fuzzy weighting function.

Notice:

1. When there's water in the tub, this function is not available.
2. This function can be only applied under the programs of "Normal"、"Soft"、"Strong".
3. Before press [Start/Pause] button, if consumer selected the water level, there will be no fuzzy weighting function.
4. After press [Start/Pause] button, the washing machine will run the fuzzy weighting function. Consumer can also select the water level to set the water level as needed.

Self Power off function:

1. If the machine do not start to work within 10 minutes after powered on, it will power off automatically.
2. After end of operation and the buzzer sounding 6 times, it will power off automatically.

Unbalance Control:

1. During the spin process, and under the condition of safety switch connected, if the sudden break happened, the washing machine will come into the unbalance adjustment situation;
2. While coming into the unbalance adjustment process, the rinsing LED flashed, inlet the water to reach to the set level, adjust the clothes' status, drain after finished rinsing, and return to the normal spinning process. If it is not effective after 3 times' adjustment, there will be an alarm.

Power failure memory function

If the power supply becomes off suddenly during operation , the machine remembers the current operation state . When power is on ,the machine returns to former operation state automatically.

One Touch System

After power on, push "start/pause"button directly to One-key Washing. The function will be canceled if other buttons, such as water level, program, temperature and function are pressed before. It will also be invalid if there is water left in the inner tube, and the program will be directly set into **Normal with default water level 6.**

Washing Machine will perform fuzzy detection immediately by pushing "start/pause" after power on and water level and program will be selected according to amount of clothing. During the selecting, water level lamp is flashing continuously, as digital display shows "—",at the same time, only power button is effective. **After detecting is completed, program is chosen to "Quick" with automatically setting water level 1/2/3,and "Normal"with water level 4/5/6,also, "Soak" with water level 7/8.** Program will run automatically when checked out and finished program and water level setting.

Normal

Normal fabric washing program, suitable to wash ramie cotton fabric. Wash for once, rinsing for twice, the spin time is a little long.

Quick:

Suitable to wash light stained clothes and clothes in summer.

Memory:

Memory procedure, It can remember all the washing parameters which users have set up, such as water level, washing time, rinsing times etc. Memory procedure is effective after you press the start/pause button, next start when you choose the Memory procedure, You can see all the state which you choose last time.

Soft:

Mid/High/Low water level selection, the tempo is soft, slow washing and spinning speed, to make the lightest wear and deformation.

Soak:

Suitable to wash more dirtier clothes, there's 54 minutes additional soaking time during the washing process.

Strong:

The wash time is longer, the stream is stronger, so the washing effect is better.

Air dry:

As for not easily fading ,deforming , and non-waterproof clothes , can use the function to dry clothes without heating, and to reach the result of being dried in a room.

Tub Clean:

By the intermittent spinning, clean the dirt of inner & outer tub and impeller.

Program	Water level	Wash time	Rinse times	Spin time	Total time
Normal	6	18 minutes	2 times	7 minutes	62 minutes
Quick	4	6 minutes	1 times	5 minutes	30 minutes
Soft	6	12 minutes	2 times	6 minutes	55 minutes
Memory	6	18 minutes	2 times	7 minutes	62 minutes
Soak	7	Soak54 minutes Wash 10 minutes	2 times	9 minutes	2H
Air Dry	/	/	/	/	63 minutes F
Strong	8	20 minutes	2 times	8 minutes	65 minutes
Tub Clean	8	20 minutes	1 times	3 minutes	60 minutes

Note:





- The total time included the time of entering water and the drain time .It can be affected by the pressure of the tap water in your family and the drain speed.
- During jeans program, hot and cold water inject at the same time as default.

Efficiency Program

During Soak washing program, it is identified as Saudi Arabia Efficiency Program as followed: washing processes 10 minutes, and soak for 54mins, and rinse for 2 times and then spin 9mins.

Water level

Water level	1	2	3	4	5	6	7	8
Water volume	25L	33L	42L	49L	56L	64L	80L	85L
Weight of laundry	≤1.0kg	≤2.5kg	≤4.0kg	≤5.5kg	≤7.0kg	≤8.5kg	≤10.0kg	≤13.0kg

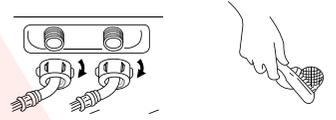End of program		Maintenance	
<ul style="list-style-type: none"> The washing machine will send off the sound of "dou-dou" at the end of any program operation to remind you to take out the laundry or operate it again. After the sound, the washing machine returns to its power-off state with no display and all lights off. Please shut off the tap, pull out the plug when not in use to avoid water leakage or the fire accidents. 		<p>Use gentle clothing to wipe off the water and dirt on the surface each time after using the washing machine. Detergent, propellant and other chemicals are not allowed to use so as to avoid any damage to the plastic accessories.</p> 	
Clean the water inlet		Clean Of the filter	
<p>After long time use, the water inlet mesh bag may be blocked with smudginess, and should be cleaned according to the following steps:</p> <ol style="list-style-type: none"> Switch on the power, followed by shutting off the tap. Let the washer works for 5 seconds so that water flows into the tub through the water inlet hose. then turn off the power. Unload the water inlet hose and clean the mesh bag, then restore the water inlet assembly. 		<p>After using the washing machine for a period, please clean it according to the following steps:</p> <ol style="list-style-type: none"> Take off the lint filter. Turn over the mesh bag and wash it clean in the water. Restore it and fix it. 	
Clean the lint filter in the drain pump (only for having drain filter)			
1. Drain the water out of the pump, under which use a container to collect.	2. Loosen the pump cover anticlockwise.	3. Take out the lint filter.	
			
4. Clean the filter.	5. Restore it and adjust the convex place to align at the pump hole.	6. Tighten the pump cover clockwise.	
			

Note: If the drain filter is not cleaned at proper time (every 10 times of use), Drain problem could be caused.

When the washer is in trouble, please contact local service office or the sales service department of our company and the customer should not dismantle the machine without permission. If the washer can not work normally, or appear abnormality or alarms, please check and correct as follows.

List of faults and inspection

Faults	Inspection Items
No water flows in	<ul style="list-style-type: none"> If the power is off or the fuse is burned out. If the water supply is cut off or the water pressure is too low. If the inlet hose is properly connected and the water tap is opened. If the filtering screen of inlet valve is blocked by dirt. If the coil of inlet valve is damaged. (The slight electromagnetic sound is normal phenomenon when the inlet valve is switched on) If the "Start / Pause" button is pressed after the power switch is pressed.
No washing	<ul style="list-style-type: none"> If the power is off or the fuse is burned out. If the power supply voltage is too low. If the water amount reaches to the required water level. (The washer will not work if the water amount does not reach the required water level) If it is set to "Delay" washing mode. (It will only start to work until the reservation time reached)
Abnormal draining	<ul style="list-style-type: none"> If the water drain hose is placed very high. If the end of water drain hose is sealed in pond. If the internal rubber ring of drain valve is blocked by dirt.
Abnormal spin	<ul style="list-style-type: none"> If the door lid is closed. If all clothing piled largely at one side of barrel or the clothing is excessively placed. If the washer is not placed in stable condition or it is placed in inclination state. (The ground is not flat). If the motor belt is loosened.

Note: During the de spin process, if washing are piled at one side of the spin barrel, it will cause unbalance of spin barrel resulting in striking. At this moment, the computer inside the washer will feel this unbalance phenomenon and will automatically correct it (fill in water Washing). However, if unbalance situation is not removed after continuous three corrections, which means the computer auto-correction can not resolve the problem. Then the user has to manually and evenly place the clothing inside the barrel to solve the problem.

Malfuction display and solutions

When the washer is in trouble, please contact local service office or the sales service department of our company and the customer should not dismantle the machine. If the washer can not work normally, and the abnormal indication is shown in the digital display window or the machine alarms, please check and correct them as follows.

Falut	Cause of fault	Indication	Alarm of the buzzing sound	Stopping alarm
Alarm for water inlet	Water injection for about 1 hour, but do not reach preset water level.	"E1"flares	The buzzer goes on buzzing for 10 seconds. If the fault is not solved, buzzes again for 10 seconds in every 15minutes.	Open the lid to deal with faults, then close the lid to stop the alarm.
Drain Alarm	Drain off water 10 mins not arrive at empty water level.	"E2"flares		
Alarm for opening lid	While spinning or delay function starts, there will be an alarm if open the lid, and only to be suspended without alarming in the spinning process.	"E3"flares		
Imbalance Alarm	Checked imbalance for the third time.	"E4"flares		

Note: The program which has E4 alarm when shocked in the first time is "Air dry" and "Tub clean".

Technical specifications

Model	WMHA-1560STL
Rated washing capacity	13.0kg
Rated voltage	220V~
Rated frequency	60Hz
Rated input power	600W
Motor rated input power	600W
Pump rated input power	45W
Grade of waterproof	IPX4
Water pressure	0.1MPa~0.6MPa
Standard program water consumption	220L
Water volume	85L
Net weight	46kg
Overall dimensions	601X630X1000(mm)

MADE IN CHINA

المواصفات الفنية

الطراز	WMHA-1560STL
سعة الغسيل	13.0 كجم
الجهد	220 فولت-
التردد	60 هرتز
استهلاك الطاقة	600 واط
استهلاك الطاقة للمحرك	600 واط
استهلاك الطاقة للمضخة	45 واط
درجة مقاومة الماء	IPX4
ضغط الماء	0.1 ميجاباسكال ~ 0.6 ميجاباسكال
استهلاك المياه في البرنامج العادي	220 لتر
حجم المياه	85 لتر
الوزن الصافي	46 كجم
الأبعاد الكلية	601X630X1000 (مم)

صنع في الصين

عرض الأعطال والحلول

عندما تكون هناك مشكلة ما في الغسالة، يُرجى الاتصال بمكتب الخدمة المحلي أو بقسم خدمة المبيعات الخاص بشركتنا على ألا يقوم المستهلك بتفكيك الغسالة بنفسه. وفي حالة عدم عمل الغسالة بصورة طبيعية ويظهر المؤشر الدال على الحالة الشاذة في شاشة العرض الرقمية أو تصدر تنبيهات، يُرجى التحقق من الخطأ وتصحيحه باتباع الآتي

العطل	سبب العطل	الإشارة في الشاشة	التنبيه في صورة صوت طنان	إيقاف صوت التنبيه
التنبيه الخاص بمدخل المياه	يتم إدخال المياه لمدة ساعة واحدة تقريباً ولكنها لا تصل إلى مستوى المياه المحدد مسبقاً.	الإشارة تظهر "E1"	يصدر صوت طنان لمدة 10 ثوانٍ. وفي حالة عدم إصلاح العطل، يصدر الصوت الطنان لمدة 10 ثوانٍ كل 15 دقيقة.	افتح الغطاء لمعالجة الأعطال، ثم أغلق الغطاء لإيقاف الإنذار.
تنبيه الصرف	تصريف المياه لمدة 10 دقائق لا يصل إلى مستوى تفريغ الماء تماماً.	الإشارة تظهر "E2"		
تنبيه الغطاء مفتوح	عند العصر أو بداية وظيفة تأخير عملية الغسيل، سيكون هناك صوت تنبيه في حالة فتح الغطاء ولا يمكن تعليق الصوت دون تنبيه إلا في حالة العصر.	الإشارة تظهر "E3"		
تنبيه عدم الاتزان	فحص عدم الاتزان للمرة الثالثة.	الإشارة تظهر "E4"		






التعريف بالمشكلات الشائعة للغسالة

عندما تكون هناك مشكلة ما في الغسالة، يُرجى الاتصال بمكتب الخدمة المحلي أو بقسم خدمة المبيعات الخاص بشركتنا على الأرقام المخصصة بتفكيك الغسالة بنفسه دون تصريح بذلك. وفي حالة عدم عمل الغسالة بصورة طبيعية أو إذا كانت تبدو في حالة شاذة أو تصدر تنبيهات، يُرجى التحقق من الخطأ وتصحيحه باتباع الآتي.

قائمة الأعطال وعمليات الفحص

الأعطال	عناصر الفحص
المياه لا تتدفق	<ul style="list-style-type: none"> • ينبغي التحقق مما إذا كان مصدر الطاقة مُغلقاً أو أن المصهر محترق. • ينبغي التحقق مما إذا كان المياه مقطوعة أو أن ضغط المياه منخفض جداً. • ينبغي التحقق مما إذا كان خرطوم الإدخال متصلًا بشكل صحيح وأن صنوبر المياه مفتوح. • ينبغي التحقق مما إذا كان سائر الترشيح في صمام الإدخال مسدودًا بالقاذورات. • ينبغي التحقق مما إذا كان ملف صمام الإدخال تالفًا. (يُعد الصوت الكهرومغناطيسي الخفيف ظاهرة طبيعية عندما يكون صمام الإدخال مفتوحًا) • ينبغي التحقق إذا ما تم الضغط على زر Start/Pause (تشغيل/ إيقاف مؤقت) بعد الضغط على مفتاح الطاقة.
عملية الغسيل لا تعمل	<ul style="list-style-type: none"> • ينبغي التحقق مما إذا كان مصدر الطاقة مُغلقاً أو أن المصهر محترق. • ينبغي التحقق مما إذا كانت فولتية الطاقة منخفضة للغاية. • ينبغي التحقق مما إذا كانت كمية المياه قد وصلت إلى المستوى المطلوب. • (لن تعمل الغسالة إذا لم يصل الماء إلى المستوى المحدد له) • ينبغي التحقق مما إذا كانت الغسالة مضبوطة على وضع "تأخير وقت الغسيل". (لن تبدأ الغسالة في العمل إلا في الوقت المحدد مسبقاً)
تصريف غير طبيعي	<ul style="list-style-type: none"> • ينبغي التحقق مما إذا كان خرطوم صرف المياه مثبتاً في مكان مرتفع بشدة. • ينبغي التحقق مما إذا كان طرف خرطوم صرف المياه مسدوداً في بركة من المياه. • ينبغي التحقق مما إذا كانت الحلقة المطاطية الداخلية في صمام الصرف مسدودة بالقاذورات.
عملية الغسيل لا تعمل	<ul style="list-style-type: none"> • ينبغي التحقق مما إذا كان غطاء الباب مُغلقاً. • ينبغي التحقق مما إذا كانت جميع الملابس مُكدّسة في جانب واحد من الحلة أو أن الحلة مُكدّسة بالكامل. • ينبغي التحقق مما إذا كانت الغسالة ليست موضوعة في مكان مستقر أو أنها في وضع مائل. (الأرضية ليست مسطحة). • ينبغي التحقق مما إذا سير المحرك مفكوكاً.

ملاحظة: في أثناء عملية الدوران السريع (العصر)، إذا كانت الملابس مُكدّسة في جانب واحد من حلة العصر، سيؤدي هذا إلى عدم توازن حلة العصر مما يسفر عن صوت ارتطام. وفي هذه الحالة، سيسبح الكمبيوتر المُدمج في الغسالة بحالة عدم التوازن هذه وسيعمل على تصحيحها تلقائياً (وسيضخ مزيداً من المياه). ولكن، إذا لم يتم إيجاد حل لمشكلة عدم التوازن بعد ثلاث محاولات تصحيح متوالية، فإن هذا يعني أن عملية التصحيح التلقائية من خلال الكمبيوتر لا يمكنها حل المشكلة. ولذلك يتعين على المستخدم أن يقوم بتسوية الملابس داخل الحلة يدوياً لحل المشكلة.

نهاية البرنامج	الصيانة
<ul style="list-style-type: none"> • ستصدر الغسالة أصوات "دو دو" في نهاية تشغيل أي برنامج لتذكيرك بإخراج الملابس من الغسالة أو تشغيلها مرة أخرى. • بعد إصدار الصوت، تعود الغسالة إلى حالة عدم التشغيل بدون إظهار أي شيء على شاشة العرض مع إغلاق جميع الأضواء. • يُرجى إغلاق الصنوبر وسحب القابس في حالة عدم استخدام الغسالة لتجنب تسرب المياه أو حدوث حرائق. 	<p>استخدم قماشة رقيقة لتجفيف المياه والقاذورات المتكونة على السطح في كل مرة بعد استخدام الغسالة. لا تستخدم أدوات التنظيف والمواد المساعدة والمواد الكيميائية الأخرى لتنظيف الغسالة لتفادي تلف الأجزاء البلاستيكية.</p> 
قم بتنظيف مدخل المياه	تنظيف المرشّح
<p>بعد استخدام الغسالة لفترة طويلة، يمكن أن يحدث انسداد بالأتربة في شبكة منفذ إدخال المياه، لذلك يُرجى تنظيفها باتباع الخطوات التالية:</p> <ol style="list-style-type: none"> 1. شغل مصدر الطاقة وأغلق الصنوبر. 2. قم بتشغيل الغسالة لمدة 5 ثوان بحيث تتدفق المياه إلى الحلة من خلال خرطوم إدخال المياه ثم افصل مصدر الطاقة. 3. قم بتفريغ خرطوم إدخال المياه ونظف الحقيبة الشبكية ثم أعد تركيب طاقم إدخال المياه 	<p>بعد استخدام الغسالة لفترة طويلة، ينبغي اتباع الخطوات التالية عند التنظيف:</p> <ol style="list-style-type: none"> 1. انزع مرشّح النسالة. 2. اقلب الحقيبة الشبكية للخارج واغسلها وقم بتنظيفها بالمياه. 3. أعد تركيبها وتثبيتها. 
قم بغسل مرشّح النسالة في مضخة التصريف (للأنواع التي تشمل على مرشّح تصريف)	
<ol style="list-style-type: none"> 1. قم بصرف المياه من المضخة وضع وعاءً من تحتها لتجميع الماء. 	<ol style="list-style-type: none"> 2. قم بفك غطاء المضخة في عكس اتجاه عقارب الساعة. 
<ol style="list-style-type: none"> 3. أخرج مرشّح النسالة. 	<ol style="list-style-type: none"> 4. قم بتنظيف المرشّح. 
<ol style="list-style-type: none"> 5. أعد تركيبه واضبط المكان المُحدّد ليتواءم مع فتحة المضخة. 	<ol style="list-style-type: none"> 6. اربط غطاء المضخة بإحكام في اتجاه عقارب الساعة. 

ملاحظة: إذا لم يتم تنظيف مرشّح الصرف في الوقت المناسب (بعد كل ١٠ مرات من الاستخدام)، قد تحدث مشكلة في عملية الصرف.

نبذة عن إجراءات برنامج الغسيل التلقائي الكامل

الوقت الإجمالي	وقت الدوران (السريع) (العصر)	عدد مرات الشطف	وقت الغسيل	مستوى المياه	البرنامج
62 دقائق	7 دقائق	مرتان	18 دقائق	6	Normal (عادي)
30 دقائق	5 دقائق	مرة واحدة	6 دقائق	4	Quick (سريع)
55 دقيقة	6 دقائق	مرتان	12 دقيقة	6	Soft (ناعم)
62 دقيقة	7 دقائق	مرتان	18 دقيقة	6	Memory (الذاكرة)
ساعتان	9 دقائق	مرتان	النقع 54 دقيقة الغسيل 10 دقائق	7	Soak (النقع)
63 دقيقة	/	/	/	/	Air dry (هواء جاف)
65 دقيقة	8 دقائق	مرتان	20 دقيقة	8	Strong (قوي)
60 دقيقة	3 دقائق	مرة واحدة	20 دقيقة	8	Tub Clean (تنظيف الحلة)

ملاحظة:

- يتضمن الوقت الإجمالي الوقت الخاص بإدخال الماء ووقت التجفيف. ويمكن أن يتأثر هذا الوقت بضغط المياه في الصنبور في المنزل وسرعة الصرف.
- في أثناء البرنامج الخاص بالأقمشة الجينز، تُضخ المياه الساخنة والباردة في نفس الوقت كإجراء افتراضي.

برنامج الفاعلية

في أثناء برنامج الغسيل والنقع، يُعرف هذا باسم "برنامج الفاعلية الموجه للمملكة العربية السعودية" كالتالي: عمليات الغسل 10 دقائق ونقع لمدة 54 دقيقة وشطف مرتين وعصر لمدة 9 دقائق.

مستوى المياه

مستوى المياه	1	2	3	4	5	6	7	8
حجم المياه	25 لتراً	33 لتراً	42 لتراً	49 لتراً	56 لتراً	64 لتراً	80 لتراً	85 لتراً
وزن الملابس	1.0 كجم	2.5 كجم	4.0 كجم	5.5 كجم	7.0 كجم	8.5 كجم	10.0 كجم	13.0 كجم

نبذة عن إجراءات برنامج الغسيل التلقائي الكامل

Normal (عادي)

وهو برنامج لغسل الأقمشة العادية وهو مناسب للأقمشة القطنية من نسيج الرامبي. ينفذ هذا البرنامج عملية غسل واحدة وشطف مرتين وتسنقرق عملية العصر وقتاً طويلاً نسبياً.

Quick (سريع)

وهو برنامج مناسب لغسل الملابس القليلة الاتساح والملابس الصيفية.

Memory (الذاكرة)

يمثل هذا البرنامج ذاكرة للغسالة، حيث إنه يتذكر كافة مُعاملات الغسيل التي قام المستخدمون بضبطها، مثل مستوى الماء ووقت الغسيل وعدد مرات الشطف وغيرها. وتعمل ذاكرة الغسالة بعد الضغط على زر Start/Pause (تشغيل/ إيقاف مؤقت)، ويتم التشغيل بعد اختيارك لذاكرة الغسالة، حيث يمكنك رؤية جميع الحالات التي اخترتها في المرة الأخيرة.

Soft (ناعم)

يتميز هذا البرنامج باختيار مستوى الماء (متوسط أو مرتفع أو منخفض) إلى جانب درجة حرارة منخفضة وسرعة غسل وعصر بطيئة وذلك للوصول إلى الحد الأدنى من التلف والتشويه.

Soak (النقع)

وهو برنامج مُصمم لغسل الملابس الأكثر اتساحاً حيث تزيد مدة النقع به بمقدار 54 دقيقة في أثناء عملية الغسل.

Strong (قوي)

يتميز هذا البرنامج بطول فترته نسبياً كما أن التدفق أقوى ومن ثم تكون فعالية الغسل أفضل.

Air dry (هواء جاف)

يعمل هذا البرنامج على عدم زوال الألوان وتجنب تشوه الأنسجة كما أنه مُخصص للملابس غير المقاومة للماء ويمكن استخدام الوظيفة الخاصة بهذا البرنامج لتجفيف الملابس بدون حرارة لتحقيق نتيجة مشابهة للتجفيف في المنزل.


Tub Clean (تنظيف الحلة)

من خلال العصر المتقطع، يمكن تنظيف قاذورات الحلة الداخلية والخارجية ووحدة الدفع.

التأخير:

برنامج وقت التأخير

- يشير وقت التأخير إلى وقت بدء عملية الغسيل المُحدد سلفاً.
1. شغل مصدر الطاقة.
 2. افتح الصنبور وقم بتمديد خرطوم الصرف.
 3. ضع الملابس والمنظفات في الغسالة.
 4. اختر مستوى المياه المناسب وفقاً لكمية الملابس.
 5. حدد الوظائف والبرامج.
 6. اضغط على الزر "DELAY" (تأخير) لتحديد وقت بداية عملية الغسيل.
 7. أغلق الغطاء واضغط على زر Start/Pause (تشغيل/إيقاف مؤقت)

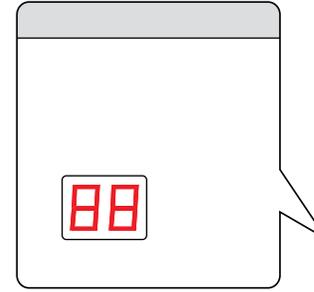

تأكيد عملية التأخير والتحقق منها

1. بعد تشغيل وظيفة التأخير، ستعرض قناة رقمية وميضاً بوقت التأخير بينما ستتطفئ كافة الأضواء الأخرى.
2. وبعد تشغيل وظيفة التأخير، اضغط على زر Delay "تأخير التشغيل" بشكل مستمر، فقد تستعرض البرنامج والوظيفة السابق ضبطهما. حرر الزر كي يعود البرنامج لحالة تأخير التشغيل.

إلغاء وقت التأخير أو تبديله

1. اضغط على الزر "Power" (طاقة) لإلغاء وقت التأخير.
2. لتغيير وقت التأخير، قم بإلغاء وقت التأخير أولاً ثم اضغط على الزر "Delay" لإعادة ضبطه.

التعليمات الخاصة بإجراء الغسيل الفردي

1. يملك المستخدم حرية اختيار أي عملية فردية أو مزيج من عمليات الشطف والعصر وفقاً للاحتياجات الفعلية. كل ما عليك فعله هو إغلاق واحد أو اثنين من هذه المؤشرات التي لا يحتاج المستخدم إليها. ويشير فتح المؤشر إلى العملية التي يحتاج المستخدم إليها.
2. عملية الغسيل الفردية - بعد تشغيل مفتاح الطاقة، أوقف تشغيل مؤشري RINSE (الشطف) و SPIN (العصر) من خلال الضغط على زر الوظائف. وتعد عملية الشطف الفردي مشابهة لعملية العصر الفردي.
3. عملية الغسيل والعصر الفردية - بعد تشغيل مفتاح الطاقة، أوقف تشغيل مؤشر RINSE (الشطف) من خلال الضغط على زر الوظائف. وتعد عملية الشطف والعصر الفردي مشابهة لعملية الغسيل والعصر الفردي.

قفل الأطفال:

1. تعمل هذه الخاصية فقط بعد البدء في البرنامج؛
2. اضغط على الزر [Start/Pause] (تشغيل/إيقاف مؤقت) لتشغيل البرنامج ثم اضغط على الزر [Wash] & [Rinse] (شطف/غسيل) في الوقت نفسه لتشغيل وظيفة قفل الأطفال. وإذا ما أراد المستهلك إلغاء هذه الوظيفة، يمكنه الضغط ثانية على زر الغسيل والشطف [Wash] & [Rinse] في الوقت نفسه.
3. وعند تشغيل وظيفة "قفل الأطفال"، إذا ما حدث أن فُتح الغطاء في أثناء عمل الغسالة، سينطلق صوت إنذار. افتح الغطاء في غضون 20 ثانية، سينطلق صوت التنبيه "E3"، وعندما يُغلق الغطاء في غضون 20 ثانية، سينطلق صوت التنبيه، ولمواصلة تشغيل البرنامج السابق الذي أغلق المستهلك قبله الغطاء، إذا فتح الغطاء بعد 20 ثانية، ستظهر شاشة العرض "CL" وتعني "تنبيه عطل طبيعي"، وسيُفتح صمام التصريف. وبعد استمرار عملية التصريف لمدة 90 ثانية، سيقطع صمام التصريف. في أثناء هذه العملية، لا يمكن إطلاق صوت التنبيه. سيصدر صوت التنبيه الطبيعي كل 15 دقيقة. ويمكن للمستهلك إغلاق الغسالة أو فصل مقبس الطاقة لإطلاق هذا التنبيه.

وظيفة الوزن التقريبي:

1. اضغط على زر [On/Off] (تشغيل/إيقاف تشغيل)
2. افتح الخرطوم وأنزل خرطوم الصرف.
3. أدخل الغسيل والمنظف (لا ترش المنظف على الملابس مباشرة وذلك لتجنب زوال ألوان الملابس)؛ أغلق الغطاء.
4. جدد البرنامج "عادي" أو "ناعم" أو "قوي". ستختار الغسالة مستوى المياه المناسب بصورة تلقائية وفقاً لكمية الملابس.
5. اضغط على زر Start/Pause (تشغيل/إيقاف مؤقت) لتشغيل وظيفة الوزن التقريبي.

ملحوظة:

1. عندما يكون هناك ماء في الحلة، لا تتوفر هذه الوظيفة.
2. يمكن تشغيل هذه الوظيفة فقط في أثناء عمل البرامج "عادي" و"قوي" و"ناعم".
3. قبل الضغط على زر Start/Pause (تشغيل/إيقاف مؤقت)، إذا أختار المستهلك مستوى الماء، فلن تعمل وظيفة الوزن التقريبي.
4. اضغط على زر Start/Pause (تشغيل/إيقاف مؤقت)، وستقوم الغسالة بتشغيل وظيفة الوزن التقريبي. كما يمكن للمستهلك اختيار مستوى المياه المناسب وتحديدته حسب الحاجة.

وظيفة إيقاف التشغيل الذاتي:

1. في حالة عدم عمل الغسالة في غضون 10 دقائق من تشغيلها، فسوف تُغلق تلقائياً.
2. عند الانتهاء من عملية الغسيل وصدور الصوت الطنان 6 مرات، سيقطع مصدر الكهرباء تلقائياً.

التحكم غير المتوازن:

1. في أثناء عملية الدوران السريع (العصر) هذه، وبشروط توصيل مفتاح الأمان، في حالة حدوث قطع مفاجئ، تنتقل الغسالة إلى وضع الضبط اللامتوازن؛
2. في أثناء الوصول إلى مرحلة الضبط اللامتوازن، يوفض ضوء LED الخاص بالشطف، مما يسمح بوصول الماء إلى المستوى المُحدد، ويُضبط حسب حالة الملابس، ويصرف بعد انتهاء الشطف ويعود إلى عملية الدوران السريع (العصر) العادية. وإذا لم تتم العملية بكفاءة بعد الضبط لثلاث مرات، سينطلق صوت تنبيه.

وظيفة الذاكرة في حالة انقطاع التيار الكهربائي

- في حالة انقطاع مصدر التيار الكهربائي بشكل مفاجئ في أثناء التشغيل، تتذكر الآلة حالة العملية الحالية وعندما تعمل الطاقة، تعود الماكينة إلى حالة العملية السابقة بصورة تلقائية.

نظام اللمسة الواحدة

- بعد تشغيل الطاقة، اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) مباشرة إلى أن تظهر علامة One-key Washing (الغسل بزر واحد). وسيتم إلغاء الوظيفة إذا تم الضغط على أي أزرار أخرى مثل مستوى الماء والبرنامج ودرجة الحرارة والوظيفة. كما ستكون الوظيفة غير صالحة في حالة ترك مياه في الحلة الداخلية، وسيتم ضبط البرنامج مباشرة على وضع Normal (العادي) مع ضبط مستوى الماء الافتراضي على الرقم 6.

- وستؤدي الغسالة عملية استكشاف تقريبية على الفور من خلال الضغط على زر Start/Pause (تشغيل/إيقاف مؤقت) بعد تشغيل مصدر الطاقة حيث سيتم اختيار مستوى المياه والبرنامج وفقاً لكمية الملابس. وفي أثناء الاختيار، يوفض مصباح مستوى المياه بصفة مستمرة، حيث يوجد على شاشة العرض الرقمية العلامة "E3" في الوقت نفسه، ويكون زر الطاقة هو الوحيد الذي يعمل. بعد الانتهاء من عملية الاستكشاف، يتم اختيار درجة البرنامج "Quick" "سريع" مع ضبط مستوى المياه تلقائياً على 1/2/3، و"Normal" "عادي" مع ضبط مستوى الماء على 4/5/6 أيضاً، و"Soak" "نقع" مع ضبط مستوى الماء على 7/8. وسيعمل البرنامج بصورة تلقائية عند الاختيار وانتهاء البرنامج وضبط مستوى الماء.

اختيار البرنامج:

1. اضغط على زر [On/Off];
2. حدد مستوى المياه واختر البرنامج;
3. اضغط على زر Start/Pause (تشغيل/ إيقاف مؤقت).

عند الانتهاء من عملية الغسيل:

1. سينطلق صوت مستمر من الصفارة لـ 6 مرات وبعد ذلك ستنفصل الطاقة بصورة تلقائية;
2. أغلق صنبور المياه.
3. وعلى الرغم من إمكانية فصل الطاقة بصورة تلقائية، ينبغي نزع قابس الكهرباء أيضاً مراعاة للأمن والسلامة.

وظيفة التنبيه عندما يُفتح باب الغسالة:


1. عند الغسيل أو العصر، سينطلق صوت التنبيه "E3" عندما يقوم المستهلك بفتح الغطاء، وعندما يغلق المستهلك الغطاء، سينطلق صوت التنبيه ويستمر تشغيل البرنامج المحدد قبل فتح المستهلك للغطاء.
2. وعندما تبدأ وظيفة "Delay"، سيطلق صوت التنبيه "E3" الخاص بوظيفة "Delay" عندما يقوم المستهلك بفتح الغطاء، وعندما يغلق المستهلك الغطاء، سيطلق صوت التنبيه، ولمواصلة تشغيل وظيفة "Delay".
- ولكن في أثناء عمل الغسالة، إذا قام المستهلك بفتح الغطاء، لن يصدر صوت تنبيه.

مهارات غسيل الملابس:

1. في أثناء غسيل الملابس التي يمكن أن تتلف بسهولة، يمكن للمستهلك أن يضع هذه الملابس في حقيبة شبكية ثم يشترع في عملية الغسيل؛
2. بالنسبة للملابس ذات الأحجام الكبيرة أو الملابس التي يمكن أن تطفو بسهولة، ينبغي وضعها في الحوض أولاً؛
3. بالنسبة للملابس التي يمكن أن تتعقد بسهولة، يتعين على المستهلك أن يقلب هذه الملابس على ظهرها ثم يشترع في عملية الغسيل؛
4. ولغسل الملابس ذات الأشرطة أو السيور أو الأربطة أو السوست، يتعين على المستهلك ربطها وقفل السوست جيداً.
5. إزالة الترسبات قبل الغسل؛
6. بالنسبة للأجزاء الشديدة الاتساخ، يمكن للمستهلك أن يفرّكها بالمنظفات أولاً.

ملاحظة ⚠

أغلق الغطاء العلوي أثناء تشغيل الغسالة في مرحلة العصر، وإلا فسوف تتوقف الغسالة عن العمل بشكل تلقائي وتصدر صوت إنذار غير مُعتاد. لن تعمل الغسالة إذا لم يصل الماء المملوء إلى المستوى المُحدد له.

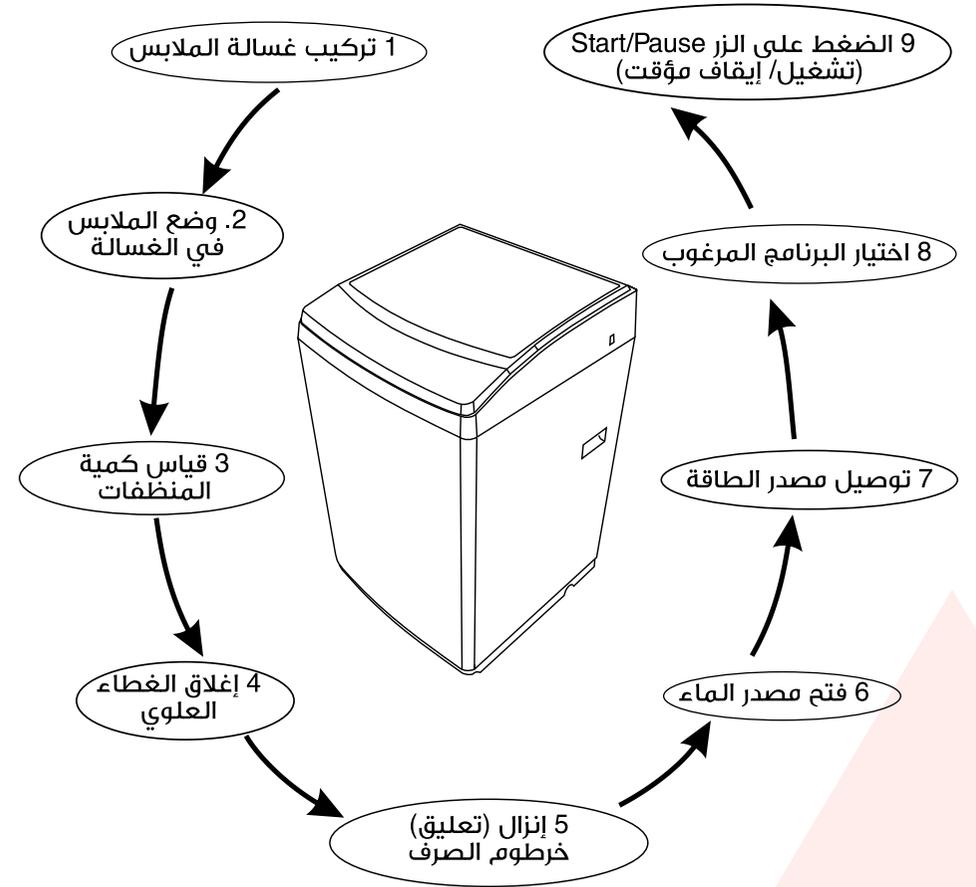

الوظائف الرئيسية:

التحضير:

1. أنزل خرطوم الصرف؛
2. وصل خرطوم الإدخال وافتح صنبور المياه؛
3. ضع قابس الطاقة في المقبس؛
4. أخرج العملات والأشياء الأخرى من الجيوب وقم بهز الملابس للتخلص من أي تسربات بها.

الخطوات التفصيلية:

1. اضغط على زر [On/Off];
2. اختر مستوى المياه المناسب وفقاً لكمية الملابس لديك؛
3. اضغط على زر Start/Pause (تشغيل/ إيقاف مؤقت).

التعليمات الخاصة بلوحة تشغيل الغسالة

6. زر التأخير "Delay"

عند الضغط مع الاستمرار على زر التأخير "Delay"، فإن كل درجة تضيف ساعة واحدة ويصدر صوت صفارة واحدة، وبعد أن تصل إلى 24 ساعة، ستعود إلى وضعها الأولي. وبعد تشغيل التأخير (لا تضغط على زر قفل الأطفال "child lock")، إذ إن المستهلك يمكنه مراجعة البرامج المعدة عند الضغط على زر "delay" مرة أخرى. وبعد تشغيل التأخير، سيكون هناك "منبه للتأخير" في حالة فتح المستهلك للغطاء وفي حالة إغلاق المستهلك للغطاء، سيتم إطلاق هذا الإنذار، ولكن في أثناء عمل الغسالة، وإذا قام المستهلك بفتح الغطاء، سيصدر تنبيه "E3". للاستخدام التفصيلي، يمكن للمستهلك الرجوع لوصف "الوظائف الخاصة - وظيفة التأخير".

5. قفل الأمان للأطفال

اضغط على زر التشغيل / الإيقاف المؤقت [Start/Pause] لتشغيل البرنامج، ثم [Wash] اضغط على زر الغسيل والشطف في الوقت نفسه لتشغيل [Rinse] ووظيفة قفل الأمان للأطفال، حيث يمكنها إغلاق البرنامج المحدد لتجنب أي مشكلات لا داعي لها في حالة قيام الأطفال بتشغيل الغسالة بصورة خاطئة. وإذا ما أراد المستهلك إلغاء هذه الوظيفة، يمكنه الضغط ثانية على زر الغسيل في الوقت [Wash] & [Rinse] والشطف نفسه.

4. الوظيفة

بعد التشغيل، سيومض ضوء واحد من بين الأضواء الخاصة بوظائف الغسيل والشطف والدوران السريع وذلك وفقاً للعملية الجارية بالفعل.

التعليمات الخاصة بلوحة تشغيل الغسالة

9. درجة الحرارة:

اضغط على هذا الزر للاختيار من بين درجات حرارة المياه المناسبة للغسيل.

8. وظيفة برنامج التنظيف السريع


FCS (برنامج التنظيف السريع) تشغيل برنامج التنظيف السريع: بعد تشغيل مفتاح الطاقة، حدد برنامج "عادي" و"ناعم" و"نقع" و"قوي". ثم اضغط على زر برنامج التنظيف السريع "FCS". ثم اضغط على زر التشغيل / التوقف المؤقت "Start/Pause". وبهذا ستعمل وظيفة برنامج التنظيف السريع. ستظهر الأشكال المناسبة بعد عمل وظيفة برنامج التنظيف السريع. إلغاء وظيفة برنامج التنظيف السريع: بعد اختيار وظيفة برنامج التنظيف السريع، يمكن إلغاء الوظيفة من خلال الضغط على أي زر فيما عدا أزرار "درجة الحرارة" أو "مستوى المياه" أو "التأخير" أو زر إغلاق الغسالة.

7. اختيار البرنامج:

قبل بدء عملية الغسيل، اضغط على هذا الزر لاختيار البرنامج المناسب [عادي]، [ناعم]، [نقع]، [قوي]، [سريع]، [ذاكرة]، [هواء جاف]، [تنظيف في الحلة]..

1. مصدر الطاقة:

اضغط على هذا الزر للاختيار من بين درجات حرارة المياه المناسبة للغسيل.

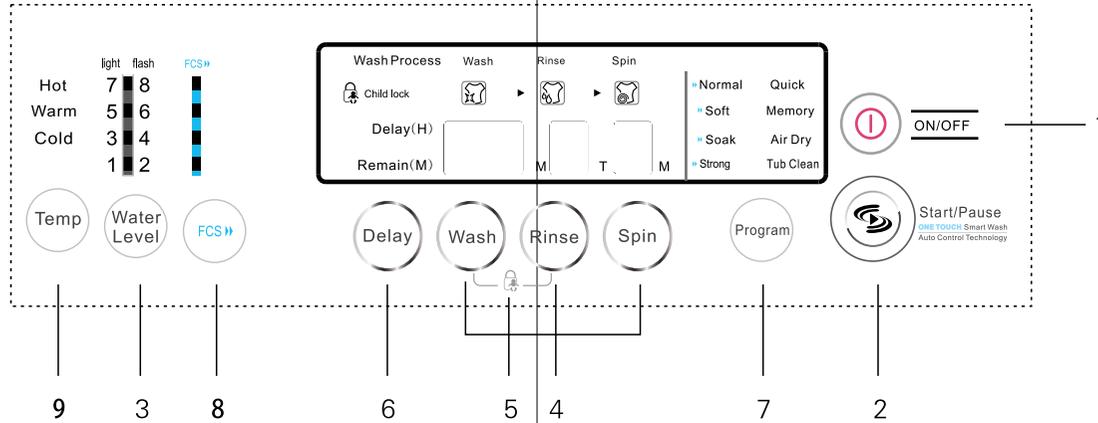

3. اختيار مستوى الماء

قبل الشروع في عملية الغسيل، يمكن للمستهلك اختيار مستوى الماء وفقاً لدرجة الاتساخ أو الخامة أو وزن الملابس. وللاستعمال بالتفصيل، يمكن للمستهلك الاطلاع على القسم الخاص بـ "العلاقة بين مستوى الماء والحمولة".


2. تشغيل / إيقاف مؤقت (Start / Pause)

يتميز زر "التشغيل / الإيقاف المؤقت" [Start / Pause] بأداء وظيفتي التشغيل والإيقاف المؤقت للغسالة. في ظل الضغط على هذا الزر باستمرار، ستنتقل الغسالة بين وضعي التشغيل والإيقاف المؤقت.


* في حالة تغيير الدرج، ستختفي هذه المعلومات. لحماية لوحة التحكم، ينبغي ألا يقل الفاصل الزمني بين فتح مصدر الطاقة وإغلاقه عن 3 ثانية.

تركيب الغسالة

2 تركيب خرطوم إدخال المياه.

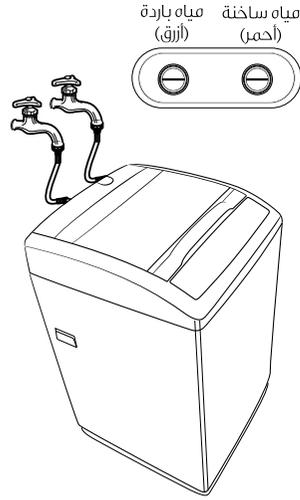

1 قم بضبط القاعدة القابلة للضبط حتى تستقر الغسالة على الأرضية بثبات.

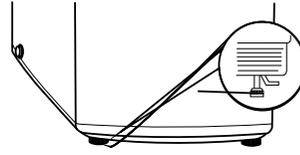


قاعدة قابلة للضبط (تمتد عند إدارتها في اتجاه عقارب الساعة وتقصّر عند إدارتها عكس اتجاه عقارب الساعة) (قم بإمالة الغسالة أولاً بدرجة طفيفة وقم بفك مقبض القاعدة القابلة للضبط. قم بضبط القاعدة القابلة للضبط لضمان ملائمة الحوائب الأربعة للغسالة للأرض بصورة ثابتة. وبعد ذلك، قم بربط مقبض القاعدة القابل للضبط وأغلقه. وإذا لم تكن الأرضية مسطحة بشكل واضح، ينبغي إجراء الضبط على سطح الأرضية، وإلا سيميل حوض الغسالة ويصطدم بالهيكل)

6 إدخال الملابس ووضع كمية مناسبة من مسحوق الغسيل.

5 إنزال خرطوم الصرف.

ملاحظة:
قبل بداية تشغيل الغسالة، ينبغي أن يقوم المستخدم بتثبيت مضخة الصرف في مكان المخرج على ارتفاع من 86-100 سم لتعليق الأنبوب.

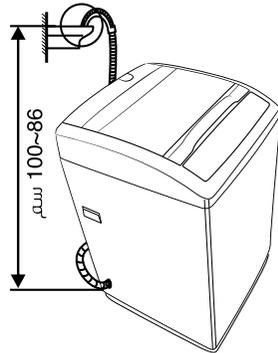

3 التوصيل بمصدر الطاقة الكهربائية.



4 فتح مصدر الماء.




ملاحظة
قبل الشروع في عملية الغسيل، يُرجى إخراج العملات المعدنية والمفاتيح والأشياء الصلبة الأخرى وإغلاق سوست الملابس بإحكام لتفادي تلفها وإصابة الحوض بأضرار.





التعريف بمكونات الغسالة

أسماء المكونات

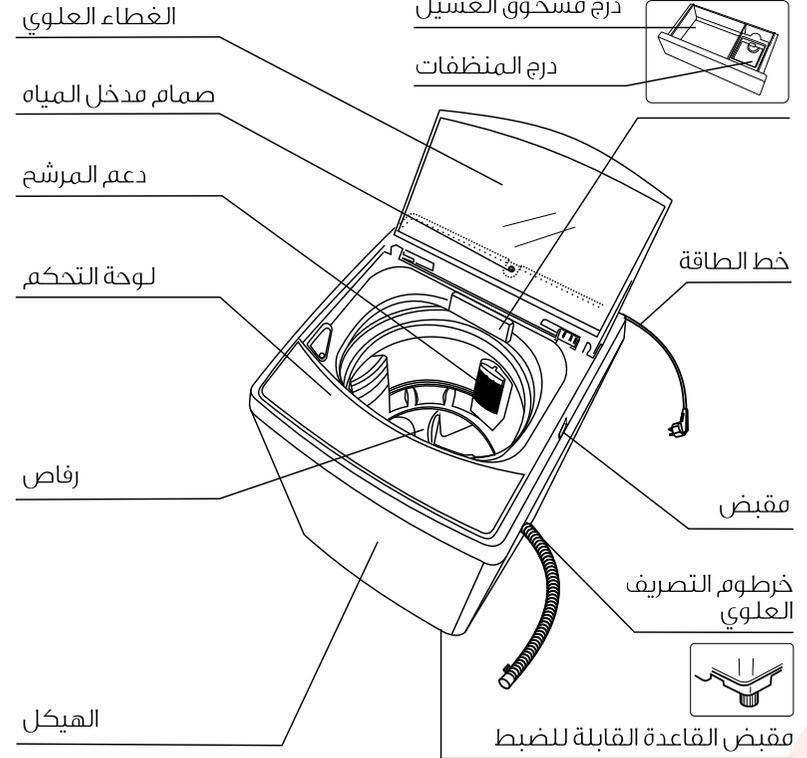


المُلحقات

	
مجموعة خرطوم إدخال المياه	غطاء القاعدة


تركيب الغسالة

انزع عبوة التغليف

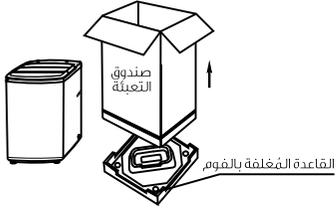


- انزع عبوة التغليف وأخرج اللوح السفلي من الهيكل من على الغطاء الفوم.
- افتح غطاء باب الغسالة وأخرج الملحقات.
- يحظر تماماً إجراء تشغيل تجريبي أو غسيل في أثناء استمرار وضع الغسالة على القاعدة المُغلقة بالفوم.

وضع خرطوم صرف المياه الغلوي

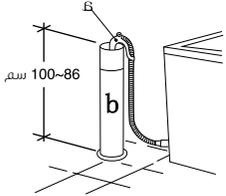

- يجب أن يكون ارتفاع أنبوب الصرف (a) ما بين 86-100 سم.
- ينبغي ألا يقل قطر الأنبوب "ب" عن 3 سم كما يجب ألا تقل سرعة التدفق عن 40 لتر/دقيقة.
- وقبل بداية تشغيل الغسالة، ينبغي أن يقوم المستخدم بتعليق أنبوب التصريف على ارتفاع من 86-100 سم من الأرض.

تركيب أنبوب إدخال المياه

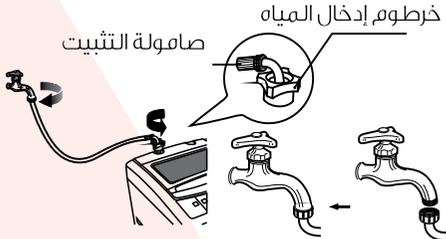

- ضع ماسورة إدخال المياه (التي تتضمن كيس ترشيح معدني) بصورة ملولبة على الصنبور.
- ثم قم بربط الطرف الآخر من خرطوم إدخال المياه بصورة لولبية على صمام إدخال المياه (على أن تكون حلقة منع التسريب المطاطية في الداخل).
- ملاحظة: عند ربط صامولة التثبيت بإحكام، وزع القوة بشكل متساوٍ ولا تقم بلي صمام إدخال المياه لتجنب كسر وصلة صمام إدخال المياه.

السلامة والتدابير الوقائية


تحذير ⚠

يُرجى عدم غسل المعاطف وسترات المطر ومعاطف الصيد وما شابهها في غسالة الملابس



محظور

يُرجى التأكد من توصيل أنبوب مدخل المياه وأن الصنبور مفتوح قبل الشروع في غسل الملابس.

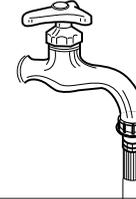

يُحظر تماماً وضع أطفال أو أوزان ثقيلة على الغسالة



محظور

لا تستبدل كابل الطاقة بنفسك.



محظور

لا تملأ الحوض بالماء يدوياً.




محظور

لا تشد كابل الكهرباء عند سحب القابس.



تحذير ⚠

يُرجى توصيل الخط الأرضي للمقبس جيداً لتجنب الصدمات الكهربائية من خلال التسريبات العرضية.
(تأريض)

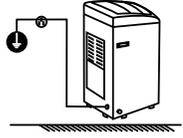

تأريض

يُرجى سحب القابس من المقبس في حالة عدم استخدام الغسالة.



انزع قابس الطاقة

يُرجى عدم وضع الأشياء التالية على الغسالة: الشموع والأقراص الطاردة للبعوض والسجائر والأشياء الأخرى القابلة للاشتعال، إلى جانب المواقف الكهربائية ومدفأة الهواء المزودة بمروحة ومصادر التدفئة الأخرى.




ممنوع التدخين وإشعال النيران

يُرجى إدخال قابس الطاقة بشكل فحكم.




لا تقم بإدخال القابس أو نزعها ويداك مبللتان لتجنب الإصابة بصدمة كهربائية.

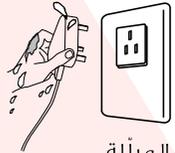

ممنوع استخدام الأيدي المبللة

يُرجى استخدام مصدر الطاقة الصحيح.

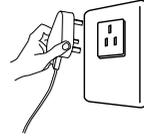

تحذير ⚠

يُرجى عدم إدخال يدك لإخراج الملابس من الحوض الدوار قبل أن يتوقف تماماً.



ممنوع اللمس

يُرجى عدم تفكيك الغسالة وتجميعها دون تفويض.



التفكيك ممنوع

يُرجى عدم شطف الغسالة بالماء مباشرة عند تنظيفها.



ممنوع الشطف بالماء

يُرجى عدم تركيب الغسالة في بيئة رطبة وممطرة لتجنب حدوث صدمة كهربائية أو اندلاع حرائق أو حدوث أعطال أو انبعاث هيكل الغسالة.




ممنوع التعرّض للرطوبة

يُحظر غسل الملابس الملامسة للكبروسين والجازولين والكحوليات والمواد الأخرى القابلة للاشتعال.



محظور

يُرجى عدم السماح للأطفال بالصعود أعلى الغسالة أو التحديق في الحوض الدوار في أثناء عمل الغسالة لتجنب الحوادث.

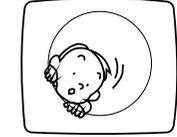


محظور

يُرجى تنظيف قابس الكهرباء بانتظام لإزالة الغبار والأتربة لتجنب إتلاف التوصيلة.



يُرجى عدم إتلاف كابل الطاقة المرنة وقابس الكهرباء لتجنب حدوث صدمة كهربائية أو قصر في الدائرة أو اندلاع حريق.

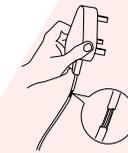

محظور

المحتويات

2	السلامة والتدابير الوقائية
6	تركيب الغسالة
7	الإعداد قبل عملية الغسل
8	التعريف بمكونات الغسالة
9	التعليمات الخاصة بلوحة تشغيل الغسالة
11	البداية السريعة
12	عملية الغسيل الأساسية
13	سمات خاصة
15	نبذة عن إجراءات برنامج الغسيل التلقائي الكامل
17	صيانة الغسالة وتنظيفها
18	التعريف بالمشكلات الشائعة للغسالة
19	عرض الأعطال والحلول
20	المواصفات الفنية

السلامة والتدابير الوقائية

يُرجى الانتباه جيداً للعناصر التالية لتجنب إيذاء نفسك والآخرين واطلاع الممتلكات الشخصية:

	تحذير	يشير هذا إلى إمكانية تعرُّض الشخص لإصابة حادة أو الوفاة.
	تنبيه	يذكُرُك هذا الرمز بإمكانية إلحاق إصابة بالأشخاص أو حدوث خسائر للممتلكات.

يُرجى ملاحظة المحتويات التالية الواردة في الرسوم البيانية.

	يمثل هذا الرمز عبارة (انتبه) حيث تُعرض التنبيهات التفصيلية داخل الأشكال البيانية. 
	يمثل هذا الرمز عبارة (التشغيل ممنوع) حيث تُعرض العناصر المحظورة بالتفصيل داخل الأشكال البيانية. 
	يمثل هذا الرمز عبارة (التنفيذ الإجمالي) حيث تُعرض العناصر الخاصة بالتنفيذ الإجمالي بالتفصيل داخل الأشكال البيانية. 

تحذير 

- هذا الجهاز غير معد للاستخدام من قِبل أشخاص (بما في ذلك الأطفال) لديهم قدرات بدنية أو حسية أو عقلية محدودة أو تنقصهم الخبرة والمعرفة، ما لم يتم مراقبتهم وتوجيه الإرشادات إليهم بخصوص استخدام هذا الجهاز من قِبل الشخص المسؤول عن سلامتهم.
- يجب مراقبة الأطفال لضمان عدم العبث بالغسالة.
- يتعين استخدام مجموعة الخراطيم الجديدة المرفقة مع الجهاز، مع مراعاة عدم إعادة استخدام مجموعة الخراطيم القديمة.
- في حال تلف سلك الكهرباء، يجب استبداله عن طريق الجهة المصنعة أو وكيل الخدمات التابع لها أو أشخاص مؤهلين بنفس مستوى الكفاءة وذلك بغرض تجنب أي مخاطر.
- ينبغي ألا تكون هناك أي عوائق تسد الفتحات. هذه الغسالة مُصممة للاستخدام المنزلي فقط.
- لا تضع الغسالة في مكان مُعرَّض للرطوبة.
- لا تضع يديك داخل حوض التجفيف الدوّار أثناء تشغيل الغسالة.
- في حالة عدم توقف حوض التجفيف الدوّار في غضون ٥٠ ثانية بعد فتح الغطاء، يُرجى التوقف عن استخدام الغسالة وإرسالها للإصلاح.