


CK-218 / CK-219 マルチファンクションテーブルオープン L竹 / R竹

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、スノーピーク製品拡張用の竹製のテーブルです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容

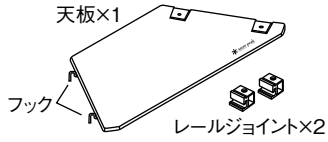

※イラストはCK-219です。



取扱説明書(本書)

スペック

- サイズ:990×496×25mm
- 材質:竹集成材、アルミ、ステンレス
- 重量:4.3kg
- ※脚は付属しておりません。別売りのセットCK-109/112/113/114が必要です。別途お問い合わせください。

対応品番

本製品は以下の品番に取り付けることができます。
CK-149/CK-150/CK-080/LV-210(SET-200,SET-210)/LV-310/ST-050
※そのほかの製品に対応しておりませんので、ご注意ください。
※本取説中では、CK-149/CK-150をIGTフレームと表記します。
※本製品を取り付ける際は対応する製品の取扱説明書をよくお読みください。
※LV-310に取り付ける際には、LV-311が必要です。別途お問い合わせください。

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- 本製品を取り付ける際は対応する製品の取扱説明書をよく読んでからご使用ください。●本製品の上で燃焼器を使用する場合、燃焼器の取扱説明書をよく読み、注意事項を従ってください。火災や火傷などの重大な事故につながる恐れがあります。●本製品の上で、乳幼児や小さいお子様を寝かせる、または座らせるのは大変危険です。絶対にやらないでください。
- 焚き火の近くでは絶対に使用しないでください。特に焚き火を囲むようなセッティングはしないでください。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

- 本製品のフックは完全に固定する機能はありません。本製品が対応する製品に、確実にセットされていることを確認してからご使用ください。しっかりとセットされずに使用すると、本製品上に置いたものが転倒したり、落下したりする恐れがありますので大変危険です。●本製品をご使用の際は対応する製品と同じ高さの脚を必ず取り付けてください。また、取り付け脚のアジャスターを調整して、脚を地面に必ず接地させてからご使用ください。脚が浮いたまま使用すると本体の転倒などにつながり重大な事故を招く恐れがあります。●本製品に手をつき体重をかけるなどしないでください。本製品のバランスを崩し転倒する恐れがありますので大変危険です。●本製品の上に座ったり立ち上がりたりするのは危険です。絶対にしないでください。●取り付け製品と連結したままの製品の移動はしないでください。連結部に無理な力がかかり、本製品が破損する恐れがあります。必ず本製品を外して、移動してください。●本製品を使用する場合は、均等な力がかかるようにし、上に載せる重量は30kg以下にしてください。●機能を損なったり、強度が低下しますので改造は絶対に行わないでください。改造製品のアフターサービスは受けできません。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。








- 本製品のフックに無理な力がかからないように注意してください。本製品または、連結した製品が破損します。●接続した脚に横方向の力を加えないでください。脚の曲り、破損の原因になります。●地盤のしっかりした平らな場所でご使用ください。ご使用状況により不安定のまま使用を継続しないでください。●雨中に放置したり、長時間水分に接触すると、塗膜の内部に水分が浸透し、染みや変色、反り等の原因になることがあります。●本製品は常設用ではありません。また、常時重量物を置くような環境では天板が反る原因になります。●本製品をぶつかるなどして塗膜が損傷すると、湿気を吸収しやすくなり、染みや変色、反り等の原因になることがあります。●本製品の上に火をかけた直後の熱い鍋などを置く、焦げの原因になります。絶対置かないでください。●本製品は天然の竹を加工、集成したものです。色の濃淡や風合いは個々の特性です。天然の色や風合いをお楽しみください。●固いもの尖ったものなどで擦らないでください。キズの原因になります。●本製品はご使用状況や保管状況により、退色、変色、反り、ゆがみ、割れが発生することがあります。特に暖房の熱が直接伝わる場所、長時間直射日光に当たる場所、夏場の車内での使用や保管はしないでください。取扱いに十分注意してください。●本製品を関連商品に取り付ける際は周囲に人が居ないことを確認してから行ってください。

メンテナンス方法

- 軽い汚れや水分が本体に付着した場合は速やかに乾いた布で拭き取り、よく乾燥させてください。●塩分、調味料やその他の薬品などが付着した場合は、固く絞った布でよく拭きとり、十分に乾燥させてください。●使用後、保管する際には直射日光を避け、風通しのいい場所で保管してください。

使用方法

- ①天板を裏返して置き、脚固定用穴に脚パイプの凸部を合わせて差し込みます。(その時、脚パイプの先端の突起が天板の反対側に突き出たことを確認してください。)
- ②脚のガタツキがなくなるまで回転(時計、反時計回りどちらでもロックします。)させ、しっかりと固定させます。(脚は取り付け時に傾くよう設計されています。)
- ③天板のフックを引き出し回転させます。
- ④(IGTフレームの場合)対応する製品と確実に連結させます。
- ⑤(レールジョイントを使用する場合)IGTフレームの長辺のレールに挿入し、天板フックと連結します。
- ⑥全ての脚が必ず地面に接地していることを確認してからご使用ください。接地させる際は脚のアジャスターを調整してください。
※アジャスターのネジ部は25mm以上露出しない範囲でご使用ください。

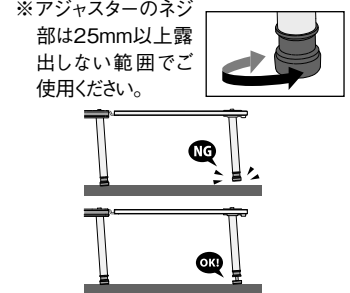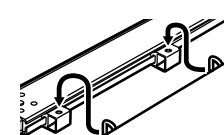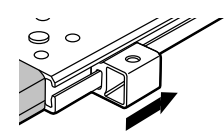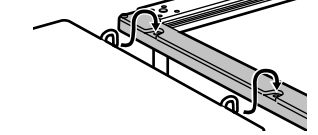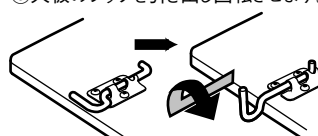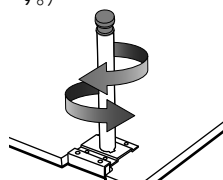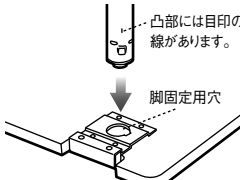

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。 / 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、
販売店様または弊社ユーザーサービスまで
お問い合わせください。

スノーピークユーザーサービス
☎0120-010-660 (9:00~17:00)
Email:userservice@snowpeak.co.jp


株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel.0256-46-5858 Fax.0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

CK-218 / CK-219 Multifunction Table Open L Bamboo / R Bamboo

Thank you very much for purchasing a Snow Peak product. This product is a bamboo extension for the Snow Peak Iron Grill Table (IGT) system. To use this product safely and correctly, please carefully read these instructions. After reading these instructions, keep this manual in a safe place for future reference. If you find anything in the instruction manual that is difficult to understand or find a defect with the product, stop using it immediately and contact the dealers where the product was purchased or Snow Peak Customer Service.

Set Contents (Name of the Parts)

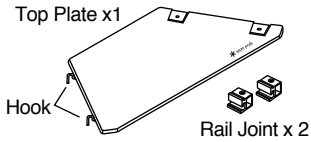

* The illustration above is CK-219.



Instruction Manual
(this document)

Specifications

- Size: 990x496x25mm
- Material: Bamboo laminated material, aluminum, stainless steel
- Weight: 4.3 kg (9.5lb)
- * Legs are not included. Please purchase a leg set, CK-109/112/113/114, separately.

Supported Item code

This product can be paired with the following items.
 CK-149/CK-150/CK-080/LV-210 (SET-200,SET-210)/LV-310/ST-050
 * Please note that this product is not compatible with other products.
 * CK-149/CK-150 is referred to as IGT pole in this manual.
 * When inserting the legs into the slots of this product, please carefully read the instruction manual.
 * LV-310 is required to attach to LV-311. Please purchase separately.

Safety precautions (read carefully before use to avoid accidents and use safely)

⚠ DANGER / Misuse could easily result in a serious accident or death.

●When setting up this product in combination with other products, read all instruction manuals carefully before use. ●When using the combustor on this product, read the instruction manual of the combustor carefully and follow the precautions. It may cause serious accidents such as fire or burns. ●Please do not let infants and small children sit or lie down on this product. ●Never use this product near a bonfire. Do not set it up around the fire.

⚠ WARNING / Misuse could result in serious injury or death to the user.

●The connecting hardware and hooks do not offer complete securement. Inspect the connectors and legs for looseness and confirm that everything is set up correctly before use. Loose connectors or legs could come undone, causing the product to fall or tip over. ●Use legs of the same height to customize your Iron Grill Table set-up. Adjusting the attached legs, make sure that all legs touch the ground before use. Uneven legs may cause the product to tip over or other serious accidents. ●Do not place your weight on this product, or it may fall over. ●Do not sit or stand up on this product. ●Do not move this product if connected to other items. Moving the product will apply excessive force to the connections and damage them. Separate everything before moving. ●Do not place more than 30kg on the tabletop and ensure that the load is distributed evenly on the surface. Otherwise, the unit could tip over or become damaged. ●Do not attempt to modify this product. Modifications may impair its functionality or decrease its strength. Modifications make the product ineligible for after-sale services.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.


●Do not apply excessive force to the connecting hardware and hooks, as they may become damaged. ●Do not apply horizontal force to the legs. The horizontal force will cause the legs to bend or break. ●Use this product on firm, flat ground. Do not use in unstable or uneven areas. ●Leaving this product in the rain or in contact with water for an extended period of time will cause the water to permeate its coating, resulting in staining, discoloration, warping, or distortion. ●This product is not meant for permanent use. Leaving heavy objects on the tabletop permanently could result in warping. ●Hitting the tabletop could damage its coating or make it easier for moisture to get inside, resulting in staining, discoloration, warping, or distortion. ●Do not place a hot pot or pan on top of the product. Hot items may burn the surface. ●This product is made of processed and laminated bamboo. Each one will vary in terms of color density and texture. Please enjoy its natural colors and textures. ●Do not scrub with abrasive or sharp objects, as they will scratch the surface. ●Depending on its usage and storage conditions, the tabletop may become faded, discolored, warped, distorted, or cracked. For example, do not store or use in areas where a heater applies direct heat, areas with direct sunlight for long periods of time, or in a vehicle in the summertime. ●When attaching this product to other products, make sure that there is no one around you.

Maintenance method


●To remove light dirt or moisture from the product, wipe it off quickly with a dry cloth and dry it well. ●If salt, seasonings, or other chemicals stick to the product, wipe off with a tightly wrung cloth and then dry it thoroughly. ●After use, store the product in a shaded, well-ventilated area.

How to use


① Turn the tabletop upside down and insert convex parts of the legs into the leg hole. Make sure that the tip of the legs protrudes through the top of the hole to the opposite side of the tabletop.

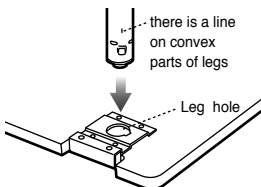


② Rotate legs to secure. The lock works either clockwise or counter-clockwise. The legs are designed to tilt when installed.

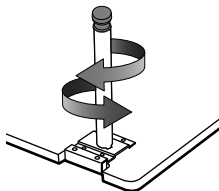


③ Pull out the hook and rotate.

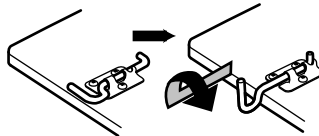

④ Connect to the side of the IGT unit frame.


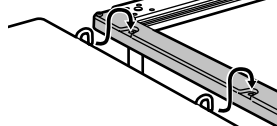


⑤ Insert the rail joints onto the long side of the rail on the IGT unit frame. Then, connect the tabletop hooks.

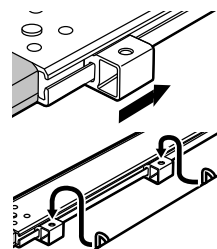

⑥ Please make sure that all legs touch the ground before use. If not, adjust the leg adjusters at the bottom of the leg.

* Do not expose the screw part of the adjuster more than 25 mm.

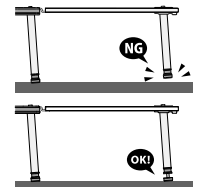

Warranty

Snow Peak guarantees the quality of all its products. Please contact your local Snow Peak dealer if you have any problems with this product. Snow Peak will replace or repair if the product is shown to have manufacture defects. In other instances, Snow Peak may repair at an appropriate fee. Please note, the warranty does not apply under the following conditions: / 1. Natural product deterioration over time. / 2. Damage caused by alterations or careless handling. / 3. Damage caused by improper handling that is prohibited in the instruction manual. / 4. Product failure due to user accidents. / 5. Any damage except due to manufacturing defects. / 6. Damage caused by dirt and rust. / 7. Damage caused by disassembly. / 8. Deformation and damage caused by dropping or other similar incidents. / 9. Product failure due to wear and tear caused by the user. / 10. Damage caused by use with other unrelated products.

Repair

●For repairs, please contact the retailer where you purchased the product or Snow Peak Customer Service ●When you request a repair, please make sure that the product is dry and clean. ●Please attach a memo or some kind of tag indicating the needed repair and detail when and how the damage occurred. ●Shipping cost and repair fee for the repair will be determined as follows. 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak. / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.