

CS-068R ケトル No.1

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、湯沸かし兼調理用鍋です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

スペック

●材質:ステンレス ●本体サイズ:150×140×96(h)mm ●満水容量:0.9L ●重量:290g

安全上の注意事項 ご使用前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- 弊社の燃焼器具と併用する場合、燃焼器具の取扱説明書をよくお読みいただき対応機種をご確認の上、注意事項に従ってお取り扱いください。誤った使用法は火災や火傷等の重大事故につながるおそれがあります。
- 電子レンジでは使用しないでください。爆発、火災等の重大事故につながるおそれがあります。
- ストーブの上では絶対に使用しないでください。本体の転倒、異常過熱等により火傷のおそれがあります。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

- ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお問い合わせいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- 本製品は湯沸かし兼調理用鍋です。その他の用途で使用しないでください。
- ガスコンロやバーナー等の燃焼器具でご使用の場合はゴトクの中央に置いて、炎が製品底面より大きくならないように火力を調整してください。炎が底面よりはみ出したままご使用になりますと、ハンドルが熱くなり火傷のおそれがあります。
- 空焚きはしないでください。火災や火傷及び破損の原因になります。
- 使用中や使用後しばらくは本体が大変熱くなっています。火傷のおそれがありますので、十分に注意してください。特に幼児が触れて大事故にならないよう注意してください。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

- お使いになる前に、中性洗剤と柔らかいスポンジ等で、よく洗ってからご使用ください。
- 満水状態で使用しないでください。沸騰すると吹きこぼれやすくなります。
- 本製品は金属製のため、使用中や使用後しばらくは高温になり火傷の恐れがあります。素手では触れず、必ず市販されている鍋つかみなどを着用し取り扱ってください。
- 焚火や炭火で使用する場合は、炭火の熱や薪の炎が遠火になるように火力を調整してください。本製品が熱くなり火傷のおそれがあります。また蓋の上に薪や炭を乗せないでください。
- 急激な温度変化(熱した本体に冷水をかける等)や強い衝撃を加えると、変形する場合がありますのでおやめください。
- ハンドルの動きが硬い場合は、ハンドルの根元部分をつかんで操作してください。使い始めはハンドルの動きが硬い場合があります。
- 本製品の使用中は落下、転倒させないように注意してください。火傷や怪我の危険及び、変形するおそれがあります。
- 本製品は直火のみ使用可能です。IHコンロでは使用しないでください。

使用方法


- ①コンロの中央部に乗せ、安定させます。
- ②本体に食材や水などを入れ、加熱します。
- ③中火以下で調理します。

(強火で加熱すると食材を焦がす可能性があります。)

◎スタッキングについて

高さ100mm内径155mm以上のサイズのクッカーであればケトルNo.1をスタッキング(収納することができます)。

⚠注意:スタッキングするクッカーの内側に塗装がされている場合は収納しないでください。塗装表面に傷がつく恐れがあります。

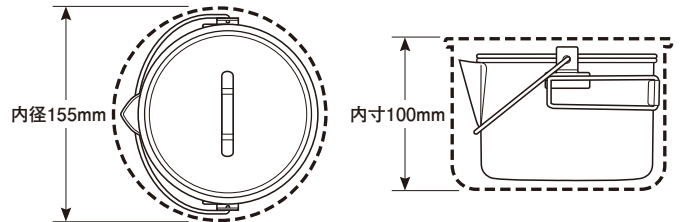

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお問い合わせいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- 洗う場合は金属タワシや磨き粉を含む洗剤で洗わないでください。表面を傷つける要因となります。同様にすす等を落とす際も表面が傷つきますのでおやめください。
- 使用後はよく洗って水分をふき取り風通しの良い日陰でよく乾燥させてください。
- 湿気のない乾燥したところで保管してください。
- 本製品は食器洗浄機や乾燥機を使用しないでください。

品質保証について

お問い合わせいただきました製品は万全を期していますが、万一不備な点がございましたら、お問い合わせいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

修理について

●本格的な修理が必要な場合は、お問い合わせになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。 / 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、**スノーピークユーザーサービス**
販売店様または弊社ユーザーサービスまで
お問い合わせください。
0120-010-660 (9:00~17:00)
Email:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel.0256-46-5858 / Fax.0256-46-5860
www.snowpeak.co.jp

MADE IN TAIWAN

**CS-068R
Kettle No.1**

Thank you for purchasing a Snow Peak product. This product is a kettle or cooker. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Specifications

●Material: Stainless Steel ●Size: 150×140×96(h)mm (5.9"×5.5"×3.7") ●Full water capacity: 0.9L (30.4 fl oz) ●Weight: 290g (10.2 oz)

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

- When using the product together with our combustion appliances, please read the instruction manual of the combustion appliance carefully to confirm the compatible model, and handle it according to the precautions. Improper use may cause fire, burns, or other serious accidents.
- Do not use the product in a microwave oven. Doing so may cause an explosion, fire, or other serious accident.
- Never use this product on a heater. There is a risk of burns due to the product falling over or abnormally overheating.

⚠ WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- This product is a kettle or cooker. Do not use it for any other purpose.
- When using a gas stove, burner, or other combustion appliance, place the product in the center of the burner and adjust the heat source so that the flames do not become broader than the bottom of the kettle. If the flame extends beyond the base of the product, flames may heat the handle of the kettle and cause burns.
- Do not use this product empty. Heating an empty kettle may result in fire, burns, or product damage.
- The kettle is very hot during and after use. Please be careful not to burn yourself. Keep a close eye on the kettle to prevent serious accidents, especially when young children are present.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

- Before use, wash well with mild detergent and a soft sponge.
- Do not use the kettle if it is full of water. Instead, leave a bit of space at the top, so the boiling water does not spill over.
- Since this product is made of metal, it will become hot during use and will remain so for a while after use. Avoid burns by using a potholder or other protection when handling.
- When using this product over a bonfire or charcoal fire, adjust the heating power so the heat from the flames of the charcoal or firewood is indirect. The product may become hot and burn. Do not put firewood or charcoal on the lid - doing so may damage the product.
- Do not apply a sudden impact, jolt, or sudden temperature change (such as pouring cold water over the heated product) as damage may occur.
- If the movement of the handle is hard, grasp the base of the handle to operate it. The handle may be hard to move at the beginning of use.
- Be careful not to drop or tip over the product during use. Doing so may result in burns, injury, or damage to the product.
- Never use the kettle on a heater or induction burner.


Instructions for Use

- 1) Place the kettle on the center of the stove and make sure it is stable.
- 2) Put food, water, etc. into the kettle and begin heating.
- 3) Cook over medium-high heat or lower.
(Heating over high heat may burn the food.)

◎About Stacking

Kettle No. 1 can be stored inside another cooker that has a height of 100 mm(4") high and 155mm(6.1") of or more.

⚠CAUTION : Do not store if the inside of the cooker is painted. The painted surface may be scratched.

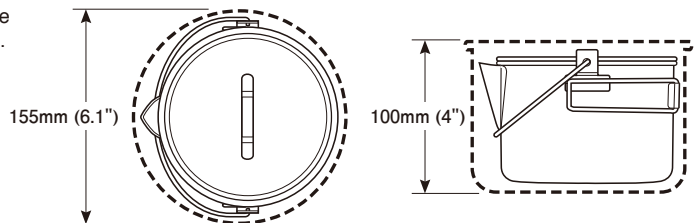

Maintenance

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Do not use a metal scrubbing brush or detergents containing polishing powder when washing. Abrasive materials may damage the surface. Similarly, removing soot will damage the surface, so please do not remove it.
- After use, wash thoroughly, wipe off the water, and dry well in a well-ventilated shade.
- Store in a dry place with no moisture.
- Do not use this product in a dishwasher or dryer.

Warranty

The specifications of Snow Peak products are based on field testing and quality control to ensure the correct function and longevity of every product. If apparent defects in the manufacturing of the product are found, the defective product will be repaired or exchanged free of charge. Damages, as follows, are not covered under warranty.

1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by improper use not following the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Damage not caused by defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage or defects caused when dismantling the product. / 8. Damage and defects caused by dropping or other shocks to the product. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with other maker's products.

Repair

- For repairs, please contact the retailer where you purchased the product or Snow Peak user service. ●When you ask for repair, please make sure that the product is dry and clean. ●Please attach a memo or some kind of tag indicating the needed repair, and please write details of when and how the damage occurred. ●Shipping cost and repair fee for the repair as follows. 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.