

取扱説明書: Ver 1.00

FP-150R / FP-151R / FP-152R ジャンボキャンプシンク / パックシンク / キャンプバケツ

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、折りたたみ式のバケツです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご 使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様も しくは弊社ユーザーサービスまでお問い合わせください。



スペック

質:外側/PVC+ポリエステル 材

断熱材/発泡ポリエチレン+ミラー加工、内側/PVCシート、

その他/ポリプロピレン、樹脂、スチール :FP-150R:Φ345×270mm、収納時:Φ355×65mm

FP-151R:270×265×180mm、収納時:270×185×35mm FP-152R:Φ235×265mm、収納時:360×275×45mm

量:FP-150R:340g FP-151R:260g FP-152R:180g

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●小さいお子様が製品を頭からかぶったり、製品本体に入らないようにして下さい、窒息や思わぬ事故の原因となります。●乳 幼児の手の届かないところで使用してください。思わぬ事故 の原因となります。●ペットが入らないようにしてください。窒息や思わぬ事故の原因となります。

☆警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

●ご使用の前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザー サービス係に点検または修理を依頼してください。●ビンなど割れやすいものを入れる場合は十分にご注意ください。製品内部でビンが割れると同梱しているものにガラスが刺さり、 大変危険です。●本製品内に重たいものを入れすぎないでください。持ち上げて運搬する際に転倒する恐れがあります。

↑ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。


●はじめてご使用になる際は中性洗剤で洗ってください。●本製品に先端がとがった硬いものを入れないでください。本製品に穴が開く原因となります。●火の近くで放置しないでくだ さい。また本製品に熱したものを入れないでください。本体破損の原因となります。●重いものを入れすぎると、変形破損する恐れがあります。入れすぎにはご注意ください。●ドライアイ スは使用しないでください。生地の劣化や破損の原因となります。●車中等高温になる場所に放置しないでください。高温になり製品劣化や破損の原因となります。●濡れた状態で 使用すると色移りする恐れがあります。●食べ物や飲料が製品に付着すると、色移りする恐れがあります。

使用方法

①製品を組み立てます。 【ジャンボキャンプシンク】

* snow peak

【パックシンク】



*snow peak





②運搬したいものを入れます。



③使用しない時の製品は、折りたたんで運搬できます。 手順①と逆の手順で行ってください。

●長期間ご使用しなかった製品を再度お使いになる際は点検を行ったうえでご使用ください。●使用後は中性洗剤でスポンジの柔らかい面を使用して洗ってください。その後、乾いた布でよくふ き取っていただき、乾燥させてください。●濡れた状態で保管しないでください。カビや経年劣化を早める原因となります。●金属製のタワシなど、硬いもので擦らないでください。●保管は日の当た らない風通しのいい涼しい場所で保管してください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載 された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていた だきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素 材の経年劣化による損害など商品の寿命 2.改造および粗雑な取扱いによる故障 3.取扱説明書で禁止されている取扱いによる故障 4.不測の事 故による商品の故障5.その他製造上の欠陥以外による製品の故障 6.ゴミやさびによる故障 7.分解したことによる不具合の発生または破損 8.落下 やその他の衝撃による部品の変形や破損による不具合 9.摩擦によるパーツの変化及びそれによる故障 10.他社製品との組み合わせによる故障

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼され る場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。 ●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付 けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。 ●修理品の運賃並びに修理費については以下のように規 定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。 2.保証対象以外の場合:往復運賃並び に修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、 販売店様または弊社ユーザーサービスまで

スノーピークユーザーサービス **000** 0120-010-660

 $(9:00\sim17:00)$ Email:userservice@snowpeak.co.jp

株式会社スノーピーク

〒955-0147 新潟県三条市中野原456 Tel. 0256-46-5858 Fax. 0256-46-5860 www.snowpeak.co.jp

MADE IN CHINA



Instruction Manual: Ver 1.00

FP-150R / FP-151R / FP-152R Jumbo Camp Sink / Pack Sink / Camp Bucket

Thank you very much for purchasing a Snow Peak product. This product is a collapsible bucket. To use this product safely and correctly, please read these instructions carefully. After reading these instructions, keep this manual in a safe place for future reference. If you find anything in the instruction manual that is difficult to understand, or if you find a defect with the product, stop use immediately and contact the dealers where you purchased the product or Snow Peak Customer Service.

Specifications

Material: PVC Polyester, Polyester, Resin
Body Size: FP-150R: Φ345×270mm (Φ13.6"×10.6)
Stowed: Φ355×65mm (Φ14.0"×2.6)
FP-151R: 270×265×180mm (10.6"×10.4"×7.1")

Stowed:270×185×35mm (10.6"×7.3"×1.4")

 $\begin{tabular}{ll} FP-152R: $\Phi 235 \times 265mm (\Phi 9.3" \times 10.4)$ \\ Stowed: $360 \times 275 \times 45mm (14.1" \times 10.8" \times 1.8")$ \\ \end{tabular}$

Weight: FP-150R: 340g(13.4oz) FP-151R: 260g(10.2oz) FP-152R: 180g(7.1oz)

Before use: please read thoroughly to ensure safety and avoid accidents.

♠ DANGER / Misuse could easily result in a serious accident or death.

● Please do not let small children place the product over their heads or climb in the product itself. This may cause suffocation and unexpected accidents.
● Please keep this product out of the reach of children to avoid unexpected accidents.
● Please do not allow pets to climb into this product to avoid unexpected accidents.

MARNING / Improper use may result in death or serious injury.

● Before use, check the product for abnormalities. If any abnormalities are found, stop using the product then contact the dealer where the product was purchased or Snow Peak Customer Service for inspection or repair. ● Please be cautious when using this product with breakable items like glass bottles. If the bottle breaks inside the product, the glass will stick to the package or other items in the product, which is very dangerous. ● Do not put too many heavy items in this product. It increases the risk of falling when carrying the product.


↑ CAUTION / Misuse could result in injury to the user and/or property damage.

● Wash with a mild detergent before using this product for the first time. ● Do not store anything hard with a sharp tip in this product, as holes may form. ● Do not leave this product near a fire. Additionally, do not store hot food or drinks in this product, as they may cause damage. ● If you put too many heavy items in the container, it may be deformed and damaged. Please be mindful of the weight. ● Do not use dry ice in this product as it may cause the fabric to deteriorate or break. ● Do not leave the product in a car or other places subject to high temperatures. High temperature may cause deterioration or damage. ● If the product is used in a wet area or is left wet for long periods, there is a risk of color staining. ● If food or drink adheres to the inside of the product, there is a risk of color staining.

How to use

①Assemble the product.

[Jumbo Camp Sink]




snow peak

[Pack Sink]

【Camp Bucket】



 $\ensuremath{ \textcircled{2} \textbf{Place}}$ items in the container.

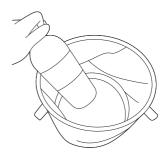

3When not in use, the product can be folded for easy transport.

Maintenance

● If this product has not been used for a long period, please check each part for abnormalities before using it again. ● Do not store this product when it is wet, as mold may form. ● Do not rub with abrasive objects such as metal scrubbing brush.

Warranty

The specifications of Snow Peak products are based on field testing and quality control to ensure the correct function and longevity of every product. If apparent defects in the manufacturing of the product are found, the defective product will be repaired or exchanged free of charge. Damages, as follows, are not covered under warranty.

1. Material deterioration caused by age. 2. Damage caused by modifications or rough handling. 3. Damage caused by improper use not following the instruction manual.

4. Damage caused by unexpected accidents. 5. Damage not caused by defects in the manufacturing process. 6. Damage caused by dust or rust. 7. Damage or defects caused when dismantling the product. 8. Damage and defects caused by dropping or other shocks to the product. 9. Deterioration or failure of parts due to friction. 10. Damage caused by the use of the product in combination with other maker's products.

Regarding Repair

•If a professional repair is necessary, please contact the dealer where the product was sold or Snow Peak Customer Service.
•Please dry and clean the product before sending it for repair. •Please stick a memo onto the damaged area of the product. In the memo, include details explaining the circumstances that led to the damage. •The cost of repair will be determined as follows:

1. If the damage is subject to warranty, transportation cost (both ways) and repair cost will be covered by Snow Peak.

2. If the damage is not subject to warranty, transportation cost (both ways) and repair cost will be covered by the customer.

Snow Peak USA, Inc.

404 NW 23rd Ave., Portland, OR 97210, USA Tel: +1-503-697-3330 IG: @snowpeakusa www.snowpeak.com

MADE IN CHINA