


取扱説明書 Ver 1.00

LV-071M-BK メッシュFDベンチ ブラック

このたびはスノーピーク製品をお買い上げいただき誠にありがとうございます。この製品は折りたたみ機能を有する二人掛け用の椅子です。安全にご使用いただくためにも必ずこの 取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。製品には万全を期しておりますが、フィールドでご使用する前に安全な場所で組立、 取扱い方法及び付属品の確認をしてください。説明内容で理解できない点及び製品に不具合が確認された際には、直ちに使用を中止しご購入いただきました販売店様もしくは 弊社ユーザーサービスまでお問い合わせください。

セット内容(各部の名称)

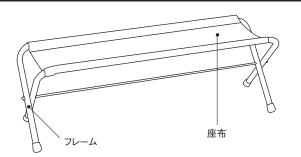



スペック

- ●材質:本体/アルミニウム合金、 ポリエチレン、合成ゴム シート/ポリエステル
- ●サイズ:1,095×330×360(h)mm ●収納サイズ:1,095×65×470mm
- ●重量:1.9kg

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

▲ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●燃焼式のランタン、バーナー、ヒーターなどの熱源のそばで、本製品を使用しないでください。特に焚火、マッチ、ローソク、ライター、タバコなどの裸火や炎のそばでは、絶対に使用しないでください。座布に火が移り、火災や火傷の危険性があります。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

- ●ご使用の前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザー サービス係に点検または修理を依頼してください。
- ●商品の改造は絶対にしないでください。機能を損ない強度や耐久性が低下するなどの原因になります。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

- ●ご使用の際、着衣の金具などが生地に引っ掛かり、思わぬ事故が発生する恐れがあります。十分ご注意ください。
- ●運搬時、座布が突起物に引っ掛からないようご注意ください。
- ●地盤のしっかりした平坦な場所を選び、凹凸のある場所や傾斜地では使用しないでください。
- ●床面がフローリングや畳の場合は、床に傷をつける場合がありますので敷物を敷いてください。
- ●可動するフレームに指を挟まれないように注意し、ゆっくりと開閉作業を行ってください。
- ●転倒の恐れがありますので、浅く腰を掛けたり横座りをしたり無理な姿勢で使用しないでください。また座る目的以外には使用しないでください。
- ●変形や破損の原因となりますので、衝撃を加えたり、激しくゆする行為をしないでください。
- ●お子さまを座らせるときは、必ず大人の管理のもとで使用してください。思わぬ事故やケガが起こる恐れがあります。
- ●本製品の生地は難燃性ではありません。火気の付近でのご使用は十分ご注意ください。
- ●本製品は常設用ではありません。
- ●保管の際は高温多湿な場所を避け、通気性のよい場所に保管してください。
- ●アルミパイプは有色のアルマイト加工(酸化皮膜)を施しています。硬いものや尖ったものに接触したり、擦れたりするとキズがつき、素地が露出することがあります。

メンテナンス方法

- ●座布に汚れが付いた場合は、ぬるま湯に薄めた洗濯用洗剤を布に含ませ、軽く叩く要領で汚れを拭き取ります(丸洗いはしないでください)。 乾燥は直射日光を避け風通しの良い日陰で乾燥させてください。
- ●保管の際は高温多湿な場所を避け、通気性のよい場所に保管してください。

品質保証について

お買い求めいただきました製品は万全を期してますが万一不備な点がございましたら、お買い求めの販売店様または弊社ユーザーサービスまでご連絡ください。製造上の欠陥が原因の場合は無償で 修理または交換させていただきます。その他の場合は適正な価格で修理させていただきます。修理・交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は保証、修理できない 場合もありますので、あらかじめご了承ください。

1.取扱説明書に従わなかったと判断した場合。 / 2.素材の経年劣化による製品の寿命。 / 3.改造及び粗雑な扱いによる製品の故障。 / 4.不測の事故による製品の故障。 / 5.その他製造上の欠陥以外による製品の故障。 / 6.ゴミやサビによる故障。 / 7.分解したことによる不具合の発生または破損。 / 8.落下やその他の衝撃による部品の変形や破損による不具合。 / 9.消耗品の劣化、破損、故障及び付随する不具合。 / 10.他社製品との組合せによる故障。

修理について

- ●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- ●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- ●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- ●修理品の運賃並びに修理費については以下のように規定させていただきます。
 - 1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。
 - 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様 または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス 0120-010-660 (9:00~17:00) Email:userservice@snowpeak.co.jp 株式会社スノーピーク

〒955-0147 新潟県三条市中野原456 Tel.0256-46-5858 Fax.0256-46-5860 www.snowpeak.co.jp




Product Manual: Ver 1.10

LV-071M-BK Mesh FD Bench BK

Thank you for purchasing a Snow Peak product. This Folding Bench is designed for use outdoors. Please read this instruction manual before using and keep this instruction manual for future reference. Please confirm all components and set up instructions before using. If you are not clear on any point, contact your local Snow Peak Dealer before using.

Contents Include (Name of Parts)

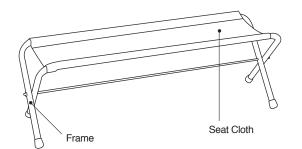



Specifications

- •Material: Frame/ Aluminum Alloy, Polyethylene,
- Synthetic Rubber, Seat/ Polyester
 •Size: 1,095 (43.1") x330 (13") x360(14.2") (h)mm
 •Stowed: 1,095(43.1") x65 (2.6") x470 (18.5") mm
- •Weight: 1.9kg (4.2lbs)

Safety Precautions: Read the following instructions thoroughly to ensure safe and proper usage

♠ Danger / Incorrect handling may result in death or serious injury to the user.

Do not use this product near a heat source such as a gas-powered lantern, burner or heater. In particular, do not use it near open flames such as bonfires, matches, candles, lighters, or cigarettes. The seat cloth may catch fire and cause burns if the product is used near a heat source or open flames.

Marning / Misuse could result in serious injury or death to the user.

• Before using the product, inspect it to ensure there are no abnormalities in any of the parts. If any abnormalities are found, stop use immediately and contact the dealer where the product was purchased or Snow Peak Customer Service for inspection or repair. •Do not do any remodeling. It may cause to lose its strength and performance.

⚠ Caution / Indicates actions which may lead to injury, damage to this product, or damage to other items.

•Metal zippers or buttons may snag or get caught on this product during use. Please exercise caution to avoid unexpected accidents. •When transporting this product, be careful not to let the seat cloth get caught on nearby objects. Place it on stable ground and not on a slope or uneven ground. This product may cause damage if used on a wooden floor or tatami mat. Use it only on a rug or outdoors. •When setting up, be careful to watch the folding legs to avoid pinching your hand or fingers. Open and close legs slowly and not leave the chair when not fully set-up. •Unfold the bench and sit on it facing forward. Do not use it for anything other than a seat. • Avoid shaking or vibrating strongly or for a prolonged timeframe to prevent damage or breaking. • Do not use for children. • The cloth on the bench is not fire-resistant. Be careful using around an open flame. •The product is not for permanent use. •Stow the bench in a location that is dry and moderate in temperature. •The aluminum pipe of LV-077GY is black anodized (oxide film) processed. Scratching may expose the base metal.

Maintenance

- For stains on seat cloth, wipe out with cloth soaked in detergent (do not wash all). Dry under shade and in a well-ventilated area.
- Please store this product in a well-ventilated area away from high temperatures and humidity.

Warranty

Snow Peak guarantees its products quality; please contact your local Snow Peak dealer if you have any problems. Snow Peak will replace or repair if the product is shown to be originally manufactured defective. Snow Peak appreciates your understanding if any of the following conditions are true we may not able to repair the product ,or in some cases may charge a reasonable amount for repair. 1. Products lifetime expires due to material changing in quality naturally with time. / 2. Damage by altering or careless handling. / 3. Damage due to handling that is specifically prohibited in the instruction manual. / 4. Product failure due to user accidents. / 5. Any damage except with product defects due to manufacturing. / 6. Damage by dirt and rust. / 7. Damage by disassembly. / 8. Deformation and failure of parts damaged by dropping or other similar incidents. / 9. Product failure due to wear and tear by user. / 10. Damage caused by use with other unrelated products.

Repair

• For repairs, please contact the retailer where you purchased the product or Snow Peak user service. • When you ask for repair, please make sure that the product is dry and clean. •Please attach a memo or some kind of tag indicating the needed repair and also please write details of when and how the damaged occurred. •Shipping cost and repair fee for the repair as follows. 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.