


LV-077M-BK メッシュFDチェア ブラック

セット内容(各部の名称)

スペック

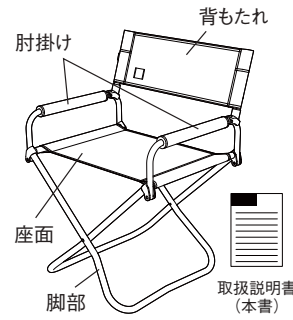

- 材質
フレーム/金属(アルミニウム合金)、シート/ポリエステル、アームレスト/ポリエステル・ウレタンフォーム
- サイズ
595×580×840(h)mm (シート高460mm)
- 収納サイズ
580×110×690(h)mm
- 重量: 3.1kg

このたびはスノーピーク製品をお買い上げいただき誠にありがとうございます。この商品は屋外で使用するために開発された折り畳み式の椅子です。安全にご使用いただくためにも必ずこの取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。製品には万全を期しておりますが、使用する前に安全な場所で組立、取扱い方法及び付属品の確認をしてください。説明内容で理解できない点や製品に不具合が確認された際には、直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

●燃焼式のランタン、バーナー、ヒーターなどの熱源のそばで、本製品を使用しないでください。特に焚火、マッチ、ローソク、ライター、タバコなどの裸火や炎のそばでは、絶対に使用しないでください。座布に火が移り、火災や火傷の危険性があります。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。


●ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●カーペットの上など脚部が滑りやすい床面で使用すると、脚部に大きな負担がかかり破損による転倒の原因となります。椅子を床面に設置したら着座する前に両手で軽く前後に動かし、接地面が滑っている場合は使用しないでください。●商品の改造は絶対にしないでください。機能を損ない強度や耐久性が低下するなどの原因になります。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。


●ご使用の際、着衣の金具などが生地につ引っ掛かり、思わぬ事故が発生する恐れがあります。十分ご注意ください。●運搬時、座布が突起物につ引っ掛からないようご注意ください。●地盤のしっかりした平坦な場所を選び、凹凸のある場所や傾斜地では使用しないでください。●稼動するフレームに指を挟まないように注意し、ゆっくりと開閉操作を行ってください。また、開閉途中の状態では放置しないでください。●必ず正面を向いて着座し、横座りや肘掛けへの着座はしないでください。また座る目的以外に使用しないでください。●変形や破損の原因となりますので、衝撃を加えたり、激しくゆする行為をしないでください。●小さなお子様には使用させないでください。●本製品の生地は難燃性ではありません。火気の付近でのご使用は十分ご注意ください。●本製品は常設用ではありません。●保管は湿気の少ないところで保管してください。●チェアを展開した状態で移動させる場合はチェアの正面に立って肘掛け部分のフレームを両手で持って移動させてください。背もたれのパイプや座布、ハンドルを持って移動すると背もたれが破損する原因になります。●アルミパイプは有色のアルマイト加工(酸化皮膜)を施しています。硬いものや尖ったものに接触したり、擦れたりするとキズがつき、素地が露出することがあります。●製品を開閉するとジョイント金具と脚部がこすれることにより、徐々にアルミパイプの素地が露出していきます。予めご了承ください。●床面がフローリングや畳の場合は、床に傷をつける場合がありますので敷物を敷いてください。

使用方法


セットアップのしかた

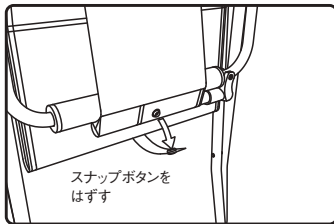


①座布をまとめているスナップボタンを外します。

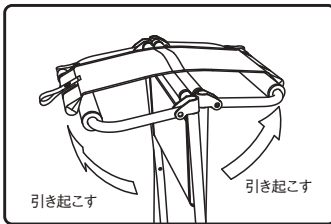

②肘掛けを背もたれと一緒に引き起こします。

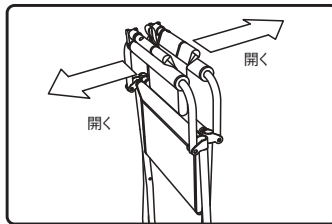


③起こした肘掛けを両手でつかみ左右に開くように脚部を展開します。

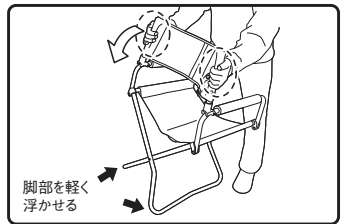


④背もたれ部を両手でつかみ椅子を軽く持ち上げながら背もたれを後方に倒します。


フォールディングのしかた

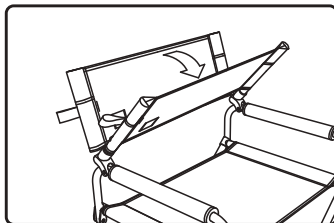


①背もたれを左右同時に折りたたみます。

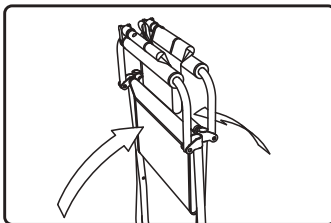

②左右の肘掛け部を握り、持ち上げるようにして中央に寄せます。

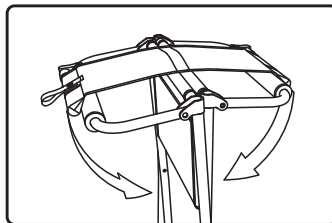

③肘掛け部を外側に回すようにして折りたたみます。

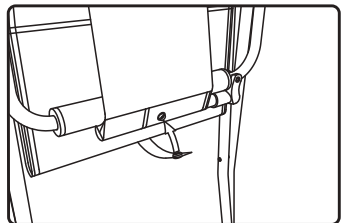

④背もたれに付いているスナップボタンを留めます。

メンテナンス方法

●長期間ご使用しなかった製品を再度お使いになる際は、弊社ユーザーサービスまで点検を依頼してください。●座布に汚れが付いた場合は、ぬるま湯に薄めた洗濯用洗剤を布に含ませ、軽く叩く要領で汚れを拭き取ります(丸洗いはしないでください)。●肘掛け部の生地は取り外してぬるま湯に薄めた洗濯用洗剤の中で手洗いし、その後流水でよくすすいでください。乾燥は直射日光を避け風通しの良い日陰で乾燥させてください。●保管の際は高温多湿を避け、通気性の良い場所で保管してください。

品質保証について

お買い求めいただきました製品は万全を期しますが万一不備な点がございましたら、お買い求めの販売店様または弊社ユーザーサービスまでご連絡ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適正な価格で修理させていただきます。修理・交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は保証、修理できない場合もありますので、あらかじめご了承ください。1.取扱説明書に従わなかったと判断した場合。/ 2.素材の経年劣化による製品の寿命。/ 3.改造及び粗雑な扱いによる製品の故障。/ 4.不測の事故による製品の故障。/ 5.その他製造上の欠陥以外による製品の故障。/ 6.ゴミやサビによる故障。/ 7.分解したことによる不具合の発生または破損。/ 8.落下やその他の衝撃による部品の変形や破損による不具合。/ 9.消耗品の劣化、破損、故障及び付随する不具合。/ 10.他社製品との組合せによる故障。

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合・往復運賃並びに修理費は弊社にて負担いたします。2.保証対象以外の場合・往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス
☎ 0120-010-660
(9:00~17:00)
Email:userservice@snowpeak.co.jp


株式会社スノーピーク

〒955-0147 新潟県三条市中野原456
Tel.0256-46-5858 Fax.0256-46-5860
www.snowpeak.co.jp

MADE IN CHINA

**LV-077M-BK
Mesh FD Chair Black**

Contents Include

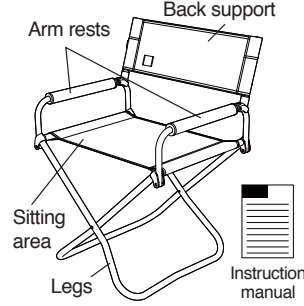

Specification

- Material / Body frame: Aluminum alloy, Fabric: Polyester, Arm rest: Polyester · Urethane foam
- Dimensions / 595x580x840 (h)mm / 23.4" x 22.8" x 33" (Seat height: 460mm / 18") (Stowed: 580x110x690 (h)mm / 22.8" x 4.3" x 27.2")
- Weight / 3.1kg / 6.8 lbs

Thank you for purchasing this Snow Peak product. This Folding Chair is designed for use outdoors. Please read this instruction manual before using and keep this instruction manual for future reference. Please confirm all components and set up instructions before using. If you are not clear on any point, contact your local Snow Peak Dealer before using.

Handling Precaution Read the following instructions thoroughly prior to use to assure safety.

⚠ Danger / Indicates actions from which life-threatening, major accidents are clearly expected.

- Do not use this product near a heat source such as a gas-powered lantern, burner, or heater. Do not use it near open flames such as bonfires, matches, candles, lighters, or cigarettes. The seat cloth may catch fire if used near heat sources or open flames, potentially causing a fire or burns.

⚠ Warning / Misuse could result in serious injury or death to the user.


- Inspect this product before use to ensure there are no abnormalities in any of the parts. If any abnormalities are found, stop use immediately and contact the dealer where the product was purchased or Snow Peak Customer Service for inspection or repair. ●Using this chair on carpet or other slippery surfaces can put extra strain on the legs and may cause them to collapse or break. Before sitting, confirm that the floor is not slippery and that the chair is stable and secure. Do not use on uneven or slippery floors. ●Do not do any remodeling. It may cause to lose its strength and performance.

⚠ Caution / Indicates actions which may lead to injury, damage to this product, or damage to other items.


- Metal buttons or zippers may get caught on this product during use. Please be careful to avoid unexpected accidents. ●When transporting, be careful not to let the seat cloth get caught on nearby objects. ●Place it on stable ground and not on a slope or uneven ground. ●When setting up, be careful to watch the folding legs to avoid pinching your hand or fingers. Open and close legs slowly and not leave the chair when not fully set-up. ●Sit the chair properly down facing to the front, not sit on arm rest area. Do not use for other purpose except as a seat. ●Avoid shaking or vibrating strongly or for a prolonged timeframe to prevent damage or braking. ●Do not use for children. ●The cloth on the chair is not fire-protected. Be care using around an open flame. ●The product is not for permanent use. Do not leave the chair set-up outside over long periods of time, only set-up when using camping or any other temporary outdoor use. ●Stow the chair in a location that is dry and moderate in temperature. ●If you wish to move the chair opened, stand in front of the chair and hold the frame of the arm with both hands and then move the chair. It may cause damage on the back if you hold the pipe on the back or the seat fabric or handles. ●The aluminum pipe of LV-077GY is black anodized (oxide film) processed. Scratching may expose the base metal. ●While opening and closing the legs the joint metal fittings and legs will rub against each other, gradually exposing the base metal. ●This product may damage wooden floors or tatami mats. Please use this product on a rug or outdoors.

Installation


How to set up

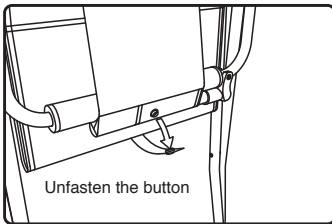


① Undo the strap.

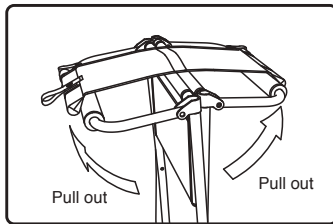

② Pull the arm rests and the back support out.

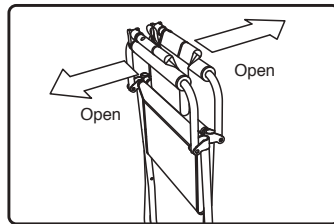


③ Hold the arm rests with both hands, and then open the legs on a chair to the left and right.

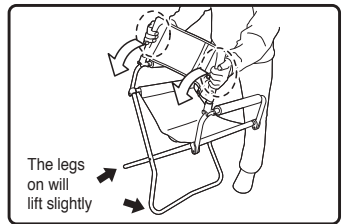


④ Tip the back support back while holding it with both hands and lift the chair slightly.


How to fold

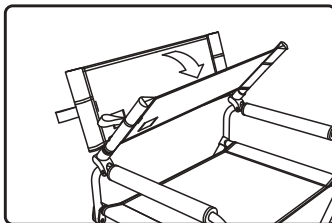


① Fold the back support from the left and right sides at the same time.

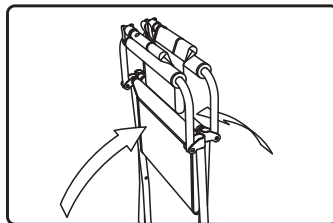

② Hold the arm rests and lift them up towards the center.

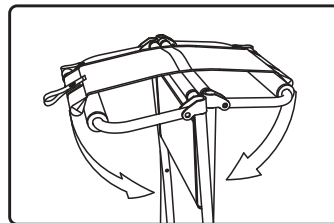

③ Fold the arm rests by rotating out.

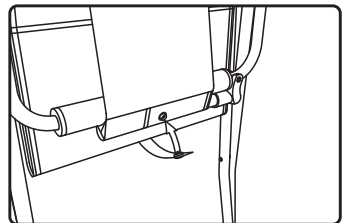

④ Fasten the back support button.

Maintenance

- If this product has not been used for a long time, please contact Snow Peak Customer Service for an inspection before use. ●For stains on seat cloth, wipe out with cloth soaked detergent (do not wash all). ●For stains on arm rest, detach it and hand wash by detergent with warm water and wash well with running water. Dry under shade and in a well ventilated area. ●Please store this product in a well-ventilated area away from high temperatures and humidity. *Not recommended for washing machine or dryer.

Warranty

Snow Peak guarantees its products quality ; please contact your local Snow Peak dealer if you have any problems. Snow Peak will replace or repair if the product is shown to be originally manufactured defective. Snow Peak appreciates your understanding if any of the following conditions are true we may not able to repair the product , or in some cases may charge a reasonable amount for repair. 1. Products lifetime expires due to material changing in quality naturally with time. / 2. Damage by altering or careless handling. / 3. Damage due to handling that is specifically prohibited in the instruction manual. / 4. Product failure due to user accidents. / 5. Any damage except with product defects due to manufacturing. / 6. Damage by dirt and rust. / 7. Damage by disassembly. / 8. Deformation and failure of parts damaged by dropping or other similar incidents. / 9. Product failure due to wear and tear by user. / 10. Damage caused by use with other unrelated products.

Repair

- For repairs, please contact the retailer where you purchased the product or Snow Peak user service. ●When you ask for repair, please make sure that the product is dry and clean. ●Please attach a memo or some kind of tag indicating the needed repair and also please write details of when and how the damaged occurred. ●Shipping cost and repair fee for the repair as follows. 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.

Snow Peak, Inc.

456, Nakanohara, Sanjo-shi Niigata 955-0147 Japan
Tel. +81 256-46-5858 Fax. +81 256-46-5860
www.snowpeak.co.jp

Snow Peak USA, Inc.

404 NW 23rd Ave., Portland, OR 97210, USA
Tel. +1-503-697-3330 Fax. +1-503-699-1396
www.snowpeak.com