

TW-540 酒筒Titanium

このたびはスノーピーク製品をお買い上げいただき誠にありがとうございます。この製品は、飲料を携行するためのボトルです。安全にご使用いただくためにも必ずこの取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。製品は万全を期しておりますが、ご使用する前には安全な場所で組立、取扱い方法及び付属品の確認をしてください。取説内容で理解できない点及び製品に不具合が確認された際には、直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

各部の名称	使用例	セット内容
		本体×1 スペック ●材質: ボトル本体 / チタニウム、 キャップ / ポリプロピレン、 パッキン / シリコーンゴム ●サイズ: φ76(口元内径φ26.8)×225(h)mm ●重量: 135g ●容量: 540ml


ご使用前に よく読んで予測される事故を回避し安全にご使用ください。

- ⚠ 危険** 明らかに生命に関わる重大な事故が予測される行為を示します。
- ⚠ 警告** 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。
- ⚠ 注意** ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

取扱上の注意

- ⚠ 危険** 明らかに生命に関わる重大な事故が予測される行為を示します。
 - ボトル本体やキャップを直接火にかけたり、湯煎するなど加熱しないでください。爆発や溶解の恐れがあります。また、火傷やケガなどにつながる恐れがあります。
 - 本製品をIHヒーターや電熱調理器、電子レンジでは使用しないでください。
- ⚠ 警告** 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。
 - 本製品に熱い飲み物を入れてキャップをすぐに閉めると、飲み物から発生した蒸気により内圧が上がり、開栓しにくくなる場合があります。無理に開栓すると熱い蒸気や飲み物が噴出したり、キャップが飛んで火傷やケガにつながる恐れがあります。
 - 以下の物は絶対に入れないでください。
 - ① ドライアイス・炭酸飲料 / 内圧が上がりキャップが開かなくなったり、飲み物が吹き出たり、キャップが破損して飛散することがあり、ケガや物的損害につながる恐れがあります。
 - ② 牛乳・乳飲料・果汁など腐敗しやすい飲み物 / 長く放置した場合、腐敗ガス発生により内圧が上がり、キャップが開かなくなったり、飲み物が吹き出たり、キャップが破損して飛散することがあり、ケガや物的損害につながる恐れがあります。
 - ③ お茶の葉・果肉 / キャップと本体の間に詰まり、中の飲み物が漏れて物的損害につながる恐れがあります。
 - ④ ニゴリ酒・ドブロク・マッコリ等の発泡系の酒類 / 内圧が上がりキャップが開かなくなったり、飲み物が吹き出たり、キャップが破損して飛散することがあり、ケガや物的損害につながる恐れがあります。
 - 飲み物を入れた状態で長く放置しないでください。飲み物が変質・腐敗すると腐敗ガス発生により内圧が上がり、キャップが開かなくなったり、飲み物が吹き出たり、キャップが破損して飛散することがあり、ケガや物的損害につながる恐れがあります。

- ⚠ 注意** ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。
 - 本製品は構造上、熱いものを入れると本体にも熱が伝わり熱くなります。40℃以上の熱い飲み物を入れて使用しないでください。
 - ボトル本体・キャップは煮沸したり、食器洗浄機、食器乾燥機を使用しないでください。熱によりボトル本体やキャップが変形し飲み物が漏れるなど、物的損害につながる恐れがあります。
 - 本製品は改造・分解は絶対に行わないでください。
 - 本製品を飲み物の携行以外の目的に使用しないでください。
 - 本製品に飲み物を入れて携行する際は、携行前に必ずボトルを逆さまにして漏れの無いことを確認してから行ってください。
 - 本製品は構造上ボトルの口元が細くなっております。飲み物を入れる際はこぼさぬよう十分ご注意ください。困難な場合はジョウゴなどを使用してください。
 - コーヒーやお茶などを繰り返し入れると、ボトルやパッキンが変色することがあります。予めご了承ください。
 - 本製品は構造上、冷たい飲み物を入れると、外気温との温度差により結露します。他の物が濡れるなど物的損害につながる恐れがありますので取扱には十分ご注意ください。
 - 飲み物を入れる際は右の図の位置以上には入れないでください。
 - キャップのパッキンは正しく取り付けを確認し、キャップを確実に閉めてください。パッキンと取付けが不完全では飲み物が漏れたり溢れる恐れがあり、周囲のものを汚したり、物的損害につながる恐れがあります。
 - 長期間使用しない場合は、パッキン保護のため、キャップをゆるめて保管してください。
 - 本製品に飲み物を入れて冷凍させないでください。飲み物が膨張してボトルが破裂する恐れがあります。
 - ボトル内部の飲み物の温度が下がると、内圧が下がってキャップが開きにくくなる場合があります。キャップが開かない場合は、ボトルの外側からお湯を掛けて暖めると開けやすくなる場合があります。

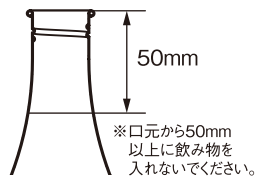

メンテナンス

- はじめて使用される際は、工程上の油分などが残っている場合もございますので、中性洗剤を使用してよく水洗いしてからご使用ください。
- ご使用後は柄のついたスポンジなどで中性洗剤を使用して水洗いし、よく乾燥させてから保管してください。

品質保証について

お買い求めいただきました製品は万全を期しますが万一不備な点がございましたら、お買い求めの販売店様または弊社ユーザーサービスまでご連絡ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適正な価格で修理させていただきます。修理・交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は保証、修理できない場合もありますので、あらかじめご了承ください。

- | | |
|--------------------------|------------------------------|
| 1. 素材の経年劣化による損傷などの製品の寿命 | 6. ゴミやさびによる故障 |
| 2. 改造及び乱雑な扱いによる故障 | 7. 分解したことによる故障 |
| 3. 取扱説明書で禁止されている取扱いによる故障 | 8. 落下やその他衝撃による部品の変形や破損による不具合 |
| 4. 不慮の事故による製品の故障 | 9. 摩耗によるパーツの変化およびそれによる故障 |
| 5. その他製造上の欠陥以外による製品の故障 | 10. 他社製品との組み合わせによる故障 |

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させていただきます。
 1. 保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。
 2. 保証対象以外の場合: 往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス
 **0120-010-660**
 (9:00~17:00)
 Email: userservice@snowpeak.co.jp

株式会社スノーピーク
 〒955-0147 新潟県三条市中野原456
 Tel. 0256-46-5858 Fax. 0256-46-5860
www.snowpeak.co.jp

TW-540 Sake Bottle Titanium

Thank you for purchasing this Snow Peak product. This product is a container for storing liquid. Please read this instruction manual carefully before using to use it safely. And please keep the instruction manual safe after reading. Please check assembling method, handling method and accessories in a safe place before using the product in a field, though we will take all possible measures for the product. Please stop using it immediately if you can not understand the content of explanation or find failure of the product, and please let the store which you purchased the product or our customer service know that.

Name of sections	Usage example	Contents include
		Bottle×1, Lid×1 Specifications ●Material: Bottle/Titanium, Lid/Polypropylene, Packing/Silicon ●Dimensions: Φ3 × H 8.85 inches ●Weight: 4.76oz (135g) ●Capacity: 18.2 fl oz


Before using Please read this section carefully to avoid accident and use the product safely.

- ⚠ Danger** Indicating the risk of life-threatening accident without proper usage.
- ⚠ Warning** Indicating the possible risk of serious injury or death without proper usage.
- ⚠ Caution** Indicating the possible risk of injury, damage of the product, and permanent breakage of the product.

Safety precautions

- ⚠ Danger** Indicating the risk of life-threatening accident without proper usage.
 - Please do not place the bottle and the lid directly on a flame. There is a possibility of explosion and damage. And there is a possibility that it leads to injury.
 - Please do not use this product with Induction cooking heater, electric heating cooker, or microwave oven.
- ⚠ Warning** Indicating the possible risk of serious injury or death without proper usage.
 - If you close the lid promptly after putting hot beverage in the bottle, it can make the bottle difficult to open since inner pressure will increase by steam from beverage. If you open the lid forcibly, there is a possibility that hot steam or beverage will spout, or lid will fly and it leads burn and injury.
 - Please do not ever put following items in the bottle.
 - ①Dry ice, Carbonated drink / Lid can not be opened, beverage can spout, or lid can be damaged and scatter by the increasing inner pressure. There is a possibility that it can lead to injury and product damage.
 - ②Perishable beverage such as Milk, Milk drinks, Fruit juice etc./ Lid can not be opened, beverage can spout, and lid can be damaged and scatter by increased inner pressure by generation of gas from decomposition if you leave perishable beverage for a long time. There is a possibility that it leads injury and product damage.
 - ③Tea leaves, Fruit pulp / Inside beverage can leak if tea leaves or fruit pulp will be stuck between lid and main body. There is a possibility that it leads product damage.
 - ④Sparkling liquor such as Unrefined sake, Raw sake, Makgeolli etc. / Lid can not be opened, beverage can spout, and lid can be damaged and scatter by increasing of inner pressure. There is a possibility that it leads injury and product damage.
 - Please do not leave beverage in the bottle for a long time. Lid may not be able to open, beverage can spout, and lid can be damaged and scatter by increased inner pressure by generation of decomposition gas if the beverage will change in quality or go rotten. There is a possibility that it leads injury and product damage.

- ⚠ Caution** Indicating the possible risk of injury, damage of the product, and permanent breakage of the product.
 - Heat will transfer from inside to main body, and this product will be hot by touch when you pour hot beverage into it. Please do not use this product with hot beverage over 40°C (104°F).
 - Please do not place product or lid in boiling water. Please do not use dishwasher and dish dryers. There is a possibility that it will lead to product damage. For example, bottle main body and lid will transform and beverage will leak.
 - Please make sure not to reconstruct and disassemble this product.
 - Please do not use this product for a purpose other than carrying beverage.
 - Please confirm that there is no leak by turning the bottle upside down before carrying.
 - The mouth of this product is narrow by structural reasons. Please pour beverage into the bottle with enough care not to spill. Please use funnel if you have difficulty pouring beverages, or want to make certain not to spill any of the beverage.
 - Please note that the bottle may change color over time after pouring coffee and tea or other staining beverages.
 - Dew condensation will form on this product from the difference between the inside temperature and the outside temperature when you pour cold beverage into it. Please handle it with enough care to avoid damaging other surfaces or other articles that come into contact with the product.
 - Please do not pour beverage into the bottle above the position in the right picture.
 - Please make sure to close lid after confirming that you mounted packing of lid correctly. If mounting of packing is imperfect, there is a possibility that beverage will leak or overflow, and it makes surroundings dirty, and it leads physical damage.
 - Please keep lid loose and store bottle to protect packing when you will not use the bottle for a long time.
 - Please do not refrigerate beverage in the bottle. There is a possibility that the bottle will burst after beverage expands.
 - Inner pressure may make opening the lid difficult when the temperature of beverage in the bottle drops. Warm the bottle by pouring hot water onto outside of that, it may make opening the lid easier.

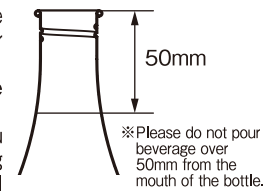

Maintenance

- Wash the product well with a neutral detergent before using it for the first time.
- Wash the product with a neutral detergent and a sponge having a handle after use. And store it after drying well.

Warranty

Snow Peak guarantees its products quality. We have made every effort to insure our products are free from any defect or flaws. In the rare event that you feel this product has a defect or needs repair please contact the Snow Peak customer service or go to your local Snow Peak dealer where you purchased this product. Snow Peak will replace or repair any defect that may have been caused due to manufacturing. Snow Peak will not be able to replace this product if any damages occurred due to any of the following:

1. Material quality has changed due to aging of product.
2. Damage by altering or careless handling.
3. Damage due to improper handling which is prohibited a
4. Product failure due to user accidents.
5. Any damage except with product defects due to manufacturing.
6. Damage by dirt and rust.
7. Damage by dismantling.
8. Deformation and failure of parts damaged by dropping or other similar incidents.
9. Product failure due to wear and tear by user.
10. Damage caused by improper use with other products.

Repair

- For repairs, please contact the retailer where you purchased the product or Snow Peak user service.
- When you ask for repair, please make sure that the product is dry and clean.
- Please attach a memo or some kind of tag indicating the needed repair and also please write details of when and how the damaged occurred.
- Our policy on shipping cost and repair fees are as follows.
 1. Under warranty: Return to user shipping cost and repair fee will be covered by Snow Peak.
 2. Outside warranty: Return to user shipping cost to and repair fee will be the responsibility of user.