



airtender
powered air for kitchen & bar



Quickstart Guide



For more information visit www.airtender.com/support or use the Airtender® app

Introduction

Congratulations on your purchase and welcome to Airtender®


This quickstart guide contains visual instructions to help you install and use the Airtender®. For more information regarding the system as well as a more detailed installation guide, we refer you to the free Airtender® App, available in the App store and Google Play Store.

This product is not intended for use by persons (including children) with a reduced physical sensory or mental capability or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

The Airtender® is intended for indoor use in household environments that may also be used by non-expert users for typical housekeeping functions.

To fully benefit from the support that Airtender® offers, register your product at www.airtender.com

Download the app



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment


does cause harmful interference to installations, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the appliance
- Increase the separation between the appliance and other installations.
- Connect the appliance into an outlet on a circuit different from that to which the other installation is connected.

V00_03 - Okt 2020


Appliance overview

For more information about accessories: see the Accessories Quickstart Guide




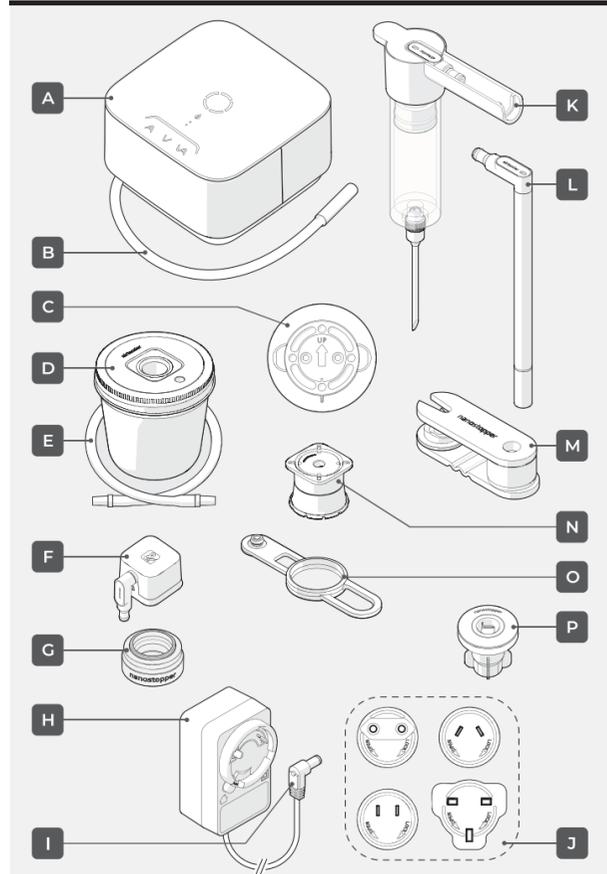


A	Airtender®	I	Power plug
B	Airtender® hose	J	Power plugs – EU / UK / CN / US
C	Mounting bracket	K	Fluid Injector
D	Fluid Buffer	L	Precision Aerator
E	Fluid Buffer hose	M	Nanostopper® Lid Punch
F	Universal Vacuum Adapter	N	Nanostopper® Zip Bag Adapter
G	Universal Pump Adapter	O	Hanger & Seal
H	Power adapter	P	Nanostopper®

Interface overview

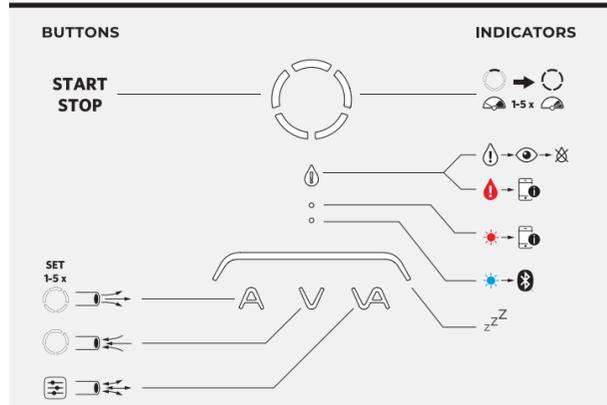

Installation

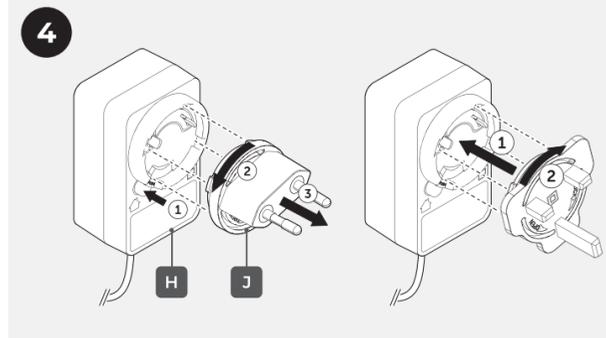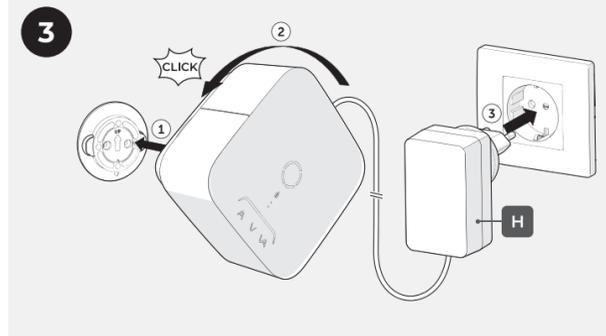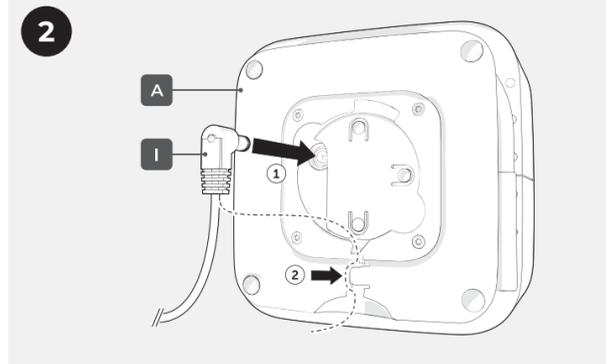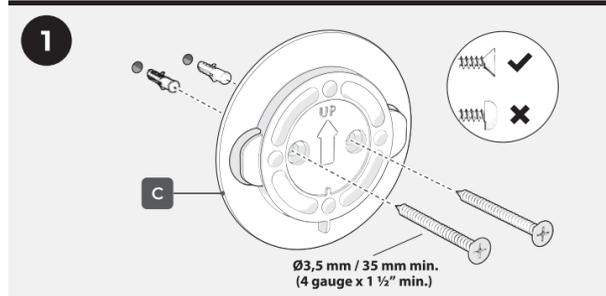

EN Quickstart Guide

Safety instructions

Warning

- DO NOT DISASSEMBLE. OBSERVE ALL WARNING LABELS. Do not remove warning labels.
- Never immerse the Airtender® appliance, accessories or the power adapter in water or any other liquid, nor rinse it under the tap unless specifically stated otherwise in chapter: Maintenance.
- Only use the appliance as described in this manual.
- Do not expose the appliance to heat or direct flames.
- Disconnect the appliance from the power source if problems occur.
- This appliance may only be serviced by a qualified technician for maintenance to reduce the risk of electric shock.
- Disconnect the appliance from the power source before service.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This system is an appliance and is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and power cable out of reach of children under 8 years.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the power cable or the appliance itself is damaged.
- If the power cable is damaged, you must have it replaced by Airtender®, a service centre authorised by Airtender® or similarly qualified persons in order to avoid a hazard. For more information contact the Airtender® support team at service@airtender.com
- Only use the provided power supply to power the appliance.
- Do not place the appliance on or near a hot gas stove or all kinds of electric stove and electric cooking plates, or in a heated oven.
- Position the power adapter cord where it cannot be tugged, cause the user to become entangled, or cause the appliance to be overturned.
- Do not let the cable or hose hang over the edge of a worktop, to prevent entanglement or tripping.
- Never pull the power cable to disconnect the appliance from the outlet. Unplug the appliance by removing the plug itself.

Caution

- Always return the appliance to a service centre authorised by Airtender® for examination or repair. Do not attempt to repair the appliance yourself, otherwise the guarantee becomes invalid. Do not drop the appliance and avoid bumping.
- Use the Airtender® appliance and accessories only for their intended purpose, as described in this document.
- Never use the appliance to suck up or blow directly into liquids. Always use the liquid buffer or an Airtender® approved accessory as supplied in the Starter Set.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Do not put or use the appliance in a refrigerator or freezer.
- Place the device on a stable and flat surface.
- The Airtender® is not designed for direct contact with food. Do not use the Airtender® to directly contact food. Always use Airtender® accessories that have been designed and certified for food contact.
- The unit is intended for intermittent use with a maximum of 30 minutes continuous operation per hour. Always respect a cool down time that corresponds with the running time.

Maintenance

Do not use aggressive chemical cleaning agents such as ammonia, acid or acetone when cleaning the product.

1. Disconnect the appliance from the power source.
2. Remove any residue with a paper towel.
3. Clean the Airtender® exterior with a damp cloth.
4. Dry with a soft cloth.

See the accessories quickstart guide for cleaning instructions of the accessories.

Note! Let all parts dry completely before re-assembling the product.

Specifications

Measurements	13 x 13 x 7,5 cm
Max air hose length	80 cm
Article nr.	KA-0000/10
Power supply input	100-240V AC 50/60hz, 30 W
Power supply output	15V DC 2,000 mA
Max relative air pressure	4,5 Bar
Min relative air pressure	-0,85 Bar
Ambient temperatures	5 °C - 40 °C

Warranty

Any changes and/or modifications to the product will void the warranty. We accept no liability for damage caused by improper use of the product. For additional information or support, please visit www.airtender.com/support or read the separate worldwide warranty leaflet.

Intellectual Property

All Intellectual Properties, as defined below, owned by or which is otherwise the property of Kitchenair BV, Airtender® or its suppliers relating to Airtender® products, including but not limited to, accessories, parts or software relating thereto, are proprietary to federal and state laws, and international treaty provisions. Intellectual Property includes but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, firmware, computer programs, and related documentation and other works of authorship. Moreover, you agree that you will not, and will not attempt to, modify, prepare derivative works of, reverse engineer, disassemble the Airtender® products, decompile or otherwise attempt to create source code from the related software/firmware. No title to or ownership in Intellectual Property

Disposal

This symbol indicates that this product should not be thrown away with other household waste throughout the EU. To prevent possible harm to the environment or human health by uncontrolled waste disposal, you are responsible for recycling it so that it can promote the sustainable reuse of raw materials. To return your used product, you can use the regular return and collection systems or contact the store where the product was purchased. They can recycle this product for the environment.

Declaration of Conformity

We, Airtender® B.V. declare as manufacturer that the Airtender®, produced in Slovenia, has been tested according to all relevant CE standards and regulations and that all tests have been passed successfully. This includes, but is not limited to, the 2014/53/ EU regulation.

The complete Declaration of Conformity (and the safety datasheet if applicable) can be found and downloaded via: www.airtender.com/support

NL Korte handleiding

Veiligheidsaanwijzingen

Waarschuwing

- NIET DEMONTEREN, LET OP ALLE WAARSCHUWINGSSTICKERS. Verwijder waarschuwingsstickers niet.

- Dompel het Airtender®-apparaat, accessoires of de netadapter nooit onder in water of een andere vloeistof. Spoel deze onderdelen nooit af onder de kraan, tenzij anders voorgeschreven in hoofdstuk: Onderhoud.
- Gebruik het apparaat alleen zoals in deze handleiding beschreven is.
- Stel het apparaat niet bloot aan hitte of directe vlammen.
- Koppel het apparaat los van de stroomvoorziening als er problemen optreden.
- Om het risico voor een elektrische schok te verminderen, mag dit apparaat alleen gerepareerd worden door een gekwalificeerde onderhoudstechnicus.
- Koppel het apparaat voor de reparatie los van de stroomvoorziening.
- Dit apparaat kan gebruikt worden door kinderen vanaf 8 jaar en personen met verminderde fysieke, zintuiglijke of verstandelijke capaciteiten of onvoldoende ervaring en kennis, indien ze onder toezicht staan of instructies ontvangen voor het veilige gebruik van het apparaat en de gevaren ervan begrijpen.
- Dit systeem is een apparaat en geen speelgoed. Kinderen moeten onder toezicht staan om ervoor te zorgen dat ze niet met het apparaat spelen.
- Reiniging en onderhoud mogen niet door kinderen worden uitgevoerd, tenzij ze ouder dan 8 jaar zijn en onder toezicht staan.
- Houd het apparaat en het netsnoer buiten bereik van kinderen onder de 8 jaar.
- Controleer voordat u het apparaat aansluit of de spanning die op het apparaat aangegeven is, overeenkomt met de lokale netspanning.
- Gebruik het apparaat niet als de stekker, het netsnoer of het apparaat zelf beschadigd is.
- Als het netsnoer beschadigd is, moet u het laten vervangen door Airtender®, een servicevestiging die door Airtender® geautoriseerde of vergelijkbaar gekwalificeerde personen om gevaren te voorkomen. Neem voor meer informatie contact op met het Airtender®-supportteam via service@airtender.com
- Gebruik alleen het meegeleverde netsnoer om het apparaat van stroom te voorzien.
- Plaats het apparaat niet op of dichtbij een heet gasfornuis of alle andere soorten elektrische fornuizen of kookplaten of in een hete oven.
- Leg het snoer van de netadapter zodanig dat het niet kan worden weggetrokken, de gebruiker er niet over kan struikelen en het apparaat erdoor niet omver kan worden getrokken.
- Laat het snoer of de slang niet over de rand van een tafel hangen om te voorkomen dat deze worden weggetrokken of er iemand over struikelt.
- Trek nooit aan het netsnoer om de stekker van het apparaat uit de contactdoos te trekken. Verwijder de stekker uit het de contactdoos door de stekker zelf vast te pakken.

- Gebruik het apparaat alleen zoals in deze handleiding beschreven is.
- Stel het apparaat niet bloot aan hitte of directe vlammen.
- Koppel het apparaat los van de stroomvoorziening als er problemen optreden.
- Om het risico voor een elektrische schok te verminderen, mag dit apparaat alleen gerepareerd worden door een gekwalificeerde onderhoudstechnicus.
- Koppel het apparaat voor de reparatie los van de stroomvoorziening.
- Dit apparaat kan gebruikt worden door kinderen vanaf 8 jaar en personen met verminderde fysieke, zintuiglijke of verstandelijke capaciteiten of onvoldoende ervaring en kennis, indien ze onder toezicht staan of instructies ontvangen voor het veilige gebruik van het apparaat en de gevaren ervan begrijpen.
- Dit systeem is een apparaat en geen speelgoed. Kinderen moeten onder toezicht staan om ervoor te zorgen dat ze niet met het apparaat spelen.
- Reiniging en onderhoud mogen niet door kinderen worden uitgevoerd, tenzij ze ouder dan 8 jaar zijn en onder toezicht staan.
- Houd het apparaat en het netsnoer buiten bereik van kinderen onder de 8 jaar.
- Controleer voordat u het apparaat aansluit of de spanning die op het apparaat aangegeven is, overeenkomt met de lokale netspanning.
- Gebruik het apparaat niet als de stekker, het netsnoer of het apparaat zelf beschadigd is.
- Als het netsnoer beschadigd is, moet u het laten vervangen door Airtender®, een servicevestiging die door Airtender® geautoriseerde of vergelijkbaar gekwalificeerde personen om gevaren te voorkomen. Neem voor meer informatie contact op met het Airtender®-supportteam via service@airtender.com
- Gebruik alleen het meegeleverde netsnoer om het apparaat van stroom te voorzien.
- Plaats het apparaat niet op of dichtbij een heet gasfornuis of alle andere soorten elektrische fornuizen of kookplaten of in een hete oven.
- Leg het snoer van de netadapter zodanig dat het niet kan worden weggetrokken, de gebruiker er niet over kan struikelen en het apparaat erdoor niet omver kan worden getrokken.
- Laat het snoer of de slang niet over de rand van een tafel hangen om te voorkomen dat deze worden weggetrokken of er iemand over struikelt.
- Trek nooit aan het netsnoer om de stekker van het apparaat uit de contactdoos te trekken. Verwijder de stekker uit het de contactdoos door de stekker zelf vast te pakken.

Zie de korte handleiding voor de accessoires voor de reinigingsinstructies van de accessoires.

Let op! Laat alle onderdelen volledig drogen voordat u het apparaat weer in elkaar zet.

Technische gegevens

Afmetingen	13 x 13 x 7,5 cm
Maximale lengte luchtslang	80 cm
Artikelnr.	KA-0000/10
Ingang netadapter	100-240 V AC 50/60 Hz, 30 W
Uitgang netadapter	15 V DC 2,000 mA
Max. relatieve luchtdruk	4,5 bar
Min. relatieve luchtdruk	-0,85 bar
Omgevingstemperaturen	5 °C - 40 °C

Garantie

Iedere verandering/modificatie aan het product zorgt ervoor dat de garantie vervalt. Wij accepteren geen aansprakelijkheid voor schade die ontstaat ten gevolge van verkeerd gebruik van het product. Kijk voor meer informatie of ondersteuning op www.airtender.com/support of lees het aparte wereldwijde garantiebewijs.

Intellectueel eigendom

Alle intellectuele eigendommen zoals hieronder gedefinieerd, in eigendom of op andere wijze in het bezit van Kitchenair BV, Airtender® of een van diens toeleveranciers die gerelateerd zijn aan Airtender®-producten, inclusief maar niet beperkt tot accessoires, onderdelen of software die hieraan gerelateerd is, zijn beschermd door federale en staatswetten en internationale verdragen. Intellectueel eigendom omvat, maar is niet beperkt tot, uitvindingen (al dan niet octrooierbaar), octrooien, handelsgeheimen, auteursrechten, software, firmware, computerprogramma's en gerelateerde documentatie en andere werken van auteurschap. Bovendien gaat u ermee akkoord dat u niet zult proberen de Airtender®-producten te wijzigen, afgeleide werken ervan voor te bereiden, reverse-engineering toe te passen, te demonteren, te decompileren of op een andere manier te proberen broncode te maken van de betreffende software/apparaatuur. Geen titel of eigendomsrecht in intellectueel eigendom

Afvoeren

Dit symbool geeft aan dat het product in de EU niet met het huishoudelijk afval worden weggegooid. Om eventuele schade aan het milieu of de gezondheid van mensen door ongecontroleerd weggooiën te vermijden, bent u verantwoordelijk voor de recycling van het product zodat het kan bijdragen aan een duurzaam gebruik van grondstoffen. Om uw gebruikte product terug te geven kunt u de gebruikelijke inzamel-systemen gebruiken of contact opnemen met de winkel waar u het product heeft gekocht. Zij kunnen dit product ten behoeve van het milieu recyclen.

