


## RV BUG SCREEN (A10-1300VP)

PARE-INSECTES POUR VR

### For Exterior RV Furnace Vents (Sol-Aire™, Coleman®, Hydro Flame® and Suburban)

Pour les événements d'appareils de chauffage extérieurs (Sol-Aire™, Coleman®, Hydro Flame® et Suburban™)

- Note that the spring connectors have a crossbar at one end of the coils. The other end of the coil is open. The open end is the end that attaches to the vent screen. The end with crossbar attaches to the furnace vent (figure 1).
- Position vent screen over furnace vent.
- Determine the best location to attach spring connector to vent screen.
- Remove the vent screen and attach the open end of the spring connectors to the vent screen. The spring connector end should grasp three wires on the screen.
- Reposition the vent screen over the furnace vent.
- Push the installation tool through the screen and into the center of the spring connector. The slot in the installation tool should grasp the spring connector crossbar.
- Stretch the spring connector and hook the connector onto the furnace vent (figure 2).
- Gently remove the installation tool from the screen.

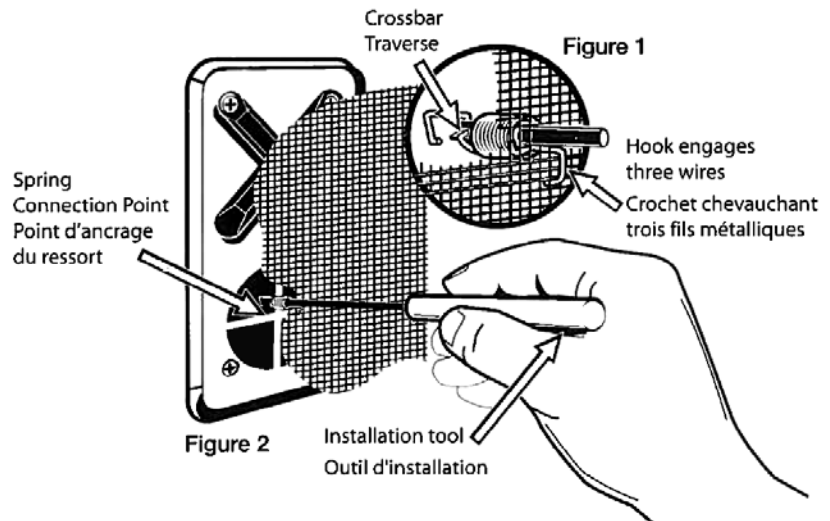

Cleaning the screens is necessary for proper air flow. Inspect screens frequently and clean as needed. Save the installation tool for reinstallation of screens after cleaning.

- Remarque : les ressorts sont équipés d'une traverse à une extrémité des serpentins. L'autre extrémité du serpentin est ouverte. L'extrémité ouverte est le bout qui se fixe à la grille d'évent. L'extrémité avec la traverse se fixe à l'évent de l'appareil de chauffage (figure 1).
- Positionner la grille d'évent sur l'évent de l'appareil de chauffage.
- Déterminer le meilleur emplacement pour fixer le ressort à la grille d'évent.
- Retirer la grille d'évent et fixer l'extrémité ouverte des ressorts à la grille d'évent. L'extrémité du ressort devrait chevaucher trois fils sur la grille.
- Repositionner la grille d'évent sur l'évent de l'appareil de chauffage.
- Pousser l'outil d'installation dans la grille et au centre du ressort. L'encoche dans l'outil d'installation devrait chevaucher la traverse du ressort.
- Étirer le ressort et l'accrocher à l'évent de l'appareil de chauffage (figure 2).
- Retirer doucement l'outil d'installation de la grille.

Le nettoyage des grilles est nécessaire pour assurer un flux d'air approprié. Inspecter les grilles fréquemment et nettoyer au besoin. Conserver l'outil d'installation pour une réinstallation des grilles après le nettoyage.