




momo  
— lifestyle —

MOMO EASY FRY®  
ONE TOUCH, TWELVE DISHES  
UN TOQUE, DOCE PLATOS

USER MANUAL  
MANUAL DE USUARIO

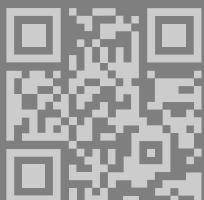

contact us

habla con  
nosotros

USA & North America  
+1 305 998 2988  
[info@momo-lifestyle.com](mailto:info@momo-lifestyle.com)  
[www.momo-lifestyle.com](http://www.momo-lifestyle.com)

# MOMO EASY FRY®

ONE TOUCH, TWELVE DISHES

# momo — lifestyle —

## INTRODUCTION

It's finally here! Your **Momo Easy Fry®** is the most complete air fryer of its category, equipped with a tasty 12 dish menu, 3.4qt teflon free ceramic dishwasher friendly basket, digital LED control wheel, and 1500W of raw air frying power between 105°F to 400°F.

Whether you're after tasty chicken wings, crispy bacon strips, or a succulent steak, the Momo Easy Fry® will effortlessly have it ready for you in no time!

Please read this manual carefully, and store it in a safe place for future reference.

## IMPORTANT SAFETY NOTICES

### ATTENTION!

**Please read all instructions in the manual carefully before using the appliance. Always observe safety measures, and follow instructions in this manual to prevent accidents or injuries.**

**1)** Plastic wrappers and other packaging materials relating to the appliance should be kept out of reach of children and pets to avoid the risk of suffocation when playing or handling such materials.

**2)** Please ensure the voltage indicated on your appliance is compatible with the power outlet that is destined for use.

**3)** Please supervise children at all times to ensure they do not play with the appliance, as it is not a toy.

**4)** The appliance should only be placed and operated on a flat, stable, clean, and dry surface in order to avoid accidents. Never operate the appliance on a wet surface.

**5)** Keep the appliance away from hot surfaces, such as ovens, stove tops, heaters, and other heated elements.



- 6)** While using the appliance, keep it away from curtains, tapestry, drapes, clothing, towels, or other flammable materials.
- 7)** Do not use the appliance near sinks, taps, showers, swimming pools, or leave it unattended.
- 8)** Some external surfaces may become hot when using the appliance, please use caution when touching them.
- 9)** Some portions of the appliance's surface may also become hot during use, please do not touch these hot panels, as this may cause burns.
- 10)** To avoid the risk of electric shock, or other accidents and personal injuries, do not immerse the appliance, plug, or cord, in water or other liquids. Do not touch the plug or power cord with wet hands.
- 11)** Never leave the power cord in a position where someone can trip over it.
- 12)** Do not plug the unit into overloaded outlets or extension cords, since overloading could damage the appliance and cause accidents.



**13)** Do not use the appliance if it presents any kind of damage to the power cord, plug or other components. Please contact the Momo Lifestyle® technical assistance team if this occurs.

**14)** If the power cord is damaged, it must be replaced by the manufacturer or an authorized technician to avoid risks.

**15)** Do not try to open, disassemble or repair the appliance. Any replacement of a damaged part should only be performed by the Momo Lifestyle®.

**16)** This appliance was not designed to be used by individuals (including children) with reduced physical, sensory or mental abilities, or those who lack experience or knowledge, unless they are under the supervision or instruction of someone that is responsible for their safety.

**17)** Children should always be supervised when in the vicinity of the appliance while it is in operation.

**18)** It is important to wear shoes and stand on dry floors when using an electrical appliance.

**19)** Never unplug the appliance by pulling the power cord. Hold the plug firmly and then pull it to disconnect it from the outlet correctly.

**20)** Keep the appliance out of reach of children, especially when in use, or when it is still hot in order to avoid burns.

**21)** Do not use accessories other than the original ones supplied for the appliance. The use of non-original accessories may impair the performance of the appliance, and cause damage to the appliance or personal injuries.


**22)** Do not store the appliance while it is hot. Wait for it to cool down completely before putting it away.

### IMPORTANT!

*It is normal for a new electrical appliance to release some smoke or odor during the first times it is used. This is a result of the initial heating of some materials and components used in the manufacturing of the appliance. This is normal, and does not represent a defect.*

### FOR HOUSEHOLD, INDOORS AND NON-COMMERCIAL USE ONLY

## MOMO EASY FRY® COMPONENTS

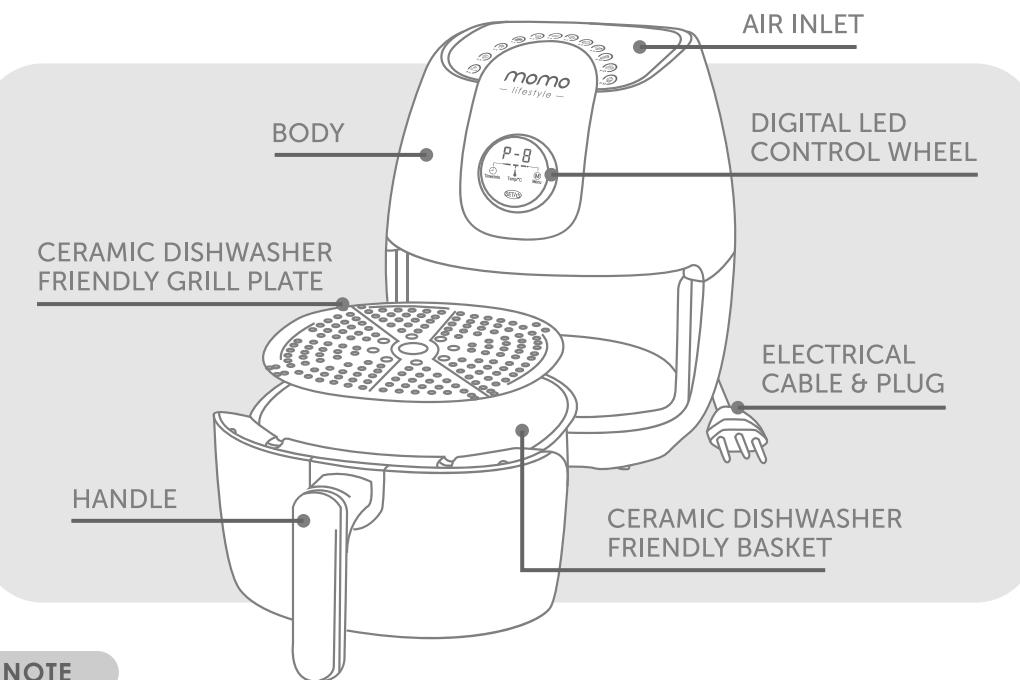

### NOTE

**Hot Air Outlet** is located at the rear of the product - responsible for eliminating hot air from inside the cavity generated during cooking.



This symbol indicates that the contact surfaces can heat up when the air fryer is in operation.


## DIGITAL CONTROL WHEEL FUNCTIONS

### A) Digital display


Displays time, temperature, menu selection, cooking time remaining, and cooking completion.

### B) Rotating Knob

Turn the rotating knob (outer ring) to increase or decrease the time, temperature, and switch between pre-programmed functions.

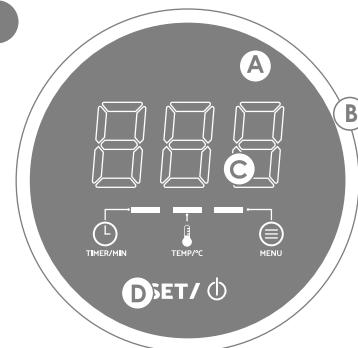

## C) LED indicator Lights

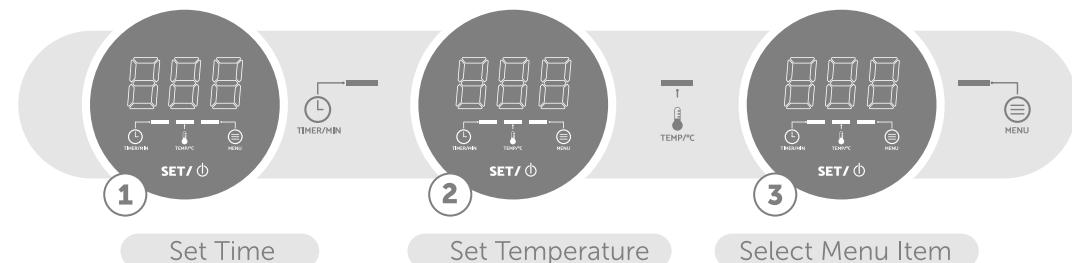

## D) On / Off button

Press and hold to turn on/off.  
Press to switch between time, temperature, and menu settings

## DIRECTIONS FOR USE

### IMPORTANT!

- 1) Ensure the power cord is unplugged
- 2) Sanitize/clean the ceramic basket with neutral detergent and a soft sponge before use, proceed to rinse and dry thoroughly.
- 3) Clean the outside of the appliance with a soft, damp cloth.
- 4) If desired, you may also run the Momo Easy Fry® for 5 minutes at maximum temperature before first use to release any smoke from oils used during the manufacturing process.




## USE

- 1) Place the Momo Easy Fry® on a flat, firm, and dry surface.
- 2) Remove the ceramic basket by pulling on the handle, as shown in the following image.
- 3) Fill the ceramic basket with up to ¼ of food, and insert the basket back into the Momo Easy Fry®
- 4) Plug the appliance into a power outlet. The Momo Easy Fry® will beep and light up the digital LED display.

### IMPORTANT!

**Food should never be prepared if the basket is not correctly placed into the appliance.**

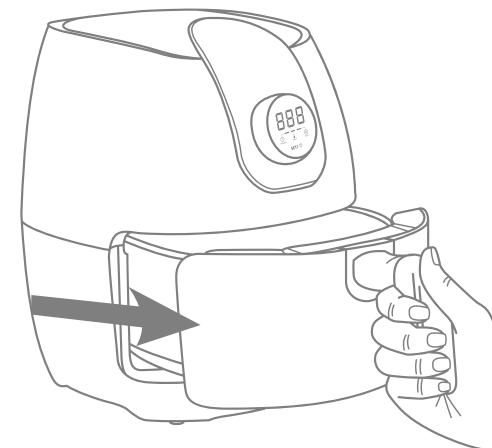

**NOTE**

Each time The Momo Easy Fry® is switched on, the last used time and temperature configuration will be displayed.

5) Press the on/off button to switch between time, temperature, and menu dishes / functions.

6) Turn the rotating knob (outer ring) to increase or decrease the time, temperature, and switch between pre-programmed functions. Wait a few seconds for the Momo Easy Fry® to begin cooking automatically. You may custom set the timer for up to 90 minutes, and temperature anywhere between 105°F to 400°F.

7) You may also directly select any of our 12 easy dish menu presets for a fast, simple, and tasty experience. Refer to the below table to find out more about each of our 12 dish menu presets:

FUNCTION	CODE NAME	TIME	TEMPERATURE	
	Reheat	P-1	10 min	320°F
	Dehydrate	P-2	4 hours	130°F
	Defrost	P-3	12 min	180°F
	Frozen french fries	P-4	25 min	400°F
	Shrimp	P-5	15 min	350°F
	Fish	P-6	20 min	350°F
	Chicken Wings	P-7	20 min	400°F
	Steak	P-8	16 min	400°F
	Vegetables	P-9	20 min	375°F
	Bacon	P-10	10 min	400°F
	Nuggets	P-11	15 min	400°F
	Cupcake	P-12	15 min	400°F

8) The Momo Easy Fry® shall beep and display the word "OFF" to signal the end of the air frying cycle. The unit's fan will remain on for a few seconds to ensure adequate cooling down of the appliance.

**NOTE**

Some foods require stirring at some point during the cooking cycle. If this is the case, please pull out the ceramic basket carefully and avoid any hot vapors that may have been generated. Proceed to stir with a heat resistant utensil, and place the ceramic basket back into the Momo Easy Fry® properly.

For safety, please note that the Momo Easy Fry® will switch off automatically when the ceramic basket is removed during cooking. Please exercise caution, as the appliance along with the ceramic basket will remain hot for some time. Once the ceramic basket is placed back into the cavity, the Momo Easy Fry will continue cooking at the same temperature point and time remaining in the current cycle.

**IMPORTANT!**

Please note that the suggested times and temperatures in the below table may vary according to the amount of food input and user preferences. The below times do not take into account the preheating times of the fryer, which takes approximately 2 minutes to reach the desired temperature.

You may therefore add 2 minutes onto the cooking times listed in the table below for foods being prepared at room temperature, or if the Momo Easy Fry® has not been pre-heated.

**IMPORTANT!**

Exercise due caution when removing the ceramic basket from the appliance while it is running, as the heating elements and internal fan will also continue to function.

Under no circumstances should you touch the inside of the ceramic basket, the inside of the appliance, or insert any objects into the air fryer's cavity, as doing so may cause burns and/or other physical injury.

9) Using a heat resistant utensil, remove the food from the Air Fryer basket and transfer it into another container or serving dish.

**NOTE**

If desired, the Momo Easy Fry® can be reused immediately after its first use.

10) Press and hold the on/off button for 2 seconds to switch off the appliance. Once switched off, please remove the plug from the socket, and wait for the appliance to cool completely before cleaning. For cleaning instructions, please refer to the care and maintenance section of this manual.

**NOTE**

Never use the Momo Easy Fry® without the ceramic basket installed.

For best results, please follow the tips below:

- 1) Never exceed the ceramic basket's ¾ capacity limit when adding food.
- 2) For faster frying, dehydrate the food beforehand.
- 3) If food becomes stuck together during frying, use a spatula or other suitable utensil to separate. For your safety, always use appropriate accessories in order to protect your hands.
- 4) If food requires greasing for best results, always attempt to do so with good quality oil wherever possible.
- 5) Foods that are frozen or holding a large amount of water will take more time to prepare, and final results may not be as expected.
- 6) Where possible, attempt to prepare smaller food portions that are already previously defrosted and chopped into smaller pieces.
- 7) Pre-cooked foods generally require a higher cooking temperature than raw foods.
- 8) Most foods usually baked inside an oven may also be prepared using the Momo Easy Fry® without any oil.
- 9) The Momo Easy Fry® can also defrost, reheat, or dehydrate food.

**CLEANING AND MAINTENANCE**

Tips for maintaining the ceramic basket and grill plate:

Your Ceramic Dishwasher Friendly Basket and grill plate are Teflon free, making them safe for the entire family whilst delivering a reliable and flavorsome cooking experience.

Being made from highly durable ceramic, your basket and grill plate will resist most scratches, and be better equipped to withstand extreme temperatures whilst allowing you to create healthier foods without the need for large amounts of oil.

That being said, please take note of the following tips to maintain and extend your ceramic basket and grill plate's life:

- 1) Wherever possible, use utensils made from plastic, silicone, wood or nylon, as they are easier on the ceramic non-scratch cooking surface.
- 2) Avoid using metal cooking utensils when possible, as such utensils may contain sharp or rough edges that may damage your ceramic basket and grill plate.
- 3) Never cut food directly inside your basket, or on your grill plate. Instead, be sure to transfer food to a serving platter prior to preparation.
- 4) It is best to wash your ceramic basket and grill plate regularly after use.
- 5) Do not wash your ceramic basket or grill plate with chemical products or bleaches.

### Cleaning your dishwasher friendly ceramic basket and/or grill plate:

- 1) Firstly, remove the plug from the power outlet and allow the Momo Easy Fry® to cool down.
- 2) Remove the ceramic basket and/or grill plate.
- 3) Wash your ceramic basket and grill plate in the dishwasher.
- 4) Alternatively, you may prefer to wash your ceramic basket and/or grill plate by hand. See below for detailed hand washing instructions.

### Hand Washing your ceramic basket and grill plate:

- 1) To hand wash, allow the ceramic basket and/or grill plate to cool completely before submerging them in water.
- 2) Never place your ceramic basket or grill plate directly into cold water while they are still hot. Although ceramic cooking baskets and grills can handle extreme temperatures on both ends of the thermometer, the sudden and significant temperature change may cause potential damaging effects.

3) Wash the ceramic basket and grill plate in warm soap water using a sponge or clean dishcloth on the pan to thoroughly remove all food particles.

4) Rinse the ceramic basket and grill plate thoroughly with clean water after cleaning, and inspect them to ensure all food particles have been removed.

5) Dry the ceramic basket and grill plate with a soft cloth.

### Cleaning the Momo Easy Fry®'s Exterior

1) The external parts of the Momo Easy Fry® should only be cleaned with a soft, damp cloth. The use of abrasive materials and alcohol should be avoided, and ensure that moisture does not enter into the product's cavity.

2) Cleaning the cavity should only be done using a soft, dry cloth to remove any excess water.

3) Following the aforementioned step, you may place the ceramic basket back into the cavity, and switch your Momo Easy Fry® on for 5 minutes at 350°F to guarantee the complete drying of the ceramic basket.

### NOTE

*The Momo Easy Fry®'s heating element is located at the top of the cavity. It can be hot even if not red in color, so always ensure that the product has cooled down completely before performing any cleaning.*

### Other important general maintenance tips

- 1) Never submerge the product in water.
- 2) Always clean only using a soft, lint-free cloth and soap.
- 3) Always dry thoroughly after cleaning.
- 4) Always ensure all of the product's parts are completely dry before using again.

5) Always re-assemble all of your Momo Easy Fry®'s components after cleaning to ensure it is ready for its next use.

6) Repeat-clean your Momo Easy Fry® before using for the first time after a prolonged period without use.

7) Always store your MomoEasy Fry® on a flat surface in a safe and dry place that is out of reach of children.



### ENVIRONMENTAL WARNING

Please always keep the environment's wellbeing in mind, and never dispose of this product and/or its packaging as normal household waste as some components may be harmful to the environment. Instead, please ensure that you dispose of your Momo Easy Fry® and its packaging via your city's authorized service. Always pay attention to your city's current local environmental laws, and when in doubt, contact your local council for the most up to date waste and disposal information.

### NOTE

*Updates to the product's hardware and components are made regularly. Some instructions, specifications, and images contained in this user manual may potentially differ slightly from your particular product. For our latest updated manual, please always refer to our official website: [www.momo-lifestyle.com](http://www.momo-lifestyle.com)*

### 1 YEAR (12 MONTH) LIMITED WARRANTY FROM THE DATE OF PURCHASE

Momo Lifestyle LLC warrants that for a period of ONE (1) year from the date of purchase, this product will be free from defects in material and workmanship. Momo Lifestyle, at its sole discretion, will choose to provide technical support or replacement for this product, or any component of the product found to be defective during the warranty period. For Mexico, the warranty is from the date the customer receives the product, which is presumed to be the date of the invoice or voucher, or the stamped date of the guarantee, unless proven otherwise.

This warranty is valid for the original purchaser and is not transferable (Not applicable for the Mexican market where transferable).

For this warranty to be honored by Momo Lifestyle LLC, it is necessary to present the product together with the purchase receipt.

In order for Mexico to enforce the guarantee, it should not be required that the product presentation is accompanied by an invoice or receipt.

For information on parts, components, supplies and accessories for this product, the consumer should contact Momo Lifestyle® as indicated within this product's user manual.

Momo Lifestyle® dealers, Authorized Momo Lifestyle® Technical Service Centers, or retail stores selling Momo Lifestyle® products do not have the right to alter, modify, or in any way change the terms and conditions of this warranty. This includes the technical support and repair or replacement of any faulty accessory, part, or component, and the labor required, (as well as transportation cost only applicable for Mexico), to check, diagnose and service the product needed to fulfill this policy from the date it is received by Momo Lifestyle®. This warranty is only effective to the FINAL USER of the product for COMMERCIAL AND/OR DOMESTIC use.

### Momo Lifestyle® will not cover under warranty the following cases:

Applicable worldwide (unless otherwise stipulated by local regulations):

- a) If the product was used in any manner other than intended.
- b) If the product has not been used according to the instruction manual included with the product.
- c) If the product was altered or repaired by anyone other than those authorized by Momo Lifestyle LLC.
- d) Use of incorrect current or voltage or faulty electric power supply.
- e) Damages resulting from the consumer through the transportation or handling of the appliance.

f) Normal wear and tear of accessories in general including but not limited to: recipients, jars, baskets, electric cords, and all other accessories or parts that may relate to the appliance.

g) If internal damages are determined to be caused by insects or animals.

It is recommended that in order to receive warranty service, customers should not bring the product to the store of purchase, but rather contact Momo Lifestyle®'s customer service directly.

#### NOTE

**The following cases do not apply to Mexico:**  
d, e, f, g.

At the end of this warranty policy, Momo Lifestyle® will continue to remain at your disposal to grant you the service you expect and deserve with the trust of the Momo Lifestyle® brand.

If you have any questions, please contact us at the following:

**momo**  
— lifestyle —

**Momo Easy Fry®**  
Designed and developed in Florida by Momo Lifestyle LLC

✉  
info@momo-lifestyle.com

📱  
+1 305 998 2988

Follow us on Social Media:

⌚  
momolifestyleusa

🌐  
www.momo-lifestyle.com



# MOMO EASY FRY®

UN SOLO BOTÓN, DOCE PLATILLOS

## INTRODUCCIÓN

¡Ya está aquí! Tu Momo Easy Fry® es la freidora de aire más completa de su categoría, equipada con un delicioso menú de 12 platillos, una canasta de cerámica apta para lavavajillas de 3.2 litros sin teflón, rueda de control digital y 1500 vatios de potencia para freír en crudo.

Ya sea que desees preparar unas alitas de pollo deliciosas, unas tiras de tocino crujientes o un bistec suculento, ¡Momo Easy Fry® lo tendrá listo sin esfuerzo en poco tiempo!

Lee este manual detenidamente y guárdalo en un lugar seguro para consultarlos en el futuro.

## AVISOS DE SEGURIDAD IMPORTANTES

### ¡ATENCIÓN!

**Lee atentamente todas las instrucciones del manual antes de utilizar el aparato. Observa siempre las medidas de seguridad y sigue las instrucciones de este manual para evitar accidentes o lesiones.**

- 1) Las envolturas de plástico y otros materiales de empaque relacionados con el aparato deben mantenerse fuera del alcance de los niños y las mascotas para evitar el riesgo de asfixia al jugar o manipularlos.
- 2) Asegúrate de que el voltaje indicado en tu electrodoméstico sea compatible con la toma de corriente en la que se utilizará.
- 3) Supervisa a los niños en todo momento para asegurarte de que no jueguen con el aparato (no es un juguete).
- 4) El aparato solo debe colocarse y utilizarse sobre una superficie plana, estable, limpia y seca para evitar accidentes. Nunca operes el aparato sobre una superficie mojada.
- 5) Mantén el aparato alejado de superficies calientes, como hornos, estufas, calentadores y otros elementos calientes.
- 6) Al usar el aparato, manténlo alejado de cortinas, tapices, telas, ropa, toallas u otros materiales inflamables.
- 7) No utilices el aparato cerca de fregaderos, grifos, regaderas, piletas ni lo dejes desatendido.
- 8) Algunas superficies externas pueden calentarse al usar el aparato; ten cuidado al tocarlas.
- 9) Algunas partes de la superficie del aparato también pueden calentarse durante el uso; no toques estos paneles calientes, ya que pueden causar quemaduras.
- 10) Para evitar el riesgo de descarga eléctrica u otros accidentes y lesiones personales, no sumerjas el aparato, el enchufe o el cable en agua u otros líquidos. No toques el enchufe o el cable de alimentación con las manos mojadas.
- 11) Nunca dejes el cable de alimentación en una posición en la que alguien pueda tropezarse con él.
- 12) No conectes la unidad a enchufes o extensiones sobrecargadas, ya que la sobrecarga podría dañar el aparato y provocar accidentes.



**13)** No utilices el aparato si presenta algún tipo de daño en el cable de alimentación, enchufe u otros componentes. Comunícate con el equipo de asistencia técnica de Momo Lifestyle® si esto ocurre.

**14)** Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante o un técnico autorizado para evitar riesgos.

**15)** No intentes abrir, desmontar o reparar el aparato. Cualquier reemplazo de una pieza dañada solo debe ser realizado por Momo Lifestyle®.

**16)** Este electrodoméstico no fue diseñado para ser utilizado por personas (incluidos niños) con capacidades físicas, sensoriales o mentales reducidas, o personas que carecen de experiencia o conocimientos, a menos que estén bajo la supervisión o instrucción de alguien que sea responsable de su seguridad.

**17)** Los niños siempre deben ser supervisados cuando estén cerca del aparato mientras está en funcionamiento.

**18)** Es importante usar zapatos y asegurarse de que el piso esté seco cuando se usa un aparato eléctrico.

**19)** Nunca desenchufes el aparato tirando del cable de alimentación. Sostén el enchufe firmemente y luego tira de él para desconectarlo correctamente del tomacorriente.

**20)** Mantén el aparato fuera del alcance de los niños, especialmente cuando esté en uso o cuando aún esté caliente para evitar quemaduras.

**21)** No utilices accesorios que no sean los originales suministrados con el aparato. El uso de accesorios no originales puede afectar el rendimiento del aparato y causar daños al aparato o lesiones a las personas.

**22)** No guardes el aparato mientras esté caliente. Espera a que se enfrie por completo antes de guardarla.

## ¡IMPORTANTE!

**Es normal que un aparato eléctrico nuevo libere algo de humo u olor durante las primeras veces que se utiliza. Esto es el resultado del calentamiento inicial de algunos materiales y componentes utilizados en la fabricación del aparato. Esto es normal y no representa un defecto.**

**SOLO PARA USO DOMÉSTICO, INTERIOR Y NO COMERCIAL**

**23)** Nunca transportes el aparato sujetándolo por el cable de alimentación. Nunca dejes que el cable de alimentación toque superficies calientes. Sostén siempre con cuidado el cuerpo de la unidad cuando la muevas.

**24)** Deja que el aire circule libremente sobre y alrededor de la unidad. Deja siempre al menos 10 cm de espacio libre alrededor del aparato en todo momento.

**25)** Nunca bloques las salidas de aire del aparato mientras esté en funcionamiento para evitar accidentes.

**26)** Durante el funcionamiento, la unidad puede liberar vapor extremadamente caliente. Ten cuidado al manipular la unidad y al abrir y/o retirar la canasta de cerámica.

**27)** El aparato no debe utilizarse con un temporizador externo o un sistema de control remoto.

**28)** No utilices esponjas o estropajos de lana de acero para limpiar ninguna de las piezas del electrodoméstico, ya que se pueden producir daños en el electrodoméstico, incluidas sus partes eléctricas, que también pueden provocar descargas eléctricas.

**29)** Usa protección adecuada o guantes de cocina cuando manipules la canasta cuando esté caliente.

**30)** La freidora no debe utilizarse para fines distintos a los indicados en este manual.


**31)** Asegúrate de desenchufar la unidad cuando no esté en uso, incluso si es por un período corto de tiempo.

**32)** Cuando insertes la canasta en la unidad para su uso, asegúrate de que esté correctamente insertada y bien fijada a su lugar.

**33)** El mantenimiento y la limpieza del aparato no deben ser realizados por niños.

**34)** Nunca permitas que objetos afilados y abrasivos entren en contacto con la superficie de cerámica de la unidad, ya que pueden causar daños.

## COMPONENTES DE MOMO EASY FRY®

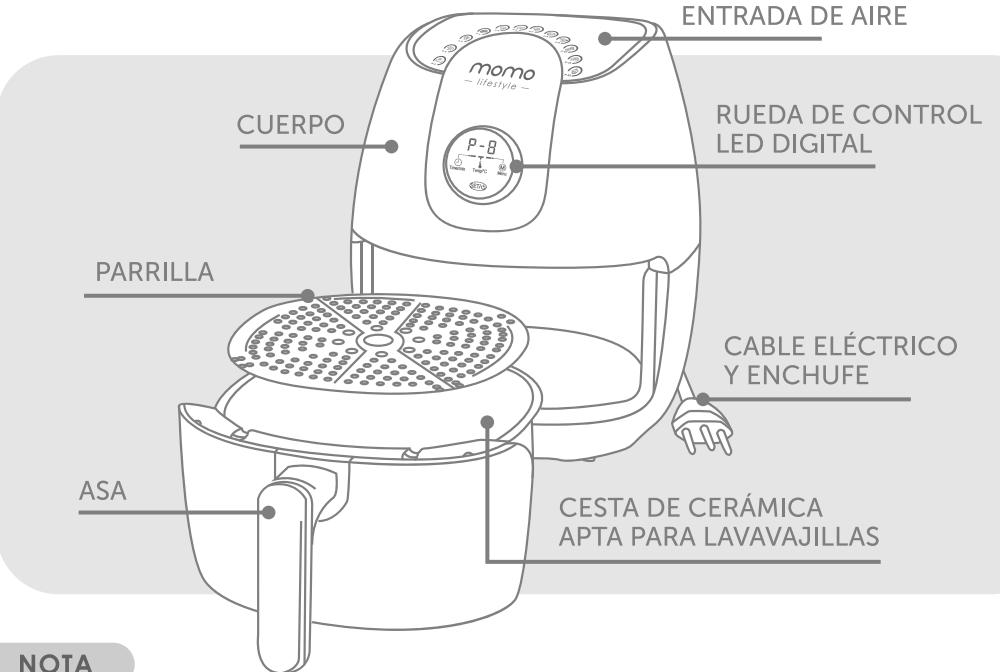

### NOTA

**Salida de aire caliente ubicada en la parte posterior del producto - responsable de eliminar el aire caliente del interior de la cavidad generado durante la cocción.**



**Este símbolo indica que las superficies de contacto pueden calentarse cuando la freidora está en funcionamiento..**


## FUNCIONES DE LA RUEDA DE CONTROL DIGITAL

### A) Pantalla digital


Muestra el tiempo, la temperatura, la selección del menú, el tiempo de cocción restante y la finalización de la cocción

### B) Perilla giratoria

Gira la perilla giratoria (anillo exterior) para aumentar o disminuir el tiempo, la temperatura y cambiar entre las funciones preprogramadas.

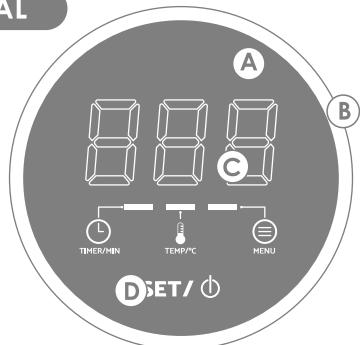

### C) Luces indicadoras LED

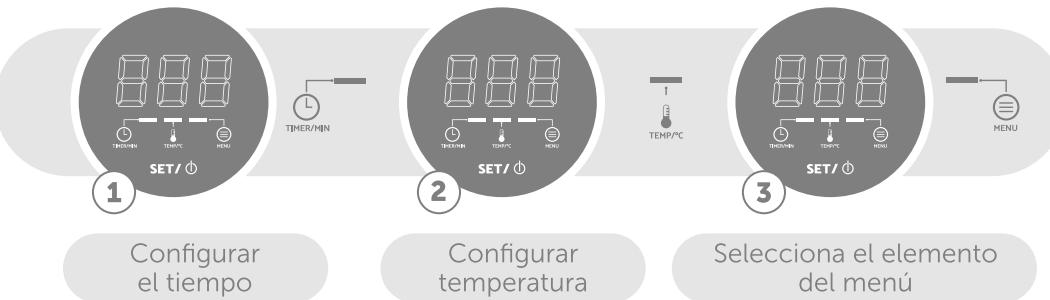

### D) Botón de encendido / apagado

Mantén pulsado para encender / apagar.  
Presiona para cambiar entre los ajustes de tiempo, temperatura y menú

## INSTRUCCIONES DE USO

### AVISOS IMPORTANTES ANTES DEL PRIMER USO

- 1) Asegúrate de que el cable de alimentación esté desenchufado
- 2) Desinfecta / limpia la canasta de cerámica con detergente neutro y una esponja suave antes de usar, procede a enjuagar y secar bien.
- 3) Limpia el exterior del aparato con un paño suave y húmedo.
- 4) Ejecuta la Momo Easy Fry®. Si lo deseas, puedes hacer funcionar el aparato a temperatura máxima durante 5 minutos antes del primer uso para liberar el humo de los aceites utilizados en el proceso de producción.


### USO

- 1) Coloca el Momo Easy Fry® sobre una superficie plana, firme y seca.
- 2) Retira la canasta de cerámica tirando del asa, como se muestra en la siguiente imagen.
- 3) Llena la canasta de cerámica con hasta ¾ de comida e inserta la canasta nuevamente en el Momo Easy Fry®.
- 4) Enchufa el aparato a una toma de corriente. La MomoEasy Fry® emitirá un pitido y se iluminará la pantalla LED digital.



### ¡IMPORTANTE!

Nunca se deben preparar alimentos si la cesta no está colocada correctamente en el aparato.

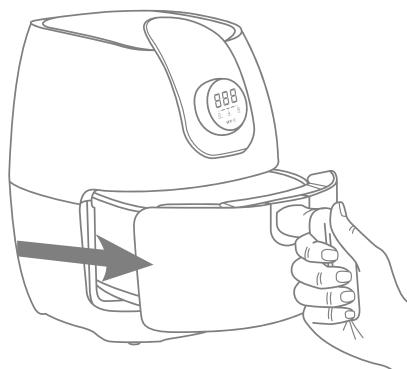

### NOTA

Cada vez que se enciende el Momo Easy Fry®, se muestra la última configuración utilizada de tiempo y temperatura.

5) Presiona el botón de encendido / apagado para cambiar entre tiempo, temperatura y platos / funciones del menú.

6) Gira la perilla giratoria (anillo exterior) para aumentar o disminuir el tiempo, la temperatura y cambiar entre las funciones preprogramadas. Espera unos segundos a que Momo Easy Fry® comience a cocinar automáticamente. Puedes configurar el temporizador de forma personalizada hasta por 90 minutos y la temperatura en cualquier lugar entre 40.5 °C (105 °F) y 204.4 °C (400 °F).

7) También puedes seleccionar directamente cualquiera de nuestros 12 menús preestablecidos de platos fáciles para una experiencia rápida, sencilla y sabrosa. Consulta la siguiente tabla para obtener más información sobre cada uno de nuestros 12 menús de platillos preestablecidos:

FUNCIÓN	CÓDIGO NOMBRE	TIEMPO	TEMPERATURA
	P-1	10 min	160 °C (320°F)
	P-2	4 horas	54.4 °C (130°F)
	P-3	12 min	160 °C (180°F)
	P-4	25 min	54.4 °C (400°F)
	P-5	15 min	160 °C (350°F)
	P-6	20 min	160 °C (350°F)
	P-7	20 min	54.4 °C (400°F)
	P-8	16 min	54.4 °C (400°F)
	P-9	20 min	160 °C (375°F)
	P-10	10 min	54.4 °C (400°F)
	P-11	15 min	54.4 °C (400°F)
	P-12	15 min	54.4 °C (400°F)

8) El Momo Easy Fry® emitirá un pitido y mostrará la palabra "OFF" para indicar el final del ciclo de freído. El ventilador de la unidad permanecerá encendido durante unos segundos para garantizar un enfriamiento adecuado del aparato.

### ¡IMPORTANTE!



Si este es el primer uso del producto y está frío, agrega 3 minutos más al tiempo de preparación para permitir que la cavidad de Momo Easy Fry se caliente lo suficiente. Si el Momo Easy Fry ya ha sido calentado, los tiempos de preparación anteriores se consideran normales.

**NOTA**

Algunos alimentos requieren revolver en algún momento durante el ciclo de cocción. Si este es el caso, extrae la cesta de cerámica con cuidado y evita los vapores calientes que puedan haberse generado. Procede a revolver con un utensilio resistente al calor y vuelve a colocar la canasta de cerámica en el Momo Easy Fry® correctamente.

Por seguridad, tenga en cuenta que el Momo Easy Fry® se apagará automáticamente cuando se retire la canasta de cerámica durante la cocción. Tenga cuidado, ya que el aparato junto con la cesta de cerámica permanecerán calientes durante algún tiempo. Una vez que la canasta de cerámica se coloca nuevamente en la cavidad, el Momo Easy Fry continuará cocinando al mismo punto de temperatura y tiempo restante en el ciclo actual.

**¡IMPORTANTE!**

Ten la debida precaución al retirar la canasta de cerámica del aparato mientras está funcionando, ya que los elementos calefactores y el ventilador interno también seguirán funcionando. Bajo ninguna circunstancia se debe tocar el interior de la canasta de cerámica, el interior del aparato, ni insertar ningún objeto en la cavidad de la freidora, ya que hacerlo puede causar quemaduras y/u otras lesiones físicas.

9) Con un utensilio resistente al calor, retira la comida de la canasta de la freidora de aire y transfírela a otro recipiente o plato para servir.

**NOTA**

Si lo deseas, Momo Easy Fry se puede reutilizar inmediatamente después de su primer uso.

10) Mantén pulsado el botón de encendido / apagado durante 2 segundos para apagar el aparato. Una vez apagado, retira el enchufe de la toma de corriente y espera a que el aparato se enfrie por completo antes de limpiarlo. Para obtener instrucciones de limpieza, consulta la sección de cuidado y mantenimiento de este manual.

**NOTA**

Nunca uses el Momo Easy Fry® sin la canasta de cerámica instalada.

**Para obtener los mejores resultados, sigue los consejos a continuación**

- 1) Nunca excedas el límite de capacidad de la canasta de cerámica al agregar alimentos.
- 2) Para freír más rápido, deshidrata la comida de antemano.
- 3) Si los alimentos se pegan durante el freído, utiliza una espátula u otro utensilio adecuado para separarlos. Por tu seguridad, utiliza siempre los accesorios adecuados para proteger tus manos.
- 4) Si es necesario engrasar la comida para obtener mejores resultados, siempre intenta hacerlo con aceite de buena calidad siempre que sea posible.
- 5) Los alimentos que están congelados o que contienen una gran cantidad de agua tomarán más tiempo en prepararse y es posible que los resultados finales no sean los esperados.
- 6) Siempre que sea posible, intenta preparar porciones de comida más pequeñas que ya estén previamente descongeladas y picadas en trozos más pequeños.
- 7) Los alimentos precocinados generalmente requieren una temperatura de cocción más alta que los alimentos crudos.
- 8) La mayoría de los alimentos generalmente horneados dentro de un horno también se pueden preparar usando Momo Easy Fry® sin aceite.
- 9) El Momo Easy Fry® también puede descongelar, recalentar o deshidratar alimentos.

**LIMPIEZA Y MANTENIMIENTO****Consejos para el mantenimiento de la canasta de cerámica**

Tu canasta de cerámica apta para lavavajillas no contiene teflón, lo que la hace segura para toda la familia al tiempo que brinda una experiencia de cocina confiable y sabrosa.

Al estar hecha de cerámica de larga duración, la canasta resistirá la mayoría de los rasguños y estará mejor equipada para soportar temperaturas extremas mientras te permite crear alimentos más saludables sin la necesidad de grandes cantidades de aceite.

Dicho esto, ten en cuenta los siguientes consejos para mantener y prolongar la vida útil de la canasta de cerámica:

- 1) Siempre que sea posible, usa utensilios hechos de plástico, silicona, madera o nailon, ya que son más fáciles para la superficie de cocción de cerámica que no raya.
- 2) Evita el uso de utensilios de cocina de metal cuando sea posible, ya que dichos utensilios pueden contener bordes afilados o ásperos que pueden dañar la canasta de cerámica.
- 3) Nunca cortes alimentos directamente dentro de la canasta. En su lugar, asegúrate de colocar los alimentos en una fuente antes de prepararlos.
- 4) Es mejor lavar la canasta de cerámica con regularidad después de su uso.
- 5) No laves la canasta de cerámica con productos químicos o blanqueadores.

**Limpiar la canasta de cerámica apta para lavavajillas:**

- 1) En primer lugar, retira el enchufe de la toma de corriente y deja que el Momo Easy Fry® se enfrie.
- 2) Retira la canasta de cerámica.
- 3) Lava tu canasta de cerámica en el lavavajillas.
- 4) Alternativamente, puedes preferir lavar la canasta de cerámica a mano. Consulta a continuación las instrucciones detalladas para el lavado de manos.

**Lava a mano la canasta de cerámica:**

- 1) Para lavar a mano, deja que la canasta de cerámica se enfrie completamente antes de sumergirla en agua.

2) Nunca coloques la canasta de cerámica directamente en agua fría mientras aún esté caliente. Aunque las canastas de cerámica para cocinar pueden soportar temperaturas extremas en ambos extremos del termómetro, el cambio repentino y significativo de temperatura puede causar posibles efectos dañinos.

- 3) Lava la canasta de cerámica en agua tibia con jabón usando una esponja o un paño de cocina limpio en la sartén para eliminar completamente todas las partículas de comida.
- 4) Enjuaga bien la canasta de cerámica con agua limpia después de limpiarla e inspecciónala para asegurarte de que se hayan eliminado todas las partículas de comida.
- 5) Seca la canasta de cerámica con un paño suave.

**Limpieza del exterior del Momo Easy Fry®**

- 1) Las partes externas del Momo Easy Fry® solo deben limpiarse con un paño suave y húmedo. Debe evitarse el uso de materiales abrasivos y alcohol y asegurarse de que no entre humedad en la cavidad del producto.
- 2) La limpieza de la cavidad solo debe realizarse con un paño suave y seco para eliminar el exceso de agua.
- 3) Siguiendo el paso antes mencionado, puedes volver a colocar la canasta de cerámica en la cavidad y encender tu Momo Easy Fry® durante 5 minutos a 176.6 °C (350 °F) para garantizar el completo secado de la cesta de cerámica.

**NOTA**

El elemento calefactor de Momo Easy Fry® se encuentra en la parte superior de la cavidad. Puede estar caliente aunque no se vea de color rojo, por lo que siempre asegúrate de que el producto se haya enfriado por completo antes de realizar cualquier limpieza.

## Otros consejos importantes de mantenimiento general:

- 1) Nunca sumerjas el producto en agua.
- 2) Siempre limpia con un paño suave que no suelte pelusa y jabón.
- 3) Siempre seca bien después de limpiar.
- 4) Asegúrate siempre de que todas las piezas del producto estén completamente secas antes de volver a usarlo.
- 5) Siempre vuelve a ensamblar todos los componentes de tu Momo Easy Fry® después de la limpieza para asegurarte de que esté listo para su próximo uso.
- 6) Repite la limpieza de tu Momo Easy Fry® antes de usarlo por primera vez después de un período prolongado sin uso.
- 7) Guarda siempre tu MomoEasy Fry® sobre una superficie plana en un lugar seguro y seco que esté fuera del alcance de los niños.

## ADVERTENCIA MEDIOAMBIENTAL



Ten siempre en cuenta el bienestar del medio ambiente y nunca deseches este producto y/o su empaque como residuos domésticos normales, ya que algunos componentes pueden ser perjudiciales para el medio ambiente. En su lugar, asegúrate de desechar tu Momo Easy Fry® y su empaque a través del servicio autorizado de tu ciudad. Siempre presta atención a las leyes ambientales locales vigentes de tu ciudad y, en caso de duda, comunícate con tu ayuntamiento local para obtener la información más actualizada sobre desechos y eliminación.

## NOTA

**Actualizaciones del hardware y de los componentes del producto se realizan con regularidad. Algunas instrucciones, especificaciones e imágenes contenidas en este manual del usuario pueden diferir ligeramente de tu producto en particular. Para obtener nuestro último manual actualizado, consulta siempre nuestro sitio web oficial: [www.momo-lifestyle.com](http://www.momo-lifestyle.com)**

## GARANTÍA LIMITADA DE 1 AÑO (12 MESES) A PARTIR DE LA FECHA DE COMPRA

Momo Lifestyle LLC warrants that for a period of ONE (1) year from the date of purchase, this product will be free from defects in material and workmanship. Momo Lifestyle, at its sole discretion, will choose to provide technical support or replacement for this product, or any component of the product found to be defective during the warranty period. For Mexico, the warranty is from the date the customer receives the product, which is presumed to be the date of the invoice or voucher, or the stamped date of the guarantee, unless proven otherwise.

Momo Lifestyle LLC garantiza que durante un período de UN (1) año a partir de la fecha de compra, este producto estará libre de defectos en materiales y mano de obra. Momo Lifestyle, a su entera discreción, elegirá proporcionar soporte técnico o reemplazo para este producto, o cualquier componente del producto que se encuentre defectuoso durante el período de garantía. Para México, la garantía es desde la fecha en que el cliente recibe el producto, que se presume que es la fecha de la factura o comprobante, o la fecha sellada de la garantía, a menos que se demuestre lo contrario.

**Esta garantía es válida para el comprador minorista original y no es transferible (no aplica para el mercado mexicano donde sea transferible).**

Para que Momo Lifestyle LLC cumpla con esta garantía, es necesario presentar el producto, el recibo de compra.

Para que México haga cumplir la garantía, no se debe exigir que la presentación del producto esté acompañada de la póliza correspondiente, debidamente sellada por el establecimiento vendido, o que incluya factura o recibo con los datos específicos del producto.

Para obtener información sobre piezas, componentes, suministros y accesorios de este producto, el consumidor debe comunicarse con Momo Lifestyle® como se indica en el manual del usuario de este producto.

Para obtener información sobre piezas, componentes, suministros y accesorios de este producto, el consumidor debe comunicarse con Momo Lifestyle® como se indica en el manual del usuario de este producto.

Se recomienda que para recibir el servicio de garantía, los clientes no deben traer el producto a la tienda de compra, sino que deben comunicarse directamente con el servicio de atención al cliente de Momo Lifestyle®.

## NOTE

**Los siguientes casos no aplican a México: d, e, f, g.**

Al final de esta política de garantía, Momo Lifestyle® seguirá estando a tu disposición para brindarte el servicio que esperas y mereces con la confianza de la marca Momo Lifestyle®.



**Si tienes alguna pregunta, comunícate con nosotros a la siguiente dirección**

**momo**  
— lifestyle —  
**Momo Easy Fry®**  
Desarrollado en Florida por  
Momo Lifestyle LLC

 info@momo-lifestyle.com

 +1 305 998 2988

**Síguenos en las redes sociales:**

   
momolifestyleusa  
 www.momo-lifestyle.com