


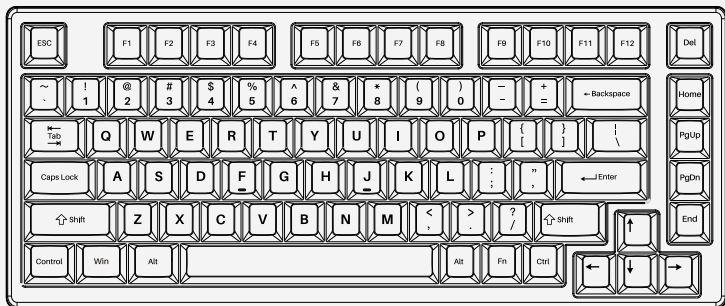

YZ75



User Manual

マニュアル

ユーザーズ



使用指南

型号： YZ75三模版
尺寸： ≈330mm×138mm×32mm
热插拔： 全键轴座热插拔
系统： Windows/Mac/Linux/
Android/iOS
电池： 5000mAh

供电： Type-C 5V-1A
重量： 950±50g
配列： 82键
键帽： PBT键帽
灯光： 下灯位

WIN 快捷键

FN +	功能
FN + Esc (3s)	恢复出厂设置
FN + Win	WIN锁定
FN + Del	Ins
FN + BACK	省电模式
FN + P	键盘锁
FN + F1	屏幕亮度-
FN + F2	屏幕亮度+
FN + F3	任务切换
FN + F4	打开浏览器
FN + F5	邮件
FN + F6	我的电脑
FN + F7	上一曲
FN + F8	播放/暂停
FN + F9	下一曲
FN + F10	静音
FN + F11	音量-
FN + F12	音量+

Mac 快捷键 (系统自动识别)

FN +	功能
FN + Esc (3s)	恢复出厂设置
FN + BACK	省电模式
FN + Del	Ins
FN + P	键盘锁
FN + F1	屏幕亮度-
FN + F2	屏幕亮度+
FN + F3	截图
FN + F4	打开浏览器
FN + F5	静音
FN + F6	音量-
FN + F7	音量+
FN + F8	上一曲
FN + F9	播放/暂停
FN + F10	下一曲
FN + F11	搜索
FN + F12	主页

独立指示灯



大小写指示灯



键盘锁指示灯



Win/Fn锁指示灯



电量指示灯

邮箱: support@yunzii.com

连接及RGB指南

设备连接模式

FN +	功能
FN + 1	蓝牙设备1
FN + 2	蓝牙设备2
FN + 3	蓝牙设备3
FN + 4	2.4G模式
FN + 5	有线模式

连接指南

蓝牙连接:

1. 打开键盘电源开关
2. 短按FN+1/2/3选择蓝牙通道, 此时1/2/3键慢闪
3. 长按5秒FN+1/2/3进入配对模式, 此时1/2/3键快闪
4. 在设备上选择YZ75 3.0/YZ75 5.0进行配对, 配对成功后RGB长亮

注意: 如配对失败, 键盘指示灯熄灭进入休眠, 请重新进行蓝牙连接。

2.4G连接:

1. 打开键盘电源开关
2. 短按FN+4选择2.4G通道, 此时4键慢闪
3. 长按5秒FN+4进入配对模式, 此时4键快闪
4. 将2.4G接收器插入设备, 配对成功后键盘RGB长亮

注意: 如键盘与设备对码失败, 键盘指示灯熄灭进入休眠, 请重新进行对码操作。

有线连接:

1. 从包装盒里取出键盘连接线
2. 将线的两头分别插入键盘与设备
3. 键盘自动识别系统之后, 连接成功

注意: 如键盘没有自动识别有线连接, 可长按3秒FN+5进入有线模式。

连接设备切换方法:

1. 短按3秒FN+1/2/3/4/5切换设备连接方式
2. 设备连接过程中, 指示灯慢闪; 连接成功后, 指示灯与RGB长亮2秒。
3. 若设备连接失败, 键盘指示灯熄灭, 进入休眠模式。

电量提示

电量低于5%, 红灯慢闪(背光关闭)充电时, 黄灯常亮; 充电完成, 绿灯常亮。

电量查询

背光开启时, 按下组合键**Fn+Space**, 背光熄灭字母区数字键1到0键亮灯显示电量占比

省电模式

在无线连接时**蓝牙/2.4G**, 5分钟内无操作关闭背光, 30分钟无操作进入深度睡眠

RGB灯效控制

FN +	功能
FN + Back	灯效开关
FN + End	灯效模式
FN + Home	灯光颜色
FN + PgUp	灯效方向
FN + ←→	灯效速度加减
FN + ↑↓	灯光亮度加减
FN + RIGHT CTRL	侧灯灯效模式
FN + RIGHT ALT	侧灯灯光颜色
FN + []	侧灯灯光亮度
FN + ; ''	侧灯灯效速度

网址: www.yunzii.com

邮箱: support@yunzii.com

键盘驱动

下载方式:

- 1.打开yunzii官网, 找到与型号对应的驱动
- 2.解压已下载的驱动包, 点击exe文件安装。
- 3.安装完成后, 使用有线模式连接电脑, 驱动程序会自动识别键盘。
- 4.连接完成, 开始使用驱动。

驱动下载与安装

下载网址: www.yunzii.com

适配系统: Windows



邮 箱: support@yunzii.com

驱动更新

打开驱动程序, 点击右上角更新驱动, 即可获得最新版本的驱动。

更换键帽和轴

拆换工具

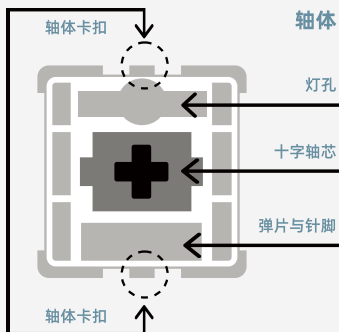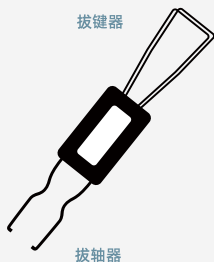

取下键帽

- 1.使用拔键器以垂直角度对准键帽上方
- 2.将拔键器下推至金属钩打开, 旋转拔键器从键帽下方抓牢键帽的对角
- 3.按住键盘, 垂直方向用力取下键帽

安装键帽

- 1.确认键帽方向正确, 对准十字轴芯
- 2.将键帽垂直推到轴上

取下轴体

- 1.使用拔轴器对准轴体的卡扣 (如图所示)
- 2.捏住轴体卡扣垂, 使卡扣与键盘定位板分离
- 3.使用温和且恒定的力度, 垂直将轴体取下
- 4.取下单个轴体时, 请先移出轴体轴位所有键帽, 以免损伤周边键帽

安装轴体

- 1.检查轴体针脚是否笔直且干净, 切忌使用有焊接痕迹的轴体
- 2.将针脚与键盘PCB板上的轴座对齐
- 3.垂直按下轴体, 使轴体固定到定位板上
- 4.检查轴体是否触发正常



如果轴体无法正常触发, 可能是因为轴体针脚弯折, 请将轴体取下, 更换轴体或修复针脚后重新安装
更换键帽和轴体切忌使用蛮力, 以免造成轴座损坏。

如您遇到拆卸和安装困难, 请联系客服人员, 以免因操作错误损坏键盘

QUICK START GUIDE

MODEL : YZ75 Wireless
SIZE : ≈330mm×138mm×32mm
HOTSWAP : YES
SYSTEM : Windows/Mac/Linux/
Android/iOS
BATTERY : 5000mAh

CONNECT : 2.4GHZ Wireless/Bluetooth/
Wired connection
WEIGHT : 950±50g
LAYOUT : 82 KEYS
KEYCAPS : PBT
LIGHT : RGB
PCB : South Facing PCB

FUNCTION



FN +	FUNCTION
FN + Esc (5s)	Reset
FN + Win	Win Lock
FN + Del	Ins
FN + Back	Battery Saving Mode
FN + P	Keyboard Lock
FN + F1	Screen Brightness-
FN + F2	Screen Brightness+
FN + F3	Task switch
FN + F4	Open Web
FN + F5	E-mail
FN + F6	My computer
FN + F7	Previous song
FN + F8	Play / Pause
FN + F9	Next song
FN + F10	Mute
FN + F11	Volume-
FN + F12	Volume+

FUNCTION KEY



FN +	FUNCTION
FN + Esc (5s)	Reset
FN + Del	Ins
FN + Back	Battery Saving Mode
FN + P	Keyboard lock
FN + F1	Screen Brightness-
FN + F2	Screen Brightness+
FN + F3	Screenshot
FN + F4	Open Web
FN + F5	Mute
FN + F6	Volume-
FN + F7	Volume+
FN + F8	Previous song
FN + F9	Play / Pause
FN + F10	Next song
FN + F11	Search
FN + F12	Home page

INDICATOR LIGHT



CAPS Lock



Lock Win/Fn



Keyboard Lock



Battery

Email: support@yunzii.com

CONNECTIONS AND RGB GUIDE

CONNECTION MODE

FN +	FUNCTION
------	----------

FN + 1	BT1
--------	-----

FN + 2	BT2
--------	-----

FN + 3	BT3
--------	-----

FN + 4	2.4G
--------	------

FN + 5	Wired
--------	-------

CONNECTION STEPS

Bluetooth Connection:

1. Turn on the ON/OFF button on the backside of the keyboard.
2. Short press the FN+1/2/3 to select the Bluetooth channel, and the 1/2/3 key will flash slowly.
3. Long press the FN+1/2/3 for 5s to the Bluetooth pairing mode, the 1/2/3 key will flash fast.
4. Select the YZ75 3.0/YZ75 5.0 to connect it, and the RGB will stay on when paired successfully.

Note: If the pairing fails, the keyboard indicator turns off and goes to sleep, please reconnect it.

2.4G Connection:

1. Turn on the ON/OFF button on the backside of the keyboard.
2. Short press the FN+4 to the 2.4G channel, and the 4 key will flash slowly.
3. Long press the FN+4 for 5s to the 2.4G pairing mode, the 4 key will flash fast.
4. Plug the 2.4G dongle into your device, the device will automatically recognize your keyboard, and the RGB will stay on when paired successfully.

Note: If the pairing fails, the keyboard indicator turns off and goes to sleep, please reconnect it.

Wired Connection:

1. Take the original keyboard cable from the package
2. Plug the cable into your device
3. The keyboard will automatically recognize your system, and then the connection is successful.

Note: If the keyboard has not recognized the wired connection, please long press FN+5 for 3s to the wired mode.

How to change the devices

1. Short press FN+1/2/3/4/5 for 3s to change the connection devices.
2. When the keyboard is in pairing mode, the indicator light will flash slowly; When paired successfully, the keyboard RGB and indicator light will stay on for 2s.
3. If the pairing fails, the keyboard indicator turns off and goes to sleep mode.

Battery

When the battery is lower than 5%, the indicator light will flash red slowly, the backlights will turn off; In charging, the indicator light will stay yellow; when charging is complete, the indicator light will stay green.

Power Query

Press Fn+Space to check the remaining power of the keyboard, the RGB backlights off, and the number keys 1 to 0 will light up to show the power ratio. e.g. Numbers 1-5 light up means 50% battery left.

Power save mode

The keyboard will automatically turn off the backlight without operation within 5 minutes, and enter a deep sleep without operation for 30 minutes.

RGB SETTINGS

FN +	FUNCTION
------	----------

FN + Back	RGB Light On/Off
-----------	------------------

FN + End	Change Back Light Effect
----------	--------------------------

FN + Home	Change Back Light Color
-----------	-------------------------

FN + PgUp	Light Effect Direction
-----------	------------------------

FN + ←→	Back Light Speed
---------	------------------

FN + ↑↓	Back Light Brightness
---------	-----------------------

FN + RIGHT CTRL	Change Side Light Effect
-----------------	--------------------------

FN + RIGHT ALT	Change Side Light Color
----------------	-------------------------

FN + []	Side Light Brightness
----------	-----------------------

FN + ; "	Side Light Speed V
----------	--------------------

Website : www.yunzii.com

Email: support@yunzii.com

KEYBOARD SOFTWARE

Download method:

1. Open the official website of yunzii, click on the software.
2. Unzip the downloaded software package and click the exe file to install.
3. After the installation is complete, use the wired mode to connect to the computer, and the software will automatically recognize the keyboard.
4. After the connection is completed, start using the software.

Software Download : www.yunzii.com

System Support: Windows


Email: support@yunzii.com

Driver update


Open the software and click Update software in the lower right corner to get the latest version of the software.

REPLACE KEYCAPS AND SWITCH

Included Tools

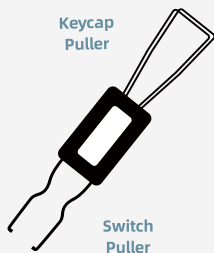

Mechanical Switch

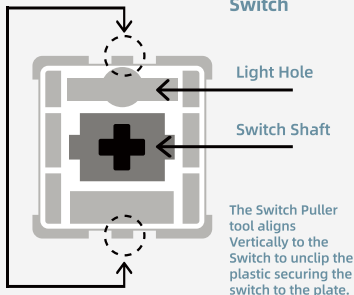

Remove Keycaps

1. Grab your Keycap Puller Tool and place it above the keycap you want to remove at a 90 degree angle.
2. Push your Keycap Puller down until the metal hooks to open themselves and grab the keycap from underneath.
3. Grab your Keyboard firmly and pull the keycap in a vertical motion.

Install Keycaps

1. Make sure the Keycap is properly oriented in your keyboard and place it above the switch.
2. Push the keycap into the switch shaft firmly.

Install Switches

1. Check that all the switch metallic pins are perfectly straight and clean.
2. Align the switch lamp hole with the backlight, The pins align themselves to the keyboard PCB.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.

Remove Switches

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.



Note: if the key doesn't work, you may have bent one of the switches while installing it. Pull the switch out and repeat the process. Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

マニュアル

モデル:	YZ75 ワイヤレス
サイズ:	≈330mm×138mm×32mm
ホットスワップ:	対応
システム:	Windows/Mac/Linux/ Android/iOS
バッテリー:	5000mAh

接続:	2.4GHZ無線/Bluetooth/有線接続
重さ:	950±50g
配列:	82 キー
キーキャップ:	PBT
ライト:	RGB

ファンクションキー

FN +	ファンクション
FN + Esc (5 秒)	リセット
FN + Win	Win ロック
FN + Del	Ins
FN + Back	省電力モード
FN + P	キーボードロック
FN + F1	画面の明るさ-
FN + F2	画面の明るさ+
FN + F3	タスクスイッチ
FN + F4	ブラウザを開く
FN + F5	メール
FN + F6	マイコンピュータ
FN + F7	前の曲
FN + F8	再生/一時停止
FN + F9	次の曲
FN + F10	ミュート
FN + F11	ボリューム-
FN + F12	ボリューム+

ファンクションキー

FN +	ファンクション
FN + Esc (3s)	リセット
FN + Del	Ins
FN + Back	省電力モード
FN + P	キーボードロック
FN + F1	画面の明るさ-
FN + F2	画面の明るさ+
FN + F3	スクリーンショット
FN + F4	ブラウザを開く
FN + F5	ミュート
FN + F6	ボリューム-
FN + F7	ボリューム+
FN + F8	前の曲
FN + F9	再生/一時停止
FN + F10	次の曲
FN + F11	検索
FN + F12	ホームページ

インジケータライト



Capsロック



ロックライト



Win/Fn ロックライト



バッテリーライト

E メール: support@yunzii.com

接続 & インストールガイド

接続モード

FN +	ファンクション
FN + 1	BT1
FN + 2	BT2
FN + 3	BT3
FN + 4	2.4G
FN + 5	有線

接続手順

Bluetooth 接続:

1. キーボード裏面のON/OFFボタンをONにしてください。
2. FN+1/2/3を短く押ししてBluetoothチャンネルを選択し、1/2/3キーがゆっくり点滅します。
3. FN+1/2/3を5秒間長押ししてBluetoothペアリングモードにし、1/2/3キーが速く点滅します。
4. YZ75 3.0/YZ75 5.0を選択して接続し、ペアリングに成功するとRGBが点灯したままになります。

ご注意: ペアリングに失敗すると、キーボードのインジケータがオフになり、スリープ状態になります。再度Bluetooth接続を行ってください。

2.4G接続:

1. キーボード裏面のON/OFFボタンをONにしてください。
2. FN+4を短く押しして2.4Gチャンネルを選択し、4キーがゆっくり点滅します。
3. FN+4を5秒間長押しして2.4Gペアリングモードにすると、4キーが速く点滅します。
4. 2.4Gドングルをデバイスに差し込むと、デバイスが自動的にキーボードを認識し、ペアリングに成功するとRGBが点灯したままになります。

ご注意: ペアリングに失敗すると、キーボードのインジケータがオフになり、スリープ状態になります。再度2.4G接続を行ってください。

有線接続:

1. パッケージからキーボードケーブルを取り出してください。
2. ケーブルをデバイスに差し込みます。
3. キーボードが自動的にシステムを認識し、接続が成功します。

ご注意: キーボードが有線接続を認識しない場合は、FN+5を3秒間長押しして有線モードにしてください。

デバイスの切り替え方法

1. FN+1/2/3/4/5を3秒間短く押し、接続デバイスを変更できます。
2. キーボードがペアリングモードになると、インジケータライトがゆっくり点滅します。ペアリングに成功すると、キーボードRGBとインジケータライトが2秒間点灯し続けます。
3. ペアリングに失敗すると、キーボードのインジケータがオフになり、スリープモードになります。

バッテリーのヒント

バッテリーのヒント

バッテリー残量が5%未満になると、赤ゆっくり点滅します。(バックライト消灯)、充電中は常に黄色のライトが点灯します。充電完了、緑色のライトが常に点灯します。

パワークエリ

バックライト点灯時にFN+Spaceキーを押すと、バックライトがオンになります。数字キーの1~0が点灯し、電力比を表示します。例: 1-5 点灯すると、バッテリー残量が50%であることを意味します。

パワーセーブモード

無線接続時 (Bluetooth/2.4G)、5分間無操作でバックライト消灯、30分間無操作でディープスリープに入る

RGB設定

FN +	ファンクション
FN + Back	RGB ライトのオン/オフ
FN + End	バックライト効果の変更
FN + Home	バックライト色の変更
FN + PgUp	イルミネーション効果の方向
FN + ←→	バックライトスピード
FN + ↑↓	バックライトの明るさ
FN + RIGHT CTRL	サイドライト効果の変更
FN + RIGHT ALT	サイドライト色の変更
FN + []	サイドライトの明るさ
FN + ; "	サイドライトスピード

公式サイト : www.yunzii.com

Eメール: support@yunzii.com

キーボードソフトウェア

ダウンロード方法:

1. yunziiの公式 サイトサイトで、ドライバーをクリックします。
2. ダウンロードしたドライバパッケージを解凍し、exeファイルを実行してインストールしてください。
3. インストールが完了したら、有線モードを使用してコンピューターに接続すると、ドライバーが自動的にキーボードを認識します。
4. 接続が完了したら、ドライバーの使用を開始します。

ソフトウェアダウンロード URL : www.yunzii.com

システムサポート : Windows


E メール: support@yunzii.com

ドライバーの更新


ドライバーで、右下隅にある [ドライバーの更新] をクリックして、最新バージョンのドライバーを取得します。

REPLACE KEYCAPS AND SWITCH

Included Tools

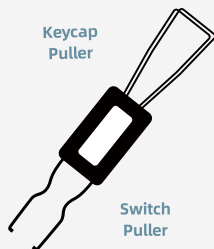

Mechanical Switch

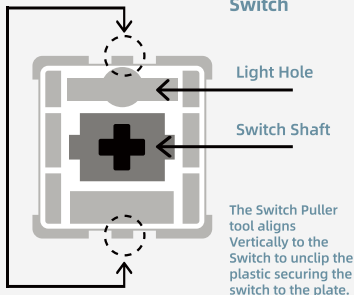

Remove Keycaps

1. Grab your Keycap Puller Tool and place it above the keycap you want to remove at a 90 degree angle.
2. Push your Keycap Puller down until the metal hooks to open themselves and grab the keycap from underneath.
3. Grab your Keyboard firmly and pull the keycap in a vertical motion.

Install Keycaps

1. Make sure the Keycap is properly oriented in your keyboard and place it above the switch.
2. Push the keycap into the switch shaft firmly.

Install Switches

1. Check that all the switch metallic pins are perfectly straight and clean.
2. Align the switch lamp hole with the backlight, The pins align themselves to the keyboard PCB.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.

Remove Switches

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.



Note: If the key doesn't work, you may have bent one of the switches while installing it. Pull the switch out and repeat the process.

Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.