



User Manual

Model: H5085
Smart Plug Pro

English

01

Français

12


Safety Instructions

- This device is recommended for use indoors and in a dry location only.
- The device should only be used within its issued outlet rating stated in the instructions.
- Please contact the Govee team for a replacement if there is any damage caused from transport.
- Please correctly plug in the socket and keep away from children.
- For added safety, please make sure to plug in the socket fully before using.
- Please do not disassemble the device. Otherwise, the device may get damaged or become a safety hazard.

English

At a Glance

Flame
Resistant
Material



Socket Panel

LED Indicator

Power Plug

On-Off/Connecting Button

With Govee Smart Plug Pro, you can remotely turn on or off home appliances simply with a network-connected mobile phone. You can also press  on the device to turn them on or off. Press and hold the button for 10s to restore to factory settings.

LED Indicator	Status
Solid blue	Power on. Wi-Fi connected.
No light	Power off. Wi-Fi connected.
Solid purple	Power on. Wi-Fi disconnected.
Solid red	Power off. Wi-Fi disconnected.
Flashing blue	Connecting to Wi-Fi.

Installing Your Device

Plug the device into the socket.

Notice:

- a. Make sure the distance between the device and the router is **less than 100ft.**

- b. Keep as few obstructions (e.g. wall, windows) as possible between the device and the router.



Pairing with Govee Home App

What You Need:

- A Wi-Fi router supporting the 2.4GHz and 802.11 b/g/n bands. 5GHz is not supported.
- A smartphone or tablet running iOS 8.0 (or above) or Android 4.3 (or above).



- 1 Download Govee Home App from the App Store (iOS devices) or Google Play (Android devices).
- 2 Turn on the Bluetooth in your smartphone.

- 3 Open the app, tap the "+" icon in the top right corner and search "H5085."
- 4 Tap the device icon and follow the on-screen instructions to complete pairing.

Using Your Device

1 App Control

Remote On/Off	Turn on/off the device remotely.
Timer Setting	Turn on/off the device at the preset time automatically.
Off Delay	Automatically turn off the device after the time period you preset.

② Voice Control

The device supports voice control via Alexa and Google Assistant. Please refer to the "User Guide" to activate. The "User Guide" can be found through:

- a. Open Govee Home App and select your plug on the "Device" page.
- b. Tap the settings icon in the top right corner.
- c. Tap "User Guide" to follow the on-screen instructions.

Troubleshooting

① Failed to connect to Wi-Fi.

- a. Make sure the distance between the device and the router is less than 100ft.

- b. Keep as few obstructions (e.g. wall, windows) as possible between the device and the router.
 - c. Make sure the Wi-Fi name and the password you entered is correct.
 - d. Make sure the Wi-Fi you connect to is 2.4GHz. 5GHz is not supported.
- ② Lost W-Fi connection./Cannot use the device with the app.
- a. Make sure your home Wi-Fi works well.
 - b. Check whether the Wi-Fi password has been modified.
 - c. Keep as few obstructions (e.g. wall, windows) as possible between the device and the router.

- d. Check whether the device has connected to Wi-Fi by the indicator. If the indicator is red, please reconnect the device to Wi-Fi as steps mentioned above.

Warning

- ❶ Do not press the On-Off button quickly and frequently.
- ❷ Do not plug in the appliance whose power is higher than 1200W.

Specifications

Rated Voltage	AC 120 V
Rated Current	10A Resistive (Max)
AC Frequency	60 Hz
Max Total Output Power	1200W
Working Temperature	-20°C - 40°C (-4°F - 104°F)
Wireless Standard	IEEE 802.11 b/g/n, 2.4GHz
App Support	iOS/Android

Customer Service

 Warranty: 18-Month Limited Warranty

 Support: Lifetime Technical Support

 Email: support@govee.com


 Official Website: www.govee.com


 @Govee  @Govee

 @Govee  @Goveeofficial

Français

Aperçu

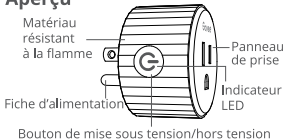

Avec la fiche intelligente Govee, vous pouvez allumer ou éteindre vos appareils électroménagers à distance simplement avec un téléphone mobile connecté au réseau. Vous pouvez également appuyer sur le bouton  pour allumer ou éteindre l'appareil. Appuyez sur la touche pendant 10 secondes pour rétablir les paramètres d'usine.

Indicateur LED	Statut
Bleu uni	Mise sous tension. Wi-Fi connecté.
Pas de lumière	Mise hors tension. Wi-Fi connecté.
Violet uni	Mise sous tension. Wi-Fi déconnecté.
Rouge uni	Mise hors tension. Wi-Fi déconnecté.
Bleu clignotant	Connexion au Wi-Fi.

Installation de votre appareil

Branchez l'appareil dans la prise.

Avertissement :

- Assurez-vous que la distance entre l'appareil et le routeur est inférieure à 100 pi.
- Veillez à ce qu'il y ait le moins d'obstacles possible (tels que les murs et les fenêtres) entre l'appareil et le routeur.



Association de votre fiche avec l'application Govee Home

Ce dont vous avez besoin :

- Un routeur Wi-Fi prenant en charge les bandes 2,4 GHz et 802.11 b/g/n. 5 GHz n'est pas pris en charge.
- Un smartphone ou une tablette fonctionnant sous iOS 8.0 (ou une version supérieure) ou sous Android 4.3 (ou une version supérieure).



- 1 Téléchargez l'application Govee Home depuis l'App Store (pour les appareils iOS) ou Google Play (pour les appareils Android).
- 2 Activez le Bluetooth sur votre smartphone.
- 3 Ouvrez l'application, appuyez sur l'icône « + » dans le coin supérieur droit et recherchez « H5085 ».
- 4 Appuyez sur l'icône de l'appareil et suivez les instructions à l'écran pour terminer l'association.

Utilisation de votre appareil

- 1 Contrôle d'application

Mise sous tension/hors tension à distance	Mettez l'appareil sous tension / hors tension à distance.
Réglages de la minuterie	Mettez l'appareil sous tension / hors tension automatiquement à une heure prédéfinie.
Hors délai	Mettez automatiquement l'appareil hors tension après la période de temps que vous avez prédéfinie.

② Commande vocale

L'appareil prend en charge la commande vocale via Alexa et l'Assistant Google. Veuillez vous reporter au « Guide d'utilisation » pour activation. Vous pouvez consulter le « Guide d'utilisation » en cliquant sur :

- a. Ouvrez l'application Govee Home, sélectionnez votre prise sur la page Appareils .
- b. Appuyez sur l'icône des paramètres dans le coin supérieur droit.
- c. Appuyez sur « Guide d'utilisation » pour suivre les instructions à l'écran.

Dépannage

- ❶ Échec de la connexion au Wi-Fi.
 - a. Assurez-vous que la distance entre l'appareil et le routeur est inférieure à 100 pi.
 - b. Veillez à ce qu'il y ait le moins d'obstacles possible (tels que les murs et les fenêtres) entre l'appareil et le routeur.
 - c. Assurez-vous que le mot de passe Wi-Fi que vous avez saisi est correct.
 - d. Assurez-vous que le Wi-Fi auquel vous vous connectez fonctionne à 2,4 GHz. 5 GHz n'est pas pris en charge.
- ❷ Connexion au Wi-Fi perdue./Impossible de faire fonctionner l'appareil avec l'application.

- a. Assurez-vous que **le Wi-Fi** de votre domicile fonctionne correctement.
- b. Vérifiez si **le mot de passe du Wi-Fi** a été modifié.
- c. Veillez à ce qu'il y ait **le moins d'obstacles possible** (tels que **les murs et les fenêtres**) entre **l'appareil** et **le routeur**.
- d. Vérifiez si **l'appareil** est connecté au Wi-Fi par **l'indicateur**. Si **l'indicateur** est rouge, veuillez **reconnecter l'appareil** au Wi-Fi en suivant **les étapes** mentionnées ci-dessus.

Avertissement

- ❶ **Ne pas appuyer sur le bouton Marche-Arrêt** rapidement et fréquemment.
- ❷ **Ne branchez pas un appareil dont la puissance est supérieure à 1200W.**

Caractéristiques techniques

Tension nominale	AC 120 V
Courant nominal	10 A résistif (Max)
Fréquence du CA	60 Hz
Puissance de sortie maximum	1200 W
Température de fonctionnement	-20 °C-40 °C (-4 °F-104 °F)
Norme sans fil	IEEE 802.11 b/g/n, 2,4 GHz
Soutien d'applications	iOS/Android

Consignes de sécurité

- Cet appareil est destiné à une utilisation à l'intérieur et dans un endroit sec uniquement.
- Vous ne devez utiliser l'appareil que dans la limite de la puissance de la prise indiquée dans les instructions.
- En cas de dommages causés par le transport, Veuillez contacter l'équipe Govee pour un remplacement.
- Veuillez brancher correctement la prise et garder hors de la portée des enfants.
- Pour plus de sécurité, veuillez à bien brancher la prise avant de l'utiliser.
- Ne démontez pas l'appareil. Sinon, l'appareil peut être endommagé ou devenir un danger pour la sécurité.

Service client

-  Garantie : Garantie limitée de 18 mois
-  Assistance : Assistance technique à vie
-  E-mail : support@govee.com
-  Site Internet officiel : www.govee.com
-  @Govee  @Govee
-  @Govee  @Goveeofficial

FCC and ISED Canada Statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR

d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

4. Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC and IC Radiation Exposure Statement

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

la distance entre l'utilisation et l'appareil ne doit pas être inférieure à 20 cm.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Shenzhen Intellirocks Tech. Co., Ltd. is under license.

Responsible party :

Name: GOVEE MOMENTS(US) TRADING LIMITED
Address: 2501 Chatham Rd Suite R Springfield IL
62704

Email: support@govee.com

Contact information:

<https://www.govee.com/support>



FOR INDOOR USE ONLY
NUR FÜR DEN INNENGEBRAUCH

Govee is a trademark of Shenzhen Intellirocks
Tech. Co., Ltd.

Copyright ©2021 Shenzhen Intellirocks Tech. Co.,
Ltd. All Rights Reserved.

Matter is developed by the Connectivity
Standards Alliance™. This brand, related logos,
and marks are trademarks of the Alliance, all
rights reserved.



Govee Home App

For FAQs and more information,
please visit: www.govee.com