
A4000

User's Manual

取扱説明書


使用说明书



Manufacturer/製造/制造商

final Inc.

3-12-7 Kitakase, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0057, Japan Tel:+81 44 789 5795 Fax:+81 44 789 5770 Part Names

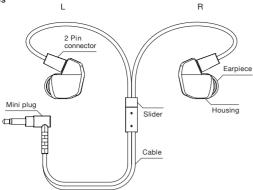

List of items in package


Main unit, Carrying case, Ear tips, Ear tips case, Ear hooks TYPE B

Regarding Ear Hooks

Using the ear hooks makes for an even more stable fit, and also makes for a reduction in touch noise

-How to put them on

Please put the ear hooks onto the cable. Next, while holding down the base of the lock on the ear hooks, pull the hole over the lock from above and push it down to lock it in place. Then, insert the housings of the earphone into the ear and hang the ear hooks on the ear and adjust the fit.









Please scan the QR code or access the link below to view a how to video.

回郷回 https://youtu.be/faD17BpNh5s

Note on use of the detachable cable

•The connecting terminal has not been configured with a view to frequent connection and disconnection. Repeatedly connecting and disconnecting the terminal may lead to contact failure owing to wear or damage to the terminal; please ensure that any connection or disconnection is limited to situations of cable breakage or when the cable is replaced with other final cables that are sold separately.




- ·To prevent damage to the connecting terminal, please ensure that all parts are held straight when connecting or disconnecting them.
- · When disconnecting them, do not pull on the cable; ensure that you hold the plug (ABS section).
- In the event that evidence of excess wear or damage to the connecting terminal is recognized, the product will not be covered by the warranty, even during thewarranty period

Regarding earpieces

To make it easier to differentiate between the right and left earpieces, we have given the bushes different colors; the bush of one earpiece is gray, while the other is red. (*1) By pulling the earpiece back slightly to check the color of the bush, it is easy to distinguish between left and right, even in places with subdued lighting.


Since the bush colors of neighboring sizes are different (the gray bushes alternate between dark and light gray; the red bushes alternate between red and pink), it is also easy to distinguish between sizes. (*2)



Regarding the carry case

Turn the lid back to open the case: store the earphones inside, then close the lid, ensuring that all three tabs are securely fastened. The lid may open if the case is exposed to inordinate force.

Please scan the QR code or access the link below to view a how to video.



Notes on use

⚠ WARNING	Ignoring the content of this indication could result in death or serious injury.
○ PROHIBITED	Do not use the earphones while driving a bicycle, car or motorcycle. Doing so could cause a traffic accident and/or serious injury.
○ PROHIBITED	Do not use the product while walking in dangerous environments such as near a railroad crossing or intersection where you cannot hear sounds from the outside.
⚠ CAUTION	Ignoring the content of this indication could cause injury or damage to household articles in the vicinity.
○ PROHIBITED	When using the earphones, be careful not to play the sound too loud. Doing so for a long period of time could affect your hearing. At 80 dB(A) exposure time shall be limited to 40 hours/week, whereas at 89 dB(A) exposure time shall be limited to 5 hours/week.
○ PROHIBITED	If you experience skin irritation, stop using the product immediately and seek medical attention, or consult with our sales agent.
O PROHIBITED	If the sound volume is too loud, sound can be heard by other people. Use care not to disturb other people.

- •The way you position the earphone in your ear affects the sound quality. We recommend trying different positions by moving the earphone around while playing music. This will allow you to find the position that generates your most preferred sound. Once you figure out your favorite position it will be easy to set that position each time. The shapes of a person's right ear and left ear are usually different. Therefore, the best position for each ear is usually different as well.
- When removing the earphone from your ears, always hold the main unit first and then remove. Pulling the cord could cause the wire to become disconnected.
- •Do not apply strong impacts to the earphones or put excess force on the cable. If the product fails or wires are broken due to abnormal use, the product warranty is invalidated.
- ·Leaving the product in locations exposed to direct sunlight, high humidity, or a dusty environment could cause the product to fail
- · If the product fails, do not attempt to disassemble.
- •The earphone jack is for stereo reproduction only. If the earphone is connected to a monaural output jack, sound may not come out of one side

Maintenance

Gently remove debris stuck in the dust filter by tweaking it out onto the tip of a toothpick. In case soil or debris cannot be removed. please replace the dust filter with a new one included as accessory Please refer to the text below regarding the methodology for replacement of the dust filter.



The cable may harden if it comes into contact with certain chemical agents and in particular with the natural oils in human skin. After using the product, please wipe the cable with a soft damp cloth. Please refrain from using wet wipes that contain alcohol; using these may result in hardening of the product. Please also refrain from using alcohol-free wet wipes; these may contain a variety of other additives which may adversely affect the product.

Warranty and after-sales service

The warranty for this product is valid for 2 years from the day of purchase. During the warranty period, we will repair the product based on the provisions below. The warranty is only valid in the country in which the product was purchased. Please contact the store you purchased the product from regarding questions pertaining to repairs. For products purchased outside your country of residence and for support after the warranty period, please contact us using the Contact Form on our website

- During the warranty period, we will repair the product free of charge if the product failed even though it was used in accordance with the instructions in the User's Manual and the Warning and Caution sections.
- 2. In the following cases, repairs to the product will be subject to a fee even during the warranty period:
- (1) The necessary documentation noted in the warranty card is not complete.
- (2) The product is identified to be modified, disassembled, or repaired by a third party or customer other than our company or our authorized organizations.
- (3) The earphones were subjected to a strong impact or were allowed to get wet. Product failure or broken wires resulting from an excessive use of force on the cables.
- (4) Failure of the product or damage caused as a result of fire, earthquake, storm or flood damage, lightning strike or other natural disaster.
- (5) Repair of scratches on the surface of the housing or repair of the housing itself.


Contacting us

Please contact us regarding inquiries using the Contact Form on our website: www.snext-final.com

Specifications

Product code	FI-A4DPLDN	Impedance	18 Ω
Housing	ABS	Sensitivity	100 dB/mW
Driver	Dynamic	Weight / Cable length	18 g / 1.2 m

各部の名称

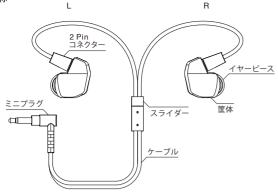

同梱品

本体、キャリーケース、イヤーピース、イヤーピースケース、イヤーフックTYPE B

イヤーフックについて

イヤーフックを使うと筐体をさらに安定して装着でき、またタッチノイズを軽減することができます。

・装着方法

イヤーフックをケーブルに装着してください。次にロック機構部のロックの根元を押さえながら、ホールを上からロックに被せるように押込んで固定してください。その後、筐体を耳に挿入し、イヤーフックを耳にかけて、フィット感を調整してください。

※イヤーフックはシリコンの柔らかさと、ケーブルにしっかりと固定される最適な形状を両立するため、イヤーフックを取り付け後に、取り外しを想定した設計ではありません。頻繁に取り外しをする場合は別売の「Ear hooks TYPE A」をご利用ください。







装着方法動画は下記リンクもしくはQRコードよりご覧ください。



https://youtu.be/svQVyaxShM0

着脱式ケーブルの注意点

- 接続端子は頻繁な抜き差しを想定したものではございません。着脱を繰り返すと、端子の摩耗や破損による接触不良を引き起こす事がございますので、ケーブル断線時の交換や弊社別売ケーブルへの交換以外での着脱はお控えください。
- ・接続端子の破損を防ぐ為、まっすぐ抜き差しを行なってください。
- ・取り外しの際はケーブルを引っ張らず、必ずプラグ(樹脂部分)を掴んでください。
- ・接続端子に過度の摩耗や破損の形跡が認められた場合は保証期間内で も保証対象外となります。



イヤーピースについて

左右判別をしやすくする為、軸色を、片方はグレー、もう一方は赤にしています。(*1) イヤーピース を少しめくって軸色を確認することで、薄暗い場所でも左右の判別がしやすくなっています。 さらに、隣のサイズの軸色を変えておりますので(グリー軸は濃いグレーと薄いグレーの交互、赤軸 は赤とピンクの交互)、サイズの判別もしやすくなっています。(*2)



キャリーケースについて

裏返して蓋を開けてイヤホンを収納し、蓋を閉じて3箇所あるツメがしっかりと留まっていることを確認 してください。過度の衝撃が加わると、蓋が開いてしまう場合がございます。十分にご注意ください。

収納方法は下記リンクもしくは QRコードより動画をご参照ください。



https://youtu.be/xzhwqs1agTQ

使用上の注意

- ☆ 禁止 運転以外であっても、踏切や交差点他、周囲の音が聞こえないと危険な環境では、で使用にならないでください。
- ▲ 注意 この表示を無視して誤った取り扱いをすると、人が負傷を負う、または周辺の家財に損害を与える可能性がある内容を示しています。
- イヤホンをご使用の際には、音量を上げすぎないように気をつけてください。 長時間、大音量での使用は、難聴を引き起こす可能性があります。80 dB (A) の音量で40時間/週、89 dB (A)の音量で5時間/週を超えないようにしてく ださい。
- ☆ 禁止 イヤホンが肌にあわないと感じられた際には、お早めに使用を中止し、医師もしくは販売店に相談ください。
- ☆ 禁 止 音量を上げすぎると、音は外部に漏れます。周囲の人の迷惑にならないように気をつけてください。
- ・装着位置によって音質が大きく変化致します。音楽を再生しながら片方ずつ本体を立体的に動かし、 最も好ましく聴こえる位置に合わせてください。それがベストポジション(最適位置)です。一度体 験すると、二度目からは無理なく位置を合わせる事が可能です。通常耳の形状は左右で大きく異な ります。そのため、ベストポジションは左右の耳で異なります。
- ・耳からイヤホンを外す際には、本体を持って外してください。ケーブルを持ち引っ張って外すと、ケーブル断線の原因となります。
- ・イヤホンに強い衝撃を与えたり、ケーブルに無理な力がかからないようにしてください。 異常な使用 状況下での故障や断線等は保証の対象外となります。
- ・直射日光の当たる場所、湿気、埃他の多い環境に放置すると、故障の原因となります。
- ・故障の際は内部を開けたりしないでください。
- ・このイヤホンのプラグはステレオ再生専用となっています。モノラル出力ジャックに接続した場合には、片側から音が出ない可能性があります。

メンテナンス

ダストフィルターに付着したゴミは、爪楊枝の先端にゴミを付着させる形でやさしく取り除いてください。内部にゴミが落下しないように、気をつけて作業してください。汚れが取れない場合は、新しいダストフィルターと交換してください。ダストフィルター交換方法については下記をご参照ください。



ケーブルは様々な化学物質、特に皮脂と反応し、硬化する場合がございます。製品使用後は、ケーブルを水で少し湿らせた柔らかい布で拭いて下さい。硬化の原因となりますので、アルコール入りのウエットティッシュのご使用をお控えください。 /ンアルコールのウエットティッシュも様々な添加剤が入っている可能性がありますのでご使用をお控えください。

保証とアフターサービス

この製品の保証期間はお買い上げ日より2年間です。保証期間中は以下の保証規定に基づき修理いたします。保証はご購入頂いた国でのみ有効です。修理のお申込は弊社ウェブサイトの「CONTACT」ページの「修理申込フォーム」より行なってください。居住国以外の国でご購入の場合や保証期間後のサポートについては、弊社ウェブサイトの「CONTACT」ページの「お問い合わせください。

- 1. 保証期間内に、取扱説明書に記載の警告、注意書きに従った使用状態で故障した場合には、 無償修理させて頂きます。
- 2. 保証期間内でも次の場合には、有償で修理させて頂きます。
- (1) 保証書に記載の必要書類が揃っていない場合。
- (2) 弊社および弊社が指定する機関以外の第三者やお客様により改造、分解、修理がなされた場合。
- (3) イヤホンに強い衝撃を与えたり、水に濡らした場合。ケーブルに無理な力がかかるような状況下で起こった故障や断線。
- (4) 火災、地震、風水害、落雷、その他天変地異などによる故障及び損傷。
- (5) 筐体表面の傷の修理、筐体自体の修理。


お問い合わせ

弊社ウェブサイトの「CONTACT」ページの「お問い合わせフォーム」よりお問い合わせください。 www.snext-final.com

仕様

製品コード	FI-A4DPLDN	インピーダンス	18 Ω
筐体	ABS	感度	100 dB/mW
ドライバー	ダイナミック型	重量 / ケーブル長	18 g / 1.2 m

部件名称图

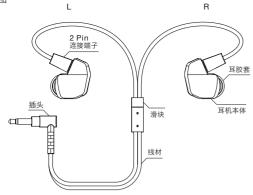

配件

耳机本体、收藏盒、耳胶套、耳胶套收纳盒、耳钩 TYPE B

耳钩的使用说明

使用耳钩有助于帮忙安定所佩戴的耳机, 同时能减轻耳机线的听诊器效应。

· 佩戴方式

请把耳机线装上耳钩,再将扣环结构的卡楯根部抵住,让扣环从上而下套住卡楯后, 将其挤入。耳机佩戴入耳后,将耳钩套上耳背,再依个人的舒适度进行调整。 ※耳钩本身并非为了反覆松脱所设计,多次反覆松脱有可能造成扣环结构破损、 请留意。有反覆松脱需求的情况下,请选购 TYPE A 的耳钩。







佩戴方式请参阅以下连结或是透过QR码参阅影片说明。




https://youtu.be/faD17BpNh5s

更换耳机线时的注意事项

- ·连接端口不宜频繁拆装,频繁拆装会造成过度磨损导致接触不良等可能情况产生,除非耳机线断线需要交换或者更换本公司另外贩售的耳机线以外,请尽量避免拆装。
- · 为防止连接端口受损, 请垂直安装或拆卸。
- ·拆卸时请勿拉扯线材,请务必紧捏连接端口(树脂部分)。
- ·即使在保修期内因不正当使用造成连接端口的过度磨损或损坏, 也不在保修范围之内。

关于耳胶套

为了能帮助简单分辨产品的左右,轴部单边以灰色系作为设计,另一边则为红色系。(*1) 稍微将耳胶套翻开即可确认轴部的颜色,在光线昏暗的地方依然很容易能区分左右。 再者邻近尺寸间的轴部颜色也作出了差异(灰色系轴部由深灰色和浅灰色相互接替,红色系轴部则是 由红色和粉红色相互接替),在尺寸上的判断也更为方便。(*2)



关于耳胶套收纳盒

将收纳盒盖子打开将耳胶套存放,盖子盖上时请确认 3 处卡楯处是否已固定住。受到过度冲击时,有可能造成收纳盒的盖子翻开,使用上请注意。

收纳方式请参阅以下连结或是透过QR码参阅影片说明。



https://youtu.be/Tb0mNsces6s

使用时的注意事项

▲ 警告	忽略该标示导致使用方式上的错误, 有可能造成生命危害或重大的伤害。
◎ 禁止	在自行车、汽、机车等交通工具行驶间,请勿使用耳机,以免造成重大交通意外事故。
○ 禁止	行驶车辆以外,在平交道、十字路口···等、周遭声音如果听不到有可能造成 危险的环境下,请勿使用。
<u>↑</u> 注 意	如果忽略该标示,可能会导致他人受到伤害,或周边设施财产的损害。
◇ 禁止	使用耳机时,请将音量控制在适当范围。长时间、大音量的使用,有可能造成听力受损。应避免每周以80dB(A)音量播放超过40小时,每周89dB(A)的音量播放超过5小时的使用量。
○禁止	在使用耳机的过程中,如肌肤感到不适,请立即停止使用,并尽快向医师或经销商咨询。

·佩戴位置的不同会在音质上带来很大的变化。建议音乐播放的同时,请将左右耳机一次一边做轻微移动调整,找到听得最清楚到且自己觉得最好的声音位置。这个位置即为该耳机的最佳佩戴位置。一旦找到位置,接下来佩戴时都会自然而然的往这个位置进行调整。通常左右耳朵的形状大小存在这差异性。因此左右耳的最佳佩戴位置也可能会有所不同。

音量过大时, 声音会有外漏的情形, 请顾虑旁人的情况, 不要造成他人的困扰。

- · 当耳机要从耳朵上取下时,请抓住耳机本体后再取下。如果以拉扯耳机线的方式,可能成为造成耳机线接触不良的原因。
- ·请勿让耳机受到强力撞击、线材部分承受过度的外力拉扯。不当使用造成产品故障及断线等情况将不在保修范围内。
- ·请勿将耳机放置于日照能直射、潮湿及多尘的环境下,有可能导致产品故障。
- ·产品故障时请勿自行拆解。

禁止

·耳机线插头属于双声道播放用专用插头。使用于单声道设备时,可能会造成单边耳机静默的情况。

耳机保养

防尘滤网上附着的脏污,请用牙签的尖端小心将其挑走的方式进行清除。清除时请小心谨慎不要让脏污掉进耳机内部。如果脏污无法顺利清除的话,请将产品附件中全新的防尘滤网取出并换上。防尘滤网的交换方法请参照下述的说明。



耳机线线材会与化学物质产生反应,特别是与皮肤油脂接触时会产生硬化现象。使用完本产品后,请以柔软的布料稍微沾湿后进行清洁。酒精成分会造成线材的硬化现象,请避免使用。不含酒精的湿纸巾也可能含有各种添加物,请避免使用。

保修以及售后服务

敝社产品的保修期间为;购买日期起两年内为有效期间。保修期内将按照敝社的保修条款提供维修服务。保修对象仅限该产品购入国地域内有效。有关商品的具体的维修事宜,请直接与授权经销商联系。凡是于居住国以外国家购买的产品,请通过敝社官网的「连络」页面咨询维修事宜。

- 1. 保修期间内, 遵守使用说明书记载的警告, 注意事项仍发生故障时, 将提供免费维修服务。
- 2. 保修期间内如有以下的情况,则仅能提供有偿维修服务:
- (1) 无法出示保证书中记载必要资料凭证。
- (2) 敝社及敝社所认可特定机关以外的第三方或是客人自身所进行的改造,分解,修理等情况。
- (3) 耳机在使用过程中受到外力冲击、进水等情况。线材受到不合理外力导致故障断线等情况。
- (4) 火灾、地震、风灾、水灾、落雷…等不可抗力之自然灾害所造成的故障。
- (4) 表面伤痕的清除、耳机本体外观的维修。

咨询方式

请至敝社网店「连络」的连接页面中「连络表格」处填写相关资讯后发送即可取得连系。 www.snext-final.com

规格

产品型号	FI-A4DPLDN	阻抗	18 Ω
外壳材质	ABS	灵敏度	100 dB/mW
单元类型	动圈	重量 / 线材长度	18 g / 1.2 m