



VIBES™

PERSONAL MASSAGER

- 20 different speeds
 - Water resistant
 - 2 hours of charging time will give you up to 4 hours of pleasure
-
- 20 intensités différentes
 - Résistant à l'eau
 - 2 heures de charge pour jusqu'à 4 heures de plaisir




WARNING / ATTENTION

- Keep out of reach of children.
 - For adults only.
 - If you have a pacemaker or are pregnant, consult your doctor before using the product.
 - Do not use on sensitive or swollen skin or areas of pre-existing injury.
 - Do not attempt to repair the device if damaged.
 - Contains battery and metal parts: do not subject to over heating or attempt to dry in an oven or microwave.
 - Dropping the device might compromise the correct functioning and water resistance of the device.
 - For some women, excessive use of vibrating device can cause temporary numbness and loss of sensitivity.
 - Do not leave in full sunlight or in a damp place.
 - Always switch off after use.
- Garder hors de la portée des enfants.
 - Pour adultes seulement.
 - Si vous portez un stimulateur cardiaque ou vous êtes enceinte, consultez un médecin avant d'utiliser le produit.
 - Ne pas utiliser sur la peau sensible ou la peau blessée.
 - Ne pas tenter de réparer l'appareil s'il est endommagé.
 - Contient des pièces métalliques: ne pas surchauffer ou tenter de sécher dans un four ou four à micro-ondes.
 - Laisser tomber l'appareil peut compromettre son fonctionnement ou sa résistance à l'eau.
 - Pour certaines femmes, une utilisation excessive d'un vibreur peut entraîner une insensibilité ou un engourdissement temporaire.
 - Ne pas laisser en plein soleil ou dans un endroit humide.
 - Toujours éteindre l'appareil après l'utilisation.

INSTRUCTIONS FOR USE / MODE D'EMPLOI

1. To turn on the device, press and hold the button for 3-4 seconds. Light illuminates and vibrator pattern begins.
 2. To change the vibrator pattern, press and hold the button for 1 second. Continue to press button to cycle through modes.
 3. To turn off the device, press and hold the button for 3-4 seconds. Light shuts off.
- We recommend you use a water based lubricant.

1. Pour allumer l'appareil, appuyez sur le bouton et maintenez-le enfoncé pendant 3 à 4 secondes. Le voyant s'allume et le motif du vibreur commence.
 2. Pour changer de mode de vibration, appuyez sur le bouton et maintenez-le enfoncé pendant 1 seconde. Continuez à appuyer sur le bouton pour faire défiler les modes.
 3. Pour éteindre l'appareil, appuyez sur le bouton et maintenez-le enfoncé pendant 3 à 4 secondes. La lumière s'éteint.
- Nous vous recommandons d'utiliser un lubrifiant à base d'eau.

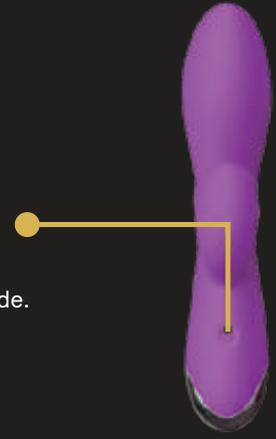

HOW TO CHARGE THE BATTERY / COMMENT CHARGER LA BATTERIE

1. Before charging, make sure the outlet is free from water or lubricant residue.
2. To charge the device, insert the cord into the bottom of the device and plug the USB cord into a power source.
3. Unplug the device before use.



1. Avant de charger la batterie, assurez-vous que l'entrée de la prise n'est pas couverte d'eau ou de résidu de lubrifiant.
2. Pour charger l'appareil, insérez le cordon dans la partie inférieure et branchez la prise USB dans une source d'alimentation.
3. Débrancher l'appareil avant l'utilisation.

Charge lasts up to 4 hours /
jusqu'à 4 heures d'autonomie

CLEANING, MAINTENANCE AND STORAGE / NETTOYAGE, MAINTENANCE ET STOCKAGE

- Using and maintaining the **SKYNN® VIBES™ PERSONAL MASSAGER** correctly will prolong the lifespan of the device.
- Clean thoroughly before using the first time, and after each subsequent use. Easy to clean with mild soap and water.
CAUTION: THIS DEVICE IS NOT WATERPROOF. IT MUST NOT BE SUBMERGED IN WATER OR USED IN THE SHOWER OR BATH.
After cleaning, dry off, and keep somewhere dry and cool.
- Do NOT use with any cleaner containing alcohol.
- L'utilisation et l'entretien corrects du **MASSEUR PERSONNEL VIBES™** prolongeront la durée de vie de l'appareil.
- Nettoyer soigneusement avant la première utilisation et après chaque utilisation. Facile à nettoyer avec de l'eau et du savon.
ATTENTION: NE PAS IMMERGER L'APPAREIL DANS L'EAU.
Après le nettoyage, sécher et conserver.
- NE PAS utiliser avec un nettoyant à base d'alcool.

DISPOSAL INSTRUCTIONS / COMMENT JETER

Dispose of this device according to your local regulations.
For more information, please contact your municipal waste disposal office.

Débarassez-vous de l'appareil conformément aux directives locales.
Pour en savoir plus, prenez contact avec le bureau municipal d'élimination des déchets.