TRIPOD ATTACHMENT

Step 1: Locate the "tripod straps" with the two buckles inside of the backpack.

Step 2: Thread the tripod straps under the webbing near the top of the bag and directly above the stretch pocket (two locations).

Step 3: The side release buckle should be located on the side of the tripod. Adjust the strap position on the bag so it is in this position.

Step 4: The ladder lock buckle should also be located on the side of the tripod. Use this buckle to tighten the strap.

RAIN COVER ATTACHMENT

Step 1: Place front feet through holes in rain cover and pull rain cover to the top of the roller.
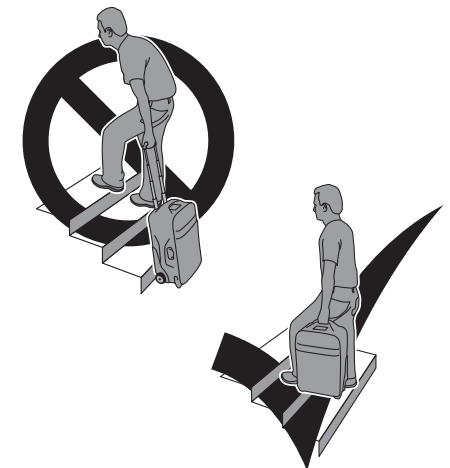
Step 2: Detach the hook/loop panel at the top of the bag. Place retractable handle through slot and tighten rain cover.

Step 3: Re-attach hook/loop panel between retractable handle tubes and tighten drawstring to secure the rain cover.

HANDLE USE

Due to the weight of video and photographic equipment, we recommend that you **do not lift the roller off ground or pull up stairs by the aluminum handle system**. Please use the fabric handle on top of the bag itself.

©2020 Think Tank Photo PIN0057a

DEPLOYING BACKPACK STRAPS

Step 1: Completely unzip the panel covering the backpack straps.

Step 2: Pull the panel down and under the wheel housings at the bottom of the bag.

Step 3: Tightly attach the panel in place with the hook and loop on the bottom of the bag.

Step 4: Untuck the backpack straps from the pocket and adjust as needed for proper fit. Reinsert the backpack straps into the pocket to use the backpack as a rolling bag.

EXTENDABLE HANDLE

Open the zipper flap on top of the Airport Essentials Rolling Backpack to reveal the extendable handle. To raise the handle, **press and hold** the button on the middle of the handle and simultaneously raise the handle completely. The release button must always be held down for the handle to be fully extended or retracted.

ADJUSTABLE STERNUM STRAP

The sternum strap adjusts up and down, along the blue rails on the backpack straps.

SECURITY CABLE AND LOCK

The cable and lock are inside the side pocket of the Airport Essentials Rolling Backpack. They are used to lock the main compartment zippers or secure to an immovable object to deter theft.

SETTING THE LOCK COMBINATION

The lock combination default setting is 0-0-0. To reset the combination, use a pen to press the small release button, on the side of the lock, until it clicks. Release the button and set the desired 3 digit combination. Be sure that each digit is centered precisely in the spaces. Press the locking clasp inward until it clicks to confirm the new combination.