


Use **PGM** to select program A, B, C, or D.

Use **NEXT** and **BACK** buttons to select options and scroll between zones.

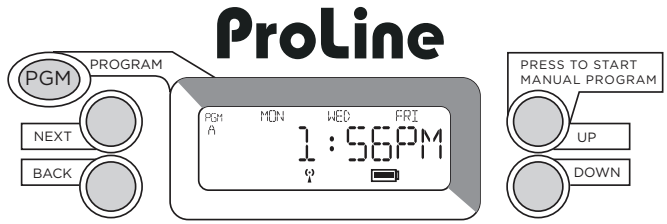

## ProLine<sup>®</sup> Programming

- 1** Set time of day (AM/PM) and month/day/year.
- 2** Set daily start times (AM/PM) for Programs (A, B, C, D) in use. Normally, one start time is sufficient. The start time is for the Program and not each zone. The Program will run all zones in consecutive order for each start.
- 3** Set zone run times (1 min to 9 hours 55 minutes) for Programs (A, B, C, D) in use.
- 4** Set watering days by selecting days of week or interval (1 to 30 days) or odd or even days for Programs (A, B, C, D) in use.
- 5** Set omit times, days, and dates to accommodate watering blackout periods (optional).
- 6** Set seasonal % by month for Programs A, B, C, D (optional).
- 7** Return dial to RUN.



### Manual Zone

Turn dial to **MANUAL ZONE**. Use **NEXT** button to select zone to run. Use **UP** and **DOWN** buttons to select zone run time (1 min to 9 hours 55 minutes). **Return dial to RUN to start.**



### Manual Test

Turn dial to **MANUAL TEST**. Use **UP** and **DOWN** buttons to enter run time (10 seconds to 10 minutes) for all zones with assigned run time. **Return dial to RUN to start.**



### Manual Program

Turn dial to **MANUAL PROGRAM**. Use **UP** and **DOWN** buttons to select the program you want to run (PROG A, B, C or D). **Return dial to RUN to start.**




Refer to Owner's Manual for complete instructions.

**DRAMM DRAMM**

**Help Desk: 920/684.0227**  
**www.dramm.com**

Use PGM para seleccionar el programa A, B, C o D.

Use los botones “SIGUIENTE” y “ANTERIOR” para seleccionar opciones y avanzar o retroceder entre las distintas zonas.

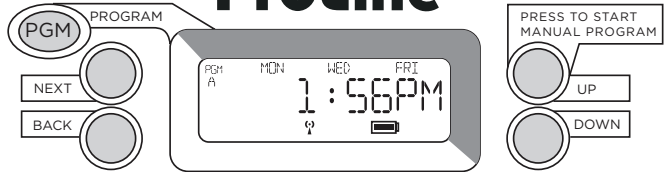

## Programación Estándar de ProLine<sup>®</sup>

**1** Programe la hora del día (AM / PM) y el mes / día / año.

**2** Programe las horas de funcionamiento diario para programas (A, B, C, D) en uso normalmente un periodo de servicio es suficiente. El tiempo de inicio es para el programa no es por cada zona. El programa correrá en todas las zonas en orden consecutiva para cada inicio.


**3** Programe las horas de inicio diario (1 minuto a 9 horas 55 minutos) para los Programas (A, B, C, D) en uso.

**4** Programe los días de riego seleccionando los días de la semana o los intervalos (1 a 30 días) o días pares para los Programas (A, B, C, D) en uso.

**5** Programe las horas, días y fechas de omisión para acomodar los periodos de bloqueo de riego (opcional).

**6** Programe el porcentaje estacional por mes para los programas A, B, C, D (opcional).

**7** Regrese el selector a la posición “ENCENDIDO”.



## Zona Manual

Gire el selector a “ZONA MANUAL”



(zona manual). Use el botón “SIGUIENTE” para seleccionar la zona de funcionamiento. Use los botones HACIA ARRIBA y HACIA ABAJO para seleccionar el tiempo de funcionamiento de la zona (1 minuto a 9 horas con 55 minutos). Regrese el selector a “ENCENDIDO” para arrancar.

## Prueba Manual

Gire el selector a “TEST MANUAL”. Use los botones HACIA ARRIBA y HACIA ABAJO para registrar el tiempo de funcionamiento (10 segundos a 10 minutos) para todas las zonas con tiempos de funcionamiento asignados. Regrese el selector a “ENCENDIDO” (funcionamiento) para arrancar.



Consulte en el Manual del Propietario la posición del selector en Funciones Avanzadas.