Category: machinery and appliances
general designation: household
electric massage chair

Purpose of use, effect-efficacy

Substitution of massage for home-use

- Thank you very much for purchasing Fujiiryoki massage chair.
- Carefully read this operation manual before use and only use as directed.
- Please read the safety precautions on pages 3-7 before us

Mount the power cord

⚠ DANGER

Do not use the chair other than on the designated voltage. Fire or electrification may occur.
Insert the power plug and connector to the root without fail and do not allow dust to adhere.
Failed to do so may cause electric shock, short circuit, or ignition.
Do not use damaged power plug or power cord. It may cause electric shock, short circuit, or fire
If it is damaged, contact your retailer or our customer care for repair.

1. Insert the connector of the power cord into the inlet (power cord insertion port) at the lower right of the rear side of the main body.

- Insert it firmly.
- Do not use any electrical cables other than the supplied cord.
- Check that the power cord, remote control cord, or power plug is not damaged or that there is no dust on the power plug.

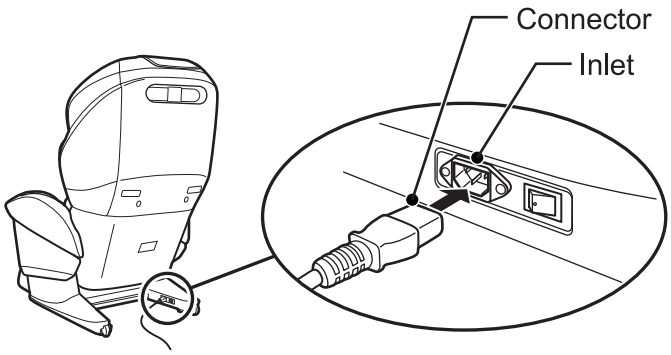

Before starting massage every time

Check around the chair

Check the surroundings without fail

- Check to make sure that there is nobody, no pet and nothing ahead behind the chair and under the footrest.

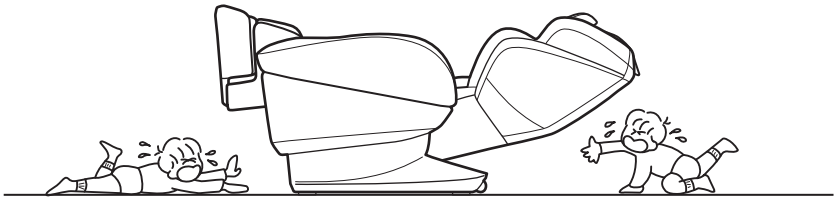

Switch on the power

⚠ DANGER

Do not use the chair other than on the designated voltage. Fire or electrification may occur.
Insert the power plug firmly so that no dust is accumulated. Failed to do so may cause electric shock, short circuit, or ignition.
Do not use damaged power plug or power cord. It may cause electric shock, short circuit, or fire
If it is damaged, contact your retailer or our customer care for repair.

1. Insert the power cord plug in the receptacle.

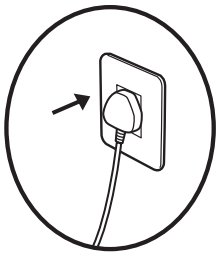

- Check that there is no damage in the power cord, remote controller cord, and the power cord plug. And there is no dust accumulated in the power cord plug.

2. Switch “ON” power of main body.

- The power switch is behind the main body on the right bottom.

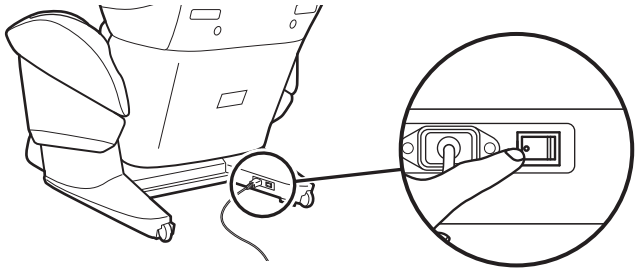

3. Press power button ⏻ of remote controller to switch on the power.

- Regular screen is displayed.
- The seat back is reclined and footrest is raised till standby position automatically.
  (When reclining angle of ^ v or footrest angle of ^ v or ■ is pressed, it is stopped)
- When it is not operated for around 3 minutes or more, power supply will be turned off automatically.

- When regular screen is not displayed even if power is switched on by pressing the power button, the chair cannot be operated.

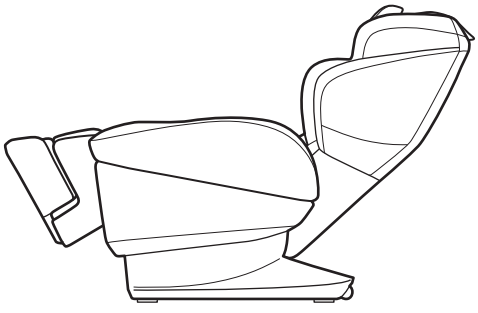

Standby position

Check the main body

1. Check for torn on the cover cloth.

⚠ DANGER

Before use, hold the back pad and make sure that there is no tear on the cover cloth of the backrest and on the other parts. (Should there be any tear, no matter how small it is, discontinue using the chair immediately. Disconnect the power cord plug, and ask for repair.) Continued use with the torn cloth may cause electric shock or any hazard on the body.

2. Check for trapping of foreign substance to the main body.

⚠ WARNING

Before use, check that there is no foreign substance trapped on to the main body (Backrest, footrest, armrest).
Failed to do so may cause accident or injury.

3. Check whether the knead ball is in the retracted position.

- When the knead ball is not in the retracted position, it can be returned by pressing ⏻ button.

⚠ WARNING

Before seated on the chair, check whether the knead balls are in the retracting position. Failed to do so may cause accident and injury.

4. Check whether the footrest is in completely lowered

- When the footrest is raised, it can be lowered down by pressing footrest angle ⌄.

⚠ WARNING

Do not get on and off the chair at the time of reclining or when the footrest is raised. The chair may overturn and the user may fall down and hurt himself/herself.

About the massage chair 2 Modes

This product has 2 modes available for use: Guest Mode, User Customized Mode.
For the functions available in each mode, please refer to the table on the specification page.（P73）

Guest Mode（P20～55）

- After the power is turned on, the menu screen will be displayed and it will automatically enter Guest Mode.
- In Guest Mode, massage can be performed directly without registering the customized information in advance. Every time it is used, the machine will perform reclining adjustment and body shape detection.

※In User Customized Mode, as long as you have registered the customized information, you can omit reclining adjustment and body shape detection.

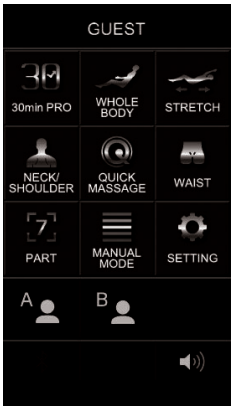

User Customized Mode（P56～62）

- User information registration/customize can be done for up to 2 users.
- The user can register customized information when uses the device for the first time. After the registration is complete, the machine will start the automatic course according to the registered customized information. Body shape detection and adjustment can be skipped.

※If you want to switch from User Customized Mode to other modes, please restart the power before operation.

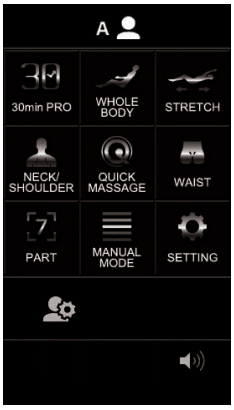

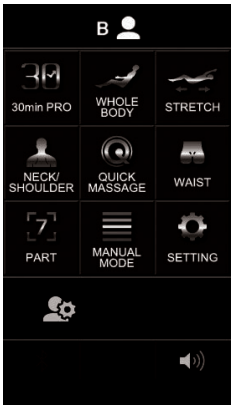

Registrable customized information（User Customized Mode）

Customize back line

Shoulder / waist position information
Shoulder / waist position information
Select the massage point of the automatic course.

S-curve detection information
In order to make the massage chair massage evenly along the back, this function will collect back line information. The detected back line data can also be further edited according to preferences.

Customize reclining

Reclining information
It is possible to register information of the preferred backrest angle, leg angle / leg length.

Customize airbags pressure

Air pressure information
After the pre-setting, it is possible to register information of the preferred air massage intensity.

Customized information first registration example

Select A/B ▶ Customize back line ▶ Customize reclining ▶ Customize airbags pressure ▶ Registration completed

Example of each massage operation（Auto Mode course）

Guest Mode

Power ON ▶ Select course ▶ Reclining adjustment ▶ Body shape detection ▶ Air pressure intensity adjustment ▶ Massage

User Customized Mode

Power ON ▶ Select course ▶ Skip body shape detection or adjustment. ▶ Massage

Adjust the reclining and footrest angle / Usage of the arm part

⚠ DANGER

Check to make sure that there is nobody, no pet and nothing ahead around the chair (back, front, side, and bottom part of main body) when reclined or footrest is moved. Failed to do so may cause accident or injury or damage of house holding.
When reclined or footrest is moved, make sure not to insert the hand, finger, leg or head in the gaps of main body which are mentioned below.
● Bottom side of chair ● Gap of armrest, backrest, and seat. ● Gap of armrest, leg and seat .
● Bottom side and back side of leg. ● Gap of armrest and arm. ● Backside gap of backrest.
Failed to do so may cause accident or injury

⚠ WARNING

Do not place your leg or hand in the footrest adjustable place, when footrest is adjusted. It may cause accident or injury.
Do not attempt to ride on the front portion of footrest or seat pad at the time of reclination.
The chair may overturn and the user may fall down and hurt himself/herself.
Do not get on and off the chair at the time of reclining or when the footrest is raised.
The chair may overturn and the user may fall down and hurt himself/herself.

Adjust the footrest angle and length

1. Adjust the footrest angle by pressing footrest angle ⌃ ⌄ button.

- When foot air is on, footrest will not be lowered till the retracted position
- Turn “OFF” the footrest air to lower the footrest till retracted position. (Refer Page 35)

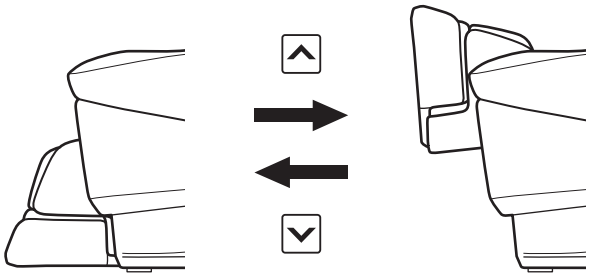

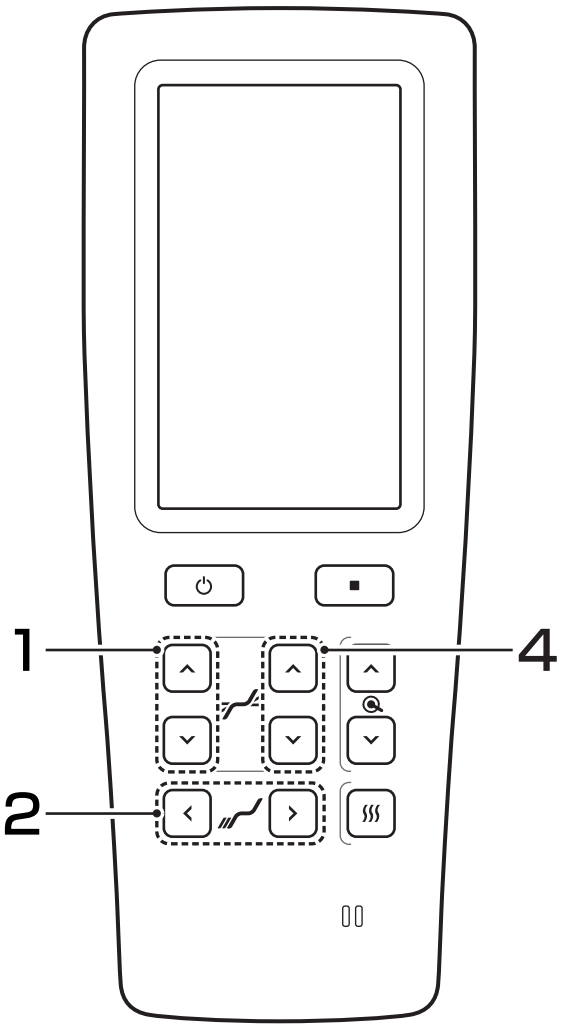

2. Adjust the footrest length by pressing the ‹ › footrest expansion buttons.

- Flexibility function can be used when footrest angle is 25 degree or more.
- Footrest length to be stretched changes in accordance with footrest angle.

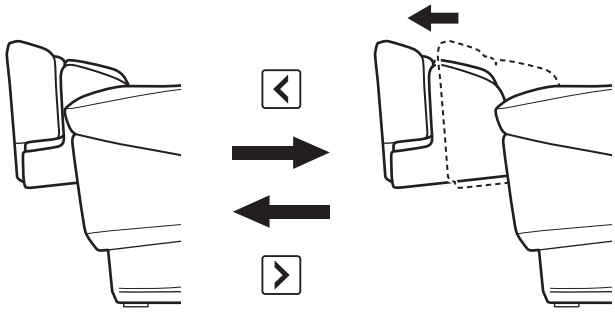

3. Stretch the sole and adjust the footrest length.

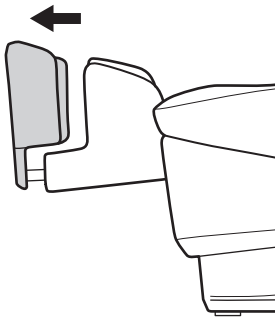

- Sole can be stretched or contracted by the spring.
  Press it with the leg.
- When returning the footrest to its original position, avoid applying force to the soles of the feet. If the footrest is moved back to position when the springs are extended, the sole part might hit the floor and then it won`t be possible to smoothly put the footrest back into position.

How to adjust reclining angle

4. The Reclining angle can be adjusted by pressing ⌃ ⌄ reclining button..

- Rather than falling down, irritability of the knead ball will be more.
- The recliner is interlocked, the footrest raises and armrest moves.

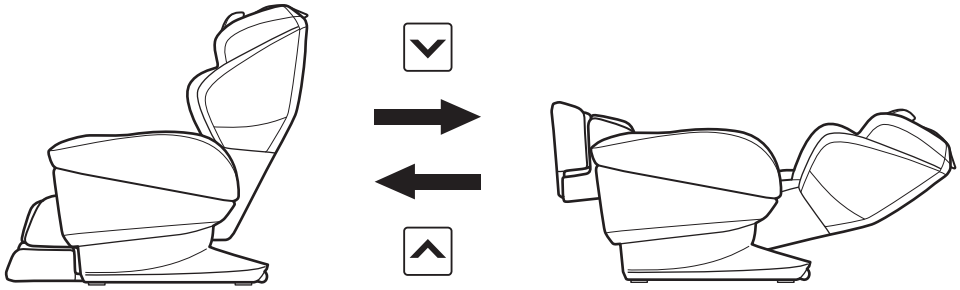

Usage of the arm part

⚠ WARNING

Do not use the hand/arm massage whilst wearing watches, rings, fake fingernail or bracelets. This may cause injury.

5. Straighten your fingers, stand your palms vertically and put your hands in.

- Do not put your hands in horizontally or with your fingers bent.

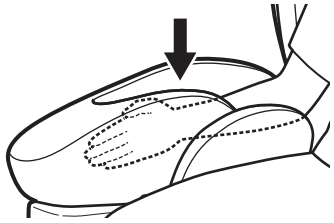

If you want to adjust the position of the arm (arm unit)

- You can adjust the position by sliding the arm part when the backrest is tilted. After the backrest is tilted, slide the arm part towards the backrest (manual).
- The larger the tilt angle of the backrest, the further the arm can be slid to the side of the back cushion. When the backrest is in the stowed position (completely upright), the arm cannot be slid.

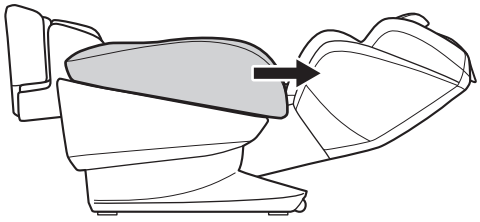

Massage by Auto Mode Course

Introduction

- Please set the power switch of the main body to “ON”.
- Put the pillow back, sit on the chair and slowly lean your head against the backrest. If you want to soften the massage feeling, add and use the pillow according to your preferences.

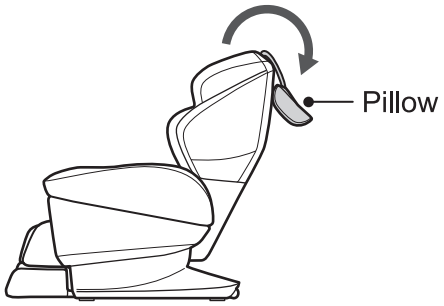

Auto Mode Course starts

1. Switch ON the Power by pressing ⏻

- Regular screen is displayed.
- The seat back is reclined and footrest raises automatically up to the standby position. (When reclining angle of ⌃ ⌄ or footrest angle of ⌃ ⌄ or ■ is pressed, it is stopped)
- If the machine is not operated for more than 3 minutes, then it is switched OFF automatically.

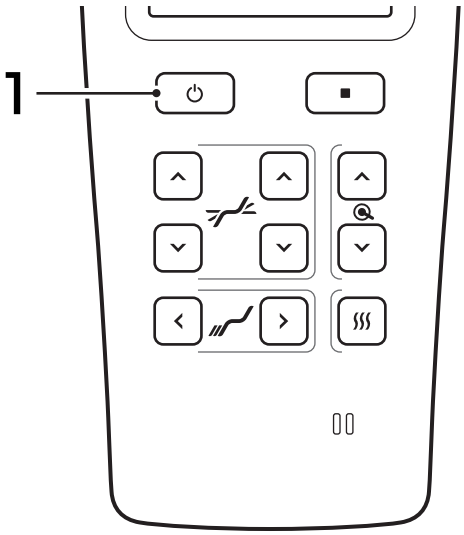

2. Select and press from these 30minPRO WHOLE BODY STRETCH NECK/ SHOULDER WAIST QUICK MASSAGE Buttons. Choose the preferred course and press the button.

- When the backrest is upper or footrest is lower than standby position,the backrest and footrest move to standby position.

[Example] When "REFRESH" course of Whole body is selected.

① Press WHOLE BODY

② Select the REFRESH

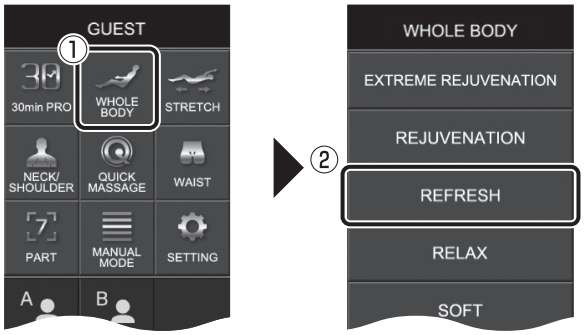

3. Start the Double Sensing (Body Shape Detection)

- The kneading balls move from the stowed position.
- Sit back firmly and lean the head towards backrest while sensing.
- Do not pull head off the backrest.
- There are some courses that the sensing is not given.

About Double Sensing (Body Shape Detection)

Double sensing is the function to detect body shape or posture before starting massage. The effective massage is given by 2 sensors, one for「S-shaped line detecting system」which detect one's back/spine, another for「Shoulder position detecting system」which detect one's shoulder position.

4. Automatic shoulder position detection starts. After detection is complete, press the “OK (①)” key. If it is inconsistent with the actual shoulders position, please press the "Re-detection" (②) key or the "Manual Adjustment" (③) key to adjust.

Position of knead ball

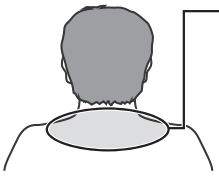

Match the knead ball in the neck and shoulder joint part

Do not keep head away from the backrest.

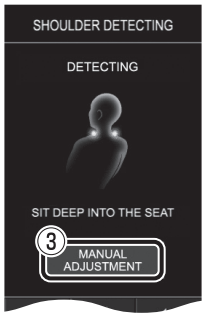

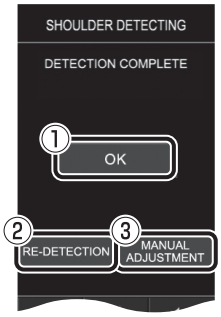

Shoulder position manual adjustment

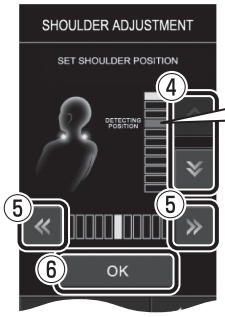

Aiming position during auto detection is displayed in red.

- Even if OK is not pressed, the massage starts after about 10 seconds.
- Detection starts again when press「RE-DETECTION」.
- Shoulder position can be adjusted by pressing [MANUAL ADJUSTMENT] during or after the detection. Adjust ⌃ ⌄ (④) for vertical position, « » for back and forward position, then press OK (⑥).
- Shoulder position detection measures vertical position. back and forward position can be adjusted by「MANUAL ADJUSTMENT」or Shoulder position adjustment after starting massage.

5. After the shoulders position is detected, the back line detection starts. After detection is complete, press the "OK" (①) key.

- Do not keep head away from the backrest.
- Even if OK is not pressed, the massage starts after about 10 seconds.
- Press the “Re-detection (②)” key to detect the back line again.
- In case of detection error, press “Re-detection”.

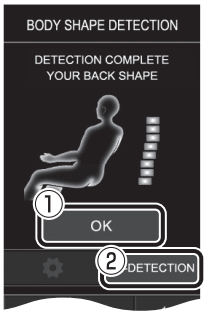

Error

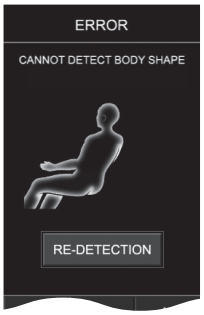

6. Selected auto course and massage operations are displayed.

- Refer to "Adjustment during auto course method" for the changes done in the settings during auto course.

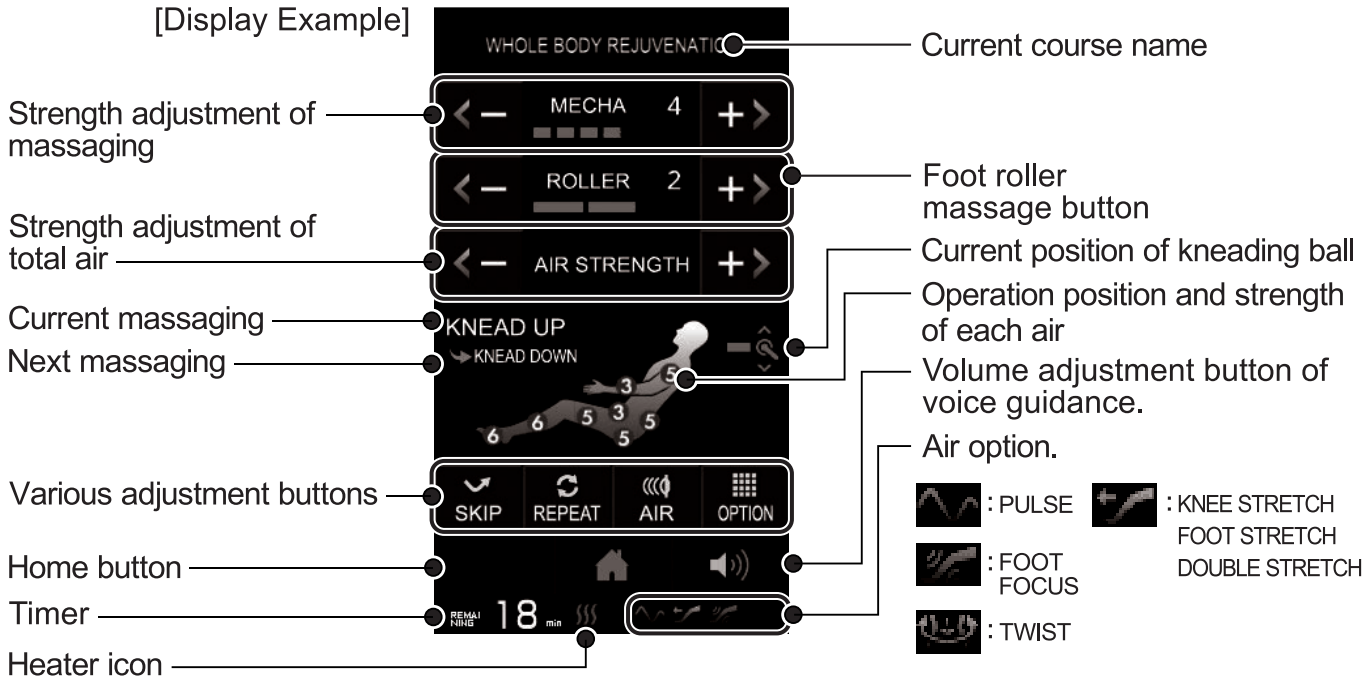

About the operation of auto course

The list of details that can be adjusted during the description of each auto course and during the start or in the middle of the course.

Course		Course details	Spinal column line auto detect	Shoulder auto detect	Rubbing ball	Air massage strength	Skip/ repeat	Adjust the shoulder position	Adjust the waist position	Option
30min PRO	V I P	Rejuvenating	●	●	●	●	-	●	●	-
	SOMMELIER	Perfect	●	●	●	●	-	●	●	-
	NIGHT HEALING	Refreshing	●	●	●	●	-	●	●	-
	CONDITIONING	Refreshing	-	●	●	●	-	-	-	-
	MINDFULNESS	Relaxing	-	-	-	●	-	-	-	-
WHOLE BODY	EXTREME REJUVENATION	Rejuvenating	●	●	●	●	●	●	●	●
	REJUVENATION	Perfect	●	●	●	●	●	●	●	●
	REFRESH	Rhythmical	●	●	●	●	●	●	●	●
	RELAX	Refreshing	●	●	●	●	●	●	●	●
	SOFT	Light massage	●	●	●	●	●	●	●	●
NECK/SHOULDER	EXTREME REJUVENATION	Rejuvenating	●	●	●	●	●	●	●	●
	REJUVENATION	Perfect	●	●	●	●	●	●	●	●
	REFRESH	Rhythmical	●	●	●	●	●	●	●	●
	RELAX	Refreshing	●	●	●	●	●	●	●	●
WAIST	EXTREME REJUVENATION	Rejuvenating	●	●	●	●	●	●	●	●
	REJUVENATION	Perfect	●	●	●	●	●	●	●	●
	REFRESH	Rhythmical	●	●	●	●	●	●	●	●
	RELAX	Refreshing	●	●	●	●	●	●	●	●
STRETCH	EXTREME WHOLE BODY STRETCH	Rejuvenating	-	●	●	●	-	-	-	-
	WHOLE BODY STRETCH	Perfect	-	●	●	●	-	-	-	-
	WHOLE BODY AIR	Massage only with air	-	-	-	●	-	-	-	●
	Technical Stretch	Site-specific stretching	-	●	●	●	-	-	-	-
7min	QUICK MASSAGE	Quick relax	●	●	●	●	-	●	●	●

※Spinal column line cannot be adjusted

Adjustment during auto course method

To adjust the strength of mecha massage

① Adjust the mecha strength by using +› for increase and by using ‹– for decrease.

- Strength can be selected from 7 steps.
- The initial setting is set in “4”. (Only software is set to "2".)

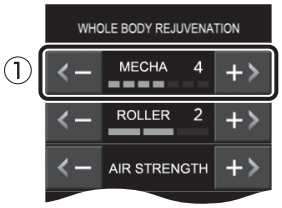

Adjustment method during air massage

[In the case whole adjustment]

① Total Air strength can be reduced with ‹– and increased with +›.

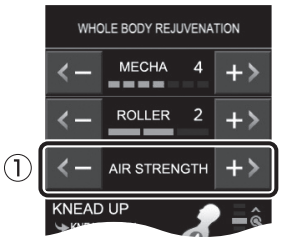

[In the case part by part adjustment]

① Press the “AIR”

② Select the preferable strength part by part. Can be reduced with ‹– and increased with +›.

③ Return to course screen by pressing OK

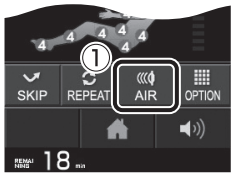

- Even if OK is not pressed, it will be set after 10 seconds approximately.
- There are 7 levels of intensity to choose from. The initial setting level is “4” (the initial setting level of the soft course is “3”). On the first page, “shoulder, arm, waist and pelvis”, on the second page, “hip, thigh, calf and ankle” can be adjusted. Press « » keys to switch the page.
- “OFF” can be set in part wise. If the ‹– is pressed when the strength is “1”, it will be set to “OFF”.

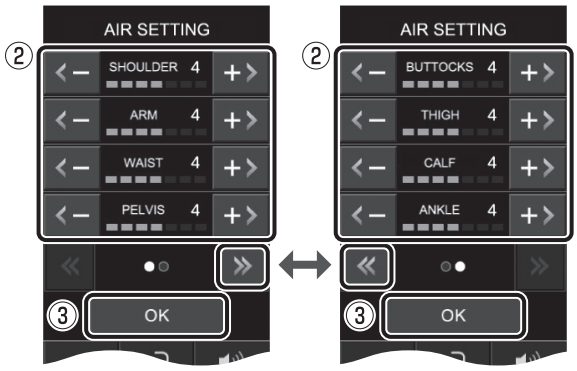

To proceed from current knead massage and to repeat the current knead massage

① When you want proceed from current knead massage, and press “SKIP”

② When you want repeat from current knead massage, and press “REPEAT”

- Air massage cannot skip and repeat.
- While pressing the repeat , the current massage will be continued for 30 seconds.
- During repeat , if press skip the repeat will be released.

To adjust the shoulder position (Front/back) and waist position (Up/down)

① When the mecha position come near by the shoulder or waist, press the ⌃ ⌄ of mecha position

② The mecha position is adjusted by using « » (front/back position of shoulder) or ⌃⌃ ⌄⌄ (Waist position).

③ Press OK

- Even if is not pressed, it will be set after 10 seconds approximately.
- The front back position of shoulder/ waist position will be reflected in neck and shoulder pro technique/ back and waist pro technique.

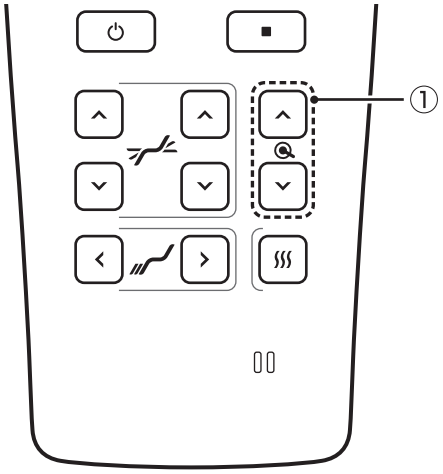

When the mecha is near to the shoulder position

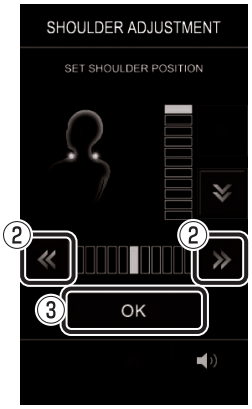

When the mecha is near to the waist position

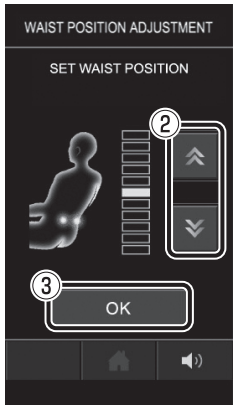

To set the airbags intensity

① Press “OPTION”

② Select “OFF / PULSE”

③ Return to course screen by pressing OK

- Even if OK is not pressed, it will be set after 10 seconds approximately.

To set stretch operation

① Press “OPTION”.
② Select “OFF / KNEE / FOOT / KNEE&FOOT”.
③ Return to course screen by pressing OK .

- Even if OK is not pressed, it will be set after 10 seconds approximately.
- When the stretch operation is selected, if the foot rest top angle is less, operation will begin after raising stretch operation up to possible angle.
- Multiple stretch operations cannot be set simultaneously.
- Stretch operation and “CALF” cannot be set simultaneously.

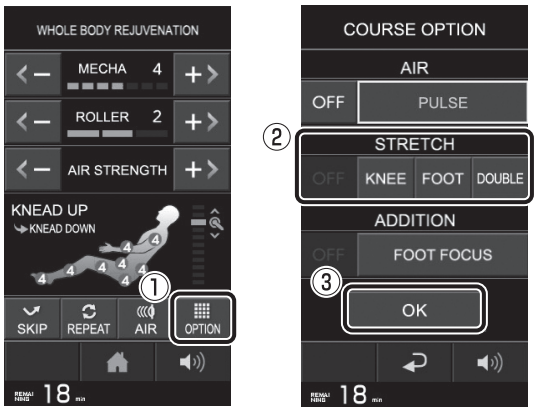

To set individual operation

① Press “OPTION”.
② Select “OFF / FOOT FOCUS”.
③ Return to course screen by pressing OK .

- Even if OK is not pressed, it will be set after 10 seconds approximately.

To adjust foot roller massage

① Foot roller strength can be reduced with ← and increased with → .

- Default setting of strength is [2].
- “OFF” can be set in part wise. If the ← is pressed when the strength is “1”, it will be set to “OFF”.
- Refer to [Foot roller massage].

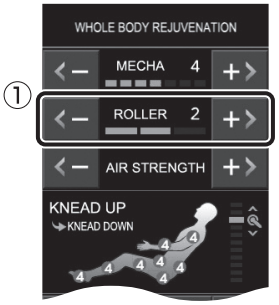

MEMO

About the end of Massage

Massage time is different from each course

- The knead ball moves to storing position after finishing massage.
- When auto reclining is「OFF」, return the angle of backrest and footrest to storing position during「STORING」is shown on the display.
- When auto reclining is「ON」, backrest moves up and footrest moves down automatically.
- When no operation for about 30 seconds after massage, power supply will be cut.

Course Selection	Massage time
Part massage Quick massage	7 minutes
Auto Course Manual Course	18 minutes
30 min PRO course	30 minutes

When returning the footrest to its original position, avoid applying force to the soles of the feet. If the footrest is moved back to position when the springs are extended, the sole part might hit the floor and then it won`t be possible to smoothly put the footrest back into position.

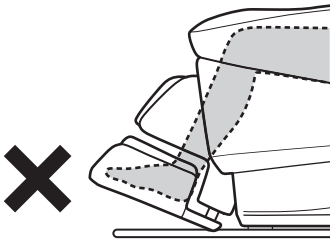

You can adjust the backrest and leg angle.(①)

AUTO MOVE UP (POWER OFF)

The backrest gets up, The legs are stowed.(②)

When the massage is over

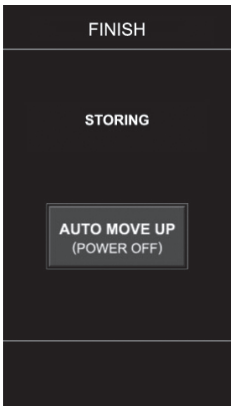

Power OFF

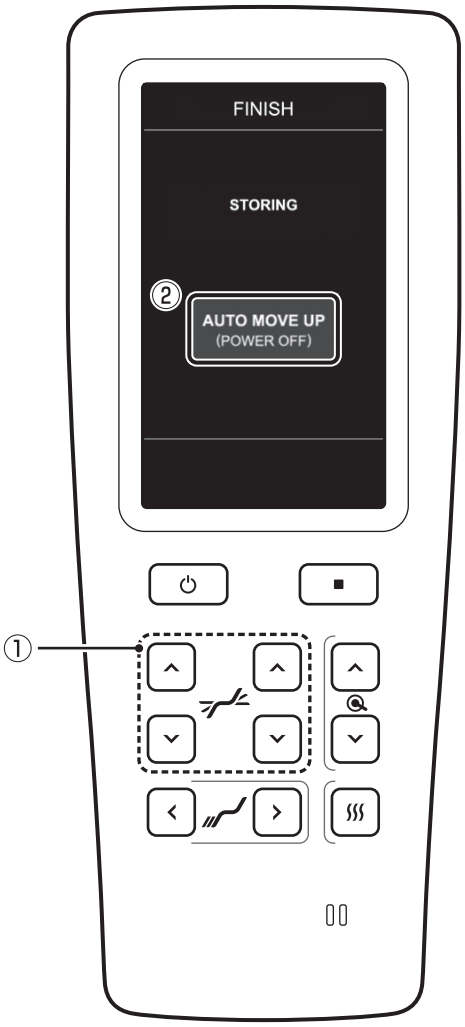

When massage is stopped as such

Press ■ (①)or ⌂ (②)

- The knead ball is stopped in the current position as such
- If ■ or ⌂ is pressed you will return to regular screen but the timer will continue.

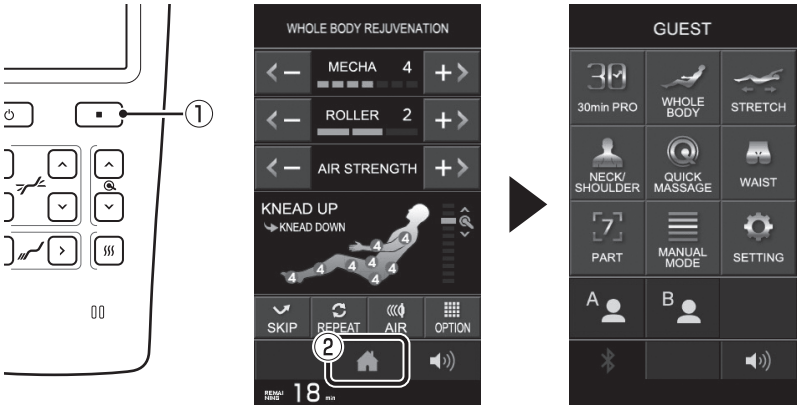

When massage is to be stopped suddenly

Press ⏻

- Knead ball moves till retracting position
- When “STORING” screen is displayed then restore the recliner and angle of footrest

You can adjust the backrest and leg angle.

AUTO MOVE UP (POWER OFF)

The backrest gets up,
The legs are stowed.

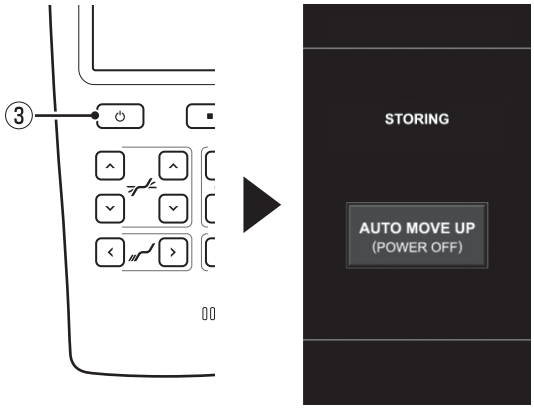

Disconnect the power of Main Body

1. Switch OFF the power of the main body

- The power switch is in the lower right part behind the main body.

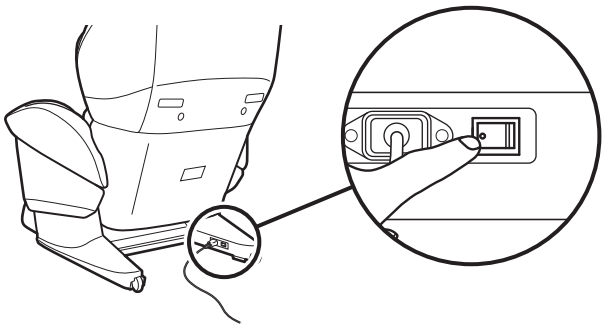

2. Remove the Power cord plug from receptacle

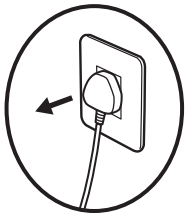

Rubbing massage

Start the desired rubbing massage

1. Switch ON the Power by pressing ⏻

- Regular screen is displayed.
- The seat back is reclined and footrest raises automatically up to the standby position. (When reclining angle of ⌃ ⌄ or footrest angle of ⌃ ⌄ or ■ is pressed, it is stopped)
- If the machine is not operated for more than 3 minutes, then it is switched OFF automatically.

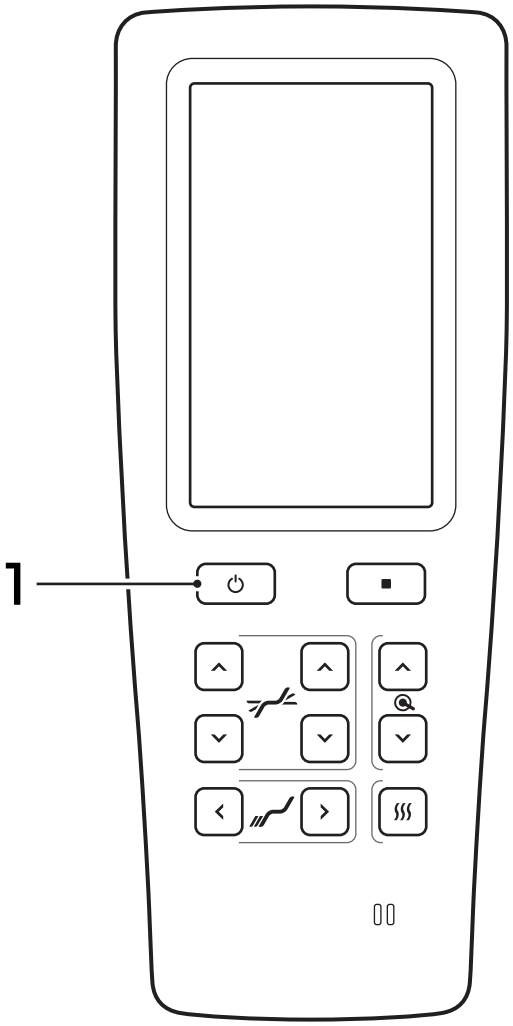

2. Select MANUAL MODE.

3. Select the desired massaging menu.

4. Select the desired massaging.

- Start the Massage

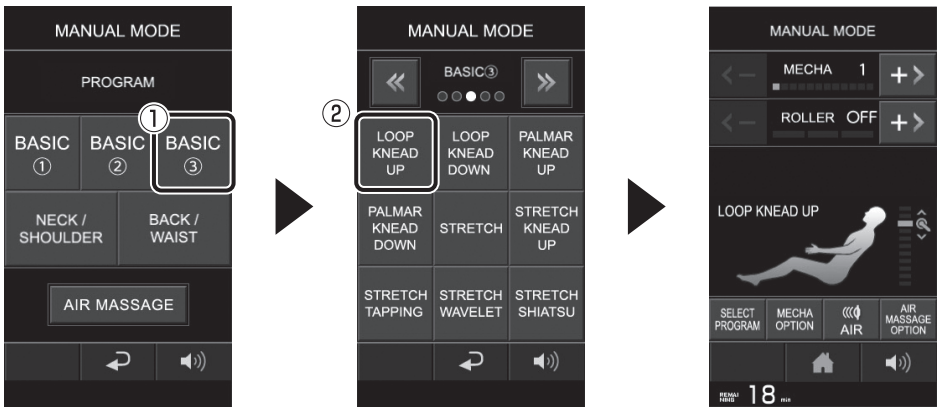

5. Set the massage action range. Select “Whole” to start detection of the shoulders position.

For the setting of action range, please refer to “To select action range (point/part/whole)” (P34).
For massage with adjustable action range, refer to “List of kneading techniques massage” (P36).

[Shoulder position adjustment]

- The mecha is moved to shoulder position and shoulder position detection starts. After completing detection, Massage starts OK (1) is pressed. When the shoulder position is not matching adjust using “RE-DETECTION (2)” or “MANUAL ADJUSTMENT (3)”.
- Even if "START" is not pressed, it will be started after 7 seconds approximately.
- The shoulder detection starts once again if "Redetect" is pressed.
- Shoulder position is manually adjusted if "MANUAL ADJUSTMENT" is pressed. Up/Down position of Mecha is adjusted by ⏫ ⏬ (4), Front/Back position is adjusted by ⏫ ⏬ (5) Press OK (6).

During shoulder position detection

Shoulder position detection completion

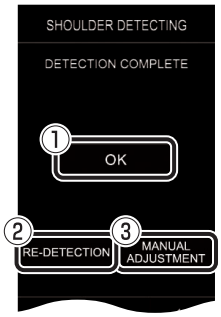

Shoulder position manual adjustment

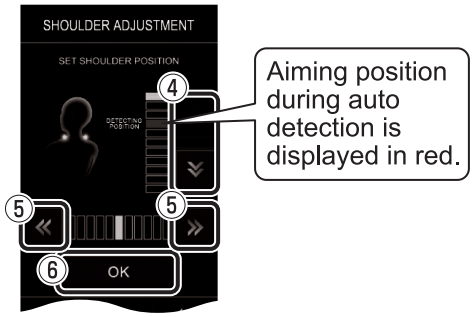

- Press the rubbing ball position ⏶ ⏷ (7) first, then use ⏪ ⏩ (8) to adjust the shoulder position front/back during massage.
  Press OK (9) after shoulder position adjustment.

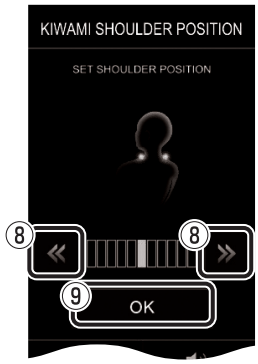

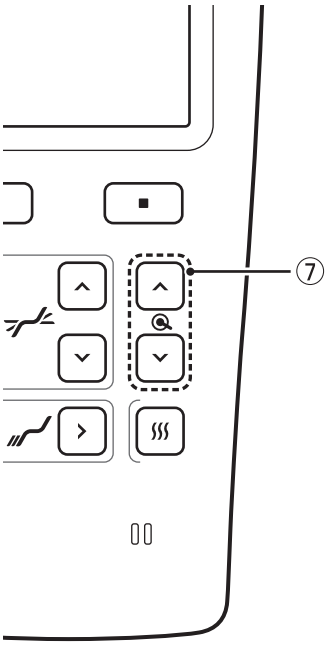

[Waist position adjustment]

- Waist position is adjusted with rubbing ball position ⏶ ⏷ (7) or ⏪ ⏩ (10) .
  Press OK (11) after waist position adjustment.

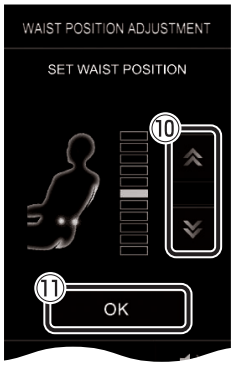

[Massage position adjustment]

- Adjust the massage position using ⏶ ⏷ (7) of mecha position.

How to adjust during massaging

When you want to adjust the massage speed

① Select the “MECHA OPTIONS”.
② Select the speed "SLOWEST/SLOW/ NORMAL/FAST".
③ Press OK .

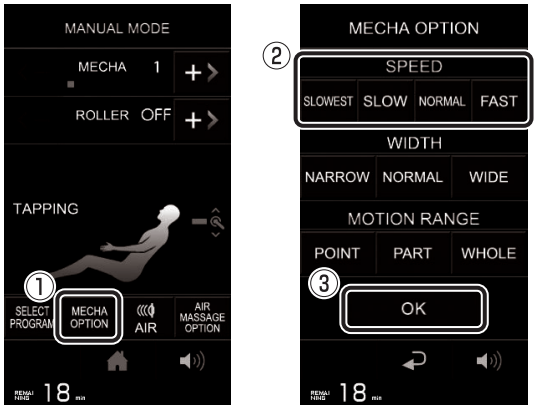

When you want to adjust the rubbing ball strength

① Select the “MECHA OPTIONS”.
② Rubbing width adjustment
Select the "NARROW/NORMAL/WIDE".
③ Press OK .

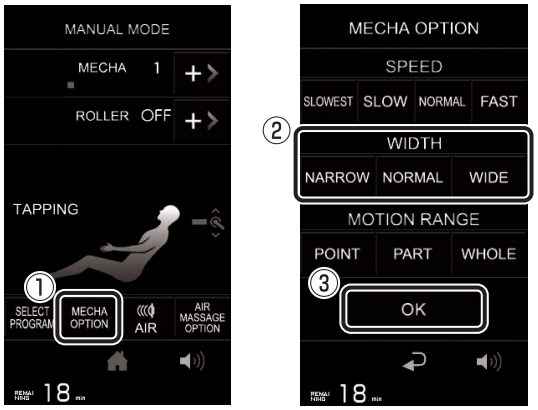

When you want to select the massage region (Point/part/whole)

① Select the “MECHA OPTIONS”.
② Select the motion range "POINT/PART/ WHOLE".
③ Press OK .

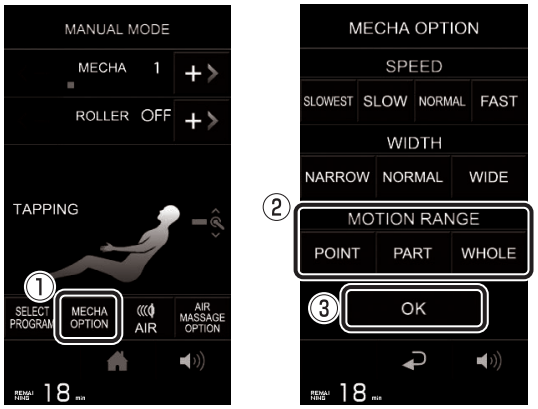

To adjust the shoulder position (Front/back) and waist position (Up/down)

① Knead ball position ⌃ ⌄ is pressed when mecha is near shoulder or waist.
② Knead ball position is adjusted with « » (Shoulder front and back position) or ⌃⌃ ⌄⌄ (neck position).
③ OK is pressed.

- Even if OK is not pressed, it will be started after 10 seconds approximately.
- The shoulder front and back position/Waist position is reflected in neck and shoulder position/Back and waist position. Refer to “Mecha massage function list table” for details. (P36)

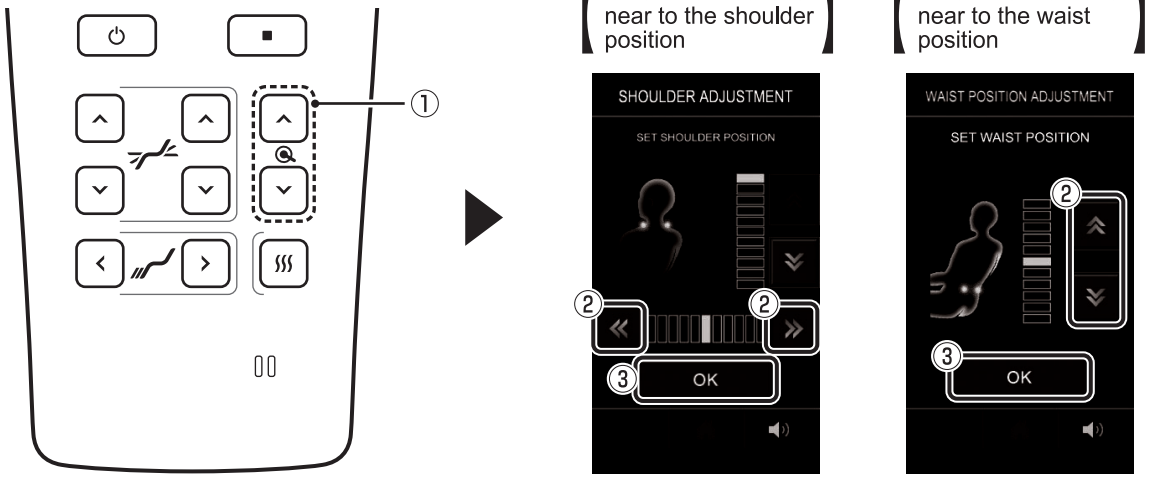

To adjust the strength of mecha massage

① Adjust the back strength by using +› for increase and by using ‹– for decrease.

- Strength can be selected from 12 steps.
- The initial setting is set in “5”.

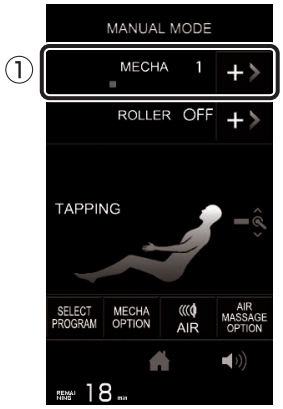

● There is an item which cannot perform Adjustment/Setting by selected rubbing technique. Refer "Mecha massage function list table" for details.

Mecha massage function list table

The list of adjustments that can be performed during each knead technique.

PROGRAM		knead technique adjustment	Knead technique front and back adjustment	Mecha Strength	Massage speed	Mecha width	Combination of foot roller	Massage position
BASIC①	KNEAD UP / DOWN	-	-	●	●	-	●	WHOLE/PART/POINT
	LIFT UP / PUSH DOWN	-	-	●	-	-	●	-
	WAVELET	-	-	●	●	-	●	WHOLE/PART/POINT
	IRREGULAR WAVES WAVELET	-	-	●	-	-	●	
	RELAX KNEAD UP / DOWN	-	-	●	●	-	●	-
	RUBBING MASSAGE	-	-	●	●	-	●	-
	PUSH & KNEAD	-	-	●	●	-	●	WHOLE/PART/POINT
	SPIRAL KNEAD	-	-	●	-	2 levels	●	-
	PRECISION SPIRAL KNEAD	-	-	●	-	-	●	-
BASIC②	SHIATSU	-	-	●	-	●	●	WHOLE/PART/POINT
	SHIATSU STRETCH	-	-	●	-	●	●	WHOLE/PART/POINT
	TAPPING SPIRAL KNEAD	-	-	●	-		●	-
	TAPPING PRECISION SPIRAL KNEAD	-	-	●	-	-	●	-
	TAPPING	-	-	●	●	●	●	WHOLE/PART/POINT
	ROLLING	shoulder position	●	●	-	●	●	PART/POINT
	PARASPINAL	shoulder position	●	●	●	-	●	-
	WAVE ROLLING	shoulder position	●	●	●	-	●	PART/POINT
	3D KNEAD UP / DOWN	-	-	-	-	-	●	WHOLE/PART/POINT
	3D TAPPING	-	-	-	-	●	●	WHOLE/PART/POINT
	3D WAVELET	-	-	-	-	-	●	WHOLE/PART/POINT
BASIC③	LOOP KNEAD UP / DOWN	-	-	●	●	-	●	WHOLE/PART/POINT
	PALMAR KNEAD UP / DOWN	-	-	●	-	-	●	WHOLE/PART/POINT
	STRETCH	-	-	●	-	●	●	WHOLE/PART/POINT
	STRETCH KNEAD UP	-	-	●	●	-	●	WHOLE/PART/POINT
	STRETCH TAPPING	-	-	●	●	●	●	WHOLE/PART/POINT
	STRETCH WAVELET	-	-	●	●	-	●	WHOLE/PART/POINT
	STRETCH SHIATSU	-	-	●	2 levels	●	●	PART/POINT
NECK / SHOULDER	NECK UPWARD LIFTING	shoulder position	-	-	-	-	●	-
	COLLAR DOWNWARD PRESSING	shoulder position	-	-	-	-	●	-
	NECK RELAX	shoulder position	●	-	-	-	●	-
	NECK SHIATSU	shoulder position	●	-	-	-	●	-
	NECK / SHOULDER EXTREME KNEAD	shoulder position	●	-	-	-	●	-
	NECK / SHOULDER EXTREME TAPPING	shoulder position	●	-	-	-	●	-
	NECK PALMAR KNEAD	shoulder position	●	-	-	-	●	-
	TOP SHOULDER LINE SHIATSU	shoulder position	-	-	-	-	●	-
	UPPER SHOULDER PRESS	-	-	-	-	-	●	-
	SHOULDER TAPPING	shoulder position	●	-	-	-	●	-
BACK / WAIST	UPPER BACK DEEP SHIATSU	shoulder position	-	-	-	-	●	-
	LUMBAR DEEP SHIATSU	waist position	-	-	-	-	●	-
	SHOULDER BLADE LINE	-	-	●	-	-	●	-
	SHOULDER BLADE OPEN	shoulder position	●	●	-	-	●	-
	WAIST EXTREME KNEAD	waist position	-	-	-	-	●	-
	WAIST EXTREME TAPPING	waist position	-	-	-	-	●	-
	RHOMBOID	shoulder position	●	●	-	-	●	-
	WAIST SHIATSU	waist position	-	-	-	-	●	-
	WAIST PALMAR	waist position	-	●	-	-	●	-
	BUTTOCK	-	-	-	-	-	●	-

Start air massage

1. Switch ON the Power by pressing ⏻

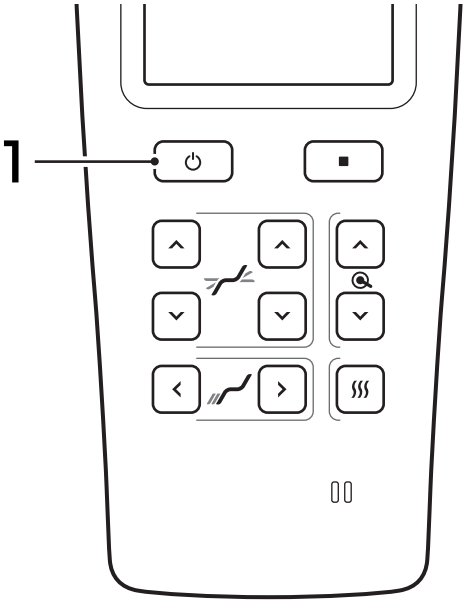

- Regular screen is displayed.
- The seat back is reclined and footrest raises automatically up to the standby position.
  (When reclining angle of ⌃ ⌄ or footrest angle of ⌃ ⌄ or ■ is pressed, it is stopped)
- If the machine is not operated for more than 3 minutes, then it is switched OFF automatically.

2. Select MANUAL MODE

3. Select “AIR MASSAGE”

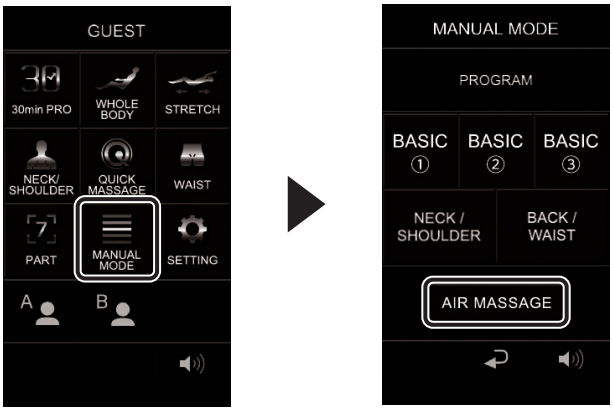

4. Select the desired strength press OK

- The air strength of "SHOULDER","ARM","WAIST","PELVIS","BUTTOCKS","THIGH","CALF","ANKLE" can be selected individually.
- Can be reduced with ← and increased with →
- Press OK and start the massage
- TheFootrest does not go down to standby position while using foot air or foot roller.
- Turn the foot air and foot roller「off」and lower the footrest when you want to lower the footrest to the standby position.

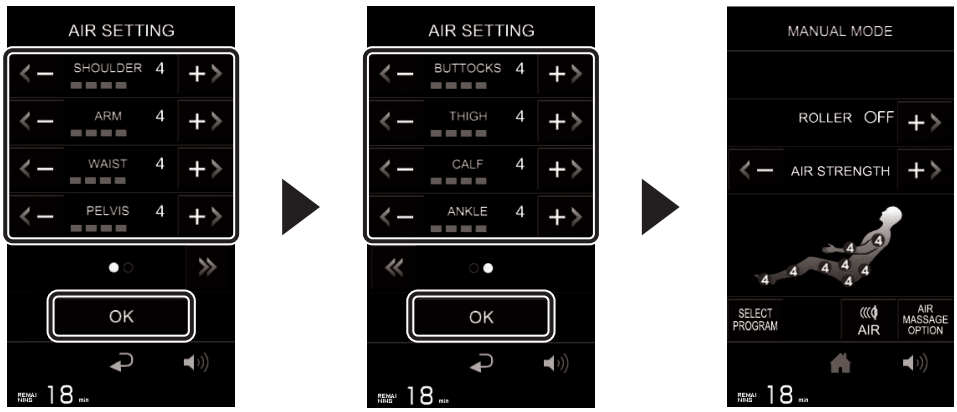

How to adjust during massaging

Adjustment method during air massage

[In the case whole adjustment]

① Total Air strength can be reduced with ← and increased with →.

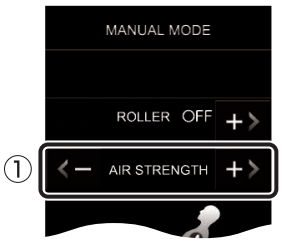

[In the case part by part adjustment]

① Press the “AIR”

② Select the preferable strength part by part. Can be reduced with ← and increased with →.

③ Return to course screen by pressing OK

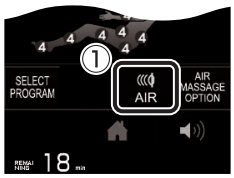

- Even if OK is not pressed, it will be set after 10 seconds approximately.
- There are 7 levels of intensity to choose from. The initial setting level is “4” (the initial setting level of the soft course is “3”). On the first page, “shoulder, arm, waist and pelvis”, on the second page, “hip, thigh, calf and ankle” can be adjusted. Press « » keys to switch the page.
- “OFF” can be set in part wise. If the ← is pressed when the strength is “1”, it will be set to “OFF”.

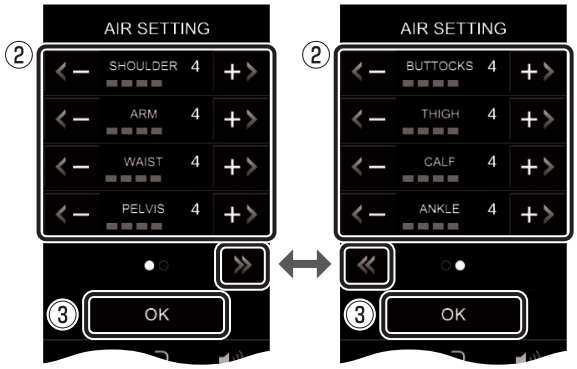

To set stretch operation

① Press “AIR MASSAGE OPTION”.

② Select “OFF / KNEE / FOOT / DOUBLE”.

③ Return to course screen by pressing OK.

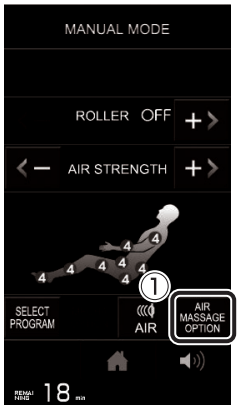

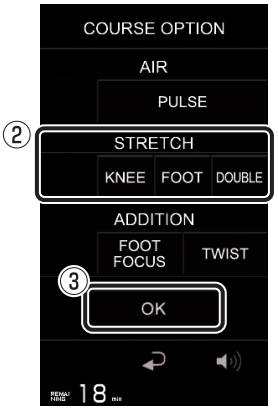

- Even if OK is not pressed, it will be set after 10 seconds approximately.
- If the stretch is set to “ON”, when leg air in “OFF”, leg air will be set to “ON” automatically.
- When the stretch operation is selected, if the foot rest top angle is less, operation will begin after raising stretch operation up to possible angle.
- Multiple stretch operations cannot be set simultaneously.
- Refer to P37, for various stretch operation details

To set air operation “PULSE” and “HAND KNEAD”

① Press “AIR MASSAGE OPTION”.
② Select “OFF / PULSE / HAND KNEAD”
③ Return to course screen by pressing OK

- Even if OK is not pressed, it will be set after 10 seconds approximately.
- PULSE and HAND KNEAD cannot be used simultaneously.

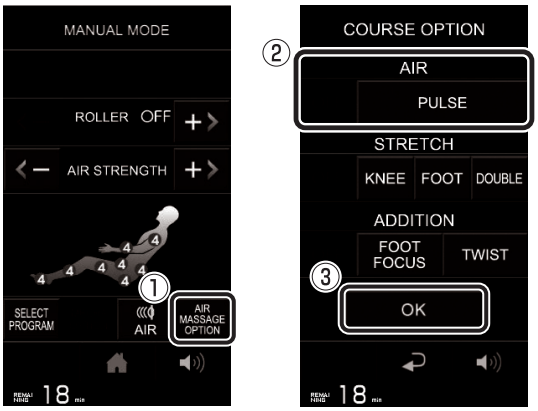

To set individual operation

① Press “AIR MASSAGE OPTION”.
② Select “OFF / FOOT FOCUS / TWIST”.
③ Return to course screen by pressing OK.

- Even if OK is not pressed, it will be set after 10 seconds approximately.
- When the airbags of any part other than the calf and ankle are “ON”, “Foot Focus” can be used. When “Foot Focus” is set to “ON”, the airbags for calf and ankle will also start.
- When “Twist” is set to “ON”, the airbags for waist, pelvis and hip will switch to “ON” and the airbags for thigh will switch to “OFF”.
- “FOOT FOCUS” with ”TWIST” cannot be set simultaneously.

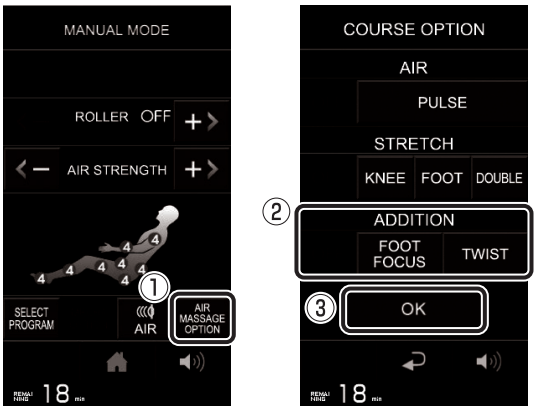

AIR MASSAGE OPTION

[PULSE]
Massage is carried out bit by bit many times by air.

[KNEE]
Leg is gripped by air and stretched in forward direction.

[FOOT FOCUS]
Calf massage can be done simultaneously with other air massage.

[FOOT]
Leg is gripped by air and stretched in downward direction.

[TWIST]
Twist operation massage is carried out around the waist center

[DOUBLE]
Leg is gripped by air and stretched in downward direction while stretching in forward direction.

Parts intensive massage

Start to part intensive massage

1. Switch ON the Power by pressing ⏻

- Regular screen is displayed.
- The seat back is reclined and footrest raises automatically up to the standby position.
  (When reclining angle of ⌃ ⌄ or footrest angle of ⌃ ⌄ or ■ is pressed, it is stopped)
- If the machine is not operated for more than 3 minutes, then it is switched OFF automatically.

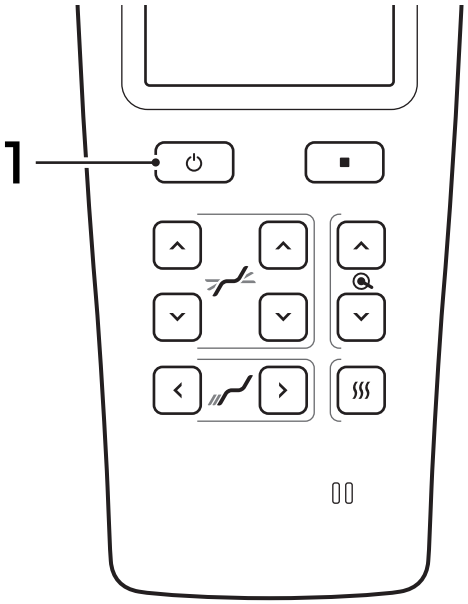

2. Select the preferred part intensive massage by pressing PART .

- Moving to other part intensive menu can be done with « » .

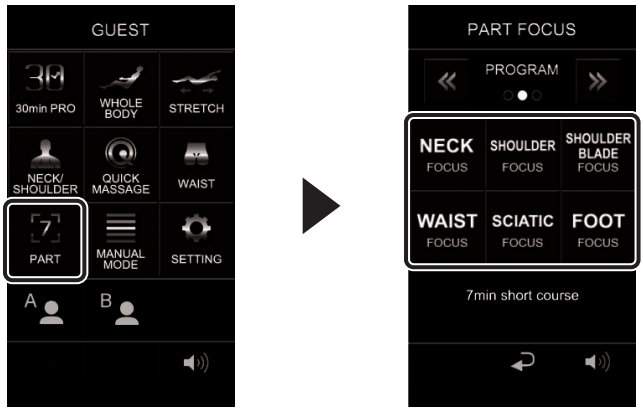

3. Shoulder position detection or waist position adjustment .

- Massage will begin after completion.
  (Some focus kneading tecniques don`t have shoulder position detection and waist position adjustment.)

[Example] While selecting NECK FOCUS

① Press NECK FOCUS

② Shoulder detection has begun.

③ Massage has begun.

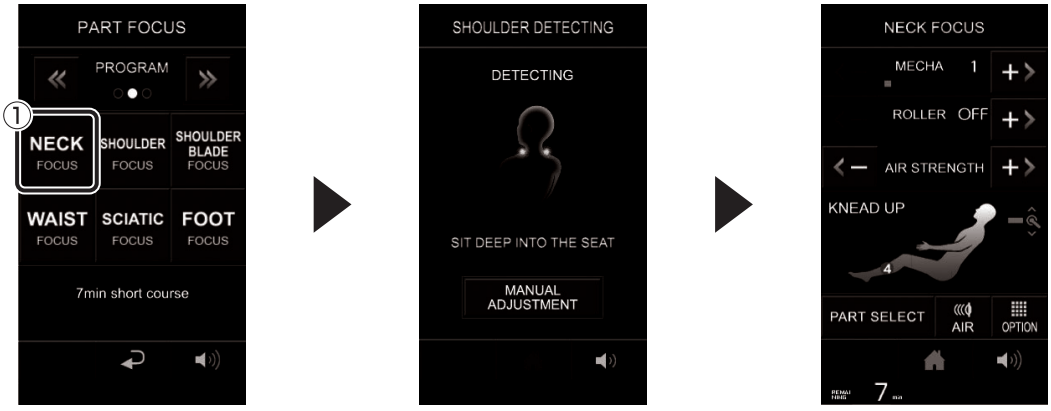

About operation of part intensive massage

It is a 7 minutes mini course for massaging the part intensively using knead technic.
The details list that can be adjusted during course of each part intensity

Parts intensity technic		Mecha strength	Air strenth	Air Massage		Shoulder Position	Waist position	Combination of foot roller
Short Program	NECK FOCUS	●	●	ON / OFF	Shoulder,Arm,Waist,Pelvis, Buttocks,Thigh,Calf,Ankle	●	-	●
	SHOULDER FOCUS	●	●	ON / OFF	Shoulder,Arm,Waist,Pelvis, Buttocks,Thigh,Calf,Ankle	●	-	●
	SHOULDER BLADE FOCUS	●	●	ON / OFF	Shoulder,Arm,Waist,Pelvis, Buttocks,Thigh,Calf,Ankle	●	-	●
	WAIST FOCUS	●	●	ON / OFF	Shoulder,Arm,Waist,Pelvis, Buttocks,Thigh,Calf,Ankle	-	●	●
	SCIATIC FOCUS	-	●	ON / OFF	Shoulder,Arm,Calf,Ankle (Buttock : ON, intensity not adjustable)	-	-	●
	FOOT FOCUS	-	●	ON	Calf,Ankle	-	-	● (It can not be turned off)
Stretch	NECK STRETCH	-	●	ON	Calf,Ankle	●	-	-
	BACK STRETCH	-	●	ON	Calf,Ankle	●	-	-
	WAIST STRETCH	-	●	ON	Calf,Ankle	-	●	-
	SHOULDER STRETCH	●	●	ON	Shoulder,Buttocks,	●	-	-
	LEG/KNEE STRETCH	-	●	ON	Pelvis,Thigh,Calf,Ankle	-	-	-
	ARCH STRETCHING	-	●	ON	Shoulder,Waist,Buttocks, Thigh,Calf,Ankle	-	-	-
Relax	BACK BODY TRUNK	●	●	ON	Shoulder,Calf,Ankle	●	-	-
	WAIST BODY TRUNK	●	●	ON	Waist,Pelvis,Buttocks,Thigh, Calf,Ankle	●	-	-
	PELVIS CORE STRETCH	-	●	ON	Waist,Pelvis,Buttocks,Thigh, Calf,Ankle	-	-	-

Adjustment method during massage

To adjust the strength of mecha massage

① Adjust the back strength by using +› for increase and by using ‹– for decrease.

- Strength can be selected from 12 steps.
- The initial setting is set in “1”.

Adjustment method during air massage

[In the case whole adjustment]

① Total Air strength can be reduced with ‹– and increased with +› .

- Strength can be selected from 7 steps.
- The initial setting is set in “4”.

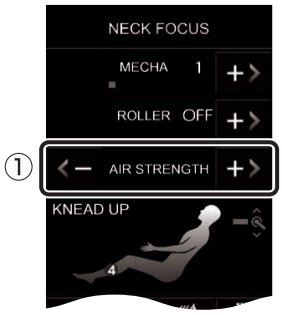

Combine the rubbing and air massage

Combine the air massage during rubbing massage operation

1. Press the "AIR".
2. Select the strength of the desired part and press OK.
3. Start the air massage of selected part.

[MANUAL MODE] [TARGET AREA]

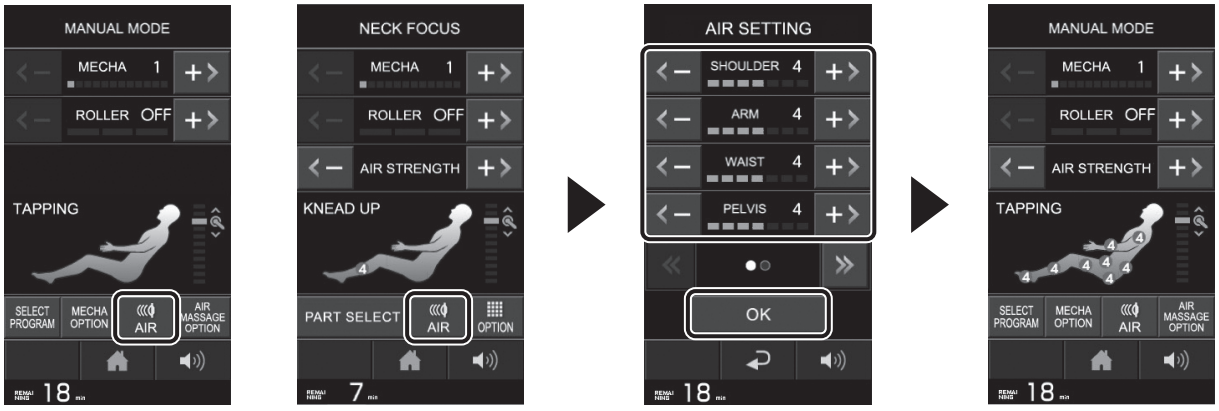

Combine the rubbing massage during air massage operation

1. Press the "SELECT PROGRAM".
2. Select the desired rubbing massage.
3. Start the selected rubbing massage.

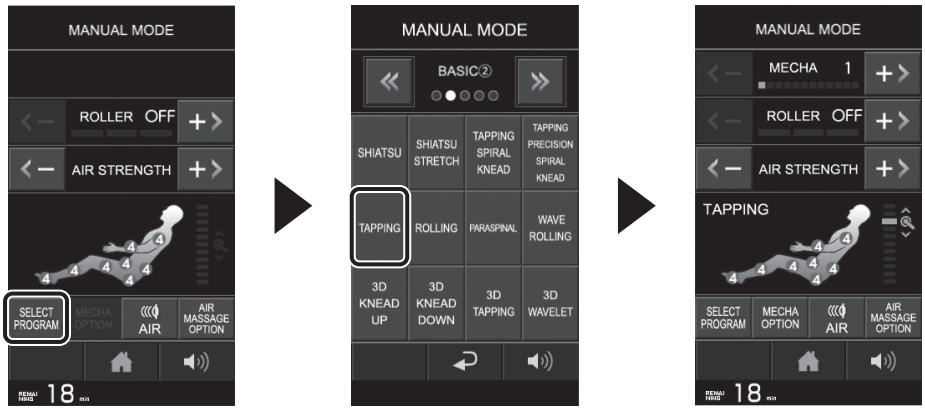

Foot roller massage

⚠ WARNING

Do not hit toes to the foot rollers. Injury may occur.

「Foot roller massage」can be used with the combination of auto course or manual massage.
※It can not be used alone.

1. Press「ROLLER ← → 」while having auto course or manual massage.

- Foot roller strength can be reduced with ← and increased with → .
- Strength can be selected from 3 steps.
- “OFF” can be set in part wise. If the ← is pressed when the strength is “1”, it will be set to “OFF”.
- When you turn the foot roller massage「ON」, Foot air turns automatically「ON」.
  When foot roller massage is「ON」, foot air can not be turned「OFF」.
- Depending on the selected course or massage program, foot roller can not be combined or turned OFF. Refer to「About auto course」(P.27),「Mecha massage function list table」(P.34),「About operation of part intensive massage」(P39)

[Display Example]

[When it cannot combine]

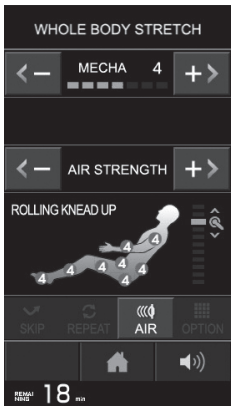

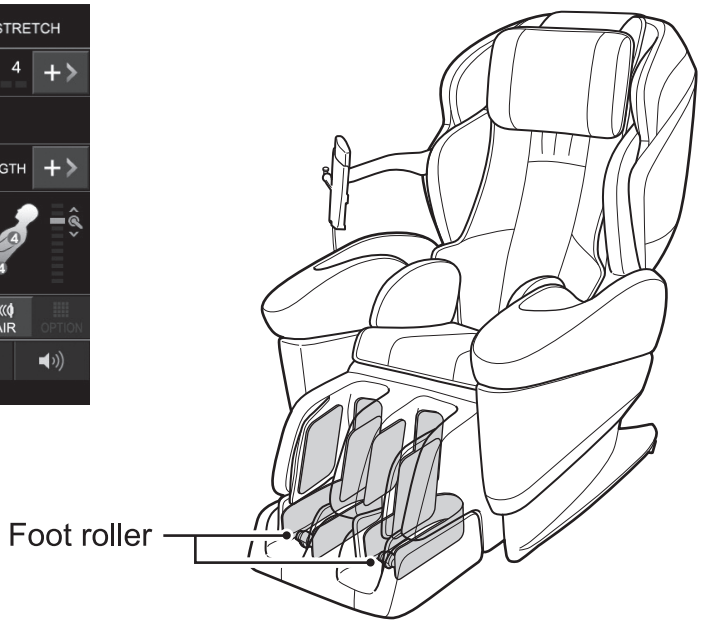

When changing the Massage in the middle

Change to auto course

1. ▪ or 🏠 is pressed.
2. Select and press from these
   30minPRO | WHOLE BODY | STRETCH | NECK/SHOULDER | WAIST | QUICK MASSAGE
   Buttons. Press the selected course button and select the desired course.

- There is a chance of muscle line or shoulder position detection. For details, check "Massage by Auto Mode Course".
- Timer for massage operation time is continued.

Change to part intensive massage

1. ▪ or 🏠 is pressed.
2. Select the preferred part intensive massage by pressing PART .

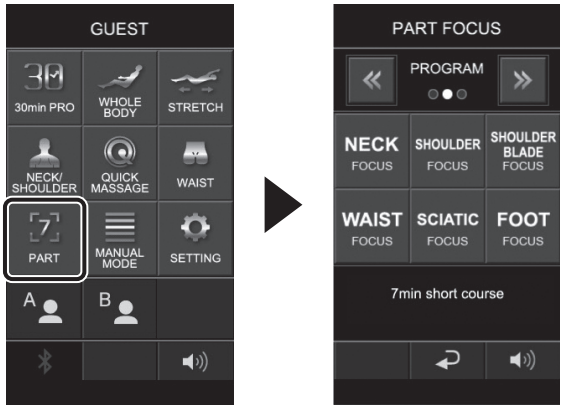

- There is a chance to carry out shoulder position detection or waist position adjustment.
- Timer for massage operation time is continued.

Timer continuation during course selection

※ It will not be operated in any combination if it exceeds 30 minutes.

- 30 minutes course(start 18 minutes or more) ➡ Normal 18 minutes course

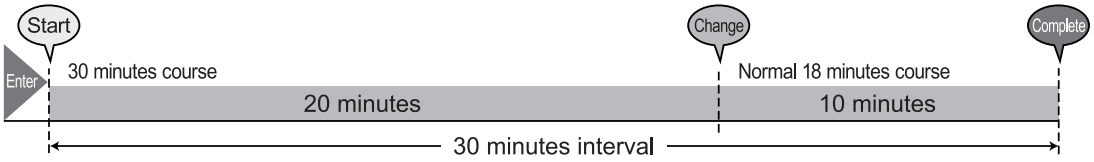

- Normal 18 minutes course ➡ 30 minutes course

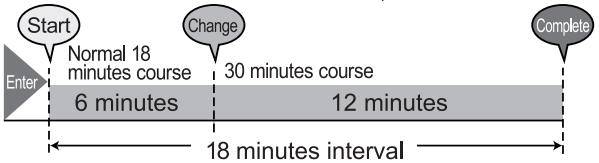

- 7 minutes course ➡ 30 minutes course, normal 18 minutes course

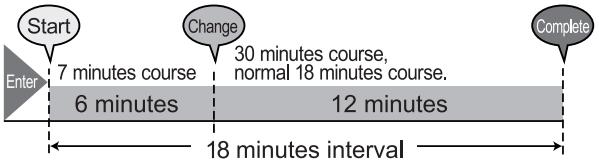

Change to MANUAL MODE massage

1. ▪ or ⌂ is pressed.
2. Press the MANUAL MODE, select the desired mecha massage menu and select the mecha massage.

● Timer for massage operation time is continued.

Change to air massage

1. ▪ or ⌂ is pressed.
2. Press MANUAL MODE, and press "AIR MASSAGE".
3. Select the preferable pressure and press OK.

● Timer for massage operation time is continued.

QUICK MODE / LANGUAGE / AUTO-RECLINE settings

About QUICK MODE settings

"QUICK MODE" is the operation mode in which the bold characters are displayed to enhance the visibility and it is with simplified operation

1. Press SETTING in the regular screen.
2. If you press QUICK MODE to "ON" and then press OK, then QUICK MODE screen will be displayed.
3. If you select the preferred course, then auto course is started.

- If you press "MODE CANCEL", then it will move to former regular screen.
- Even if the power switch off the main unit, QUICK MODE will be continued.

About AUTO-RECLINE setting

"Auto Reclining" is the function that raises the back rest automatically during power off and massage end and the one that accommodates the foot rest and switches off the power.

1. Press SETTING in the regular screen.
2. Press "ON" in the auto reclining and press OK in the regular.

- When press「AUTO UPRIGHT(POWER OFF)」while backrest and footrest are stored, auto upright stops. Press again to restart auto upright.
- When storing, footrest is storaged first and backrest is moved up.
- 「ON/OFF」setting of auto reclining remains even if main power is turned on again.

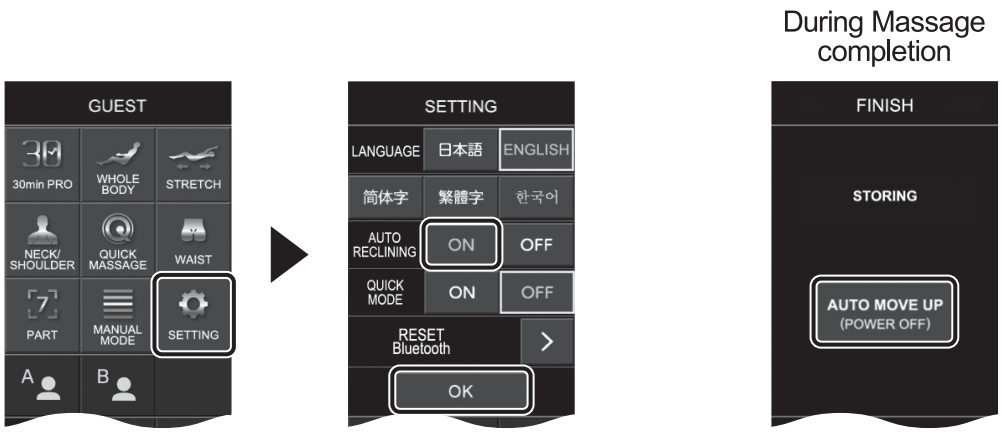

About LANGUAGE

You can switch the display language of the remote control. When you change the display language, the language of the voice guidance also changes.

[Switch to other language]

1. Press SETTING in the regular screen ,
each language (tiếng việt, 繁體字, 简体字, 한국어) is selectable.

● Each operation method is similar to English

About voice guidance

To adjust the volume of voice guidance

Voice guidance is the function to explaine how to operate and brief contents of course and movement.

1. Press "Volume adjustment button [🔊] " which is displayed on the lower right of the screen.

- Each time you press the button, it changes as "1" → "2" → "3" → "OFF".
- When you change the language setting, the language of the voice guidance also changes.

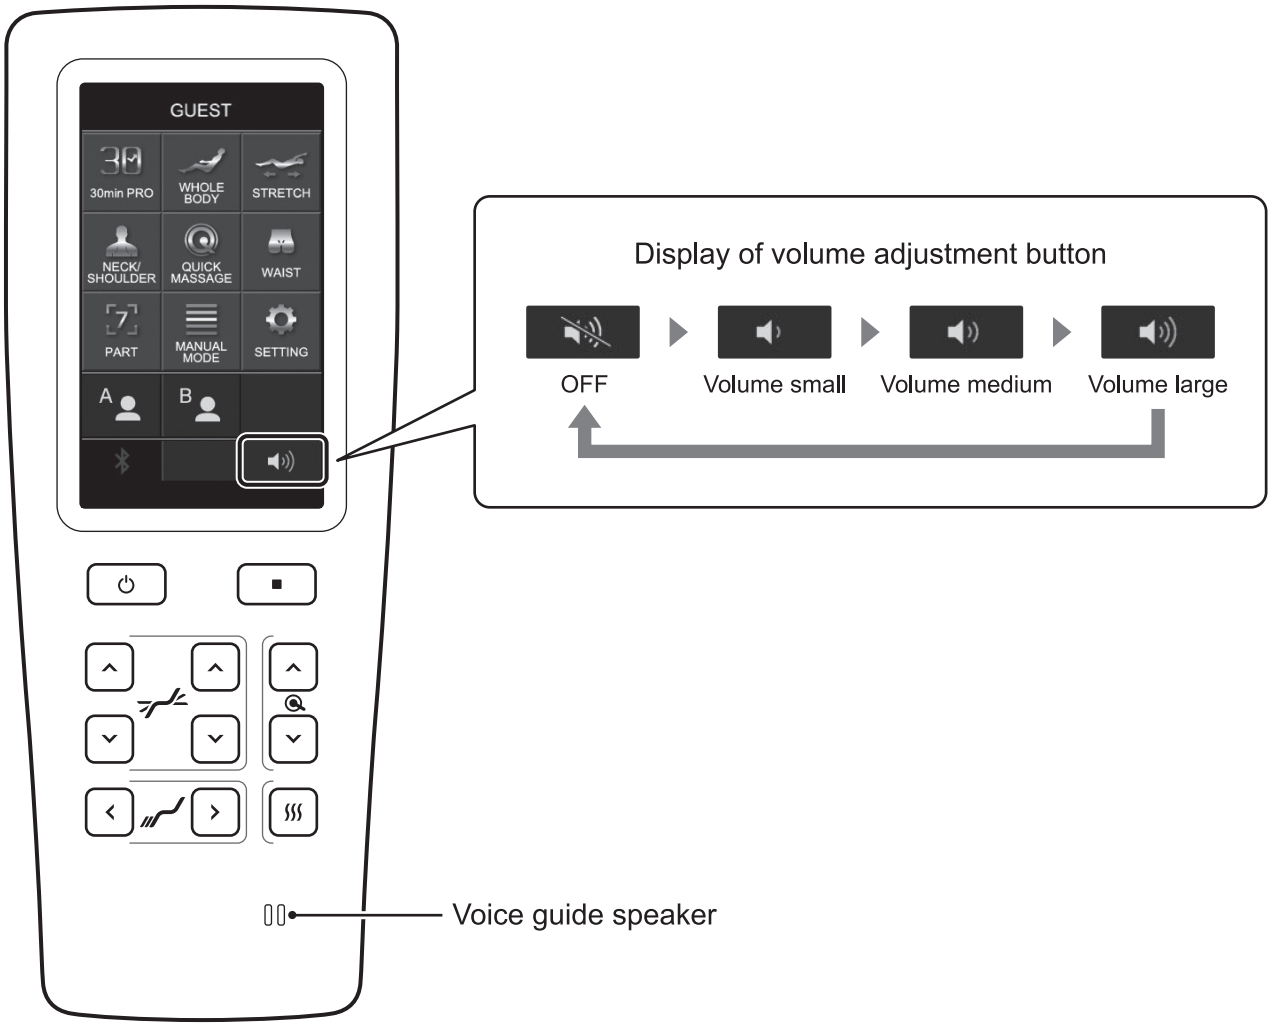

Heater ON/OFF

DANGER

Do not use the heater for long time, and do not use the heater in same place for long time.
It may cause low temperature or injury
Even at comparatively low temperature (40~60C), and do not use the heater in same place of the skin for long time.
It may cause low temperature or injury

1. Press the heater icon .

- In case the massage and heater are used simultaneously, if the massage is ended, then heater is also ended.
- Heater can be used by itself, by pressing .
- When the heater is used by itself, it will be automatically cut off after about 60 minutes.

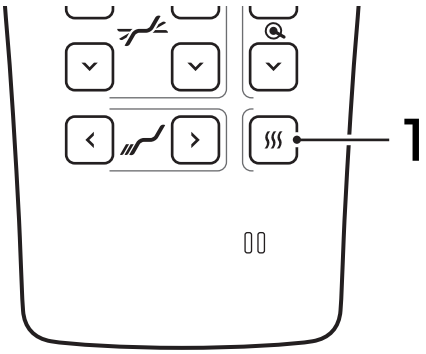

[Display Example]

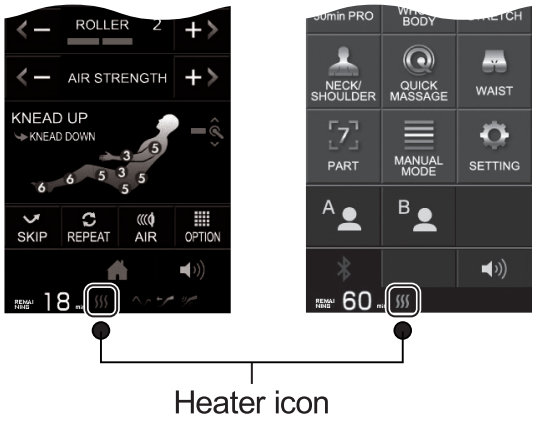

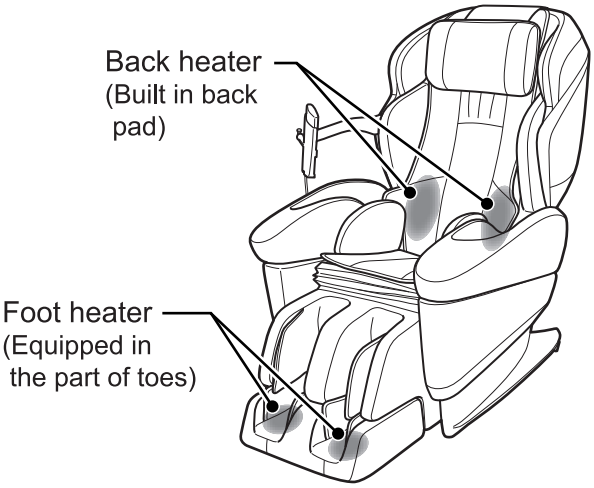

Position the back pad (heater part)

When warming around the waist

Place the back pad on the your back.

When warming around the stomach

Remove the zippers (1) securing the back pad and backrest, raise the zippers (2) on the back of the back pad and put the heater part in front of your body.

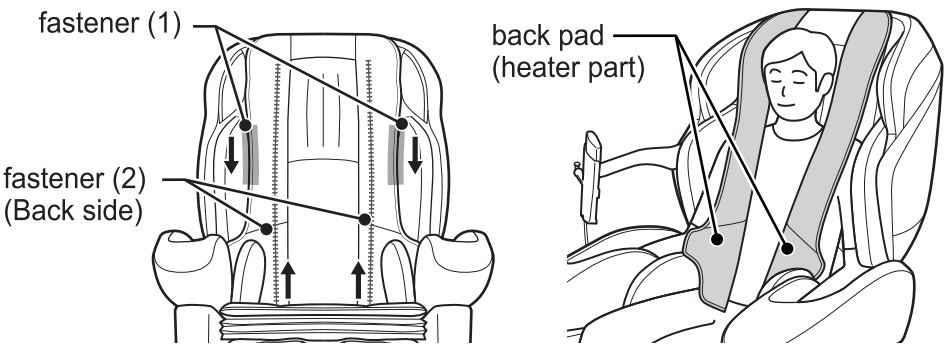

To set the child lock

[Child lock] function disables the button press so that the child cannot operate it by mistake.

1. Press ⌃ of reclining and accommodate the backrest and foot rest.

- When child lock is in progress, all the operations are not possible. Accommodate the back rest and foot rest in advance.

2. In the regular screen, if you long press ■ for 3 seconds approximately, a “Beep” will ring and the child lock screen will be displayed.

- After setting the child lock, if you do not operate within 30 seconds, then the screen will disappear.
  If you press ⏻, then the child lock screen will be displayed.
- When releasing the child lock, either perform the same operation or switch the power of main unit to “OFF”.

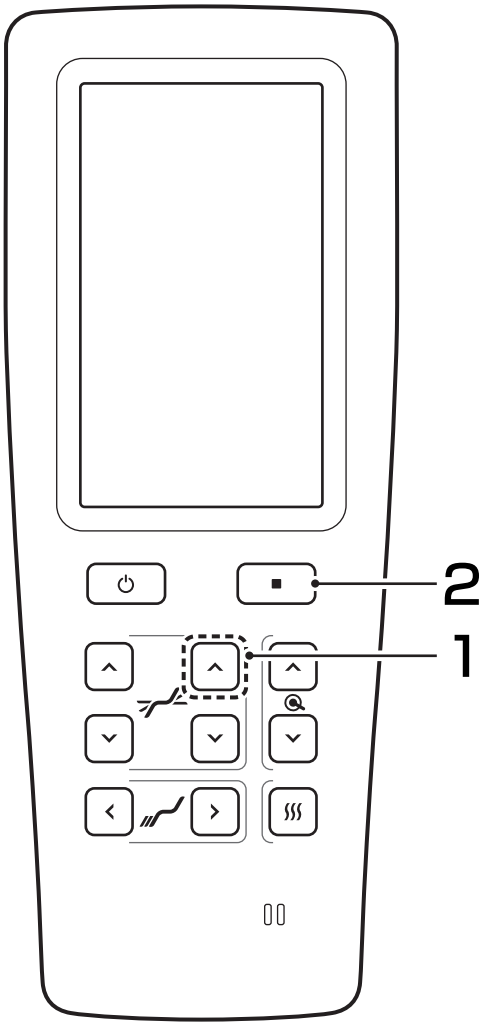

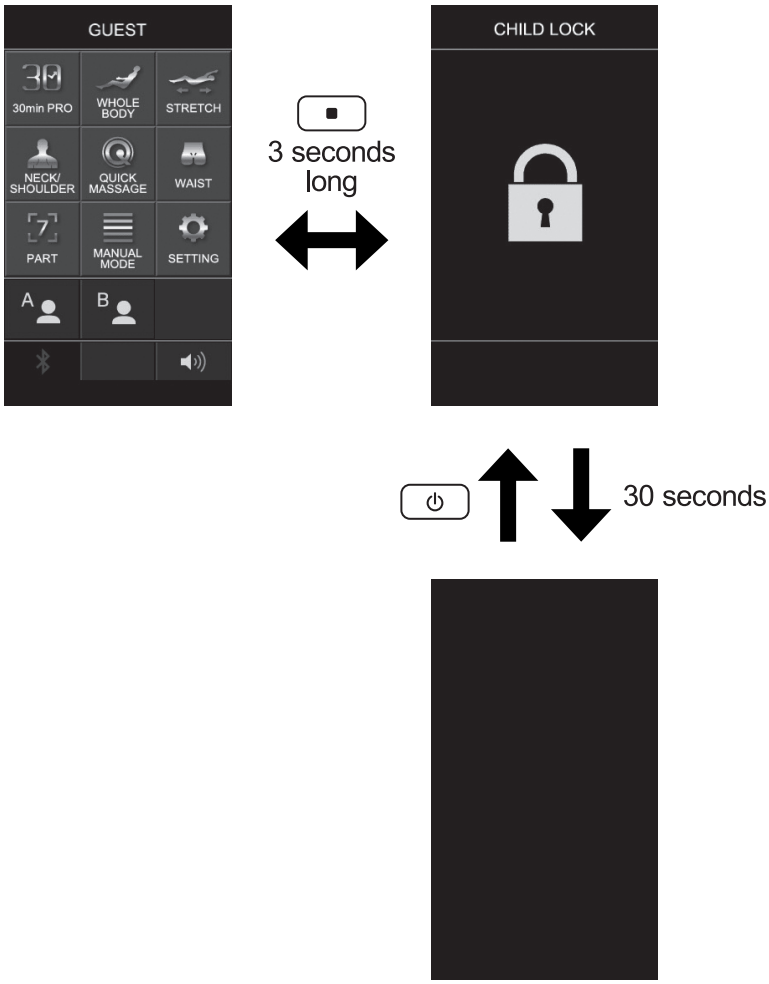

Usage of BLUETOOTH speaker

When the BLUETOOTH is connected, you can listen to music through the BLUETOOTH speakers.

⚠ WARNING

Please do not listen at high volume.
Listening at a high volume for a long time may damage your hearing.

Precautions for using speakers

- Be sure to read the instructions of the BLUETOOTH device when using it.
- The Company will not be responsible if the stored contents of the connected device disappear.
- When connecting, be sure to reduce the volume of the device in advance.
- If there are electronic devices or transmitters (mobile phones, etc.) around the product, they may interfere with the it. Please keep away from them when using the massage chair.
- If the product is used near the antenna of the TV or radio, the TV or radio may produce noise. Please keep away from them when using the massage chair.

When connecting for the first time

Pairing must be performed. After pairing is successfully completed, the main body will keep the connection information, and it will connect automatically from the following time. It can store connection information on up to 5 devices.
※ Unable to connect with more than one device at the same time.

Connect with a smartphone

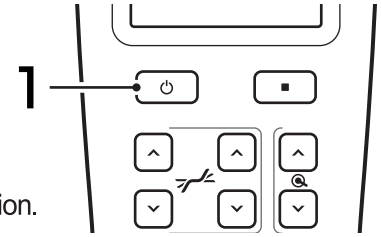

1. Switch ON the Power by pressing ⏻

- Regular screen is displayed.
- The seat back is reclined and footrest raises automatically up to the standby position. (When reclining angle of ^ v or footrest angle of ^ v or ■ is pressed, it is stopped)
- If the machine is not operated for more than 3 minutes, then it is switched OFF automatically.

2. Open the BLUETOOTH setting screen by operating the smartphone's setting App, etc.

- For iOS, settings → BLUETOOTH, and for Android settings → Connected device → New pairing device (the name may vary depending on the version).
- After searching, “Massage Chair H22” will be shown in the BLUETOOTH device.
- Push the "search" button when you are near the massage chair.
- Please read the instructions of the smartphone for its operation.

3. When “Massage Chair H22” is shown, click it.

- In iOS, it will be shown at the bottom of the screen, and in Android, it will be shown in the “Available Devices” field. (The name may vary depending on the version.)
- After selecting “Massage Chair H22”, a message such as “Pairing” or “In pairing” is displayed on the screen, and then the device connects (allow pairing in case permission is requested).
  For iOS, the display position of “Massage Chair H22” is moved to the “My Devices” field and for Android the display position of “Massage Chair H22” is moved to the “Connected devices” field.
- After pairing is complete, the BLUETOOTH icon on the remote control will turn blue.
- After pairing is complete, the device will connect automatically from the following time. (up to 5)
- If pairing fails, restart the power of the massage chair main body and try again.
- Since the voice may be output at high volume, please turn down the volume of the speaker device before usage.
- Volume adjustment button 🔊 on the screen of the remote control is unable to adjust the volume of BLUETOOTH speaker. Please adjust the volume on the speaker device.
- In case massage, please complete the connection first and then perform the massage operations as usual.
- If used together with massage, the music will also stop playing when the massage is over.
- If used together with the heater, the heater will stop after about 60 minutes, but the music will continue playing.
- If there is no music playing or no operation for 3 minutes during the BLUETOOTH connection, the power will be turned off automatically.

To connect with other devices (transmitter, etc.)

Explaination of the common connection steps for devices without an operation screen.

1. Switch ON the Power by pressing ⏻

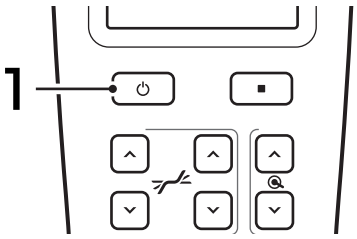

- Do not place other devices with BLUETOOTH communication function around the massage chair and the device.
- Regular screen is displayed.
- The seat back is reclined and footrest raises automatically up to the standby position. (When reclining angle of ⌃ ⌄ or footrest angle of ⌃ ⌄ or ■ is pressed, it is stopped)
- If the machine is not operated for more than 3 minutes, then it is switched OFF automatically.

2. Operate the device to be connected (transmitter, etc.) and enter the pairing mode.

- The name of pairing mode and operations of switching to pairing mode vary according to the device. Please refer to the instructions of the device for details.
- When the display status of the LED of the device changes, it means that it has entered pairing mode.

3. Wait briefly until the connection is successful.

- When the display status of the LED of the device changes, it means that the connection has been completed.
- After pairing is complete, the BLUETOOTH icon on the remote control will turn blue.
- After pairing is complete, the device will connect automatically from the following time. (up to 5)
- If pairing fails, restart the power of the massage chair main body and try again.
- Since the voice may be output at high volume, please turn down the volume of the speaker device before usage.
- Volume adjustment button 🔊 on the screen of the remote control is unable to adjust the volume of BLUETOOTH speaker. Please adjust the volume on the speaker device.
- In case massage, please complete the connection first and then perform the massage operations as usual.
- If used together with massage, the music will also stop playing when the massage is over.
- If used together with the heater, the heater will stop after about 60 minutes, but the music will continue playing.
- If there is no music playing or no operation for 3 minutes during the BLUETOOTH connection, the power will be turned off automatically.

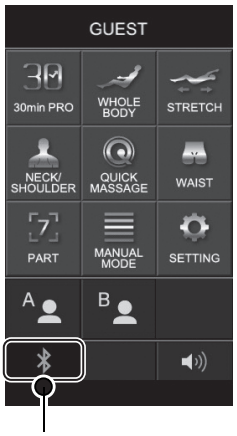

During connection, the BLUETOOTH icon will be blue.

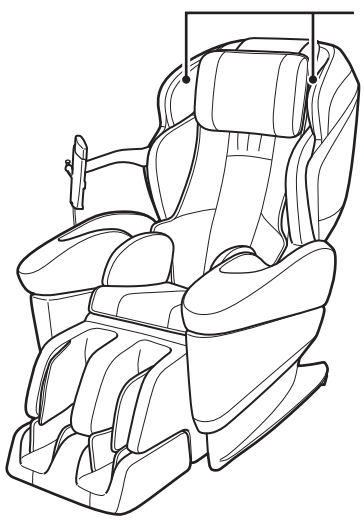

When connecting from the second time

1. After turning on the power of the smartphone or other device, press ⏻ to turn on the power and it will connect automatically.

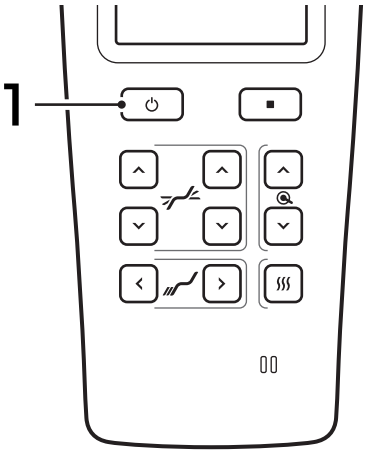

- The massage chair can keep connection information for up to 5 devices.
- After turning on the power, the massage chair will try to connect according to the order of stored connection information. The connection may take some time (about 30 seconds).
- If connection information of 5 devices are already stored, when connecting with a new device the machine will not connect automatically from the second time, even if the connection is completed according to the steps of “connection for the first time (P52)”. If you want a new device to be connected automatically, please refer to “About resetting pairing information (P54)” to reset the pairing information.

About resetting pairing information

In the following cases, pairing information must be reset.

- When you do not want the massage chair to automatically connect to the device.
- When you want it to automatically connect with a device after 5 have been already registered.
- When you want to restore the connection to its initial status.

Please note that after resetting pairing information, all previous connection information will be deleted.

1. Press SETTING on the course menu selection screen.
2. After pressing BLUETOOTH reset › and “Yes”, the pairing information will be reset.

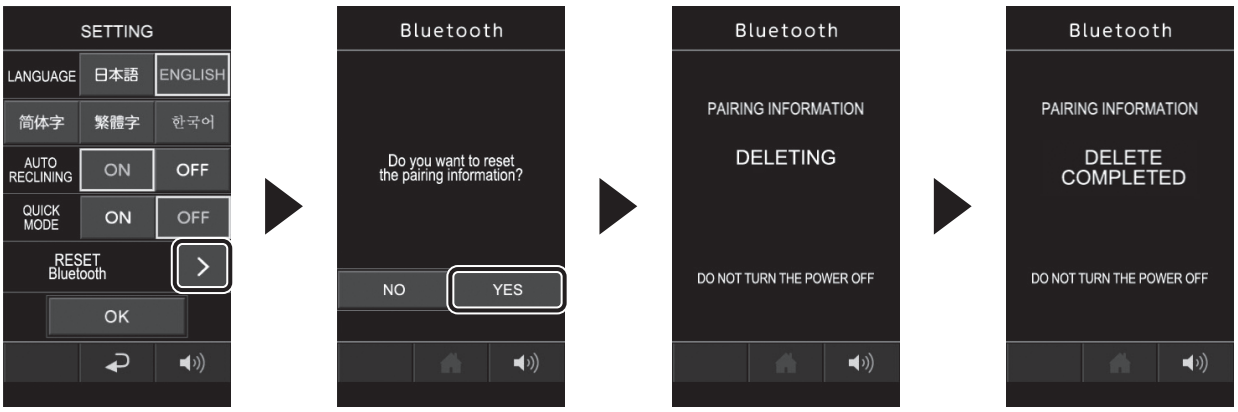

[Note] After resetting the pairing information, the connection information must be deleted also on the connection device. For a smartphone, please find the item of “Massage Chair H22” through the BLUETOOTH setting of the setting App and cancel the pairing or cancel the pairing setting.

[Explanation] Information about the connection between the massage chair and the device will be stored in both the massage chair and the connecting device. Since this information is bound through pairing or pairing setting, when the connection information of one side is lost, that of the other side will also become invalid.

MEMO

About User Customized Mode

Functions of User Customized Mode

- It can register / customize information for 2 users.
  Select user A/B and register the customized information. After the customized information is registered, it`s possible to skip the body shape detection at the beginning of the course and start the massage immediately.
- The usage of massage and various settings is the same as that in Guest Mode.
  Except for the registration of customized information, other operations are the same as those in Guest Mode. Please refer to the usage of Guest Mode. (P20~54)

※In the User Customized Mode however, the reset of tap mode, child safety lock and BLUETOOTH pairing information cannot be done. Please do it when in Guest Mode.

- For the function limitations of each mode, please refer to the table on the specification page. (P75)

Registrable customized information

Customize back line

Shoulder / waist position information
Shoulder / waist position information
Select the massage point of the automatic course.

S-curve detection information
In order to make the massage chair massage evenly along the back, this function will collect back line information. The detected back line data can also be further edited according to preferences.

Customize reclining

Reclining information
It is possible to register information of the preferred backrest angle, leg angle / leg length.

Customize airbags pressure

Air pressure information
After the pre-setting, it is possible to register information of the preferred air massage intensity.

Customized information first registration example

Select A/B ▶ Customize back line ▶ Customize reclining ▶ Customize airbags pressure ▶ Registration completed

After the reclining information is registered, when selecting the user customized mode A/B, backrest and legs will be automatically adjusted to the registered angle. Please pay attention to the surroundings.

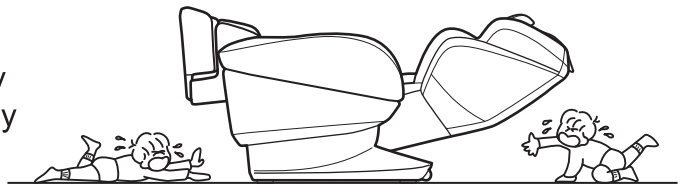

When using the User Customized Mode for the first time

1. Press ⏻ and turn on the power.
2. Select which one you want to be registered from “A/B (①)”.
3. Press “Start (②)” and then start to customize the settings in the order of back line → reclining → air pressure.
4. After the registration of customized information is complete, the screen will return to me

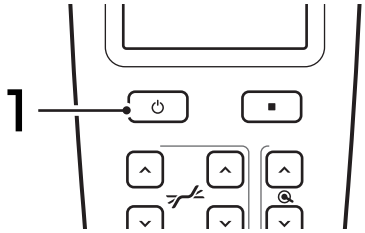

- After the registration of customized information is complete, the User Customized Mode can be used for massage. Operations are the same as those in Guest Mode. (P20~54)
- For various customize methods, please confirm the chapters on “Back Line (P58~59)”, “Reclining (P60) ” and “Air pressure (P61) ”.
- If the registration of customized back line is not complete, User Customized Mode cannot be used.
- When customizing air pressure, press “Skip” to skip the setting.
- Do not turn off the power during registration, otherwise the registration of customized information cannot be completed.

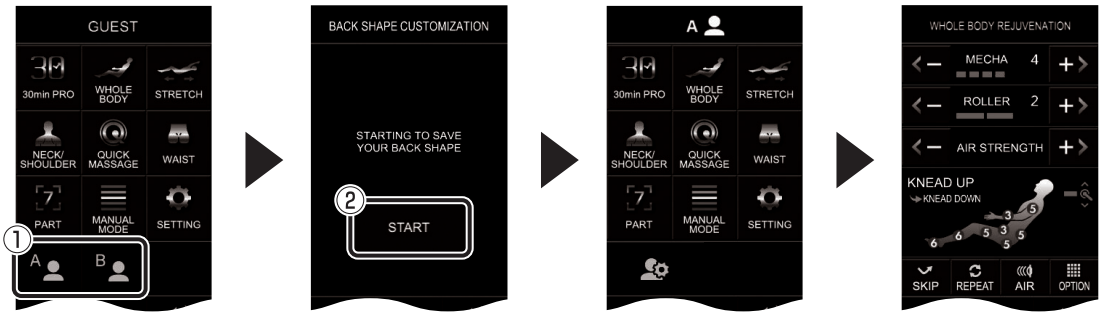

To reset the user information (re-register)

1. Log in to A or B and press “Settings”.
   After pressing reset user setting ›, the device will start customizing settings in order of back line → reclining → air pressure.

- When customizing the air pressure, press “Skip” to skip the setting.
- Even if OK is not pressed, registration will start after about 10 seconds.
- Do not turn off the power during registration, otherwise the registration of customized information cannot be completed.
- In order to maintain a state where massage can be performed immediately, the back line information will not be deleted. After user information reset, if you cancel before the new setting of customized back line overwrites the old information, the back line information will keep the latest set values.

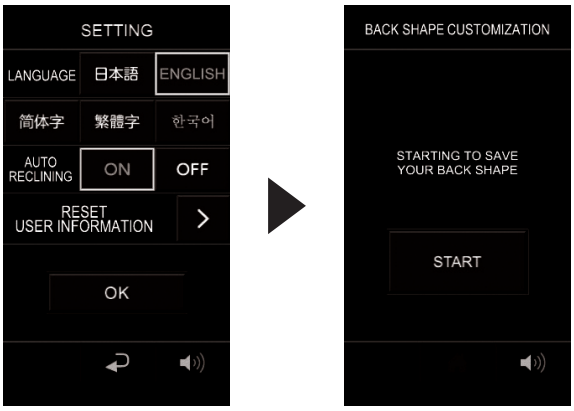

Customize back line

1. Log in to A or B, and press (①).

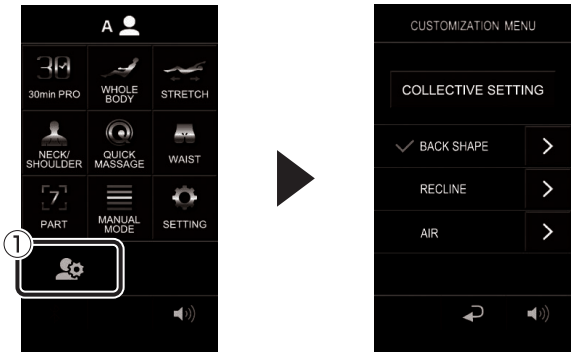

2. Press back line , select (①) and press “start (②)” to detect the shoulder position. After detection is complete, press OK (③), and the shoulder position will be registered. If it is inconsistent with the actual shoulder position, press the “Re-detection (④)” key or the "Manual Adjustment(⑤)” key to adjust.

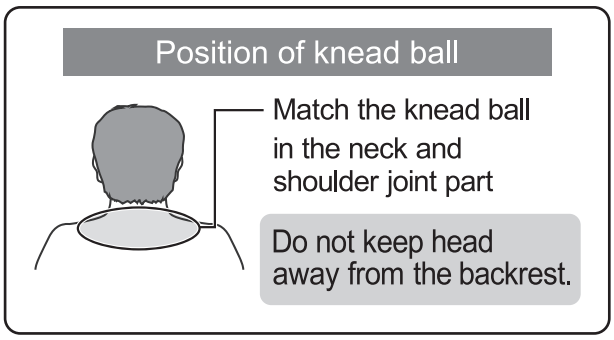

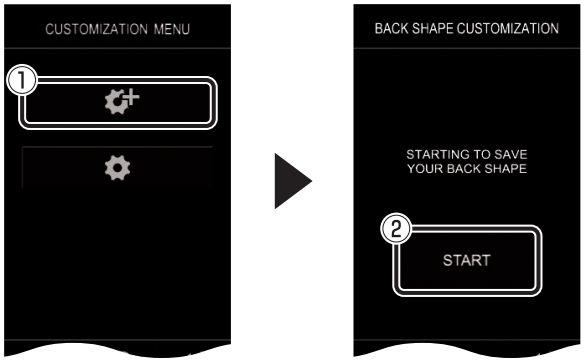

- Even if OK is not pressed, the massage starts after about 10 seconds.
- Detection starts again when press「RE-DETECTION」.
- Shoulder position can be adjusted by pressing [MANUAL ADJUSTMENT] during or after the detection. Adjust (④) for vertical position, for back and forward position, then press OK (⑥).
- Shoulder position detection measures vertical position. Position can be adjusted through “Manual Adjustment”.

Shoulder position manual adjustment

3. After the registration of shoulder position is complete, back line detection will start. After detection is complete, press OK (①) and the back line will be registered. Further adjustments can be done through ⚙ (②).

- Do not keep head away from the backrest.
- Even if OK is not pressed, the massage starts after about 10 seconds.
- Press the “Re-detection (③)” key to detect the back line again.
- After pressing ⚙ (②), the back line can be adjusted manually.
- Please refer to the “About customizing back line” below.
- In case of detection error, press “Re-detection”.

Customize

Error

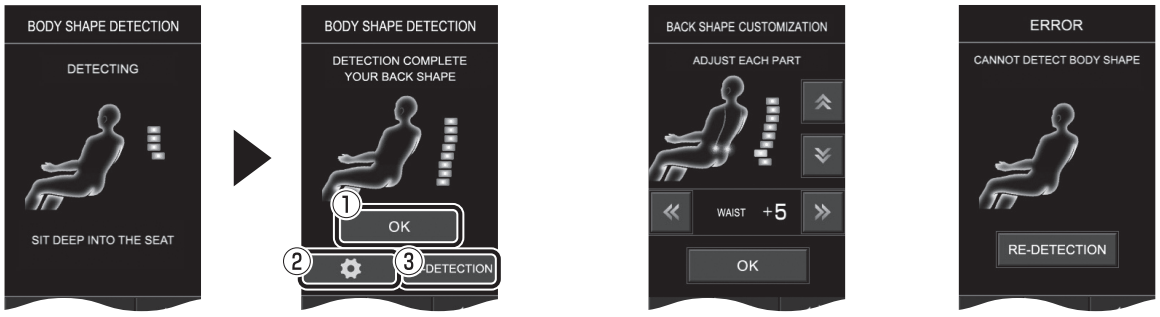

About back line customization

Generally, massage will be performed with a uniform force along the back line, but the massage standard force of each part can be changed by customizing according to user`s preferences.

(For example) To increase intensity for head and shoulder parts

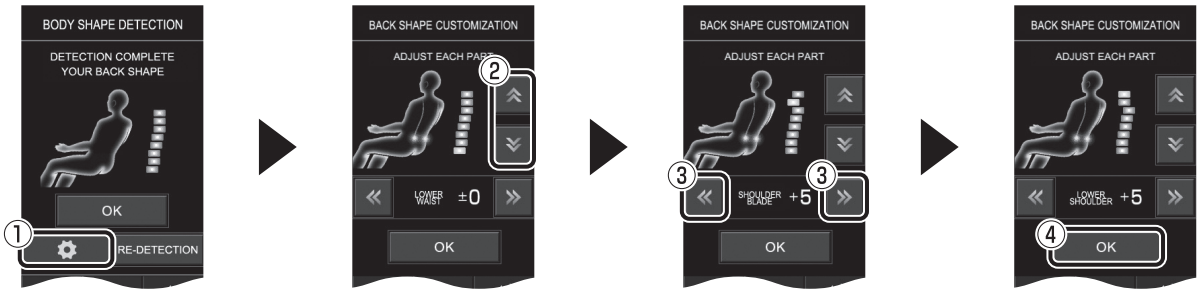

After detection, press ⚙ (①).

After selecting the part to be adjusted through ⏫ ⏬ (②), kneading balls will move and massage with standard force.

Change the standard force of the kneading balls through ⏪ ⏩ (③). (there are ± 7 levels for setting)

Adjust it to the back line information to strengthen the head and shoulder parts and press OK (④) to register.

4. After the registration of the back line is complete, waist position adjustment will start. Adjust kneading balls position through ⏫ ⏬ (⑤) and press OK (⑥) to register. If “Registration completed” is displayed, the registration is completed.

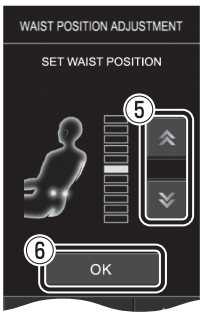

- Do not turn off the power during registration, otherwise the registration of customized information cannot be completed.

Customize reclining

1. Log in to A or B, and press (①).

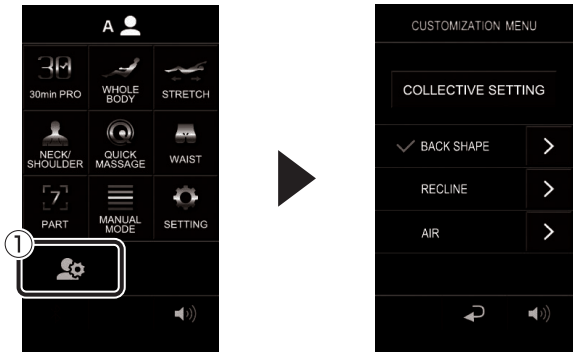

2. After pressing reclining and (①), the customize screen will appear. Adjust the backrest angle, leg angle, leg length and press OK (②). If “Registration completed” is displayed, the registration is completed.

- The backrest angle and leg angle can be adjusted with "Reclining" (③), and the leg length can be adjusted with "extending" and "retracting" (④). Please refer to “Adjusting the angle of reclining and legs” for details. (P20~21)
- The leg angle cannot be lowered below the standby position.
- After registering the customized reclining, backrest and footest will automatically move to the registered position from the following login.
- Even if OK is not pressed, the massage starts after about 10 seconds.
- Do not turn off the power during registration, otherwise the registration of customized information cannot be completed.

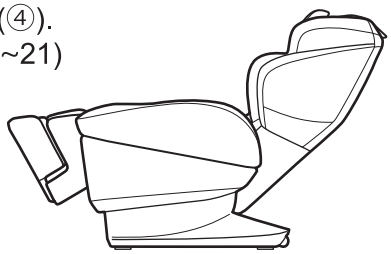

Standby position

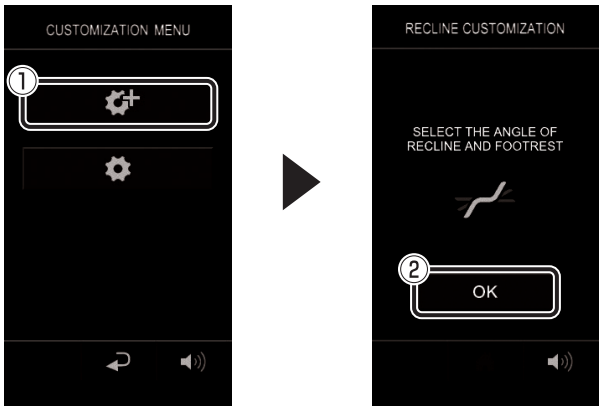

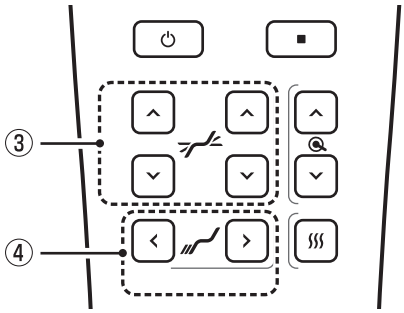

Customize airbags pressure

1. Log in to A or B, and press (①).

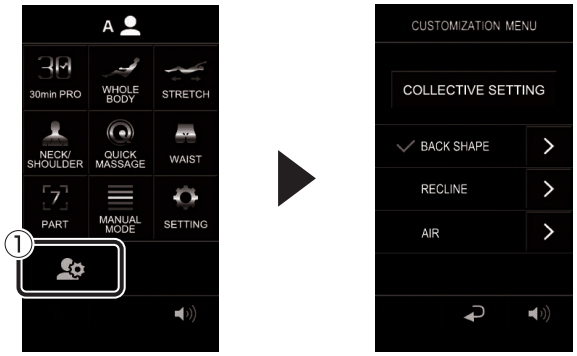

2. Press "Air " ›, select ⚙+ (①) and press “Start (②)” to start the setting of intensity for each part. When the air pressure of each part reaches the preferred intensity, press OK (③).
   (setting order: ankle → calf → arm → thigh → pelvis → hip → waist → shoulder → confirm)
   Press OK (④) to confirm the intensity displayed on the screen.
   If “Registration completed” is displayed, the registration is complete.

- The intensity adjustment action is repeated twice for each part. If “OK” is not pressed, the intensity will be set to “7”.
- To adjust the intensity on the confirmation screen, select the number corresponding to the target part and adjust it through « » (⑤).
- Do not turn off the power during registration, otherwise the registration of customized information cannot be completed.

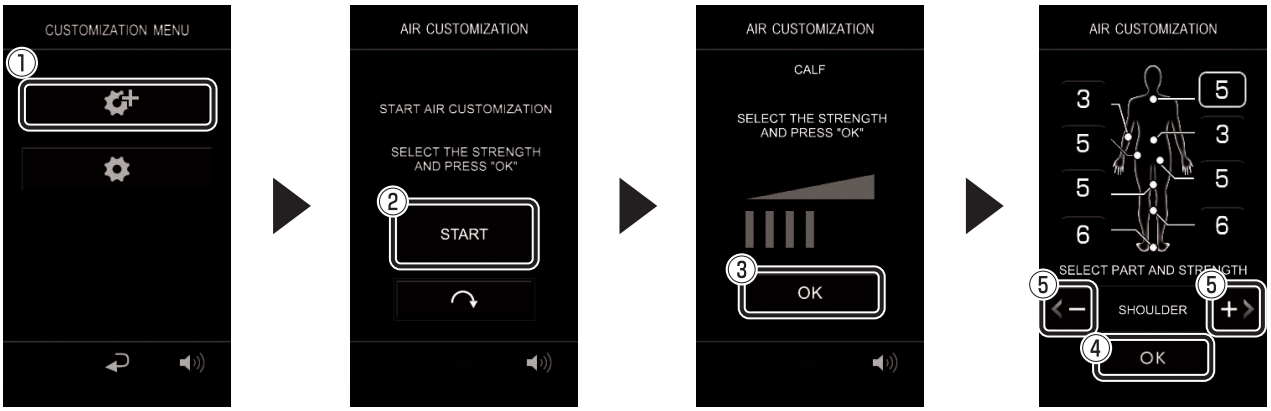

Batch setting (to reset the batch)

1. Log in to A or B, and press .
   After pressing “Batch setting”, setting customization in order of back line → reclining → air pressure will start.

- When customizing the air pressure, press “Skip” to skip the setting.
- Even if OK is not pressed, the massage starts after about 10 seconds.
- Do not turn off the power during registration, otherwise the registration of customized information cannot be completed.

To edit the registered customized information

1. Log in to A or B, and press .
   After pressing to edit the customized information, the edit screen will be displayed.

- For various customization methods, please confirm the chapters on “Back Line (P58~59)”, “Reclining (P60)” and “Air pressure (P61) ”.

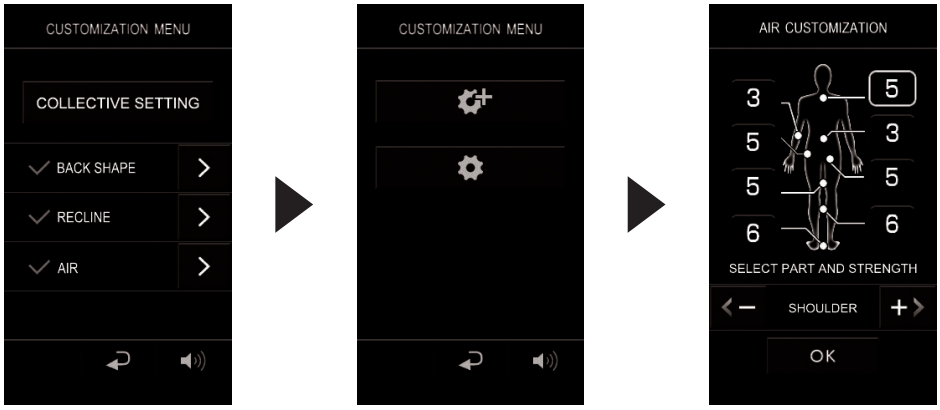

To switch to other modes

1. To switch from A to B, or from user customized mode (A/B) to Guest Mode, press ⏻ and then restart the power.

- When switching to other modes, please restart the power before operation.

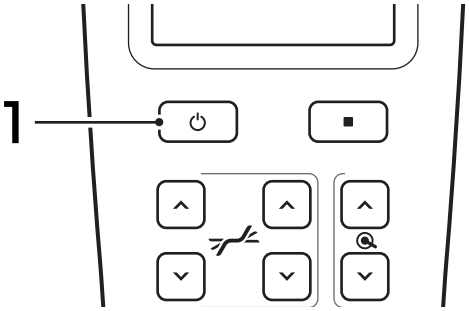

MEMO

How to maintain the chair

⚠ DANGER

Do not connect or disconnect the power plug by wet hands. Electrification may occur.

⚠ WARNING

Make sure to unplug the power plug. Electrification may occur.
Do not wipe with benzine, paint thinner or alcohol. This may cause fire or electrification.

Cloth/Back pad/Pillow

1. Instill water containing neutral detergent and squeeze firmly.
2. Wipe the dirty part with the cloth.
3. Wipe it out with a tight squeezed cloth which is water contained.
4. Dry it naturally after wiping out with a dry cloth.

- Do not iron. It may damage the fabric.
- Attention to use the machine with wearing colored clothes as color may adheres to fabrics or cloth.
- After using the machine with hairdressing on, put something like towel on where your head touches as it may cause the change of color or cracking.

Resin part

1. Instill water containing neutral detergent and squeeze firmly.
2. Wipe the dirty part with the cloth.
3. Wipe it out with a dry cloth not to leave detergent.

- Do not use scouring powder. It cause scratches, discoloration, cracks.

Remote control, lower back(Control box)

Wipe out with a dry cloth.

- Do not wipe out with a wet towel. It may cause malfunction.

How to storage

⚠ DANGER

Do not use or store in the bathrooms or places of high humidity or moisture. Electrification, fire, accidents, and moulding may occur.

Store the chair in the places which is less adverse effect by temperature, humidity, dusts after wiping out the dirt and dusts on the chair.
When the chair won't be used for a long time, put a cover on the chair and avoid the chair from dust.

- Do not store the chair near a stove or the places which chair is exposeddirect sun-light for a long time. It may cause discoloration, deterioration.

How to move the main unit

⚠ WARNING

Do not move the chair while people or items are on the chair. Damage or injuries may occur.
Do not haul the chair itself or move with the casters on the floor where it easily gets scratches.
Do not pull the power chord or remote control chord with leg or wrap with caster.
Failure to do so may cause injury.

When moving with Caster

Float the front side of the main unit, push it and move.

- While lowering the main unit, lower slowly so that the leg part does not get hit.

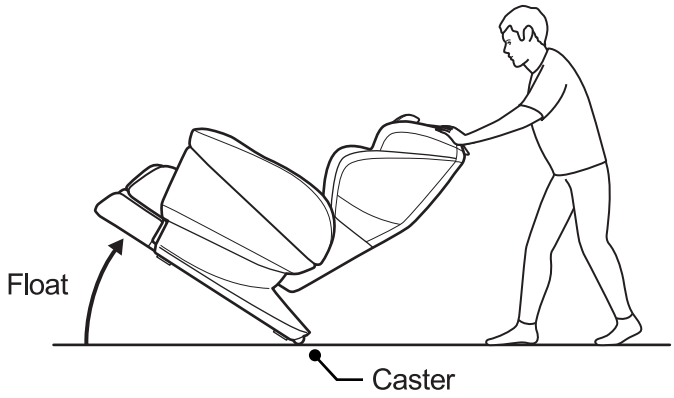

When more than 2 persons are lifting

Dismantle the arm unit and the arm rest, and after lowering the back rest part, hold the lower part of the front side and back rest with hands (Refer the below diagram) and then lift and move.

- About the method to remove the arm unit, please refer to “To remove the arm unit”. (P14)
- As it is very heavy, select more than 2 persons surely.
- Please watch your steps carefully and lower it slowly.

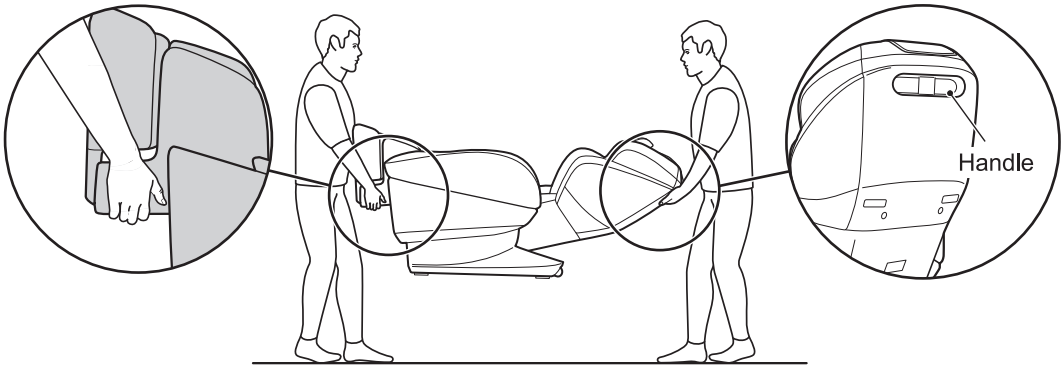

Q&A

Q1 Left and right strength is different. And, I feel the difference is remarkable.

A To massage for a better feeling, in connection with adopting a mechanism in which the rubbing will mutually hit, unavoidably, the operation might take place in the knead ball slipped position. Thereby, you feel that there is a difference among the left and right strength. But it is not a failure.

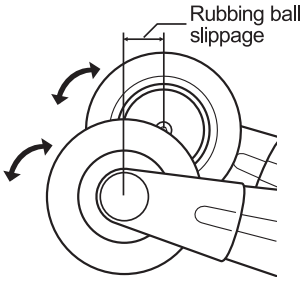

Q2 The remote control holder is loosened…

A Please re-tighten the set screws.
If the remote control stand falls off, loosen the set screws first, then re-insert the stand and tighten the set screws again. In addition, check the mounting screws of the stand and re-tighten them if they are loose.

Q3 Leg is not fitting properly in the leg part…

A Adjust by expanding and narrowing the leg part.

- For short people: Raise the back rest part and elevate the leg part.

Q4 I am commuting to hospital, is it ok to use?

A Consult with the doctor in the hospital and then use. “Touch pressure stimulation” refers to the action that promotes the blood circulation for massage by relieving the stress in the muscles. According to the illness, there are risks of getting worse. Hence you should consult with the doctor.

Q5 Is it possible to use by removing the arm?

A No, it is not possible. Air supply and exhaust vent will be exposed, trash and dust will be accumulated and this will be the cause for failure.

Q6 Is it ok to spread the hot carpet under the chair?

A As there is a danger of flame, please stop. Heat generation of hot carpet pains the body and thereby it might generate flame.

Q7 Can the leg be lowered up to the storing position?

A When using foot air or foot roller massage, footrest does not lower to standby position. Turn「OFF」foot air or foot roller. (Refer to P37, P43)

Q8 Won’t the backrest or the leg move to standby position automatically?

A When the backrest part is lowered below or the leg is raised above the standby position, it will not go back to standby position even if you press ⏻ button.

Q9 Can this be used by people of height below 150 cm or above 185 cm?

A Yes, you can use. During sensing, the shoulder position might not match even if you adjust the shoulder position and so proceed using the following methods.

- Short person: Raise the backrest and leg part.
- Tall person: Lower the backrest and leg part.

Q10 Arm is not reaching the arm unit. What to do?

A Raise the backrest and adjust the arm position

Q11 Will the shoulder and arm become red after shoulder/arm air massage?

A After usage, there might be traces of the massage. That’s due to the massage. It will disappear in due course of time. And, while doing shoulder air massage, avoid clothes that will expose the shoulders.

Q12 Even if sensing is done, shoulder position is not matching.

A Sit comfortably, lean the face so that it rests in the backrest and after that do the sensing. This can be adjusted manually.

Q13 During massage, some creaky noises are made. Is it ok?

A There is nothing abnormal in the structure. Refer to "Trouble shooting" .

Q14 Is it possible to completely cut off the air massage in the auto course?

A It is possible in the course other than 30min PRO course and stretch course. Please refer to "Adjustment method during air massage". And during "WHOLE BODY AIR" in stretch course, if you set the entire air massage to “OFF”, then it will be massage end (While stowing) screen and the power will be cut.

Q15 "Child lock" screen is displayed and remote control is not operable.

A Child lock is set.
Press and hold " ▪ button" for approximately 3 seconds to unlock the child lock. Refer to "Setting up child lock” for more details.

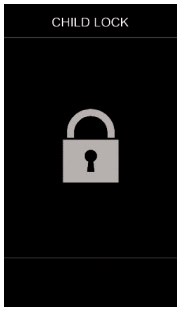

Q16 If you do a foot stretch, sometimes there is a squeaky noise.

A Noise might be generated, but it is not a failure. In the structure, when the electric actuator is isolated from the leg, noise might be generated.

Q17 It is difficult to feel the differences when change the intensity of foot roller.

A It sometimes is difficult to feel the differences of intensity as the intensity of foot roller is adjusted by the strength of pressing by the air of flaps of foot part.

Q18 The automatic course massage action is different from usual.

A Even on the same course, the timing of operation, the number of times of the air bulges the timing of knead ball movement may change depending on strength adjustment, the reclining motion, the pressure to the knead ball.

Q19 Explain the dimensions of the main unit.

A Please refer to the following diagram.

Front view

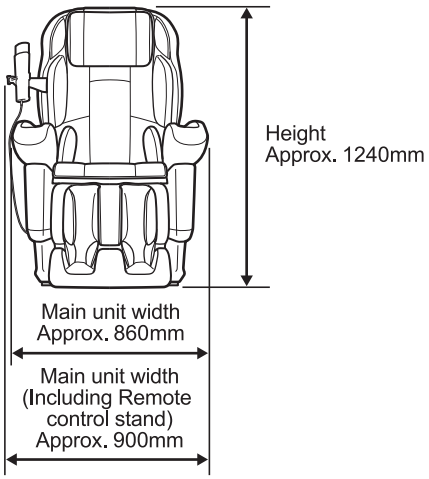

Side view

When it is not reclined

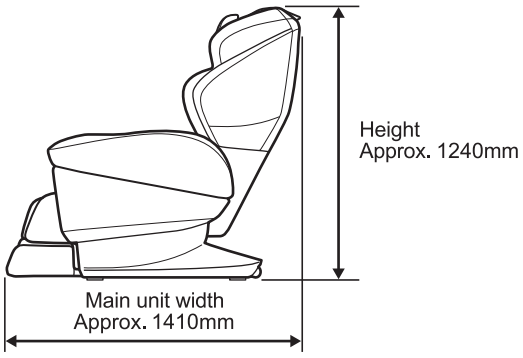

When it is reclined (When the leg part is stretched)

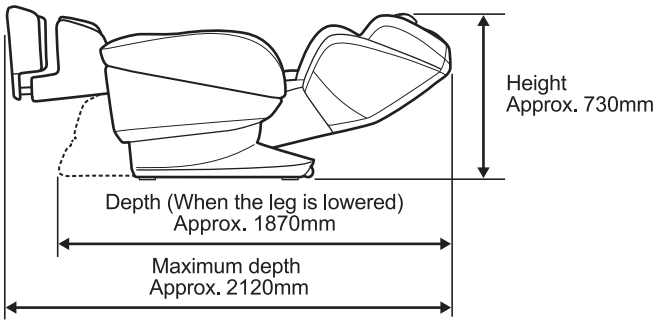

Trouble shooting

⚠ DANGER

Do not remodel and also do not analysis or repair by yourself, there are chances of injury due to fire (or) abnormal operation

You may encounter the following phenomena while in massage. As being due to the mechanical design, they have nothing to do with the product life

- A "clatter" noise occurs when the knead balls go up and down
- A "creak" noise of the gear and the motor occurs while in massage
- A friction noise occurs when the knead balls rub the cover cloth (Particularly while in the process of knead)
- A rattling noise occurs while in the "TAPPING" or "WAVELET" massage.
  (Particularly when the massage moves from the shoulders to the back)
- In the "KNEAD","TAPPING" or "WAVELET" massage, massaging speed may vary with the knead balls strength changed
- A noise becomes different when the massaging speed is changed
- A roaring noise of the motor occurs when load is given to the chair
- A "cuckoo" noise occurs while, in the Auto mode course, the knead balls are automatically adjusted to
- the back-and-forth position to have the chair fitting in with the user's body shape
- The compressor's noise and the air exhausting noise occur while in air-massage
- A noise occurs when the air bag is inflated
- A screaming noise occurs while in massage of the shoulder
- A grinding noise occurs when the backrest or seat are reclined (Squeak sound)
  (The height of the knead balls between the left and right are different.
  A mechanism is used to allow the two knead balls tapping alternatively. It occurs unavoidably and this is not the trouble)

Symptoms	Check points	Trouble shooting
The chair does not start-up	Is the power plug or the connector on the main unit side missing?	Plug the power plug into the outlet and insert the connector to the inlet.
	Is the power switch of the lower part behind the main body turned off	Turn the power switch “ON”
The chair stops halfway. (The remote controller does not work)	Is the backrest in touch with the main body or the like?	Move the chair away from the main body or the like. Turn the power switch of the lower part behind the main body OFF and ON.
	Is there any load given to the knead balls?(Should there be any load given to the knead balls, a safety mechanism works to stop all the functions)	Detach the body from the backrest for a moment, turn OFF and ON the power switch of the lower part behind the main body and once again operate from the beginning.
The backrest cannot be reclined	Is the power plug or the connector on the main unit side missing?	Plug the power plug into the outlet and insert the connector to the inlet.
	Is the backrest in touch with the wall or the like?	Move the chair away from the main body or the like
The leg part is not lowered to the retracting position?	Is the foot air or foot roller turned 「ON」?	Turn「OFF」the foot air or foot roller.

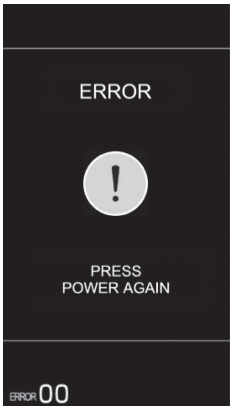

The following message may be displayed on LCD: "ERROR: Switch on Power then on/off". In this case, following the instruction, turn the power switch OFF and ON.

- When the operation could not be done normally even if the above counter measure is performed, or the same error occurs repeatedly, switch "OFF" the power switch of main body and disconnect the power cord plug from power receptacle. And then, contact your retailer or our customer care.

About BLUETOOTH connection

■ Unable to pair

- The distance between the massage chair and the BLUETOOTH device should be not more than 1 m.
- Restart the power of the massage chair and try again.
- After resetting pairing information, perform pairing again. (P54)
- Set the specifications of the BLUETOOTH device.
  Please read the instructions of the BLUETOOTH device for the setting method.
- Please confirm the specifications of the BLUETOOTH device. The device must support the BLUETOOTH specification, A2DP and GATT, otherwise cannot be used.

■ Unable to connect

- Cannot connect through BLUETOOTH with more than one device at the same time.
- When the massage chair is already connecting with a device through the BLUETOOTH, it cannot connect with other new devices. Check whether there are other connected devices.
- The operation of BLUETOOTH devices (smartphone, etc.) varies depending on the device, so please read the instructions of your BLUETOOTH device.

※When the BLUETOOTH icon of the remote control is blue, it means that the chair is connecting with a BLUETOOTH of another device. After disconnecting the unused device, please whether the BLUETOOTH icon of the remote control is gray.

■ Connection taking a long time / Not automatically connected

- Please connect manually

※Smartphones will store connection information of the BLUETOOTH: for iOS go to settings → “My devices” of BLUETOOTH, and for Android go to settings → connected devices → previously connected devices, confirm whether “Massage Chair H22” is displayed and connect (the name may vary depending on the version).

- Please reset pairing information and perform pairing again.

※The chair can keep connection information of the BLUETOOTH of up to 5 connected devices.
It can pair more than 5 devices, but the memory can keep connection information on up to 5 devices only.
When information on 5 devices has been kept, if you want to keep the information of a new device and allow it to be connected automatically, you must use the pairing information reset function to discard the information that has been kept. (P54)

The operation of the BLUETOOTH (smartphone, etc.) varies depending on the device, so please read the instructions of your BLUETOOTH device.

About BLUETOOTH connection

■ No sound / The sound is too low

- Turn on the power of the massage chair and the remote control. After the course menu selection screen is displayed, turn on the power of the BLUETOOTH device.
- Turn up the volume of the BLUETOOTH device.
- Remove all obstacles between the massage chair and the BLUETOOTH device and shorten the distance between them.
- Switch the voice output of the BLUETOOTH device to the BLUETOOTH connection.

■ Sound break / Noise / Sound interruption

- Turn down the volume of the BLUETOOTH device.
- When playing music, if other BLUETOOTH devices are trying to connect or searching, there may be noise and sound interruption.
- Keep microwave oven, wireless LAN and other devices away from the massage chair.
- Keep the TV, radio and devices with built-in tuners away from the massage chair. These devices may affect it.
- Turn off the equalizer setting of the BLUETOOTH device.
- Remove all obstacles between the massage chair and the BLUETOOTH device, and shorten the distance between them.

The operation of the BLUETOOTH (smartphone, etc.) varies depending on the device, so please read the instructions of your BLUETOOTH device.

Checkpoints

⚠ WARNING

When using the chair after a while, read the user manual once again, check to make sure that it operates normally to use again. Failing which may cause injury or accident.

Inspection Important!
Be sure to make inspection for longer use,

Are there these symptoms?

- Chair emits scorching smell
- The power cord or the plug is overheated
- Electricity runs on or off with the power cord moved
- There are some other abnormalities

Discontinue use

For prevention of accident or trouble, turn "OFF" the power switch of main body, disconnect the power cord plug from power receptacle, and contact your retailer or our customer care.

MEMO

Specifications

Product name			massage chair
Model number			JP-3000
Rating	Power supply (50-60Hz)		AC100-240V
	Rated time		30 min
	Power consumption (50-60Hz)		125W (Standby power : 0.3W)
	Motor power consumption		100W
	Electric heater power consumption		25W
Mecha(Knead balls) massage speed adjustment range	Knead		4-step adjustment (approx. 8-30 cycles/min)
	Tapping		4-step adjustment (approx. 250-650 cycles/min)
	Up and down		Approx. 1.0-5.4cm/second
Air pressure for air-massage			Approx. 45kPa
Mecha(knead balls) massage strength adjustment range	Auto course		7-step adjustment
	Manual selection		12-step adjustment
Adjustment range of intensity of foot roller			3-step adjustment
Rotation speed of foot roller			Approx. 14-21 cycles/minute
Air massage strength adjustment range			7 levels of adjustment for each part
Auto-timer			Approx. 7, 18, 30 min
Reclining angle	Seat back		Approx. 117°-164° min
	Footrest	When air massage is on	Approx. 56°-84° min
		When air massage is off	Approx. 0°-84° min
Dimensions	Upright position		Approx. W860 x D1410 x H1240 (mm)
	Reclining position		Approx. W860 x D2120 x H730 (mm)
Weight			Approx. 96kg
Upholstery			PVC leather, Polyester
Country of Origin	Made in Japan		

Communication specification

Communication mode	comformity with BLUETOOTH standard specification Ver.4.1
Output	BLUETOOTH standard specification Power Class1.5
Maximum communication distance	within 10 m when in good sight
Frequency band used	2.4GHz frequency band (2.402GHz～2.480GHz)
Modulation method	GFSK π/4 DQPSK 8DPSK
Support BLUETOOTH specification	A2DP 1.3, GATT
Support code	SBC (44.1kHz)
Support content protection	SCMS-T

Bluetooth® The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by FUJIIRYOKI is under license. Other trademarks and trade names are those of their respective owners.

Functions available in each mode

Function	Guest Mode	User Customized Mode
Customized function	—	○
Reset customized information	—	○
Reset pairing information	○	—
Release course function	—	△ (Execute course only)
Child safety lock function	○	—
Quick mode function	○	—

MEMO

FUJIIRYŌKI

FUJI MEDICAL INSTRUMENTS MFG.CO.,LTD.