User's Manual

Wireless Presenter with Air Mouse

Version 3.00
(English / Indonesian)

BEFORE GETTING STARTED

This User's Manual is designed to aid you to get started with the device. If you experience problems following these guides or need further information pertaining to the device, please visit our website at *www.prolink2u.com*. All specifications are subject to the manufacturer's configuration at the time of shipping and may change without prior notice, written or otherwise.
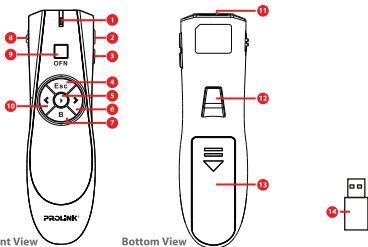
1. Package Contents

1 x Wireless Presenter
2 x USB Mini Receiver
3 2 x AAA Alkaline Batteries
4 1 x User Manual
5 1 x Carrying Pouch

2. Overview of the Device

Front View   Bottom View

1 Indicator Light
2 Increase Volume
3 Decrease Volume
4 Esc
5 Play
6 Page Down
7 Black Screen
8 Power ON/OFF
9 Optical Finger Navigation
10 Page Up
11 Red Laser Pointer
12 Control Button of Red Laser Pointer
13 Battery Compartment
14 Mini USB Receiver

3. Using the Device

Hardware Installation

1. Remove the battery cover of the presenter.
2. Insert the AAA batteries into the battery compartment by proper positive (+) and negative (–) ends as specified by the marks in the battery compartment.
3. Remove the mini USB receiver from battery cover.
4. Insert the mini USB receiver to USB port of PC. The computer will detect and setup automatically.
5. Replace the battery cover to its original position.
6. Power ON the presenter to start using.

If the presenter is not functioning, kindly follow below procedure:

1. Eject the mini USB receiver from USB port and turn off the presenter
2. Insert the mini USB receiver to another USB port of PC, and locate the presenter close or near to the mini USB receiver (within 15 meter distance).
3. Power ON the presenter and press the "Page Up" and "Page Down" buttons together.
4. The LED will flash in Red. Pairing process is completed once the LED stops flashing.

Interaction with Microsoft PowerPoint / Keynote

1. Optical Finger Navigation (OFN) – to work as a wireless mouse, move cursor and click (single or double) objects.
2. Play button – to start presentation slide show.
3. Page Up/Down buttons – to move slides to previous / next page.
4. B button – to show black screen projection.
5. ESC button – to exit presentation mode.
6. Red Laser Button Control – to generate a red laser beam.
7. PowerPoint / Keynote Mode (Press and Hold the "Page Up" and "Page Down" buttons for 3 seconds simultaneously) – to switch mode to either PPT mode (blinks slowly) or Keynote mode (blinks fast). Default is set as PPT mode.

Note of Red Laser Pointer

This product can generate safe red laser beam. However, to avoid harm, please **DO NOT** point the red laser beam to eyes of your own or others. Also **DO NOT** reach children.

Speficiations and Functions

1. Operating Distance: Up to 20 meters
2. Wireless carrier frequency: 2.4GHz
3. Input Voltage: 3V
4. Resolution of OFN: 800DPI

Low Battery Indication

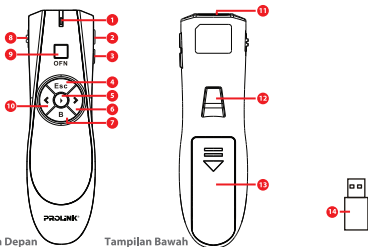Replace the batteries when the LED indicator blinks continuously.

1. Isi

1 x Wireless Presenter
2 x USB Mini Receiver
3 x 2 x Baterai Alkaline AAA
4 x Buku Panduan Pelanggan
5 x Carrying Pouch

Indonesian

2. Sekilas Perangkat

Tampilan Depan   **Tampilan Bawah**

1 Indicator Light
2 Increase Volume
3 Decrease Volume
4 Esc
5 Play
6 Page Down
7 Black Screen

8 Power ON/OFF
9 Optical Finger Navigation
10 Page Up
11 Red Laser Pointer
12 Control Button of Red Laser Pointer
13 Battery Compartment
14 Mini USB Receiver

3. Menggunakan Perangkat

Instalasi Perangkat

1. Buka penutup baterai alat tersebut.
2. Masukan baterai AAA kedalam kompartemen, pastikan kutub baterai sesuai dengan petunjuk simbol yang telah ada positif (+) dan negative (-).
3. Pindahkan mini usb receiver dari penutup baterai bagian dalam.
4. Masukan mini usb receiver ke dalam slot usb komputer anda, komputer akan mendeteksi dan menginstal dengan sendirinya.
5. Tutup kembali penutup baterai seperti posisi semula.
6. Power pada presenter untuk mulai menggunakan.

Jika presenter tidak berfungsi, harap mengikuti petunjuk dibawah ini:

1. Cabut mini usb receiver dari slot usb komputer anda dan jangan lupa matikan presenter.
2. Pasang mini usb receiver ke slot usb komputer lain dan pastikan posisi presenter dekat dengan mini usb receiver (jarak dibawah 15 meter)
3. Power pada presenter dan tekan tombol "Page Up" dan "Page Down" bersama-sama.
4. LED akan berkedip di Red. Proses berpasangan selesai setelah LED berhenti berkedip.

Penggunaan untuk Microsoft PowerPoint / Keynote

1. Optical finger navigation (OFN) – berfungsi sebagai mouse nirkabel, pindah kursor dan klik (satu atau dua) obyek.
2. Tombol play – untuk memulai slide show presentasi.
3. Tombol up/down – untuk memindahkan slide ke halaman sebelumnya / berikutnya.
4. Tombol B – untuk membuat layar ke posisi awal (black screen).
5. Tombol ESC – untuk keluar dari mode presentasi.
6. Tombol laser button control – untuk menghasilkan sinar laser merah.
7. Mode PowerPoint / Keynote (Tekan dan tahan tombol "Page Up" dan "Page Down" selama 3 detik secara bersamaan) – untuk beralih mode ke mode PPT (berkedip perlahan) atau mode Keynote (berkedip cepat). Default diatur sebagai mode PPT.

Catatan Pointer Laser Merah

Produk ini termasuk aman tetapi untuk menghindari dari bahaya mohon tidak mengarahkan langsung sinar merah langsung ke arah mata atau bagian lainnya, serta jauhi dari jangkauan anak-anak.

Fungsi & Spesifikasi

1. Berfungsi dalam jarak hingga 20 meter.
2. Frekuensi nirlabel 2.4 GHz.
3. Tegangan input : 3V
4. Resolusi dari OFN : 800DPI

Indikasi Baterai Rendah

Ganti baterai saat indikator LED berkedip terus menerus.

PROLiNK®

KETENTUAN GARANSI   *(for Indonesia region only)*

Kami mengucapkan terima kasih atas kepercayaan Anda memilih produk kami dan selaku distributor di Indonesia, kami memberikan garansi produk selama1 (satu) tahun.

1. Garansi Hanya Berlaku Jika :
    a. Diisi dengan jelas, lengkap dan benar.
    b. Jika telah dikirimkan dan diterima oleh PT. Prolink Intidata Nusantara.
    c. Memperlihatkan kartu garansi asli dan nota pembelian pada saat klaim service.

2. Garansi Tidak Berlaku Apabila :
    a. Kerusakan yang disebabkan oleh, kelalaian pemakai, bencana alam, kebakaran, tegangan listrik yang
       terlalu tinggi / rendah, terkena cairan.
    b. Kerusakan yang diakibatkan karena transportasi / pengiriman, pemasangan / pengoperasian yang tidak sesuai
       dengan buku petunjuk, penyambungan dengan alat lain.
    c. Barang yang diservice tidak sesuai dengan kartu garansi.
    d. Serial number rusak / robek / tidak ada.

3. Ruang Lingkup Garansi :
    a. Garansi hanya mencakup bagian-bagian / komponen perangkat keras dari konfigurasi standar yang terdapat
       pada spesifikasi produk sesuai dengan faktur.
    b. Khusus netbook garansi baterai hanya berlaku selama 6 bulan sejak tgl. pembelian.

* Biaya pengiriman ditanggung pembeli

No :

KARTU GARANSI / WARRANTY CARD

(for Indonesia region only)

Barang ☐ Data Comm ☐ Networking ☐ Netbook ☐ .....
Produk ☐ UPS ☐ Display* ☐ Accessories

S/N :

Model :

Nama
Name

Alamat
Address

Kode Pos:

Tgl. Pembelian
Purchase Date

Dealer :
Toko :

Kota :
City :

Kota:

Tel / Fax :

Email :

Pelanggan

PT. Prolink Intidata Nusantara

Cap Toko

Kartu Garansi harus diisi lengkap, kirimkan paling lambat 14 Hari setelah Tgl. Pembelian / Please Fill- in Your Warranty Card Completely and Send max. 14 day after Purchase
* Terdaftar No.2134/1.824.124

Alamat Pengiriman :   **PT. PROLINK INTIDATA NUSANTARA**
Address   Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia

Telp. : (+62-21) 34831777
Fax : (+62-21) 34830788
Email : service@prolink.co.id

No :

KARTU GARANSI / WARRANTY CARD

(for Indonesia region only)

Barang ☐ Data Comm ☐ Networking ☐ Netbook

Produk ☐ UPS ☐ Display* ☐ Accessories ☐ ......

S/N :

Model :

Nama
Name

Alamat
Address

Tgl. Pembelian
Purchase Date

Dealer :
Toko :

Kota:

Kode Pos:

Kota :
City :

Tel / Fax :

Email :

Pelanggan

PT. Prolink Intidata Nusantara

Cap Toko

Kartu Garansi harus diisi lengkap, kirimkan paling lambat 14 Hari setelah Tgl. Pembelian / Please Fill - in Your Warranty Card Completely and Send max.14 day after Purchase
Terdaftar No.213471.824.124

Alamat Pengiriman
Address

PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia

Telp. : (62-21) 34831777
Fax. : (62-21) 34630788
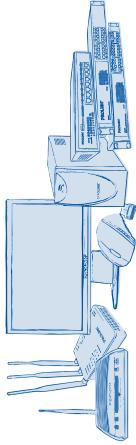**Email : service@prolink.co.id**

KARTU GARANSI
(for Indonesia region only)

Kepada Yth.
Customer Service
PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No.79
Jakarta Pusat 10150 - Indonesia

Tempelkan perangko
disini.
Hanya untuk pengeposan
di Indonesia

PROLiNK®
www.prolink2u.com

Worldwide Customer Care Centers

INDONESIA Office
PT PROLiNK INTIDATA NUSANTARA
Walk-In   : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.
Telephone   : +62 21 3483 1777
Email Support   : support.id@prolink2u.com

MALAYSIA Office
FIDA SYSTEMS (M) SDN BHD
Walk-In   : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.
Telephone   : +60 3 8024 9151
Email Support   : support.my@prolink2u.com

SINGAPORE Office
FIDA INTERNATIONAL (S) PTE LTD
Walk-In   : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.
Telephone   : +65 6357 0668
Email Support   : support@prolink2u.com

Technical Support Hotline
INDONESIA   : +62 21 3483 1717
MALAYSIA   : +60 3 8023 9151
SINGAPORE   : +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays.

Register Online For Your Product Warranty @ www.prolink2u.com/register