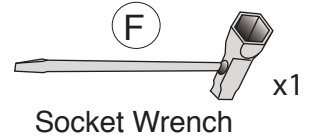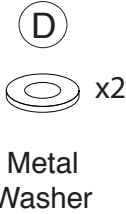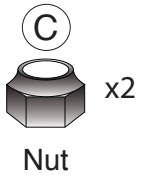# Thick, Heavy-Duty Security Gooseneck w/ Dual VESA Plates (Black)
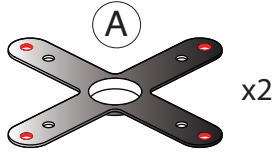
ADD-GVESAB2 / ADD-GVESAW2

INSTRUCTION - MANUAL

CONTENTS:

A x2

C x2
Nut

D x2
Metal Washer

E x4
Wear-Resistant Washer

F x1
Socket Wrench
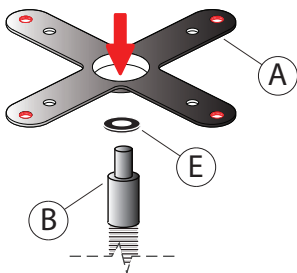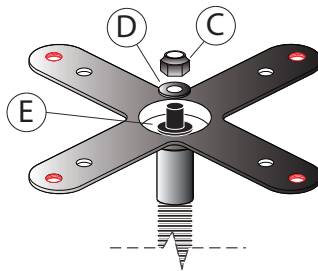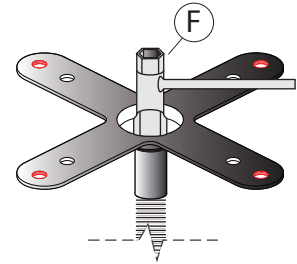
B x1

INSTALLATION:

1. Connecting VESA Plate to the Gooseneck

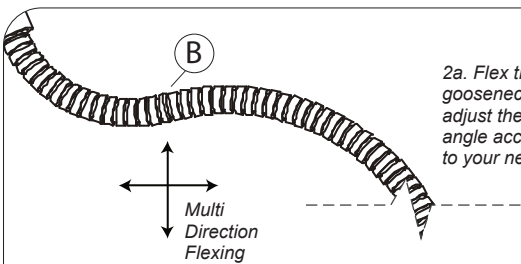1A. Align and place VESA (A), Washer (E) and Gooseneck end connector (B) in order as shown above.

1B. When everything is connected, place washers (E & D) and nut (C) as shown. Rotate nut with hand initially.
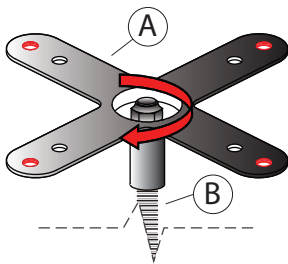
1C. Use provided wrench tool (F) to rotate nut until securely fastened.
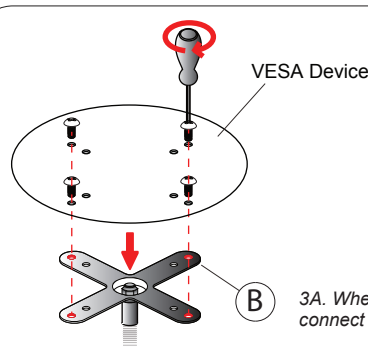
2. Adjusting Gooseneck and Rotation.

2a. Flex the gooseneck (B) to adjust the view angle according to your needs.

Multi Direction Flexing

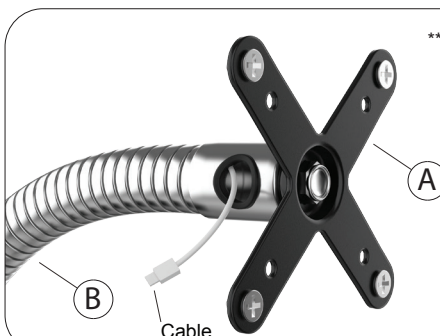2b. Rotate the VESA Plate (A) clockwise to adjust orientation to preferred setup.

3. When Connecting to a VESA Compatible Item

**Screwdriver, VESA Device and Screws not included.*

VESA Device

3A. When attaching a VESA compatible device, connect as illustrated to the left.

4. Cable Management.

**Cable only for display, not included.*

Cable

4a. Fish one end of the cable through top hole, and route the other end through the other end hole as shown.