# BRIGHTLIGHT

## HYPERION FLOOD LIGHTS | MOUNTING ACCESSORIES
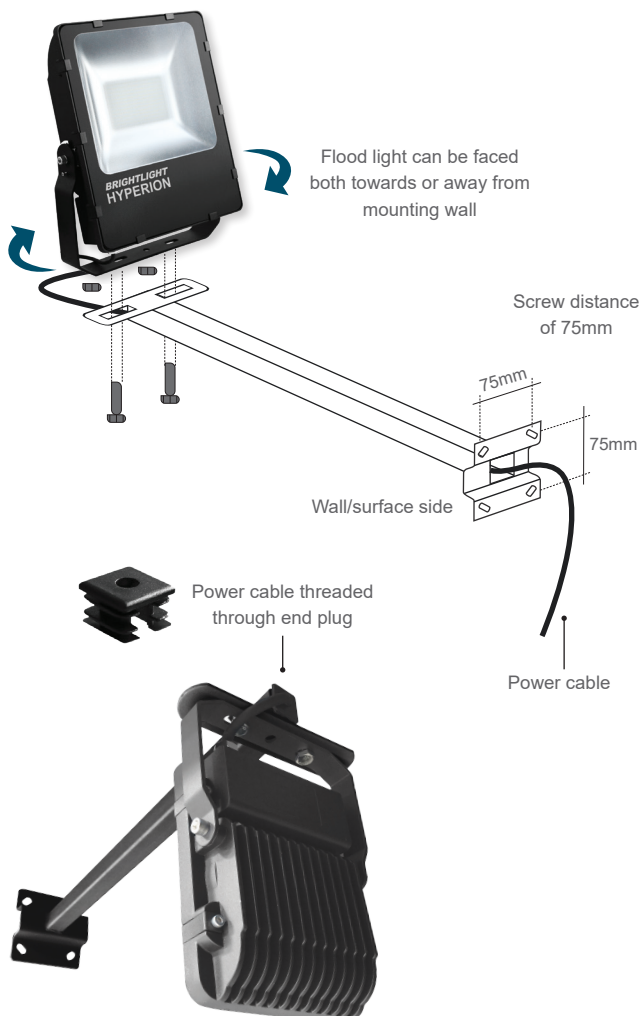


MOUNTING ARM



STAKE

| ACCESSORY | CODE |
| --- | --- |
| MOUNTING ARM 800MM BLACK | BL-CS-ARM800B |
| MOUNTING ARM 1000MM BLACK | BL-CS-ARM1000B |
| STAKE 250MM BLACK | BL-CS-STAKE250B |

### MOUNTING ARM INSTRUCTIONS

1. Fasten the bracket onto flood light with screws provided. Adjust the flood light to direct the light in the desired direction before tightening the screws.

2. Attach flood light bracket to the mounting arm with bolts.

3. Thread power cable through end plug and then through arm.

4. Fasten arm to wall with 4 screws appropriate to situation.



Flood light can be faced both towards or away from mounting wall

Screw distance of 75mm

75mm

75mm

Wall/surface side

Power cable

Power cable threaded through end plug

### MOUNTING STAKE INSTRUCTIONS

1. Fasten the bracket onto flood light with screws provided. Adjust the flood light to direct the light in the desired direction before tightening the screws.

2. Secure stake in ground. *(This can be done before or after attaching flood light)*.

3. Attach flood light to mounting stake with bolt through central bracket hole.