


SUPRENT
Haircare, We Care



THE ORCA
Beard Trimmer BT535BX

English	2 - 8
日本語	9-16

SPECIFICATIONS

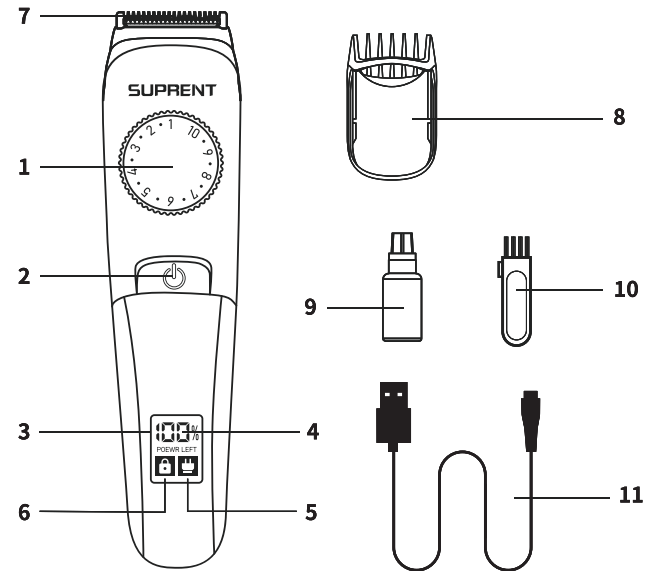

- | | | |
|-------------------------------|-----------------------|--------------------|
| 1. Adjusting Ring | 5. Charging Symbol | 9. Oil |
| 2. Switch | 6. Safety Lock Symbol | 10. Cleaning Brush |
| 3. LED Display | 7. Blade | 11. USB Cable |
| 4. Battery Remaining Capacity | 8. Guide Comb | |

PRODUCT DESCRIPTION

- Fully charge the trimmer before you use it for the first time or after not using it for a long period (When charging, please use a power adapter with an input voltage not higher than 5V 1A).

- **Display function introduction**

- 1) When working: The digital display shows the remaining power
- 2) When low power: The charging symbol flashes.
- 3) When charging: the charging symbol is always on, and the numbers flash from bottom to top .When fully charged, the number stops flashing. Meanwhile the number and charging symbol remain on.

- **Install and remove the guide comb**

Make sure the trimmer is turned off before you install or remove the guide comb. Adjust the adjusting ring to the number 1, and then remove the comb as figure 1, and install the comb as figure 2.



figure 1



figure 2

- **Install and remove the cutter head**

Make sure the trimmer is turned off before you install or remove the cutter head. Remove the cutter head as the figure 3, and install the cutter head as the figure 4.



figure 3













figure 4

- The waterproof grade of the trimmer is IPX7. It is accepted to wash the whole product. In addition, avoid splashing the power interface when flushing. After rinsing, wipe with a clean cloth and store in a dry and well-ventilated place.
- The width of the cutter head is 3.3cm. It can be trimmed to a minimum of 0.5mm and a maximum of 20mm.
- To avoid potential problems such as loud noise or high temperature during use, we recommend dripping a small amount of oil on the blade head after using 3 to 5 times. We also advise replacing the blade head once a year to improve your user

BASIC PARAMETERS

	Speed : 6300 ± 10% RPM
	Battery Type: Lithium Battery
	Power Supply Input: DC 5V 1A
	Battery Capacity: 800mAh
	Charging Time: 1.5 Hours
	Running Time: 1.5 Hours
	Waterproof Grade: IPX7
	Decibel: ≤65 dB
	Charging Interface: Type-C

NOTE

1. Before using as the first time, please charge 1.5 hours fully.
2. Charge the appliance fully before you use it for the first time or after a long period of disuse. It takes approximately 1.5 hours to fully charge the appliance. When it is fully charged, the appliance has a cordless operating time of up to 90 minutes.
3. When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops running during a session. Then recharge the battery. Follow this procedure at least twice a year.

CHARGING

1. Make sure the appliance is switched off.
2. Insert the USB cable plug into the appliance.
3. Put the adapter in the wall socket. (The charging indicator of display blinks to indicate that the appliance is charging. For the full charge, the charging indicator is steady on.)

SECURITY LOCK FUNCTION:

1. No matter in the power-on or power-off state, press and hold the key for 5 seconds, and then the key lock symbol flashes 3 times to enter the locked state.
2. In the locked state, press and hold for 5 seconds to turn it on directly.

CAUTION

1. Make sure the trimmer and your hands are dry when charging it.
2. Always charge it in a cool, dry place.

HOW TO USE

1. Put the small end of the USB cable connected with the jack of the battery pack which lies at the bottom of the machine, then put the other end of USB cable connected with the power (5V/1A). When the charging indicator of display blinks, it indicates that the trimmer is charging. When the charging indicator is steady on, it indicates that the battery is fully charged. The full charging time is 1.5 hours, when fully charged it can work more than 90 minutes.
2. Push the switch button to ON, then it can be used, push to OFF to turn off the device.

HOW TO USE THE COMB ATTACHMENT

Please make sure the device is turned off before you use the comb attachment when switch on the comb will self-lock.




figure1





figure 2

1. In the condition of shutdown, adjust the adjusting ring to the number 10, push outward, take off the comb as figure 1.
2. In the condition of shutdown, adjust the adjusting ring to the number 10, put the comb aligning the slot on the trimmer, push it inward, load the comb as figure 2.

HOW TO USE ADJUSTING RING

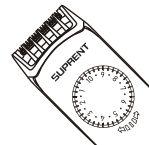

1. In the condition of shutdown, adjust the adjusting ring to adjust the cutting length with comb from 1mm to 10mm.
2. Don't adjust the adjusting ring when working.

CARE AND CLEANING



figure4



figure 5

1. Unload the blade: In the condition of shutdown and without comb, push outward, take off the blades as the figure 4.
2. Load the blade: In the condition of shutdown and without comb, push inward, load the blade as the figure 5.

3. Using the little brush, clean the blade in order to remove hair which may be caught between the blades. Lubricate the space between the fixed blade and moving blade with 2 or 3 drops of oil after every few uses (as the figure 6.).

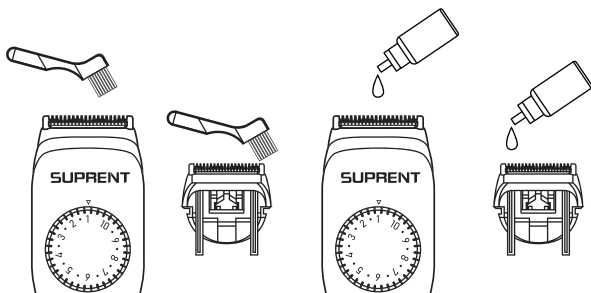


figure 6.2

DISPOSAL ENVIRONMENT

1. Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
2. The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries.

REMOVING THE RECHARGEABLE BATTERY

Only remove the rechargeable battery if it is completely empty.

1. Disconnect the appliance from the mains and let the appliance run until the motor stops.
2. Insert a screwdriver in the hair chamber to separate the housing part.
3. Cut the wires close to the battery with a pair of household scissors.
4. Remove the rechargeable battery. Do not connect the appliance to the mains again after you have opened it.

WARRANTY AND SERVICE

Warranty Description

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories). Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

After-sales Service:

If you have any query about our products, please feel free to contact us.

Issues Contact Info:

SUPRENT After-sales Service:	support@suprent.com
Official Website:	www.suprent.com
Social Medias Facebook :	@suprentinfo
Social Medias Instagram:	@suprent_official

Amazon Customer Service:

Amazon's home page--At the bottom--Help--Need more help--Contact Us

Amazon Returns or Replace Items:


Amazon's home page--Hamburger button-- Menu--Your orders--Find our

SUPRENT
Haircare.We Care



THE ORCA
ヒゲトリマー BT535BX

商品仕様

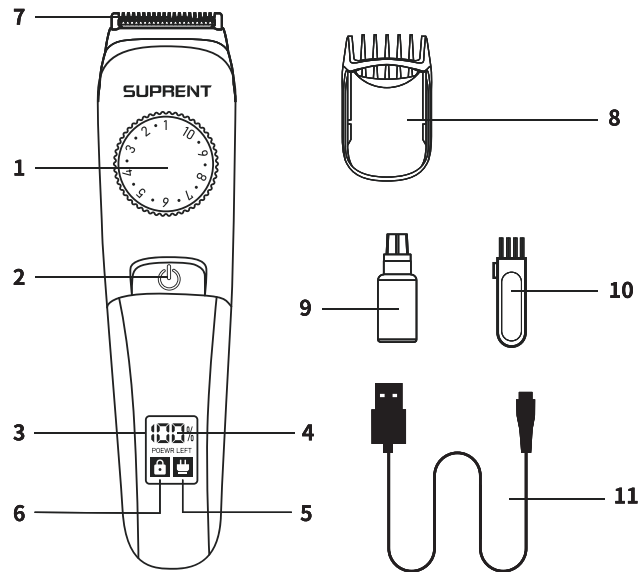

1.調整リング

2.電源ボタン

3.LEDディスプレイ

4.バッテリー残量

5.充電記号

6.ロック記号

7.ブレード

8.ガイドコーム

9.オイル

10.クリーンブラシ

11.USBケーブル

製品説明

- 1.初めて使用する場合や長期間使用しない場合は、使用前に製品を完全に充電してください。(充電するときは、入力電圧が5V / 1A以下の電源アダプターを使用してください)。
- 2.ディスプレイ機能の紹介
 - 1) 作業時:残量がデジタルディスプレイに表示されます。
 - 2) 電池残量低下:充電記号が点滅します。
 - 3) 充電時:充電記号は常に点灯しており、数字は下から上に点滅します。完全に充電されると、数字の点滅が止まります。その間、数字と充電記号は点灯したままです。
- 3.ガイドコームの取り付け
ガイドコームを取り付けたり取り外したりする前に、デバイスがオフになっていることを確認してください。調整リングを数字の1に調整し、図1に示すようにコームを取り外し、図2に示すようにコームを取り付けます。



図1



図2

- 4.ブレードヘッドの取り付け
カッターヘッドを取り付けたり取り外したりする前に、デバイスをオフにしてください。図3に示すようにカッターヘッドを取り外します。図4に示すようにブレードヘッドを取り付けます。




図3



図4

- 5.ヒゲトリマーの防水グレードはIPX7です。ブレードヘッドと本体は水で洗えます。また、水洗いの際は電源インターフェースを濡らさないようご注意ください。すすいだ後、きれいな布で拭き、乾燥した換気の良い場所に保管してください。
- 6.カッターヘッドの幅は3.3cmで、0.5mmから20mmまでトリミングできます。
- 7.ヒゲトリマーを長時間使用すると、大きな騒音、刃が鈍くなり、切れ味が低くなり、高温などの問題が発生する場合があります。3~5回使用した後、ブレードヘッドに少量のオイルをつけることをお勧めします。ブレードヘッドの交換は年に1回をお勧めします。

基本パラメータ

	モーター:速度:6300 ± 10% RPM
	バッテリー:タイプ:リチウムバッテリー
	入力電圧:DC 5V 1A
	バッテリー容量:800mAh
	充電時間:1.5時間
	実行時間:1.5時間
	防水規格:IPX7
	デシベル:≤65dB
	充電インターフェース:Type-C

注意事項

1. 初めて使用する前に、1.5時間完全に充電してください。
2. 初めて使用する前、または長期間使用しなかった場合は、製品を完全に充電してください。製品を完全に充電するには、約 1.5 時間かかります。完全に充電すると、ワイヤレスで最大 90 分間使用できます。
3. 初めて製品を充電するときは、バッテリーが完全になくなるまで使用してからフル充電することをお勧めします。この手順は少なくとも年に 2 回行ってください。

充電

1. デバイスの電源がオフになっていることを確認してください。
2. USB ケーブルをデバイスに差し込みます。
3. アダプターをコンセントに差し込みます。(ディスプレイの充電ライトの点滅は、デバイスが充電中であることを示します。完全に充電されると、充電ライトは常に点灯します。)

セキュリティロック機能:

1. 電源オンまたは電源オフの状態に関係なく、ボタンを5秒間押し続けると、ボタンロック記号が3回点滅してロック状態になります。
2. ロックされた状態で、5秒間長押しすると、直接電源が入ります。

警告 ▲

1. 充電中はトリマーと手が乾いていることを確認してください。
2. 常に涼しく乾燥した場所で充電してください。

使い方

1. USB ケーブルの小さい方の端をマシンの底部にあるバッテリーパック ジャックに接続し、USB ケーブルのもう一方の端を電源 (5V/1A) に接続します。ディスプレイの充電インジケータが点滅している場合、トリマーは充電中です。充電ランプが点灯すると、バッテリーは完全に充電されています。フル充電時間は 1.5 時間で、フル充電後は 90 分以上使用できます。
2. スイッチボタンを押して電源を入ると使用可能になります。オフに押してデバイスの電源を切ります。

ガイドコームの取り付け方

ガイドコームをスムーズに取り付けるために、製品の電源を切ってください。


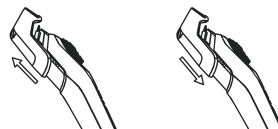


図1

図2

1. オフの状態では調整リングを1番に調整し、図1のようにコームを取り外します。
2. オフの状態では調整リングを1番に調整し、図2のようにコームを取り付けます。

調整リングの使い方

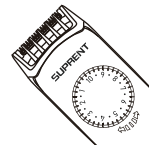

1. オフ状態では、調整リングを調整することで長さを1~10mmの間で調整できます。
2. 作業中は調整リングを調整しないでください。

メンテナンスとクリーニング




図4

図5

1. ブレードの取り外し: オフしてガイドコームがない状態で、図4のようにブレードを外側に押してブレードを取り外します。
2. ブレードの取り付け: オフしてガイドコームがない状態で、図5のようにブレードを内側に押して取り付けます。

3. 小さなブラシを使用してブレードをクリーニングし、ブレードの間に挟まっている毛を取り除きます。数回の使用ごとに、固定刃と可動刃の間に2~3滴の油を注油します。(図6に示すように)

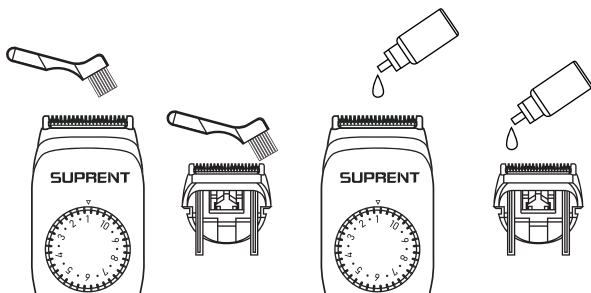


図 6 に示すように

廃棄について 環境

1. 製品の寿命が来たら、一般の家庭ごみと一緒に廃棄せずに、リサイクルのために公式の収集場所に提出してください。そうすることで、環境を保護することができます。
2. 内蔵の充電式バッテリーには、環境を汚染する可能性のある物質が含まれています。廃棄する前に必ずバッテリーを取り外して、認可された回収場所を持って行ってください。バッテリーは、公式のバッテリー回収場所で廃棄する必要があります。

充電式バッテリーの取り外し

バッテリーが完全に放電されている場合にのみ、充電式バッテリーを取り外してください。

1. 製品への電源を切断し、モーターが停止するまでデバイスを稼働させます。
2. ヘアチャンバーにドライバーを挿入して、ハウジング部分を分離します。
3. 家庭用はさみでバッテリーの近くのワイヤーを切断します。
4. 充電式バッテリーを取り外します。デバイスを開いた後は、再び主電源に接続しないでください。

保証とサービス

保証内容:

製品本体は購入日から1年間の保証(アクセサリを除く)がございます。偶発的な損傷、不正な修理、不適切な保管、その他の人為的な損傷による製品の故障は保証の対象外となります。

アフターサービス:

当社製品についてご不明な点がございましたら、お気軽にお問い合わせください。

質問連絡先情報:

SUPRENTアフターサービス	support@suprent.com
公式ウェブサイト:	www.suprent.com
ソーシャルメディアFacebook:	@suprentinfo
ソーシャルメディアInstagram:	@suprent_official

アマゾンカスタマーサービス:

アマゾンのホームページ-下部に-ヘルプ-さらにヘルプが必要-お問い合わせ

アマゾンの返品または交換:

アマゾンのホームページ-ハンバーガーボタン-メニュー-注文履歴-商品の検索-注文の詳細-商品のサポートが必要-商品の返品または交換