사용설명서 Operating Instructions

CRP-HN10 Fuzzy Series

1.8L(2~10Persons) / 1.8L(2~10인분)



happiness

NO.1 CUCKOO

Electric Pressure Rice cooker/warmer



love

esign

CUCKOO ELECTRONICS CO.,LTD.

CONTENTS

Thank you very much for purchasing "CUCKOO" Electric Rice cooker/warmer

Read all instructions before use. Save these instructions for future reference. The Instruction will be greatly useful when you find any question or face improper operation of function.

저희 쿠쿠 압력보온밥솥을 애용해 주셔서 대단히 감사 드립니다.

이 사용설명서는 잘 보관하여 주십시오. 사용 중에 모르는 사항이 있을 때나 기능이 제대로 발휘되지 않을 때 많은 도움이 될 것입니다.

CONTENTS

BEFORE USING Specifications 4 5~8 Warnings for safety Function operating part 12 WHEN USING Before cooking rice14 MY MODE (Cuckoo Customized Taste Function) ... 18~20 How to use "GABA (Brown rice)" 21~22 How to cook Red Ginseng23 How to cook the MULTI-COOK and NU RUNG JI 24 How to preset timer for cooking25~26 To keep cooked rice warm and tasty 27~29 How to use power saving function 30 BEFORE ASKING FOR SERVICE Check before asking for service 32~34 COOKING GUIDE 65~70 Cooking Guide

목 차

요리안내

나요하기저에

Important safeguards
제품규격 ····································
인전상의 경고······ 35~38
각 부분의 이름 ···································
제품 손질 방법
기능 조작부의 이름과 역할42
기능 표시부의 이상점검 기능42
시용할 때
지 ㅇ르 때 현재시각의 설정43
음성안내 기능의 설정과 해제 ······ 43
취사전 준비사항
맛있는 밥을 드시려면
취사는 이렇게 하십시오
쿠쿠 맞춤밥맛 기능은 이렇게 하십시오 48~50
현미발이는 이렇게 하십시오 51~52
홍삼은 이렇게 하십시오 53
만능찜 누룽지는 이렇게 하십시오54
예약 취사는 이렇게 하십시오55~56
밥을 맛있게 보온하려면 57~59
절전기능은 이렇게 하십시오60
버튼잠금 기능은 이렇게 하십시오 ·····61
고장 신고 전에
고장신고 전에 확인 하십시오62~64
요리안내

IMPORTANT SAFEGUARDS

- 1. Read all instructions before using this appliance.
- 2. Do not touch hot surfaces. Use handles or knobs.
- 3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or Pressure Cooker Body in water or any other liquid.
- 4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children without supervision.
- 5. Unplug from outlet when not in use and before cleaning.

 Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
- 6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
- 8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
- 9. Do not use outdoors.
- 10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- 11. Do not place on or near a hot gas, electric burner, or in a heated oven.
- 12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
- 13. Do not use this appliance for other than its intended use.
- 14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
- 15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
- 16. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
- 17. To reduce the risk of electric shock, cook only in the provided removable container.
- 18. This appliance cooks under pressure. Improper use may result in scalding injury.

 Before operating the unit, properly secure and close the unit. See "Operating Instructions."
- 19. Do not cook foods such as applesauce, cranberries, cereals, macaroni, spaghetti, or other foods. These foods tend to foam, froth, and sputter, and may block the pressure releasing device.
- 20. Before use always check the pressure releasing device for clogging.
- 21. Do not open the pressure cooker until the unit has cooled and internal pressure has been reduced. See "Operating Instructions."
- 22. Do not use this pressure cooker to fry in oil.
- 23. Be sure that handles are assembled and fastened properly before each use. Cracked, broken or charred handles should be repalced.

SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This appliance generates heat and escaping steam during use. Use proper precaution to prevent risk of burns, fires, other injury to persons, or damage to property.

- 1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
- 2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
- 3. Never open the Lid while the unit is in operation.
- 4. Do not use without the inner Pot in place.
- 5. Do not cover the Pressure Valve with anything as an explosion may occur.
- 6. Do not touch the inner pot nor any heating parts, immediately after use. Allow the unit to cool down completely first.

HOW TO USE EXTENSION CORD

Note:

- A. A short power-supply cord (or cord set) is provided to reduce the hazards from entanglement by a longer cord.
- **B.** Extension cord should be used properly.
- C. Extension cord should be used
 - (1) The rated voltage for extension cord should be proper for the appliance.
 - (2) If the appliance is set on the ground, the extension cord should also set on the ground.
 - (3) The cord wires and extension cord should always be arranged to prevent hazards to children.

This appliance has a polarized plug: (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only one way.

If the plug does not properly fit in the outlet, turn the plug over.

If it still does not fit, contact a qualified electrician.

Please, keep this safety feature.

SPECIFICATIONS / 제품규격

Model Nar	me(모델명)	CRP-HN10 Fuzzy Series
Power Su	pply(전원)	AC120V, 60Hz
Power Consum	ption(소비전력)	1315W
	Glutinous Rice(백미)	0.36~1.8L (2~10cups)
	GAMASOT Rice(무쇠솥밥)	0.30~1.0L (2~100up3)
	Rinse Free(세척미)	0.36~1.44L (2~8cups)
Cooking Capacity	Sushi(김초밥)	0.00°1.44L (2°00up3)
	Mixed Ricce(잡곡)	
(취사용량)	GABA(현미/발아)	0.36~1.08L (2~6cups)
	Turbo Giufnous Rice(백미쾌속)	
	Nu Rung Ji(누룽지)	0.36~0.72L (2~4cups)
	Panidge(즉)	0.18~0.36L (1~2cups)
Power Cord Leng	th(전원 코드 길이)	1.0m
Pressure	(사용압력)	78.4KPa(0.8kgf/cm ²)
Weigh	t(중량)	7.5kg
	Width(폭)	40.5cm
Dimension(치수)	Length(길이)	30.1cm
	Height(높이)	29.0cm

HOW SERVICE IS HANDLED

The East and the Central Districts USA

Tel. No. (718) 888-9144

The West and the Central Districts

Tel. No. (213) 687-9828

Canada

TORONTO

Tel. No. 905 707 8224 / 416 878 4561

VANCOUVER

Tel. No. 604 540 1004/604 523 1004

WARNINGS FOR SAFET

- •The following must be observed to use the product safely and correctly to prevent accidental and dangerous situations.
- 'Warning' and 'Caution' are different as follows.



/ Warning

This means that the action it describes may result in death or severe injury.



Caution

This means that the action it describes may result in injury or property damage.



- •This sign is intended to remind and alert that something may cause problems under the certain situation.
- Please read and follow the instruction to avoid any harmful situation.
- Indicates a prohibition
- Indicates an instruction



Warning

Do not

Do not cover the automatic steam outlet or pressure weight with your hand or face.



- · It can cause burns.
- · Especially be careful to keep it out of children's reach.

Do not use the cooker near hot things such as stove, gas stove or direct ray of light.



• It can cause an electric shock, fire, deformation, malfunction, or discoloration. Please check the power cord and plug frequectly.

Do not alter, reassemble, disassemble or repair.

- It can cause fire, electric shock or injury.
- · For repair, contact dealer or the service center.



Do not let the cooker contact any water by sprinkling water on the cooker.

- · It can cause an electric shock or fire.
- · If it contacts water, please separate power cord and contact dealer and service center.

Please pay careful attention against water and chemicals

• It can cause an electric shock or fire.



Use a single socket with the rated current above 15A.

- · Using several lines in one socket can cause overheating resulting in fire. Please check the power cord and plug frequently.
- · Use an extension cord with a rated current above 15A.

Do not pull out the clean steam vent by force.

• When separate it, the steam control vent can be blocked.

Please make sure you clean and check the assembly condition of the clean steam vent before and after use.

- If you have any problem with assembly and cleaning of the clean steam vent, please call a dealer or service center.
- Keep clean the product before and after use.

Do not use damaged power cord, plug or loose socket.

- Please check the power cord and frequently because it can be damage by using circumtance or method. Also, the damaged one can cause and electric shock or fire.
- It can cause an electric shock short circuit or fire.
- · If the plug was damaged, contact dealer or a service center.





WARNINGS FOR SAFETY



Do not

Do not cover the automatic steam outlet or pressure weight with a duster, a towel, or apron, etc.



- · It can cause deformation or a breakdown.
- It can cause an explosion by pressure.

Do not use pots that are not designed for the cooker.
Do not use abnormal pot and do not use without inner pot.



• It can cause an electric shock or fire.

Do not turn the Lock/Unlock Handle to "Unlock" during cooking.

- The hot steam or any hot content within the cooker can cause burns.
- After you finish the cooking do not try to open the cooker by force until the steam is completely exhausted.

Do not place heavy things on the power cord.

It can cause an electric shock or fire.
 Please check the power cord and plug frequently.

Keep the cooker out of children's reach.

• It can cause burns, electric shock or injury.

Remove external substances on plug with a clean cloth.

• It can cause fire. Please check the power cord and plug frequently.

Do not insert metal objects such as pins and wires or any other external substances in the automatic steam exhaust outlet or any other slot.



- · It can cause an electric shock or fire.
- Especially be careful to keep it out of reach of children.

Don't spray or put any insecticide and chemicals.



- It can cause an electric shock or fire.
- If cockroaches or any insects get inside the cooker, please call a dealer or a service center.


Do not put any needle, cleaning pin etc in the ventilator or any gap of the cooker.

- Do not insert cleaning pins to other parts except to the valve hole of the pressure weight.
- It can cause an electric shock or fire.
- Especially be careful to keep it out of reach of children.

Do not open the top cover during heating and cooking.

- It can cause burns.
- If you need to open the lid while cooking, keep pressing the cancel button for 2 seconds and confirm internal steam is released, completely turning the pressure weight over.

Do not bend, tie or pull the power cord by force.



Be careful that both the plug and power cord are not to be shocked by animal attack or sharp metal materials.



• Damages by impact can cause an electric shock or fire.

Please check the power cord and plug frequently.

WARNINGS FOR SAFET





Remember

Do not use on a rice chest or a shelf.

- Do not press the power code between furniture. It can cause an electric shock resulting in fire. Please check the power cord and plug frequently.
- · When using on furniture, automatically released steam can cause damage, fire and an electric shock.

Do not plug or pull the power cord with wet hands.

• It can cause an electric shock.

Clean any dust or external substances off the temperature sensor and inner pot.

• It can cause a system malfunction or fire.

If you use cardiac pacemakers or electrical medical supporting equipment, consult a doctor before using this unit.

· When this unit is working, it can influence any electrical medical equipment.





Do not

Please contact dealer or service center when strange smell or smoke has occurred.

• First pull out the power cord.

Do not use over the maximum capacity.

- · It can cause overflow or breakdown.
- · Do not cook over capacity stated for cooking of chicken soup and congee.

Do not touch the metallic surface of the inner pot and pressure weight after cooking or warming.

- It can cause burns.
- Remaining hot steam can cause burns when you tilt the pressure weight during and after the cooking.

Don't use the cooker near a magnetic field.

· It can cause burns or breakdown.



Please pull out the plug when not in use.

- · It can cause electric shocks or fire.
- · Use AC 120V only.

Use product on a flat surface. Do not use on a cushion. Please avoid using it on an unstable location prone to falling down.



• It can cause malfunction or a fire. Please check the power cord and plug frequently.

Do not use the cooker except for original purposes. It can cause danger and accidents.

Please use the cooker for original purposes.

• It can cause the malfunction or smell.



WARNINGS FOR SAFETY




Do not

Do not drop the cooker or impact.

It can cause malfunction.

After you finish cooking, do not try to open the cooker by force until the steam is completely exhausted.



- the cooker can cause burns.
- Cautiously open the top cover after cooking is done to avoid dangerous steam and burns.

Do not place on rough top or tilted top.

- · It can cause burns or breakdowns.
- · Be careful to install the power cord to pass without disruption.



Don't use for various purposes for inner pot.

- · It can cause deformation of the inner pot
- It can cause to spill the inner coating.

Please call the customer service if the inner pot coating peels off.

- ·Oven coating may wear away after long use.
- When cleaning the inner pot, do not use tough scrubber, metallic scrubber, brush, abrasive metallic etc.




Do not pull up the cooker by holding the inner pot handle.

· If can cause problems and dangerous situations. There are portable handles on bottom right and left side of the cooker. Hold the handles with both hands and move it carefully.



Remember

When you pull out the power plug, don't pull the power cord. Please, safely pull out the power plug.





If power fails during rice cooking, automatic vapor emission device may work, leading to dispersion of contents.

- ·Cook rice with specified amounts of rice and water.
- In particular, water more than specified amount may cause overflowing of contents.
- Cook rice while soft steam cap is mounted

Please clean the body and other parts after cooking.

It can cause alteration or smell.



Be cautious of the released steam of vent.

- · When the steam is released don't be surprised.
- · Please keep the cooker out of reach of children.




Please clean the body and other parts after cooking.

- After cooking chicken soup or, multicook dishes, etc., the smell may be absorbed.
- Clean the oven packing, top heater plate and inner pot every time you cook any of those.
- It can cause alteration or smell.
- Use dry kitchen cleaner or sponge to clean the inner pot, rough scrub or metallic ones are abrasive to the coating.
- Depending on the using methods or user's circumstances inner pot coating might rise.

 Please call the customer service for those cases.
- Please, do not pull out the clean steam vent by force.

Always turn the Lock/Unlock Handle to "Lock" when not in use.





Maintain more than 30cm of distance from the product while using.

A magnetic field can be released from electronic goods.

NAME OF EACH PART



Name of each part



Pressure Weight

Always keep it horizontal. It stabilizes steam inside of the oven. Pressure weight is twisted, it releases steam.

Automatic Steam Exhaust Outlet (Solenoid valve)

When finished cooking or during warming, it release steam automatically.

Lock/Unlock Handle (Set the handle to lock when cooking or warming the rice)

The handle has to turn to 'Lock' for operation.

Clamp Knob

Turn handle to 'Unlock', and then press Clamp knob to open.

Control Panel

Accessories



Manual&Cooking Guide




Rice Scoop



Rice Measuring Cup

Name of each part

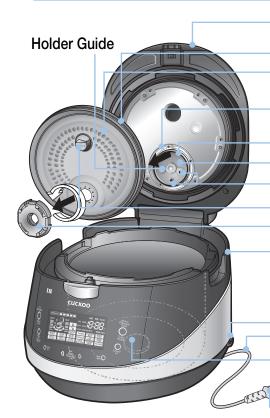

Top Cover Assy

Oven Packing Detachable Cover

Pot Handle

Contrl Plate Packing Cover

Inner Pot(Oven) Set the pot handle on Contrl Plate Packing the slot of the main unit.

Pressure Control Plate

Clean Steam Vent


Handle Holder

Dew Dish

Power Cord

Empty the water out of a dew dish after cooking or keepwarming. Leaving the water in the dew dish results in bad smell.

Rice Scoop holder





Steam Plate



Cleaning Pin

(Attached on the bottom of the unit)

When operating, refer to follow picture



Menu seal



HOW TO CLEAN


- -Unless you clean the detachable cover, it can cause bad smell (After cooling out, unplugging and cleaning it).
- -Body and cover should be cleaned by a dry dish towel. Do not use bentol while using rice cooker, starch can remain. No effect on health.
- -Do not put materials like screws into holes of detachable cover. Look up back cover and front cover.

Detachable cover & Pressure packing

After cleaning detachable cover, put it back on the lid Unless detachable cover is mounted, preset cooking cannot be done. (Alarm may sound while keeping warm.)



Turn the holder counterclockwise, and the cover will be easily separated from the cooker and can be washed.



Wash the cover with cooking purpose neutral detergent and sponge frequently, and wipe off moisture with handkerchief. » Please keep clean the edge of rubber

packing, then the rice cooker last's longer.



When mounting the cover, grab separate cover handle, attach it to hole, and after adjusting holder on top of packing stop tab, fix it by turning it clockwise.




(4) It is easier to attach the cover holder when the lower part of the detachable cover is pressed.

Please fit a rubber packing into the cover plate completely after washing or replacing the rubber packing.



To separate the rubber packing, please pull it out from the cover plate as shown in the picture.



②To put back the rubber packing, please fit it to each of 6 projections and holes as shown in the picture.



holes, please press the rubber packing around the corner completely as shown in the picture.



3) After fitting 6 projections to the
4) Please check that the rubber packing fits into the cover plate completely. If not, steam may be released from the crack between the packing and the plate.




Make sure to clean the clean steam vent after/before use.Do not try to pull out the clean steam vent and safety packing, clean it with care. Make sure the clean steam vent and safety packing are installed completely after/before use. If the steam vent is detached, or not attached completely, please contact customer service.




Wipe the inner, upper, and outer of the inner pot of any external substances.

Do not use tough scrubber. metallic scrubber, brush, abrasive material etc.

*Maintaning a rubber packing cleanly will let the rice cooker last longer.



Wipe the main unit with a wet cloth that has been extracted out of all



Make sure to clean the steam control vent before and after

How to use handle

- 1. Handle must be located at "Lock" during Cooking. The lamp turning on means the top cover is closed perfectly, so you can cook.
- 2. After cooking, the handle must be turned from "Lock" to "Unlock", and then push clamp knob to open. It is hard to open when there is remaining steam in the Inner pot. At the time, twist pressure weight and let the steam out. Do not open by force.
- 3. Handle must be located at "Unlock" when open and close.


 If the lamp does not turn on, it would not operate "Cook" and "Preset" buttons. Make sure the handle is located at "Lock".





If the valve hole of the pressure weight part is clogged, punch it with the cleaning pin

- The valve hole of the pressure weight allowing the escape of steam should be checked regularly to ensure that it is not blocked.
 - If you use the valve hole of pressure weight as it is blocked, the hot steam or any hot content within the cooker can cause injury.
- *Do not use a Cleaning Pin for other use except cleaning the valve hole of the pressure weight.





How to disassemble the pressure weight

- ▶ After the Lock/Unlock handle is locked(located on "Lock") turn the pressure weight counterclockwise while pulling it up, and pull it out.
- ▶ Punch the clogged valve hole with the cleaning pin and reassemble it by turning it clockwise.
- ▶ When the pressure weight is properly assembled, it can freely be turned.

How to clean the soft steam cap

Do not touch the surface of the soft steam cap right after cooking. You can get burned.









Detach the soft steam cap like the picture.

Press the hook in the back, and follow the arrow to Assemble the vent detach and clean. Make sure you clean frequently with a sponge or a neutral detergent.

so that it fits into the groove perfectly.

 After you attach the soft steam cap to fit into the groove, press 'A'part firmly to assemble the soft steam cap into the product.

How to clean dew dish







Separate the drain ditch cap by pushing it down.



Clean the drain ditch cap and dew dish with a neutral



Clean the drain ditch cap with brush kit.



Securely put in the dew dish after cleaning.

How to use cleaning pin and brush kit



 Separate cleaning pin Attached on the bottom of the unit from main body as shown in picture



Separate cover as the arrow points.



Use brush kit. you When using can easily clean a drain use the ditch cap and tough part to clean.



cleaning pin, pull out cleaning pin and make it meet at right angles.



Only use for the valve hole of the pressure weight.

Cautions when top cover does not close perfectly

Do not try to close the top cover by force. It can cause problems.



- 1. Check the inner pot correctly put in the main body.
- 2. To close the top cover, the handle must be located at "Unlock" as shown by the picture on the right.




3. If there are hot things in the inner pot, the top cover would not be closed. At the time twist the pressure weight and let the steam out and then close the top cover.



FUNCTION OPERATING PART

Function Operating Part

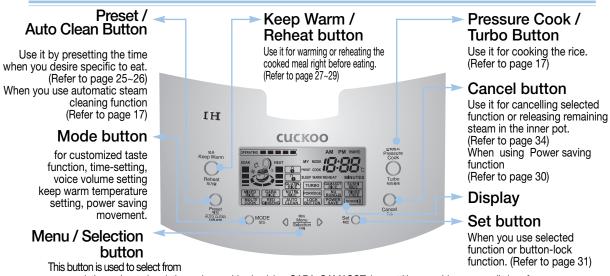

among glutinous rice, turbo glutinous rice, sushi, mixed rice, GABA, GAMASOT rice, nutritious porridge, nu rung ji, rince free, multi cook, red ginseng, and Automatic Sterilization (Steam Cleaning), and to modify preset time. See page 25. For setting selected action with mode button and setting gaba time multi-cook time. See page 22, 24.

- If no operation is done while power cord is plugged, the system is on standby as shown in the screen in the figure.

 (The menu on standby screen, time, voice and customized rice taste stage may differ depending on user configuration.)
- * If cancel button is pressed during function manipulation, the condition turns to standby condition.
- * The button has to be pressed until buzzer sounds. There is a chance that the picture may be different with actual one.

95M HEAT 12:110 - - 122

<Standby condition screen>

Error Code and Possible Cause

##:E

When the product has any problems or used it inappropriately, you can follow the below marks.

If error persistently shows up even in normal using conditions or after taking measure, inquire with customer service.

When the inner pot is not placed into the unit. Temperature sensor problem or fan motor problem. -----<u>-</u> (" F_ "mark " F_P" "mark, and " * "marks blink.) When pressing the Pressure Cook and Timer botton, while the Lock/Unlock handle is on "Unlock" Turn the Lock/Unlock handle "Lock" When boiling only water. When setting preset time longer than 13 hours 13Ka Set the preset time within 13 hours. (Refer to page 25~26) It appears on the display when you press Start button again, or if the cooking has finished and vou've never t da ever turned the handle to 'Unlock'. It can be solved by turning handle to 'Unlock' and then turn to 'Lock'. Ploblem on micom power. Ploblem on sensor. This error message shows up when Pressure Cook / turbo or keep warm/reheat button is pressed while separate cover is not Łco

mounted. Mount separate cover. Note: While keeping warm, alarm will sound and keeping warm and reheating do not work.

This code indicates the function of checking for abnormality of power or product.


VOICE()

HOW TO SET CURRENT TIME / HOW TO SET OR CANCEL VOICE GUIDE FUNCTION

How to set current time

ex)8:25am now

- Press mode button once.
 - ▶ It can be operated by pressing mode button for more than 1sec
 - ► "Current time mode press yes button" after setting current time with selection button.
 - ▶ Menu/Selection button blinks and Mode, Set and Cancel buttons turn ON.
 - ► Colon mark(:) on the sec. screen is blinging once per second.
- 2 set 8 o'clock and 25 minutes as pressing menuselection button.
 - ▶ 1 min up " D " button 1 min down " 🔾 " button
 - ▶ 10 min up or down " D", " () " keep pressing.
 - ► Careful of setting am,pm.
 - ▶ In case of 12:00 it is 12:00 pm.



- ▶ Set button blinks and Mode, Menu/Selection and Cancel buttons turn ON.
- ▶ If it is over 7sec without yes button, setting time will be canceled with voice, "it is canceled due to overtime".

Solt SOAK HEAT & SOAK 8:25

<Standby mode>

8

■About Lithium battery

- •This product contains lithium battery for improving blackout compensation and time. Lithium battery lasts for 3 years.
- When current time is not displayed on the screen, it means the battery is exhausted. It should be replaced.

■What is blackout compensation


- •This product remembers and maintains previous condition and processes. After finishing blackout, it operates immediately.
- •If blackout happens during cooking, the cooking time will be delayed depending on blackout time.
- If the rice became cold because of blackout, warming will be cancelled.

■How to set current time during keep warming mode

- Press Cancel button to cancel keep warm and then press Mode button over 1 time to set current time.
- 2. After setting time, press keep warm button to re-start keep warm.

Voice guide volume control (The function which can control volume and cancel)

To enter this function, press Mode button 2 times. Mode button needs to be pressed for over 1 second at the first time.

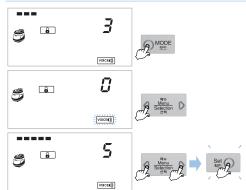

- '3' sign is displayed when entered volume control mode by pressing Mode button 2 times.
- ▶ Menu/Selection button blinks and Mode, Set and Cancel buttons turn ON.

If set value became '0' by pressing button, voice guide function is off.

Press button to set '5', that is the maximum volume sound. When finish setting desired volume, press Mode button to store.

- ▶ Set button blinks and Mode, Menu/Selection and Cancel buttons turn ON.
- ▶ Keep the button pressed, and the button will turn to Continuous.
- ▶ Set to desired voice volume, and press Set button.



BEFORE COOKING RICE


- Clean the inner pot and wipe the water on the inner pot with dry cloth.
 - ▶ Use the soft cloth to wash the inner pot.
 - ▶ Tough scrubber can make the coating come off.
- Measure the amount of rice you want to cook using the measuring cup.
 - Make the rice flat to the top of measuring cup and it is serving for 1 person. (ex: for 3 servings → 3 cups, for 6 servings → 6 cups)
- 3 Wash the rice with another container until the water becomes clear.
- Put rinsed rice into the inner pot.
- According to menu, adjust the water amount.
 - ▶ For measuring, place the inner pot on a leveled surface and adjust the amount of water.
 - ► The marked line of the inner pot indicates water level when putting the rice and water into inner pot together.
 - ▶ About water scale
 - Glutinous rice, mixed rice, Gamasot rice nutritious rice and nu rung ji: Adjust water level to the
 water scale for 'glutinous rice and mixed rice'. Glutinous rice can be cooked to max 10 servings,
 mixed rice to max 8 servings, nutritious rice to max 6 servings and nu rung ji to max 4 servings.
 Gamasot rice can be cooked to max 10 servings.
 - Sushi: Adjust water level to the water scale for 'sushi'. Sushi can be cooked to max 8 servings
 - GABA: Adjust water level to the water scale for 'GABA'. GABA can be cooked to max 6 servings
 - Nutritious porridge: Adjust water level to the water scale for 'nutritious porridge'. Nutritious porridge
 can be cooked to max 2 servings
 - Rince free: Adjust water level to the water scale for 'washed rice'. Washed rice can be cooked to max 10 servings.
 - * Cook in cereals menu, hard cereals like red-bean can be half-cooked depeding on the kind of cereal.
- 6 Put the inner pot into the main body and close the topcover.

Please, check if detachable cover is attached

- ▶ In case detachable cover is not attached, when pressure cook/ reheat button is pressed, "£ca" error could occur and cook/ warm function will not work. Put the inner pot correctly.
- ▶ If there is any external substance on the temperature sensor or the bottom of the inner pot, wipe it off before putting the pot into the main unit.
- Top cover will not close if the inner pot is not placed correctly in the main body (Place the inner pot to the corresponding parts of the main body)
- Connect power plug and turn the handle to "Lock"
 - ▶ The lamp turning on means closed perfectly.
 - ▶ If you press the cook button without setting the Lock/Unlock handle to "Lock", the cooker will not operate. You will hear "beep beep beep" sound and "F∏ !" is shown in the LCD.
 - * If you want to select another function while cooking, push cancel button.
 - If "¿F do" mark shows up in other instance, turn cover handle to "Open" direction, and turn it toward "Lock". Then the cooker will work normally. (The operation of cover lock sensing device can be checked.)
 - Note: This instruction is not applicable if cover handle is turned toward "Open" direction once or more after cooking was completed in previous cooking.





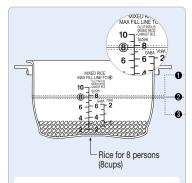

- When you want to cook the old rice or want the soft rice: pour more water than the measured scale
- Q Glutinous Rice for 8 persons (8 cups): Set the water to scale 8 of "GLUTINOUS, MIXED RICE, GAMASOT RICE"
- For overcooked rice : pour less water than the measured scale







FOR THE BEST TASTE OF RICE

Cook tasty rice with Cuckoo pressure rice cooker

For the best taste of rice, check the following points carefully.

Use the measuring cup! Pour the water until water level marking in the inner pot!	 When measuring the rice, Use the measuring cup. (The amount of the rice may vary depending on the quality of the rice.) Place the inner pot on a flat surface and adjust the water to water level in the inner pot. 	If amount of water and amount of rice is different, rice can be crisp or hard.
How to store rice	 If possible, buy a small amount of rice and keep the rice some place where ventilates well and avoid a direct ray of light. It can prevent evaporation of rice moisture. If the rice has been unsealed for long, rice can be dry and stale. In this case, you should pour the half of water more. It's tastier. 	If the rice is too dry, rice can be crisp even though it is measured properly.
Shorten the duration of the "Present" time for better cooking.	If possible, do not use the preset time function when rice is too dry and pour the half of water more.	 If you set "Preset" over the 10 hours or "Preset" dried rice, rice can be crisp or half cooked. Even worse condition, rice can be cooked different tastes each level. If the preset time is longer, the melanoizing effect could be increased.
It's better to set the "warm" time shortly.	It's better to set "warm" less than 12 hours.	If rice is kept warm for a long period of time, rice color will change, as well as odor.
Keep the product clean.	Clean the product often. (Especially clean the top of the cover for external substance.)	Wipe the top cover heating part well for any rice or external substance.



HOW TO COOK

- Choose menu with menu selection button
 - Select button.
 - Each time "Menu" button is pressed, the selection switches in the sequential order, glutinous rice → turbo glutinous rice → gamasot rice → sushi → mixed rice → GABA → nutritious rice → nutritious porridge → nu rung ji → rince free → multi cook → red ginseng → Automatic Sterilization (Steam Cleaning)
 - If the button is pressed, repeatedly, the menu switches continuously in sequential order.
 - In the cases of sushi, mixed rice, GABA and Gamasot rice, the menu remains memorized once each cooking is completed, so for continuous use of the same menu, no selection of menu is required.



ex) In case of selecting Sushi,


►You can hear a voice, Sushi, when you cook Sushi, automatic steam outlet operates while cooking.

Cooking thoroughly

The cooktime remaining on the display is shown from cooking thoroughly. The cook time is different relying on menu.

Careful not to be burned in automatic steam outlet.

ex) In case of 14minutes left.





Start cooking by pressing Pressure Cook button.

- You must turn lid handle to lock before cooking. Then press the pressure Cook/Turbo
- Unless lid handle is not turned to close, you get alarm with " £ "; t", and sound "turn lid handle to lock".





ex) In case of cooking Glutinous.

The end of cooking

- When cooking is completed, warming will start with the voice "cuckoo completed glutinous".
- When cooking ends, stir rice equally and immediately. If you don't stir rice at once and keep it stagnant, rice will go bad and smell bad.
- If the lid handle is not working well, take out the steam completely out of inner pot by turning over pressure weight
- · While cooking, do not press cancel button.





	Cooking time for each menu														
Menu	Glutinous	Turbo Glutinous rice	Sushi	Mixed	GABA	GAMASOT Rice	Nutritious rice	Porridge	Nu Rung Ji	Rince free	Multi cook	Red ginseng	Automatic Sterilization (Steam Cleaning)		
Cooking Capacity			2servings~ 8servings	2servings~ 8servings	2servings~ 6servings	· ·	· ·	tservings~ 2servings	2servings~ 4servings		to cooking by the menus.		see detated ande .		Up to water scale 2
Cooking Time		About13min~ About26 min											About 18 minutes		

^{**} After cooking chicken soup and multi cook etc, the smell may permeate into the unit, use the Unit after cleaning the rubber packing and lid part according to page 10.

^{*} Cooking time by menus may vary to some degree depending on the using environment of the product.

HOW TO COOK

How to use the cooking menu

Glutinous	When you want to have sticky and nutritive white rice.	Sushi	When you want to have a little more sticky and nutritive white rice than Glutinous rice.				
Mixed /Brown	This menu is used to cook by mixing glutinous rice in cereals.	GABA	For cooking germinated brown rice.				
GAMASOT Rice	For cooking GAMASOT	Nutritious Rice	This menu is used to cook nutritious rice.				
Porridge	For cooking germinated brown rice.	Nu Rung Ji (Scorched rice)	Have scorched rice when cooking done.				
Rince free	This menu is used to cook washed rice.	Multi cook	For cooking Nutritious Rice.				
Red Ginseng	This menu is used to steam-cook and decoct zhi mu(susam).	Automatic Sterilization (Steam Cleaning)	This menu is used to eliminate smell soaked after cooking or warming.				
Turbo function for Glutinous rice	 Pressing twice "Pressure Cook/Turbo" twice will switch to quick cooking and shorten the cooking time. (It takes about 17 minutes when you cook the Glutinous rice for 2 persons.) Use this turbo cooking function only for cooking rice for less than 6 persons. (The condition of the rice will not be good for more than 6 persons) The turbo cooking function is allowed up to 6 persons. If you soak the rice in water for about 20 minutes before cooking the rice and then cook the rice in turbo cooking course, the rice will taste good. 						

[»] Please refer to the cooking guide. (page 65~70)

How to do Automatic Sterilization (Steam Cleaning)



Put water until water scale 2, make sure to close and lock the cover.

Method 1, After choosing automatic cleaning menu by pressing "Menu/Selection" button, and then press "Pressure Cook/turbo" button.

Method 2. After choosing automatic cleaning function by pressing "Preset / Auto clean" button twice in standby mode, press "Pressure Cook/turbo" button.

How to cook with Rince free

- 1. Put desired amount of rince free into the cooker body by measuring it with measuring cup, and pour water to meet glutinous water scale. (Rince free can be cooked to min 2 servings to max 10 servings.)
- Stir evenly with scoop so rince free and water may mix properly, lock the cover, and after selecting rince free menu with Menu/Selection button, press Pressure Cook / turbo button.
- » Note: Rince free is cooked only with water poured with no separate washing, so they may experience the fine scorching
 phenomenon(melanoizing).
- ** Note: Do not store rince free in a humid place as it is vulnerable to humidity. In summer or rainy seasons, the rice may go bad or be inhabited by beetles, so when purchasing rince free in the market, buy it by units of small pack.

Melanoizing effect

The cooked rice can be light yellow at the bottom of the oven, because this product is designed to improve pleasant flavor and taste. Especially, melanoizing is more serious at the "Preset cooking" than just "Cooking". It does not mean malfunction.

* When mixing other rice with Glutinous, Melanoizing effect could increase more than "Glutinous cook" setting.



MY MODE (Cuckoo Customized Taste Function)

What is "MY MODE"?

Cuckoo's patented technology based on variable circuit design. User can select the degree of "softness" and "glutinosity & tastiness" to meet a user's desire.


MY MODE Function

- ▶ Longer "SOAK" Time: rice becomes soft and glutinous. (selectable in 4 steps)
- ▶ Longer "HEAT" Time: rice becomes tasty (selectable in 4 steps) [amelanizing will occur]
- ▶ Above 2 functions can be selected both or individually.

How to use "MY MODE"


To enter "Customized Rice Taste Setting Mode", select the menu in which Customized Rice Taste is supported such as glutinous rice, GAMASOT rice, mixed rice, GABA, nu rung ji and rince free, and press the mode button for 1 second or longer. Then, you are going to enter "Customized Rice Taste Setting Mode" while hearing the voice saying "You've entered Customized Rice Taste Setting Mode. Select swelling and heating stage with Selection button, and press Set button."

1 "MENU" setting screen

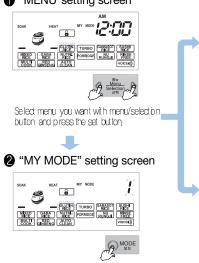

To enter Customized Rice Taste Setting Mode, select desire menu and press Mode button once for 1 second or longer,


 Menu/Selection button will blink, and Set, Pressure Cook/turbo and Cancel buttons will turn ON. 3 Soak time control mode



- Select desired swelling time by pressing the button.
- Set button will blink, and Pressure Cook/turbo, Cancel and Menu/Selection buttons will turn ON.
- 4 Keep heating fine control mode



5 Setting completed screen after



Set up desired oustomized rice taste, and press Pressure Cook/turbo.

▶Pressure Cook/turbo button will blink and Menu/Selection, Set and Cancel buttons will turn ON

D Select desired heating extension time by pressing the button, and press Set button.
►Set button will blink, and Pressure Cook/turbo, Cancel and Menu/Selection button will turn ON.
** Note: For 16 customized rice tastes, refer to the graph for 6 rice tastes, (See page 18.)

The stage mark will show up as in the figure above on the display as much as the time set during setting swelling time and heating maintenance time, and the mark will continue to show up during cooking, reservation, keeping warm and reheating as well.

- ▶ Cuckoo customized taste function is applied to glutinous, GAMASOT rice, mixed, GABA, rince free, Nu Rung Ji
- Set-up time is stored until the next reset. No need to set-up at every cooking.
 During cooking, warming and preset time cooking modes, "soak" and "heat" time cannot be readjusted.

Cautions

- 1.'MY MODE' function may influence scorching or cooking quality. Ensure that cooking time is not changed, by children.
 - Default settings are "SOAK" Time 0 min, "HEAT" Time 0 min.
- 2. "MY MODE" function may elongate cooking time according to set-up time.
- 3. Scorching of rice may occur by longer "HEAT" Time.


MY MODE (Cuckoo Customized Taste Function)



The display of my mode



This is a graph the flavors of 16 types of cuckoo custom-made rice



- *1. The rice becomes solid and glutinous.
- *2. The rice becomes soft and well-raised rice.
- *3. The rice becomes soft and alutinous.
- Note: Rice taste number from 1 to 16 will be displayed on the display window.

Cuckoo customized cooking function


While cooking you can control the heating temperature (both high an low) depending on, your prefenence.

Initialization is set up " get step by step as the case may be.

- High step: for cooking cereals, old rice and soft-boiled rice.
- Low step: for cooking the year's crop of rice.

How to use Cuckoo Customized cooking function

If you press the mode button 5times, customized cooking function is setup. Select heating power by selection button. You can see all means with cuckoo customized cooking function on the display.

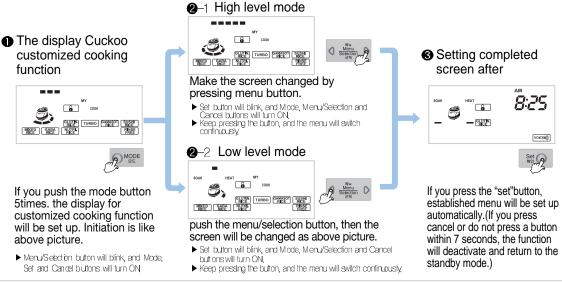

- 1. 'Cuckoo customized cooking function' applies to Glutinous, Turbo cooking, GAMASOT, Sushi, Mixed rice/Brown rice, GABA, Nutrition rice. Rince free collectively.
- 2. Set up the step of customized cooking function to taste. The scorch can occur when cooking in high step.
- 3. Cook is subject to be set differently depending on the percentage of water content and the condition of rice.




MY MODE (Cuckoo Customized Taste Function)

How to set up the function of burning nu rung ji

- ▶ When cooking nu rung ji, please set it up for your taste with function which controls the level of burning nu rung ji.
- ▶ How to set up the enhanced burning nu rung ji (for enhanced burning nu rung ji).



- 1. If you push mode button 7 times at the waiting state, enhanced burning nu rung ji mode will be set up when pushing mode button more than it will be possible to set up.
- 2. When enhanced burning nu rung ji mode is set up, it says "after removed or selection of enhanced burning nu rung ji, push the yes button". At this time, Menu/Selection button will blink, and Mode, Set and Cancel buttons will turn ON.
- 3. If you push the menu/selection button it says "enhanced burning nu rung ji chosen press the yes button after choosing a mode you want. press the yes button".
- 4. Without any button within 7 seconds or cancel button, enhanced burning nu rung ji mode will be canceled and returned to waiting state.
- ► How to cancel the enhanced burning nu rung ji



- 1. If you push mode button 7 times at the waiting state, enhanced burning nu rung ji mode will be set up when pushing mode button more than it will be possible to set up.
- 2. When enhanced burning nu rung ji mode is set up, it says "after removed or selection of enhanced burning nu rung ji, push the set button". At this time, Menu/Selection button will blink, and Mode, Set and Cancel buttons will turn ON.
- 3. If you push the menu/selection button it says, "enhanced burning nu rung ji chosen press the yes button after choosing a mode you want. press the set button".
- 4. Without any button within 7 seconds or cancel button, enhanced burning nu rung ji mode will be canceled and returned to waiting state.
 - ▶ Set up this function as the situation demands because this function is on the condition of cancel for enriched scorch at the first use.



What is Germinated Brown rice?

▶ Brown rice has richer nutrients than polished rice. However, brown rice is rather tough and harder to be digested. By germination, the enzymes in the brown rice are activated, generating nutrients and become more digestible.

Tips to Buy Quality Brown Rice

원산지: 경기용인 품 목:추청 단 위:1,5kg 생산년도:XXXX년산 도정일자:XXXX년XX월XX일






- Check the dates of harvest and pounding.
- ▶ The dates should be within 1 year from harvest, 3 months from pounding.
- 2 Inspect rice with your eyes.
 - · Check that embryo is alive
 - Rice surface should be light yellow and glazing. Whitely stirred up surface, or darkish colored Brown rice is not suitable for germination
 - · Avoid fractured, not fully corned, or empty ear's. Empty ear's may generate odors during germination and bluish- nor corned Brown rice cannot be germinated.

Features of Germinated Brown rice

Germinated Brown rice increases nutrients and enhances taste which is a weak point of brown rice. Germinated Brown rice also improves digestion.

- ▶ Taste will be greatly enhanced.
- ▶Digestive and rich in nutrients.
- Diabetic hormone is generated improving digestion.
- ▶Good as a health food for children or students.
 - Rich with dietary fiber.
- ▶Germinated brown rice has rich GABA (Gamma Amino Butryc Acid)
 - GABA promotes metabolism in liver and kidneys, suppresses neutral fat, lowers blood pressure, promotes metabolism in brain cells - these effects have been proven by medical science.

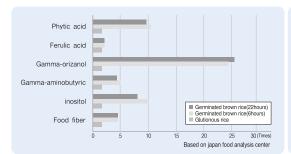

- < Comparison of Germinated brown rice's nutrition and Glutinous rice's (6 hours) nutrition. >
 - ▶ Phytic acid 10.3Times
 - ► Ferulic acid 1.4Times
 - Gamma-orizanol 23.9Times
 - Gammma-aminobutyric 5Times
 - Inositol 10Times
 - ▶ Food fiber 4.3Times



HOW TO USE "GABA (Brown rice)"

Using "GABA" Menu

- In order to promote germination, soak brown rice for 16 hours in water. Method of Pre-germination
 - ▶ Put washed brown rice in an appropriate container, pour sufficient water to soak the rice.
 - ▶ Pre-germination shall not exceed 16 hours. Make sure to wash rice clean with flowing water before using "GABA" menu. Be careful that hard washing may take off embryos which generate the germination.
 - ▶ Unique smell may be generated according to the soaking time of pre-germination.
 - ▶ When pro-germination has been completed, wash the rice and put in inner pot (Oven). Pour appropriated volume of water, and use "GABA" menu.
 - ▶ In summer or hot temperature environment odor may be generated. Reduce germination time and wash clean when cooking.
- Set the Lock/Unlock handle at "Lock", press "Menu "button to select "GABA".



*First setting time 2H(2 Hours)

- ►When the "GABA" is selected, "2H" is indicated in the display.
- ➤ Set button will blink, and Mode, Menu/Selection, Cancel and Pressure Cook/ turbo buttons will turn ON.

Press "Set" and "Menu Selection" buttons to set time.

- Menu/Selection button will blink, and Mode, Cancel and Pressure Cook buttons will turn ON.
- 1.Pressing "Menu Selection" button increases germination time by 2hours.
- 2.Pressing "Menu Selection" button decreases germination time by 2hours.
- 3. GABA" time can be set up by 0,2,4,6 hours.
- If GABA time is set "0" hours, pressing "Pressure Cook" button will start cooking immediately.

 To cook without germination or cooking germinated Brown rice, set the time at "0".

Press "Pressure Cook" button.



- * 3 more hours for germination
- ▶ Pressing "Pressure Cook/turbo" button will begin the "GABA" process, after which. cooking will begin immediately.
- ▶ During "GABA" mode, "厂" indicator will show the remaining time and will be displayed in minutes with the "3H" mark going around clockwise.

Precautions for "GABA" Cooking

- If smaller germ is preferred, omit pre-germination process. Select "GABA" menu, set-up appropriate germination time, and start cooking (nutrient ingredients do not vary significantly by the size of germ).
- 2 During hot seasons, longer germination time may generate odor. Reduce germination time.
- 3 GABA cooking is allowed up to 6 persons.
- City water can be used for germination. However, spring water is recommended. Germination may not be properly performed in hot or boiled water even after cooling.
- **6** Germination rate, germ growth may differ by the Brown rice type, condition or period of storing, etc.
 - Germinated brown rice is sprouted brown rice. Germination rate and growth may differ by the Brown rice type. The brown rice should be within 1 year from harvest, and not long since pounded.
- (See the page 25) In GABA mode, preset on 4H, 5H, 6H may not be possible. If you want to preset the GABA, set up '\[\frac{1}{1}\] '. (See the page 25)
- The taste of rice could be different as depending on a kind of brown rice. Use customized taste function or control the amount of water for your taste. (Refer to page 18~20)


How to Cook Red Ginseng



Red Ginseng Menu Manipulating Method

Red Ginseng menu will guide you to steam-cook and decoct zhi mu(susam).

- Turn cover handle to (pulling) direction, and select Red Ginseng by pressing Menu/Selection button.
 - ▶ Set button will blink, and Menu/Selection, Cancel and Pressure Cook/turbo buttons will turn ON.



When red ginseng is selected, display window will show 12H. (You will hear the voice saying "Press Red Ginseng Set button.")

Initially set to 12H(12 hours)

- ▶ To steam-cook, place 4 cups of water in steaming plate, and put zhi mu(susam) on it.
- ▶ To decoct steam-cooked ginseng, take out steaming plate, and add water again. (See page 67.)
- ▶ To change steam-cooking and decocting time, follow instruction ② using Menu/Selection button.

Press Set button, and set up time with Menu/Selection button.

- ▶ Menu/Selection button will blink, and Cancel and Pressure Cook button will turn ON.
- To increase red ginseng time by 2 hours, press Menu/Selection button.
- To decrease red ginseng time by 2 hours, press Menu/Selection button.
- ▶ To switch continuously, keep pressing the button.
- 3. Red ginseng time can be set by intervals of 2 hours, unit between 2 hours and 24 hours. (Initial set time is configured to 12 hours.)

Press Pressure Cook/turbo button.

- ▶ Pressure Cook/turbo button will blink, and Menu/Selection and Cancel buttons will turn ON.
- ▶ To proceed with steam-cooking or decocting for a set time, press Pressure Cook/turbo button, or press Pressure Cook/ turbo button after pressing Set button.
- ▶ During the progress of red ginseng, 'Cook' mark and remaining time will show up. (A voice will sound, saying "Red ginseng menu is starting.")

How to Choose and Buy Good Zhi Mu(Susam)

- 1. Good zhi mu will have vertical balance of trunk, and be smooth with no scar or scratch.
- 2. Good zhi mu shall have two or at most three roots for balance just as human legs, and shall be flourishing with fine roots evenly.
- 3. Saponin, the main ingredient of ginseng, starts to shape up from 3 year old root and reaches culmination when the root reaches 6 years of age. Thus, 6 year old root offers the best effects, but is expensive, so a purchase of 3 to 4 year old roots through choice in reference to the aforementioned red ginseng purchasing method may also be a good buy.

How to Store Zhi Mu

- 1. Zhi mus are collected and shipped out in the fall when ginseng leaves fall, so fall season is a good period to buy zhi mu for affordable price.
- 2. Zhi mu can be best stored in dry place of low temperature about 3 to 5 degree Celsius, and requires storage in refrigerated condition.
- 3. Mostly, zhi mu is liable to decay in 2 weeks of purchase, so purchase only as much as may be consumed within 2 weeks.
 - Note: Red ginseng function cannot be preset.



HOW TO COOK THE MULTI-COOK AND NU RUNG JI

How to use the Multi-cook and preset the time





Turn the top handle to "Lock," press menu to select the Multi-cook.

- Set button will blink, and Menu/Selection, Cancel and Pressure Cook/turbo buttons will turn ON.
- When selecting Multi-cook, the display indicates cooking time to be 20 minutes.

Press "Set", "Menu/Selection" button to set up the time.

It says after setting cooking time with selection button press the cook button.

▶ Menu/Selection button will blink, and Cancel and Pressure Cook/turbo buttons will turn ON.



Each time you press "Menu/Selection" button, the time increases 5 minutes. (After 90min, each 10min increase.)

▶To switch the functions continuously, keep pressing the button.



Each time you press "Menu/Selection" button, the time decreases 5 minutes. (After 90min, each 10min decrease.)

- ►To switch the functions continuously, keep pressing the button.
- Available setting time is 10 ~ 120 minutes.
 (Please refer to cooking guide for time setting of each menu.)
- If you press the yes button after choosing time you want it says "press cook or tineer button"







Press "Pressure Cook/turbo" button.

- ▶ Pressure Cook button will blink, and Menu/Selection and Cancel buttons will turn ON. Press the Pressure Cook/Turbo button and the Multi-cook will start.If the Multi-cook starts, the display shows the 'cooking mark' and remaining minutes.
- Use the preset time of Multi -cook as following instruction.
 - Check the present time.
- 2. Turn the Lock/Unlock handle to "Lock" and press the "Preset" button.



3. Press the Menu/Selection or set to preset time.



 Press menu selection butt on to select the Multi-cook.



5. Set up the cooking time for pressing menu/selection button.



6. Press the "Timer" or "Pressure Cook".



How to make Nu rung ji

- 1. Turn the Lock/Unlock handle to "Lock" and press menu to select the "Nu Rung Ji." Refer to page 20
- 2. Press the "Pressure Cook/Turbo" button to start cooking.
- 3. When cooking is completed, scoop out the boiled rice. The "Nu Rung Ji" on the jar bottom can be prepared for your taste (e.g. scorched rice tea)
- ▶ "Nu Rung Ji" can be prepared for up to 4 people
- ▶ For "Nu Rung Ji" cooking, set the water volume at "Glutinous" level.
- Not too much washing rice.
- ▶ If you want enhanced burning nu rung ji, cook after soaking rice in water for 30minutes.

HOW TO PRESET TIMER FOR COOKING



How to preset timer for cooking

How to use timer function

Check if the current time and the menu are correct.

- ▶ Refer to page 12 for the time setting.
- ▶ If the current time is not set correctly, the presetting time will also be incorrect.
- ▶ Make sure not to confuse AM and PM.



Press the "Preset/Auto Clean" button.

- ▶ The initial time set at 6:30 am is already programed.
- ▶ "Lock/Unlock" handle should be locked.
- ▶ If you push timer button, timer screen will be blinked.
- ▶ In GABA mode, preset on "["-!" is possible.
- If you want to preset "Timer" while keeping warm, cancel keep
 warm and preset the "Timer"

Preset the time.

- ▶ "Set" button will blink, and "Menu/Selection", "Cancel" and "Pressure Cook/turbo" buttons will turn ON.
- In case of setting up timer while warming 10min increase by pressing " ▷ "button
- ▶ Please set up timer after canceling warming 10min decrease when you press " 〈)" button If you keep pressing, It can be changed continuously.
- * Please be careful not to change from AM to PM.



When preset time is set to AM07:40

4 Select menu with "Menu/Selection" button

- ▶ If you select "Preset" menu with selection button, it says "Please, press the "Pressure Cook/Turbo" button.
- ▶ "Set button" will blink, and "Menu/Selection", "Pressure Cook/turbo" and "Cancel" buttons will turn ON.
- ▶ In case of menu with "Customized Rice Taste" such as glutinous rice, mixed rice, GABA, GAMASOT rice, nu rung ji and rince free, "Mode" button will turn ON.

Press "Pressure Cook / turbo" button.

- "Pressure Cook/turbo" button will blink, and "Menu/Selection" and "Cancel" buttons will be turned ON.
- ▶ It says that preset cook for glutinous is booked
- Preset cook will be completed at the timer
- Once cook is completed with preset time, preset time is stored in the memory. Don't need to set up time again.
- * If a small amount of rice is cooked, cook could be finished earlier than time you set up.









HOW TO PRESET TIMER FOR COOKING

Precautions for preset cooking

- In case of preset cooking
 - ▶ If the rice is old and dry, the result of the cooking may not be good
 - ▶ If the rice is not well cooked, increase the amount of water by about half-scale.
 - ▶ If the preset time is longer, melanoizing effect could be increased.
 - ▶ Washed rice included precipitated starch, scorching may occur in case of preset cook. To reduce scorching, cook washed rice by rinsing in running water or reduce cooking amount.
- The change of preset time
 - ▶ Press "cancel" button for more than 2 seconds and restart it to change the preset time
- In case preset time is shorter than cooking time in the following table, cooking starts immediately
 - ▶ If set time is shorter than presettable time, cooking will start immediately.
- In case the preset time is over 13 hours.
 - ▶ " ⅓⅓₀ " will be displayed and the preset time will be changed to 13 hours automatically.

 ex) If cooking is preset to AM07:00 of the following day at PM5:00 of the day, where preset time is 14 hours,

 " ⅓⅓₀ " will be displayed, and preset time automatically changes to AM06:00. (Preset time is 13 hours)
 - # If the preset time is over 13 hours, it can cause bad smell. The limited preset time is set up less than 13 hours
 because the rice spoils easily during the summer time

 ## If the preset time is over 13 hours, it can cause bad smell. The limited preset time is set up less than 13 hours
 because the rice spoils easily during the summer time.

 ### If the preset time is over 13 hours, it can cause bad smell. The limited preset time is set up less than 13 hours
 ### If the preset time is over 13 hours, it can cause bad smell.
 ### If the preset time is over 13 hours, it can cause bad smell.
 ### If the preset time is over 13 hours, it can cause bad smell.
 ### If the preset time is over 13 hours, it can cause bad smell.
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 ### If the preset time is over 14 hours
 - * When you want to finish presetting P.M 12:00, preset P.M 12:00
 - ** Use this function when you want to finish cooking between 1 hour to 13 hours based on the preset time
 - If you press the set button to check the present time during the preset cooking function, the preset time will be displayed for 2 second.













	Possible time setting for each menu											
Menu Class	Glutinous	Turbo Glutinous Rice	Sushi	Mixed	GABA	GAMASOT Rice	Nutritious Rice	Porridge	Nu Rung ji	Rince Free	Multi Cook	Automatic Sterilization (Steam Cleaning)
Possible time Setting	From (37minutes + My mode) to 13 hours	From 26minutes to 13 hours	From 51minutes to 13 hours		+ My mode)	From (40minutes + My mode) to 13 hours	+ My mode)	From 71 minutes to 13 hours	, ,	+ My mode)	,	From 18minutes to 13 hours

TO KEEP COOKED RICE WARM AND TAST



Having a meal

▶If you want to have warm rice, press the Keep warm/Reheat button. Then "Reheat/Keep" warm function will be started and you can eat fresh rice in 9 minutes.

<Keep warming>



indicates the time elapsed as warming time.

<Reheating>



The lamp blinks and "[] indicator will show the reheat remaining time displayed in minutes with the mark going around clockwise.

<Finishing reheat>



When the reheat finishes with the beep sound, keep warming function will be operated and show the time elasped.

<Present warm temperature>



If you push the "set" button present warming temperature is displayed and push "set" button again. The current time is displayed during warming. Moreover, when you push the button once more, the time elapsed of warming is displayed

- * There is a difference between the outer temperature and inner temperature because it operates with various users and environment.
- * After cooking rice, temperature is much higher than the warming temperature programmed.
- * If you change the present time during warming, see the page 13.
- ▶ The frequent use of the "Reheat" function may cause the cooked rice to be discolored or dried. Use it once or twice per day.
- ▶ If a separate heating appliance or gas burner is used to cook rice, put the cooked rice into the cooker and press the "Keep Warm/Reheat" button to keep the rice warm. At this time, '[]]-1' is shown on the display. (Like this, transferring hot rice to a cold cooker may cause the rice to be discolored or develop an odor)

Cautions for Keeping Warm

It would be hard to open the lid during warming or finished cooking right after, therefore at this time pull the pressure weight aside once and exhaust the steam perfectly.

Make sure the handle must be located on "Lock" during warming or reheating.

It is recommended to evenly stir the cooked rice after cooking. The rice taste is improved. (For a small quantity of rice, pile up the rice on the center area of the inner pot to keep warm)

Do not keep the scoop inside the pot while warming the rice. When using a wooden scoop it can create serious bacteria and odors.

It would be better to warm the rice for less than 12 hours because of odors and color change.

The cooked rice, which cooked by pressure cooker is more prone to changing color than the rice cooked by general cooker.

During warm mode, the rice can arise and turn white and rise. In this case, mix the rice.

The mixed and brown rice cannot be in such good condition as white rice while in warm function due to their characteristics. Therefore do not keep mixed and brown rice in function for a long period of time.


Do not mix small amount of rice or leftovers with the rice under keeping warm. Doing so may cause an odor. (Use a microwave oven for the cold rice.)



TO KEEP COOKED RICE WARM AND TASTY

Controlling method of warming temperature

If the temperature in the oven is not proper, it smells bad and changes rice color even though it is cleaned frequently and boiled up. Temperature needs to be set.

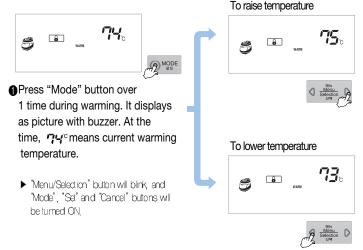

» Note: The reference temperature programmed when the product is shipped may differ from the Instruction.


- - +77°+78°+73°+80°
 - ► "Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
 - $\blacktriangleright \text{To}$ switch the functions continuously, keep pressing the button.
- After setting temperature, press "Mode" select button. Preset temperature will be stored with buzzer sound. (It will be cancelled once press "Cancel" button or after 7 seconds without pressing any button.)
- - ▶"Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
 - ▶To switch the functions continuously, keep pressing the button.

Change of temperature

If you want to change cooking temperature in the standby mode, press "Menu/selection" button over 2 seconds, and press it 2 more times. You can change cooking temperature.

How to operate My Mode function.

Use it while opening the lid when there is too much water or rice becomes too soft.

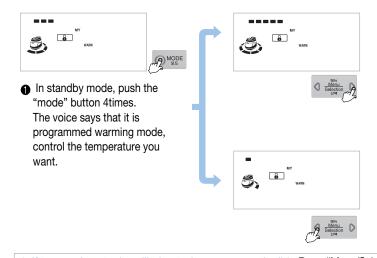

- 2 –1 Press "Menu/selection" button to change as the picture(up)
 - ▶ "Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
 - ▶To switch the functions continuously, keep pressing the button.
- Select the menu you want, then the press the "My Mode" button and set-up time will be automatically entered with a buzzer. (If you press the "Cancel" button or do not press a button within 7 seconds, the function will be cancelled and returned to standby mode.)
- 2 –2 Press "Menu/choice" button as the picture(down)
 - ▶ "Set" button will blink, and "Mode", "Menu/Selection" and "Cancel" buttons will be turned ON.
 - $\blacktriangleright \text{To}$ switch the functions continuously, keep pressing the button.
- 1. If too much water is spilled out when you open the lid: Press "Menu/Selection" button to raise the setting mode.
- 2. If the edge of rice is too soft: Press "Menu/Selection" button to reduce the setting mode.

TO KEEP COOKED RICE WARM AND TAST



How to activate "Sleeping" mode.

▶ When keeping rice warm for a long time, set up the temperature low to prevent the following quality of rice: smelly, dry, change of color; from PM10:00 ~ AM 04:00.

How to set up



- 1. Hold "the mode" button for one second, then press the "mode" button 6times to set up sleeping mode. If sleeping mode is not shown, keep on pressing the "mode" button until it is heard or displayed.
- 2. When you are in sleeping mode, it says "After selecting or canceling sleeping mode, press the set button." At this time, Menu/Selection will blink, and the Mode, Set, and Cancel will turn on.
- 3. Press the "Menu/Selection" button until you hear or see "Sleeping mode", then Press set. You will see nothing surrounding the rice cooker on the screen.
- 4. In the Sleep/Warm mode, if you press the Cancel button, the Voice message will state: "Time is over. The function setting has been canceled." If no button is pressed for more than 7 seconds, you'll return to the Standby mode.

How to release



- 1. Hold "the mode" button for one second, then press the "mode" button 6times to set up sleeping mode. If sleeping mode is not shown, keep on pressing the "mode" button until it is heard or displayed.
- 2. When you are in sleeping mode, it says "After selecting or canceling sleeping mode, press the set button." At this time, Menu/Selection will blink, and the Mode, Set, and Cancel will turn on.
- 3. Press the "Menu/Selection" button until you hear "Sleeping mode has been canceled", then Press set. You will see rings around the rice cooker on the screen.
- 4. In the Sleep/Warm mode, if you press the Cancel button, the Voice message will state: "Time is over. The function setting has been canceled." If no button is pressed for more than 7 seconds, you'll return to the Standby mode.
- ▶ If you need to keep the rice warm during sleeping, do not use this function. This function makes the rice cooler than normal. In summer, the rice can be spoiled and may smell bad because of high temperature. If possible, do not use the "Custom-made warming" mode while sleeping.
- ▶ This function is set up as cancel state.

When odors are rising during the warming mode

- ▶ Clean the lid frequently. It can cause bacteria and odors.
- ▶ Even though exterior looks clean, there might be germs and it can cause odor so please be sure to use automatic sterilization (steam cleaning) menu for cleaning. Clean the inner pot completely after automatic cleaning function is done. (refer to 17)
- ▶ After you cook soups and steamed dishes, clean the inner pot properly to prevent rice from smelling.



HOW TO USE POWER SAVING FUNCTION

What is power saving of "Standby" mode?

▶ A little electricity is wasted if power cord is not plugged in. It is called manual way as standby electric power. The power saving of "Standby" mode is technology which minimises electricity consumption.

Manual Method

► How to start power saving Push Cancel button for 3seconds at waiting state Saving power function is set up.



▶ How to end power saving

method 1) Push any button then it will be returned to waiting mode.

method 2) If lid handle is turned to open or close, power saving mode will be canceled and back to waiting state.



Automatic Method

If the standby time is chosen as a number without "0" at the automatic power saving mode, the automatic saving power function will be operated.

If you move lid handle or push any button before passing waiting time, the waiting time which is reduced will go back to the setting.

How to set up



- If you "Push" mode button 8times at the standby state, automatic power saving mode is set up.
- 2. When automatic power saving mode is set up, it says that this is automatic power saving mode. Press the "Set" button after selecting waiting time.
- 3. If you select '0'minute with "Menu/Selection" button. automatic power saving will be canceled. After setting up waiting time you want, press the "Set" button.
- 4. Without pressing any button within 7seconds or pushing "Cancel" button. Automatic power saving function will be canceled and back to waiting mode

HOW TO LOCK BUTTONS



How to lock buttons

▶ Lock can be set for touch button to prevent malfunction during cleaning with touch button or by children touch.

▶ Setting Method



- Button will be locked if "Set" button is pressed for 3 seconds or longer during cooking, presetting, warming, reheating or in standby condition.
- 2. When button is locked, a voice will sound saying "Button lock is selected." At this time, button lock is displayed on the screen.

Setting Method



- To cancel button lock, press "Set" button for 3 seconds or longer on locked the button.
- 2. "Lock" sign on the display disappears when button lock is cancelled, a voice will be saying "Button lock is cancelled."

* Note: Any button other than "Set" button is pressed while button lock is set, buzzer will sound.

** Note: Desired function can be set after cancelling button lock by pressing "Set" button for 3 seconds or longer.

** Note: Button lock function is cancelled automatically when the power is off even though the button lock function is already set.

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When the rice is not cooked.	Pressure "Cook/Turbo" button is pressed?	•Press the "Pressure Cook / turbo" button once. And check "[_]"sign on the display.
	· Is there power cut while in cooking?	•Re-press the "Pressure Cook/Turbo" button.
When the rice is not well cooked.	 Did you use the measuring cup for the rice? Did you put proper amount of water? Did you rinse the rice before cooking? Did you put rice in water for a long time? Is the rice old or dry? 	•Refer to page 14~15 •Add water about half the notch and then cook.
Bean(other grains) is half cooked.	•Is bean (other grains) too dry?	 Soak or steam beans and other grains before cooking in the pressure cooker in order to avoid partially cooked beans or grains. Beans should be soaked for-2-minutes or steamed for-2-minutes prior to cooking, depending on your taste.
Rice is too watery or stiff.	• Is the menu selected correctly?	•Select the correct menu.
	• Did you properly measure water?	• Properly measure water.
	Did you open the top cover before cooking was finished?	•Open the top cover after cooking finished.
When the water overflows.	Did you use the measuring cup?Did you use proper amount of water?Is the menu selected correctly?	•Refer to page 14~15
When you smell odors while warming.	 Did you close the top cover? Please check it the power cord is plugged. Did it warm over 12 hours? Is there any other substance such as rice scoop or cold rice? 	 Close the top cover perfectly. Always keep the power on while warming. As possible, keep warming time within 12 hours. Don't warm rice with other substance.
"E","E_P" signs show up. " ※ " signs show up.	Temperature sensor or fan motor does not work properly.	•Unplug the power cord and call the Service center.
Warming passed time mark blinks during keeping warm	•24 hours has not passed yet after keeping warm	•This function alarms if the rice remained warm for more than 24 hours.
Rice has gotten cold or a lot of water flow during keeping warm	Keeping warm was set in "Sleeping" mode	•Keep warm after cancelling or setting "Sleep Keeping Warm" mode depending on the necessity
If " <i>E do</i> " sign is appears.	 It shows on the display when pressing "Start" button again, or when the cooking has finished and you've never turned the handle to 'Unlock'. 	It can be solved by turning handle to 'Unlock' and then turn to 'Lock'.
" $\mathcal{E}_{\mathcal{C}\mathcal{Q}}$ " sign shows up	Detachable cover is not mounted	•Mount detachable cover. (See page 10) •If "£ co" sign is displayed continuously even though you already installed detachable cover, please contact customer service.
Alarm sounds or reheating does not work while keeping warm	Detachable cover is not mounted	Mount detachable cover. (See page 10)

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following			
When the button cannot operate with " [_]"	Is the inner pot inserted? Check the rated voltage?	Please insert inner pot.This product is 120V only.			
When the Pressure "Cook/Turbo" Timer button does not operate with "E [] "	Did you turn the Lock/Unlock Handle to "Lock" Is "pressure" lamp on?	Please turn the "Lock/Unlock" handle to "Lock".			
When the rice is badly sticky.	Is there any rice or any other alien substance on the temperature sensor or the bottom surface of the inner pot?	Clean all the alien substance on the temperature sensor or the bottom surface of the inner pot.			
When " E []] " is showed on the LCD	Check the rated Voitage?	• Cut the power and contact customer service. • It is normal to get " ₭ 毋子" when putting only water. • This is only for 120V.			
When the time cannot be preset.	Is the current time correct?Is AM or PM set properly?Did you set the reservation time over 13 hours?	 Set the current time. (Refer to page 13) Check the AM and PM. Maximum reservation time is 13 hours. (Refer to page 25~26) 			
When you smell after and before cooking?	Did you clean it after cooking?	Please clean it after cooking.			
When the top cover cannot be closed.	 Is the inner pot correctly inserted in the main body? Is the Lock/Unlock handle on the top cover set to "Lock"? Is there hot food in the inner pot? 	 Please put in the inner pot perfectly. Please turn the "Lock/Unlock" handle to "Lock". Pull the pressure handle to aside once. 			
When " ξ_{-u} ", " : Π_{UU} " are shown on the LCD by turns.	• Micom power is out.	Please cut the power and contact customer service.			
When " £ _ ᢓ ", " ːロロ " are shown on the LCD by turns.	The sensor is broken.	Please cut the power and contact customer service.			
" "";" " sign is displayed during the cooking, warming/reheating, or preset process is activated.	Is there inner pot in the product?	Please insert inner pot If the sign continuously displayed, cut the power and contact customer service.			
" ("-"" or " ("-"" " mark shows up during the product operation		This function checks to see if power or product has abnormality. If the mark shows up continuously, contact customer service.			

CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When cannot turn to "Unlock".	 Did you turn the "Lock/Unlock" handle while cooking? Did you turn the "Lock/Unlock" handle before exhausting steam perfectly? 	• Don't open the top cover while cooking. If you want to open top cover while cooking, press the "Cancel" button more than 2 seconds and exhaust the steam. • Pull the pressure handle to aside once and exhaust the steam perfectly.
When the top cover cannot open although the Lock/Unlock handle is turned to "Unlock".		Because of the pressure. Pull the pressure handle to aside once and exhaust the steam perfectly.
When the steam exhausted between the top cover.	Is there an external substance on the packing? Is packing too old?	 Clean the packing with duster. Keep the packing clean. If the steam is exhausted through the top cover, please power off and contact the service center and dealer. Packing life cycle is 12 month, please replace the packing per 1 year.
When the "Cancel" button does not operate while cooking.	Is the inner pot hot?Is currently the setting to lock mode?	 Keep pressing the "Cancel" button for 2 seconds for safety reason if you want to cancel while cooking. Be careful of hot steam emission or hot contents spattered from the automatic steam outlet during cancellation. Please press "Set" button for over 3 seconds to release.
When you hear weird noises during cooking and warming	Is there a wind blowing sound when cooking the rice?Is there a "Chi" sound when warming the rice?	 This is the sound of the fan motor to cool the internal parts. This is normal. The "Chi" sound during the warming process is the sound of IH cooker operating. This is normal.
Brown rice is not germinated properly	Does the amount of rice exceed the specified maximum capacity? Is the brown rice too old?	 Put the specified maximum capacity of brown rice. Old rice or contaminated rice may not be germinated properly. (Refer to page 22)

안전상의 경고



- ●'안전상의 경고'는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
- '안전상의 경고'는 '경고'와 '주의'의 두가지로 구분되어 있으며 '경고'와 '주의'의 의미는 다음과 같습니다.



피하지 않을 경우 사망이나 중상을 초래할 수 있는 잠재적인 위험상황



- 이 기호는 특정조건하에서 위험을 끼칠 우려가 있는 사항에 대하여 주의를 환기시키는 표시입니다.
- •위험 발생을 피하기 위해 주의깊게 읽고 지시에 따라 사용하십시오.



피하지 않을 경우 경상을 초래할 수 있는 잠재적인 위험상황




• 이 기호는 어떤 행위를 '금지'하는 표시입니다. •이 기호는 어떤 행위를 '지시'하는 표시입니다.




(금지)


사용 중 압력추 및 자동증기배출구에는 손과



- 증기는 매우 뜨거우므로 손이나 얼굴을 가까이 하지 마십시오.
- •특히 어린이의 접근을 막아 주십시오.

제품을 직사광선이 쬐는 곳. 가스레인지, 전열기구 등의 가까이에서 사용하지 마십시오





• 오디오, TV 등과 같은 전자제품과 2m이상 거리를 유지하십시오.

제품을 분해하거나 개조하지 마십시오

- •화재 및 감전의 원인이 됩니다.
- 서비스기사 이외의 사람이 분해 하거나 수리하지 마십시오. 수리 및 고장 상담은 서비스센터로 문의하여 주십시오.

전원코드나 전원플러그가 파손되었거나 콘센트가 흔들릴 때는 사용을 중지하고. 고객상담실로 문의바랍니다.



- •제품 사용 중 사용상의 부주의로 전원 코드의 피복이 벗겨지거 나 찍힐 경우 화재 및 감전의 원인이 될 중 있으니, 수시로 전원 코드와 전원플러그, 콘센트의 상태를 꼭 확인하십시오.
- 전원코드나 전원플러그가 파손된 경우에는 위험이 생기지 않도 록 하기 위하여 제조자나 그 판매점 또는 유자격 기술자(서비스 기사)에 의해 코드 교환을 하십시오
- 반드시 지정된 서비스 센터에서 수리하시기 바랍니다.

씽크대. 목욕탕 등 제품에 물이 들어 갈 수 있는 곳이나 화학성 물질이 있는 곳에서는 사용하지 마십시오



- •전기 누전 및 감전의 위험이 있습니다.
- 먼지가 많은 곳이나 화학성 물질이 있는 곳에서는 사용하지 마십시오.
- •제품에 물이 들어 갔을 경우에는 서비스센터로 꼭 문의 하십시오.

클린 스팀 벤트를 잡아당겨 강제로 빼지 마십시오

•분리시 증기 배출구가 막힐 위험이 있습니다.

사용전 후 클린 스팀 벤트의 결합 상태 및 이물질 유무를 확인해 주십시오.

- 클린 스팀 벤트가 빠져나갔거나 결합 상태가 불량할 시 서비스 센터에 문의 하십시오.
- •사용전·후 청결을 유지하여 주십시오.

반드시 정격 15A 이상의 교류 120V 전용 콘센트에서만 사용해 주시고 한 콘센트에 여러 제품의 전원플러그를 동시에 꽂아 사용하지 마십시오.



- 여러 제품과 함께 사용하거나, 다른 기구에 사용하면 발열 및 발화, 감전의 원인이 됩니다. 수시로 콘센트 상태를 꼭 확인하십시오
- 전원플러그에 이물질이나 물기가 묻어 있는 경우에는 잘 닦은 다음 사용하십시오.
- 연장코드도 15A이상의 것을 사용하여 주십시오.

제품을 씽크대에 넣고 닦거나 제품 내부에 물을 넣지 마십시오.

- •전기 누전 및 감전, 화재의 원인이 됩니다.
- 제품에 물이 들어간 경우에는 사용을 중지하고 전원플러그를 뽑은 다음 서비스센터로 문의하여 주십시오.



안전상의 경고



(금지)

압력추 및 자동증기배출구를 막거나 증기구에 행주나 장식용 덮개, 기타물건을 올린 채 사용하지 마십시오.



- 압력에 의한 폭발의 위험이 있습니다.
- 본체의 변형, 변색 및 고장의 원인이 됩니다.

변형된 내솥이나 전용 내솥이 아닌것은 사용하지 마십시오



- 내솥이 가열되어 이상작동 및 화재의 원인이 됩니다.
- 내솥을 떨어뜨렸거나 변형된 경우에는 서비스센터로 문의해 주십시오

내솥 없이 사용을 하지 마십시오.

- 감전 및 고장의 원인이 됩니다.
- 내솥이 없는 상태에서 쌀이나 물을 넣지 마십시오.
- 쌀이나 물이 들어갔을 경우에는 제품을 뒤집거나 흔들지 마시고 서비스센터로 꼭 문의 하십시오

취사나 요리가 진행중일 때 뚜껑 열림 버튼을 누르 거나, 뚜껑 결합 손잡이를 절대" 🔁"(열림)방향으로 돌리지 마십시오.

- 강제로 열 경우 압력으로 인해 화상 및 폭발의 위험이 있습니다.
- 취사나 요리 완료 후 증기가 완전히 배출된 상태에서 뚜껑 결합손잡이를 작동시키십시오

전원코드 위에 무거운 물건을 올려 놓거나 코드가 제품바닥에 눌러지지 않도록 주의해 주십시오.

• 화재 및 감전의 원인이 됩니다. 수시로 전원코드 상태를 꼭 확인하십시오.

내솥 없이 찜판, 금속성 물질 등을 넣거나, 넣어서 사용하지 마십시오. (특히 어린이 주의)

• 감전 및 화재의 원인이 됩니다.



제품 내에 살충제나 화학물질 등을 뿌리거나 투입하지 마십시오

- 화재 발생의 우려가 있습니다.
- •제품내 바퀴벌레나 벌레 등이 들어갔을 경우는 서비스센터로 문의해 주십시오

흡·배기구 또는 틈 사이에 바늘, 청소용 핀 금속물 등이물질이 들어가거나 막히지 않도록하십시오.

- 감전 및 화재의 원인이 됩니다.
- •청소용 핀을 증기배출구 청소외에 제품의 틈새나 구멍에 넣지 마십시오.

취사나 요리가 진행 중일 때 절대로 뚜껑을 열지 마십시오.

- 취사나 요리가 진행중일 때는 압력에 의해 뚜껑이 열리지 않습니다.
- 강제로 열면 화상 및 폭발의 위험이 있습니다.
- 취사 또는 요리가 진행 중일때 부득이하게 뚜껑을 열어야 할 경우 취소 버튼을 약 2초간 누른 후 내부압력이 완전히 제거 되었는지 확인을 하고 열어 주십시오.

전원코드를 무리하게 구부리게나. 묶거나. 잡아당기지 마십시오

• 감전이나 쇼트로 인해 화재의 원인이 될 수 있습니다. 수시로 전원코드 상태를 꼭 확인하십시오.

플러그 및 전원 코드부를 동물이 물어 뜯거나 못과 같이 날카로운 금속물체로부터 충격을 받지않도록 주의하여 주십시오



• 충격으로 인한 파손은 합선 감전 화재 등의 원인이 됩니다. 수시로 전원코드와 전원 플러그 상태를 꼭 확인하십시오

어린이 혼자 사용하거나 어린이가 만질 수 있는 장소에 제품을 두지 마십시오.

• 고열에 화상을 입거나 감전이 될 수 있습니다.

전원플러그에 묻은 이물질은 물기가 없는 천으로 깨끗이 제거하여 주십시오.

• 화재의 원인이 됩니다. 수시로 전원 플러그 상태를 꼭 확인하십시오.

안전상의 경고





(지시)

쌀통 및 다용도 선반 등에 제품을 놓고 사용하지 마십시오.

- 전원코드가 틈새에 눌러져 화재 및 감전의 원인이 됩니다. 수시로 전원코드 상태를 꼭 확인하십시오.
- 취사 또는 요리중 증기가 배출될 때 쌀통 및 다용도 선반에 의해 제품의 손상, 화재, 감전의 원인이 됩니다.

인공심장 박동기 및 전기를 사용하는 의료보조장치를 사용하는 분은 본 제품을 사용하기 ' 1 전에 의사와 상담하여 주십시오.



• 본 제품의 작동시 인공심장 박동기 및 전기를 사용하는 의료보조기구의 작동에 영향을 미칠수가 있습니다.

온도감지기. 내부 또는 내솥 주위의 이물질은 반드시 제거한 후에 사용하십시오.

• 온도감지를 정확히 못하게 되므로 내솥이 가열되어 이상작동 및 화재의 원인이 됩니다.

전원플러그를 콘센트에서 꽂거나 뺄때는 손의 물기를 반드시 제거한 후 전원플러그를 잡고 꽂거나 빼어 주십시오.

- 젖은 손으로 전원플러그를 뽑으면 감전의 원인이 될 수 있습니다
- 무리하게 당겨 뽑으면 전원코드에 이상이 발생되어 누전 및 감전이 될 수 있습니다.



(금지)

사용 중에 이상한 소리나 냄새 또는 연기가 나면 즉시 전원플러그를 뽑고 내부 압력을 완전히 제거후 서비스센터로 문의해 주십시오.

최대 용량 이상으로 내용물을 넣고 사용하지 마십시오.

• 밥물 넘침이나 취사 불량 등 고장의 원인이 됩니다.

사용 중이거나 사용직후에는 내솥. 내부 및 압력추 등은 뜨거우므로 만지지 마십시오

- 고열에 의해 화상을 입을 수 있습니다.
- 압력추가 젖혀져 증기에 의해 화상을 입을 수 있습니다.

뚜껑 위에 자성을 지난 물체를 올려 놓거나 자성이 강한 물체 근처에서 사용하지 마십시오.

•제품 고장 및 기능이 정상적으로 작동되지 않을 수 있습니다.



교류 120V 이외에는 사용하지 마십시오.

- 감전, 화재의 원인이 될 수 있습니다.
- 제품이 정상적으로 작동을 하지 않습니다.

제품을 전자레인지 및 싱크대 스테인레스 위에 올려놓거나 제품밑에 깔판, 방석 전기장판, 철판 은박지 등을 놓고 사용하지 마십시오.



• 화재 및 변형의 원인이 됩니다. 수시로 제품 상태를 꼭 확인하십시오.

취사, 보온, 지정된 메뉴 이외의 물끓임, 식혜, 미역국, 카레, 기름으로 튀기는 요리 등 다른 용도로 사용하지 마십시오.

• 고장 및 냄새의 원인이 됩니다

사용하지 않을 때는 전원플러그를 콘센트에서 뽑아 주십시오.

• 절연 성능 저하로 인해 감전 누전 화재의 원인이 될 수 있습니다.





안전상의 경고



(금지)

내솥을 다른 용도로 사용하거나 불위에 올리지 마십시오.

• 내솥의 변색 및 손잡이의 변형으로 제품에 이상이 발생할 수 있습니다.

경사진 곳이나 울퉁불퉁한 곳에서는 사용하지 마십시오.

- 화상 및 제품 고장의 원인이 됩니다.
- 전원코드에 손이나 발, 기타 물체가 걸려 제품이 떨어지지 않도록 주의 하십시오.



내솥 손잡이를 잡고 제품을 들어 올리지 마십시오

- •내솥 손잡이를 잡고 들어 올릴 경우 뚜껑이 열려 위험합니다.
- 제품 바닥 좌우측에 있는 이동용 손잡이 홈을 양손으로 들어 올려 안전하게 사용하십시오.

내솥 코팅이 벗겨질경우 서비스센터로 문의해주십시오.

- 제품을 장기간 사용할 경우 내솥 코팅이 벗겨질 수 있습니다.
- 거친 수세미나 금속성 수세미로 내솥을 씻을 경우 코팅이
 벗겨질 수 있으니 반드시 주방용 중성세제와 스폰지로 씻어 주십시오

취사나 요리 완료 후 또는 보온 시 뚜껑 결합 손잡이가 잘 돌려지지 않을 때 강제로 돌리지 마십시오.

- 화상 및 제품손상의 원인이 됩니다.
- 압력추를 젖혀 증기가 완전히 배출되었는지 확인 후 뚜껑결합손집이를 돌려주십시오.
- 취사나 요리 완료후 뚜껑을 열때 증기에 의한 회상의 우려가 있으므로 주의하십시오.

제품에 심한 충격을 주거나 떨어뜨리지 마십시오.

• 제품 고장 및 안전상의 문제가 발생할 수 있습니다.

1 주의

(지시)

취사 또는 요리 진행 중 자동증기 배출시 주의하십시오.

- 증기가 고속으로 배출되면서 '취익' 하는 소리가 나므로 놀라지 않도록 주의하십시오
- 특히, 어린이의 접근을 막아 주십시오. 화상의 원인이 됩니다.

취사중 정전이 되면 자동증기 배출장치가 작동하여 내용 물 바산의 우려가 있습니다.

- 정해진 쌀 및 물의 양으로 취사해 주십시오
- •특히, 물의 양이 규정보다 많으면 내용물 넘침의 원인이 됩니다.
- 소프트스팀캠이 장착된 상태에서 취반을 하십시오.

전원플러그를 뽑을때는 전원코드를 잡지 마시고 꼭 전원플러그를 잡고 뽑아주십시오



• 전원코드에 충격이 가면 감전 및 화재의 원인이 될 수 있습니다.

취사나 요리가 끝난 뒤에는 반드시 본체에 고인물을 닦아 주십시오.

- 이상한 냄새 및 변색의 원인이 됩니다.
- 본체의 물받이에 고인 물을 닦아 주십시오

사용중에는 제품 본체와 30cm이상의 거리를 유지하여 주십시오

• 전자제품에서는 자기장이 방출될 수 있습니다.

요리 후에는 반드시 청소해 주십시오

- 닭찜, 갈비찜 등의 요리 후 취사 및 보온을 하게되면 밥에 냄새가 배어들 수도 있습니다.
- 내솥뚜껑 세척 시 거친 수세미나 금속성 수세미를 사용할 경우 코팅이 벗겨질 수 있으니 반드시 스폰지 또는 물기를 제거한 행주로 닦이주십시오.
- 40~41쪽을 참조하여 내솥, 분리형 커버, 패킹 등을 깨끗이 닦아 낸 후 사용하십시오.
- 단, 클린 스팀 벤트 패킹은 강제로 빼지 마십시오.
- 제품의 사용환경이나 방법에 따라 내솥뚜껑의 코팅이 벗겨질 수 있습니다. 이런경우 서비스센터로 문의해 주십시오.

전원플러그를 뽑더라도 뚜껑 결합 손잡이를 항상 "➡"(잠김)방향으로 돌려 주십시오.


- 취사나 요리 완료 후 내솥이 뜨겁거나 뜨거운 밥이 남아 있을 경우 전원플러그를 뽑더라도 뚜껑을 닫고 뚜껑 결합 손잡이를 "읍"(잠김)방향으로 돌리지 않으면 내부압력에 의해 제품의 변형이나 손상의 원인이 됩니다.
- 취사, 요리 및 보온 중에도 반드시 뚜껑 결합 손잡이를 "음 "(잠김) 방향으로 돌려서 놓고 사용해 주십시오.



각 부분의 이름



각 부 명칭(외부)

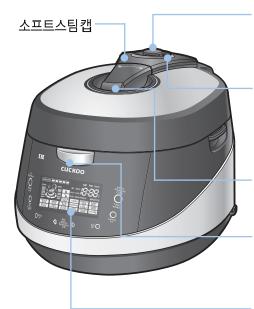

압력추

취사나 요리 전 압력추를 수평으로 맞추어 주십시오. 내부의 압력이 일정하도록 조절하며 젖하면 수동으로 증가배출이 됩니다.

자동 증기 배출구

취사나 요리가 끝나거나 보온시 자동으로 증기를 배출시켜 줍니다. 필요할 경우 취소버튼을 눌러(2초) 증기를 배출 시킬 수도 있습니다.

뚜껑 결합 손잡이

취사나 요리 시 손잡이 표시 (🗍)가 省 "(잠김) 위치로 되어야 작동이 됩니다.

뚜껑 열림 버튼

뚜껑 결합 손잡이를 "┛"(잠김)에서 "┛"(열림)으로 돌린 후 뚜껑 열림 버튼을 누르면 뚜껑이 열립니다. (취사나 요리 중에는 뚜껑 열림 버튼을 누르지 마십시오)

내솥

넣습니다.

내솥을 본체에 똑바로

기능조작부 및 표시부

부속품 안내



사용설명서 및 요리안내






계량컵

(찜판은 "요리인내"를 참조하여 사용하십시오)




청소용 핀·브러쉬 킷 (실물은 본체 바닥면에 부착되어 있습니다. 41쪽을 참조하여 사용하십시오)

※ 조작시 참고 하십시오



메뉴 씰

각 부 명칭(내부)

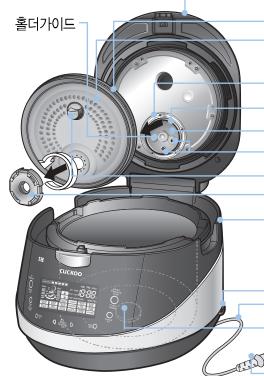

뚜껑

패킹 분리형커버 내솥 손잡이 안전패킹커 버

안전패킹

압력조절판

클린 스팀 벤트

분리형커버 손잡이 홀더

물받이

보온이나 취사 조리 후에는 항상 물받이에 있는 물을 버려 주세요, 물받이에 밥물이 고여 있을 경우 냄새의 원인이 됩니다.

전워코드 온도감지기

전원플러그





제품 손질 방법


- 청소를 잘하지 않으면 보온 중 냄새가 나는 원인이 됩니다. 특히 뚜껑부는 자주 청소해 주십시오. (전원플러그를 빼고 본체의 열이 식고 난 후 손질하십시오.)
- 본체·뚜껑은 물기를 제거한 행주로 닦아 주십시오. 벤젠, 신나 등은 사용하지 마십시오.
- 사용 중 분리형커버나 내솥내부에 밥물이 묻어 전분막이 생기는 수가 있으나. 위생상 아무런 영향이 없습니다.

분리형 커버 및 압력패킹

분리형커버 세척 후에는 반드시 뚜껑에 장착해 주십시오. 분리형커버가 장착되지 않으면 취사, 예약취사가 되지 않습니다. (보온시 경고음 발생)



① 홀더를 반시계방향으로 돌리면 밥솥과 쉽게 분리되어 세척이 가능합니다.



② 주방용 중성세제 및 스폰지로 자주 세척해 주시고 물기를 제거한 행주 로 닦아 주십시오

※압력패킹의 내솥 접촉면에는 밥알 등이 붙지 않게 닦아 주시고 청결히 관리하 면 제품을 더 오래 사용할 수 있습니다.



③ 장착 시에는 분리형커버 손잡이를 잡고 뚜껑에 부착한 후 홀더를 돌기 부위의 홈에 맞춘 후 시계 방향으로 돌려 고정 하십시오




④ 그림과 같이 분리형 커버의 하단부 를 뚜껑쪽으로 누른 상태에서 홀더 를 결합하시면 좀더 쉽게 사용하실 수 있습니다

압력패킹의 세척이나 교환으로 분리 후 재조립 시에는 빠진곳이 없도록 완전히 끼워넣고 사용해 주십시오.



같이 잡고 당겨 주십시오.



패킹 맞춤돌기와 커버눈금을 먼저 맞춰 끼워주십시오



압력 패킹을 돌려가며 눌러 완전히 끼워주십시오



① 압력패킹 분리 시에는 그림과 ② 조립 시에는 6군데의 압력 ③6군데를 끼운 후 그림과 같이 ④ 전 둘레에 그림과 같이 완전히 끼워지지 않은구간이 있는지 확인하여 주십시오 압력패킹이 완전히 끼워 지지 않으면 증기가 누설될 수 있습니다.



사용 전·후 클린 스팀 벤트가 막히지. 않도록 깨끗이 부드럽게 닦아 주십시 오 안전패킹은 부드럽게 닦아 주시고 고 사용 전·후 결합 상태를 확인해 주십 시오, 결합이 불완전한 경우 반드 시 서비스 센터에 문의 하십시오



내솥의 바깥면이나 밑면의 이물질 및 물기를 깨끗이 닦아 주십시오. 거친 수세미, 솔, 연마제 등은 코팅이 벗겨 강제로 빼거나 제품에서 떼어내지 마시 질 수 있으므로 주방용 세제와 부드러 운 천, 스폰지로 닦아 주십시오

※내솥의 압력 패킹 접촉 부위를 청결 히 관리하면 제품을 더 오래 사용할



있으므로 취사 완료후 물기를 제거한 하십시오. 행주로 깨끗이 닦아 주십시오



취사 시 발생하는 밥물은 증기배출구로 온도감지기에 이물질이 눌러 붙어 있 통해 이곳에 고일 수 있도록 설계되어 는 경우 금속판이 손상되지 않게 제거

뚜껑 결합 손잡이의 사용법에 관하여

- 1. 취사나 요리시에는 뚜껑을 닫고 뚜껑 결합손잡이를 "을"(잠김) 방향으로 확실하게 돌려주십시오. 기능표시부의 "잠김" 표시에 불이 켜집니다. 이는 뚜껑이 확실하게 잠겨 압력취사를 선택할 수 있도록 표시하여 주는 안전장치의 기능입니다.
- 2.취사나 요리가 끝난 후 뚜껑 손잡이를 " 🖨 "(잠김)에서 " 🎦 "(열림) 방향으로 돌린 후, 뚜껑 열림버튼을 눌러 뚜껑을 열어주십시오. 제품 내부에 증기가 완전히 배출되지 않으면 뚜껑 결합 손잡이가 "🖨 "(잠김)에서 "🎦"(열림)쪽으로 쉽게 돌아가지 않습니다. 이때 뚜껑 결합 손잡이를 강제로 돌리지 마시고 압력추를 젖혀 내부 증기가 완전히 배출된 후 다시 조작해 주십시오
- 3. 뚜껑을 열고 닫을 때는 항상 뚜껑 결합 손잡이 위치를 "🍙"(열림)에 방향으로 확실하게 돌려 주십시오.
- "잠김" 표시에 불이 켜지지 않으면 압력취사, 예약 버튼이 작동하지 않습니다. 정확하게 다시 "▲ "(잠김)위치로 돌려 주십시오.
- · 뚜껑부를 위에서 보았을 때 뚜껑 결합 손잡이가 "♪ "(잠김) 방향으로 완전히 돌아갔을 때 뚜껑이 잠긴 상태입니다.





제품 손질 방법



압력 노즐막힘 손질 방법

압력추 ◀

이물질 등으로 압력추 증기 배출구가 막혀 있으면 제 기능을 발휘하지 못하므로 사용 전·후에는 아래의 압력추/증기배출구 청소방법을 참조하여 압력추를 분리한 다음 청소용 핀으로 구멍을 뚫은 후 사용해 주십시오.

※ 압력추의 디자인은 그림과 다를 수 있습니다. 🖊


소프트 스팀캡

취사나 요리 완료 후 떼어낸 다음 주방 용 중성세제 및 스폰지로 자주 세척해 주시고 제품 뚜껑에 고인물은 물을 꼭 짠 행주로 닦아 주십시오.


(압력추/증기배출구 청소방법)



 ● 뚜껑 결합손잡이를 "을 "(잠김) 방향으로 돌린후 압력추를 잡고 위로 들면서 화살 표 방향반시계방향으로 돌려서 분리합니다.



※청소용 핀으로 압력추 증기 배출구만청소하시고, 다른구멍은 안전장치이므로 절대로 찌르지 마십시오.



♠ 압력추가 완전히 조립되면 추가 자유롭게 돌아 갑니다.

내솥·부속품 ▶ 주방용 중성세제와 스폰지로 씻어 주십시오.









소프트 스팀캡 손질 방법

취사나 요리 완료 직후에는 소프트 스팀캡이 뜨거우므로 만지지 마십시오. 화상을 입을 수 있으므로 주의하십시오.



◆ 소프트 스팀캡을 그림과 같이 앞부분을 손가락으로 잡고 위로 살짝들어 올리면서 떼어냅니다.



● 뒷면에 있는 후크를 화살표 방향으로 눌러서 분해하고 주방용 중성세제 및 스폰지로 자주 세척해 주십시오, 세척후 순사대로 조립해 주십시오.



❸ 소프트 스탐캡을 조립하여 끼울 때에는 아래쪽의 홈 부분을 맞춘 후, 화살표 방향으로 눌러 확실히 끼워 주십시오



◆ 제품에 소프트 스팀캡을 장착할 때는 그림과 같이 소프트스팀캡을 안착한 후 소프트스팀캡을 눌러 단단히 고정시켜주십시오.

물받이/밥물고임방지배수로 손질방법



물받이를 분해합니다.



② 밥물고임방지배수로캡의 손잡이를 잡고 아래방향으로 밀어서 분리합니다



● 밥물고임방지배수로캡 및 물받이를 물기를 제거한행주로 닦거나 주방용 중성세제 및 스펀지로 세척해 주십시오.



▲ 밥물고임방지배수로를 청소용 브러쉬를 이용하여 그림과 같이 깨끗이 청소해 주십시오.




 청소 후 그림과 같이 밥물고임 방지배수로캡을 위로 밀어서 끼워 넣은 후 물받이를 확실히 정착합니다.

청소용 핀 & 브러쉬 킷 사용방법



● 청소용 핀&브러쉬 킷(제품 바닥면 부착)을 그림과 같이 분리합니다.



② 그림과 같이 브러쉬 뚜껑을 잡고 화살표 방향으로 힘을 주어 뚜껑을 분리합니다.



 청소용 브러쉬로 밥물고임 방지 배수로나 행주로 닦기 어려운 부분을 깨끗이 청소 할 수 있습니다.



◆ 청소용 핀을사용할 때에는 화살표 방향으로청소용핀을 당겨서 청소용 핀・브러쉬킷 몸채와 90로 맞춰주십시오



청소용 핀은 증기 배출구 청소시에만 사용하십시오.

뚜껑이 닫히지 않을 때의 주의사항

뚜껑을 강제로 닫지 마십시오. 고장의 원인이 됩니다. 뚜껑이 잘 닫히지 않을 때에는 다음 사항을 확인하십시오.



- 내솥이 제품 본체에 완전히 들어가 있는지 확인합니다.
 (내솥에 부착된 손집이를 제품 본체 홈 부에 안착하십시오)
- 2. 뚜껑부를 위에서 보았을 때 뚜껑 결합 손잡이가 오른쪽 그림과 같이 되어 있어야 뚜껑이 닫힙니다.



3. 제품 내에 증기가 발생되는 음식물이나뜨거운 물 등이 들어 있으면 닫는 순간 압력이 걸려서 뚜껑이 잘 닫히지 않습니다. 이때는 압력추를 젖힌 다음 뚜껑을 닫고 뚜껑 결합 손집이를 시계방향으로 돌려서 뚜껑을 체결한니다.



기능 조작부의 이름과 역할 / 기능 표시부의 이상점검 기능

기능 조작부의 이름과 역할



백미, 백미쾌속, 김초밥,

잡곡 현미/발아, 무쇠솥밥, 영양밥, 영양죽, 누룽지, 세착기, 만능찜, 홍삼, 자동살균세책(스팀세책)을 선택할 경우 사용, 예약시간을 변경할 경우 사용 ▶ 55쪽 참조 현미발아 시간을 맞추거나 만능찜 시간을 선택할 경우 사용. 모드 버튼으로 선택된 기능들을 설정할 경우 사용 ▶ 52, 54쪽 참조

- ※ 전원플러그를 꽂고 아무 동작을 하지 않은 경우, 그림과 같이 화면상태가 나타날 때가 대기 상태입니다. (대기 상태 화면의 메뉴, 시간, 음성 유무, 맞춤밥맛 단계는 사용자의 설정에 따라 다릅니다.)
- ※ 기능 조작 시 취소 버튼을 누르면 대기 상태로 전환됩니다.
- ※ 버튼은 부저음이 날 때까지 확실히 눌러 주시고 본 명판의 디자인은 실물과 다를 수 있습니다.

- 영 - 대한 기 상태 화면 〉

기근은 무지금이 잘 빼끼지 확실이 잘나 무지고 온 경단의 다시라는 잘잘의 나를 두 했습니다. 시네가 정

기능 표시부의 이상점검 기능

사용방법이 올바르지 않거나 제품에 이상이 생겼을 때 이래와 같은 표시가 나타나 경보를 하여 줍니다. 정상적인 사용 조건에서나 혹은 조치 이후에도 지속적으로 표시가 나타날 경우에는 서비스 센터로 문의하십시오

내솥이 없을 때 나타납니다.

E ...

ELP

OSS C SON C

온도감자기 또는 냉각팬에 이상이 있을 때 나타납니다. (" E_{-p} " 표시, " E_{-p} " 표시 " \otimes "표시가 깜박거립니다.)

EUI

뚜껑 결합 손잡이를 확실하게 돌리지 않은 상태에서 압력취사 또는 예약 버튼을 눌렀을 때 나타납니다. 손잡이를 "잠김"쪽으로 확실하게 돌려 주십시오.

E [] 3

물만 계속 끓일 경우나 제품이상 발생시 나타납니다.

1386

예약 시간이 13시간을 초과한 경우에 나타납니다. 13시간 이내로 예약을 하십시오. (55~56쪽 참조)

Edo

취사완료 후 보온 상태에서 한번도 뚜껑 결합 손집이를 "출"(열림쪽으로 하지 않고 대기 상태가 된 후 재차 압력취사/예약 버튼을 눌렀을 때 나타납니다. 뚜껑체결 감지 장치의 동작 확인 기능입니다. 뚜껑 결합 손집이를 "출"(열림)으로 한 후 다시 "출"(잠감쪽으로 돌려 주시면 됩니다.

ELU

마이컴 전원에 이상이 있을때 나타납니다.

FP

환경센서에 이상이 있을때 나타납니다.

Eca

분리형 커버가 정착 되어 있지 않은 상태에서 압력취사, 보온/재가열 버튼을 눌렀을 때 나타납니다. 분리형 커버를 정착해 주십시오. ※보온 중에는 경고음이 발생하며, 보온 재가열이 되지 않습니다.

114:15

11-1-1

전원 또는 제품의 이상 발생 점검 기능입니다.

43

현재시각의 설정 / 음성안내 기능의 설정과 해제



10:08

8:25

VOICE(()

GLUTIN RICE

8

8

현재시각은 이렇게 맞추십시오.

현재시각을 맞추려면 다음 사항을 꼭 알아두십시오. 예 현재 시각이 오전 8시 25분일 경우

- 🚺 전원플러그를 꽂은 후 모드 버튼을 1회 누릅니다.
 - ▶ 모드버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다.
 - ▶ "현재 시각 설정 모드입니다. 선택버튼으로 현재시각을 맞춘 후 확인버튼을 눌러주세요"하는 음성이 나옵니다.
 - ▶ 메뉴/선택 버튼이 점멸하고 모드확인취소 버튼이 켜집니다.
 - ▶ 1초 주기로 표시부의:이 깜박거립니다.
- 📿 메뉴/선택 버튼을 눌러 시를 "🎖 "에 맞추고 분을 "🛂 "에 맞춥니다.
 - * ⁰ " 버튼을 누를 때마다 1분 단위로 증가합니다. " ◀ " 버튼을 누를 때마다 1분 단위로 감소합니다.
 - ▶ 버튼을 계속 누르고 있으면 10분 단위로 연속으로 변합니다.(반복기능) 반복기능을 이용하여 원하는 시를 먼저 맞춘 후, 1분 단위로 분을 맞추면 원하는 시각을 더 편리하게 설정 할 수 있습니다.
 - ▶ 오전, 오후가 바뀌지 않도록 주의하여 맞춥니다.
 - ▶ 낮 12:00의 경우는 오후 12:00로 표시됩니다.
- 🗿 워하는 시각으로 설정이 완료되면 확인 버튼을 눌러주십시오.
 - ▶ 확인버튼이 점멸하고 모드.메뉴/선택,취소 버튼이 켜집니다.
 - ▶ 확인 버튼을 누르지 않고 7초가 경과되면 "시간이 초과되어 기능 설정이 취소되었습니다."하는 음성과 함께 시각 설정이 취소됩니다.

8:25 . GLUTIN VOICE(())

■리듐 건전지에 대하여

- •본제품에는 정전보상 기능 및 시계기능을 위하여리듐 건전자가 내장되어 있으며 건전자의 수명은약 3년 정도이나 성능에 따라서 차이가 날수 있습니다.
- 전원플러그를 뺐다가다시 꽂았을때 현재사람이 "1200"로 리셋되는 현상이 발생하면 건전자에 문제방전 등)가 있으므로 고객상담실로 문의하여 지정된 서비스센터에서 교환한후 사용하십시오

■정전 보상기능이란?

- •본 제품은 정전이 되어도 정전 이전의 상태를 기억하게 되어 있어 정전 후 다시 전기가 들어요면 정상적으로 작동하게 됩니다.
- •취사나 요리 중에 정전이 되면 정전된 시간만큼 취사나 요리시간이 늦어지며 정전시간에 따라 취사 나 요리상태가 다소치이가 날 수도있습니다.
- 보온 중 정전이 되어밥이 식었을 때는 보온이 취소됩니다.


■보온 중일때 현재시각 설정은 이렇게 하세요.

MODE

- 1. 보온 중일 때 현재시각을 변경할 경우에는 취소 버튼을 눌러 보온을 취소한 후 모드 버튼을 1회 눌러 현재시각을 설정합니다.
- 2. 현재시각 설정이 끝나면 보온/재가열 버튼을 1회 눌러 보온합니다. 이때 표시부에는 "[]]-| "가 표시됩니다.

음성볼륨 조절기능(음성기능을 해제하거나 음성볼륨을 조절하는 기능임)

대기 상태에서 모드 버튼을 2회 누르면 진입합니다. (모드버튼을 초기에 누를 시 1초 이상 눌러야 진입 가능합니다)

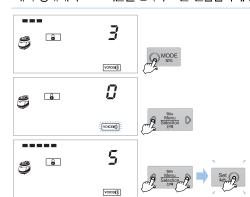

모드버튼을 2회 눌러 음성볼륨 설정모드 진입 시 표시부에 ③ 이 표시됩니다.

▶ 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.

메뉴/선택 버튼을 눌러 🕻 이 설정되면 🔽이 이 깜빡거리며 음성기능이 해제됩니다.

메뉴/선택 버튼을 눌러 1부터 5까지의 음성볼륨 크기를 설정할 수 있습니다.

- ▶ 확인버튼이 점멸하고 모드 메뉴/선택 취소 버튼이 켜집니다.
- ▶ 계속 누르고 있으면 연속으로 변합니다.
- ▶ 원하시는 음성볼륨을 설정하신 후 확인 버튼을 눌러 주십시오.



취사 전 준비사항

- 1 내솥을 깨끗이 씻은 후 물기를 닦습니다.
 - ▶ 내솥을 씻을 때는 부드러운 행주를 사용하여 주십시오.
 - ▶ 강한 수세미를 사용하면 내솥 안쪽 표면이 벗겨지는 경우가 있습니다.
- 계량접을 사용하여 쌀을 인분수 만큼 별도의 용기에 담습니다.
 - ▶ 쌀을 계량컵의 윗면 기준하여 평평하게 맞추면 1인분에 해당됩니다. (예: 3인분일 경우 → 3컵 6인분일 경우 → 6컵)
- 마은 물이 나올 때까지 깨끗이 씻습니다.
- 4 깨끗이 씻은 쌀을 내솥에 옮겨 담습니다.
- 메뉴에 따라 물의 양을 조절합니다.
 - ▶ 바닥이 평평한 곳에 내솥을 올려 놓고 내솥에 표시된 눈금에 맞춰 물의 양을 조절합니다.
 - ▶ 내솥에 표시된 눈금은 쌀과 물을 함께 부었을 때의 물눈금을 표시합니다.
 - ▶ 물 높이 조절에 대하여
 - 백미, 잡곡, 무쇠솥밥, 영양밥, 누룽지: '백미, 잡곡' 물눈금 기준으로 물을 맞춥니다. 백미는 최대 10인분, 잡곡은 최대 8인분, 무쇠솥밥은 최대(0인분, 영양밥은 최대 6인분, 누룽지는 최대4인분 까지 취사 기능합니다.
 - 김초밥: '김초밥' 물눈금 기준으로 맞춥니다. 김초밥은 최대 8인분까지 취사 가능합니다.
 - 현미/발아 : '현미/발아' 물눈금 기준으로 맞춥니다. 현미발아는 최대 6인분까지 취사 가능합니다.
 - 영양죽: '영양죽' 물눈금 기준으로 맞춥니다.

영양죽은 최대 2인분까지 취사 가능합니다.

- 세척미: '백미,잡곡' 물눈금 기준으로 맞춥니다. 세척미는 최대 10인분까지 취사 기능합니다.
- ※ 콩, 팥과 같은 딱딱한 곡류는 불리거나 삶아서 잡곡 메뉴에서 취사를 하십시오. 잡곡의 종류에 따라 설익을 수도 있습니다.
- 6 내솥을 본체에 넣고 뚜껑을 닫아 주십시오.

분리형 커버가 장착되어 있는지 확인하여 주십시오


▶ 압력취사, 보온/재가열 버튼을 누를 때 분리형 커버가 장착되어 있지 않으면 "분ca" 표시가 나타나고, 취사, 보온이 진행되지 않습니다.

내솥을 넣을 때 본체에 완전히 들어가도록 주의하여 넣습니다.

- ▶ 내솥의 바닥면에 쌀 등의 이물질이 붙어 있으면 취사가 잘 되지 않거나 고장의 우려가 있습니다.
- ▶ 내솥이 본체에 정확하게 들어가지 않으면 뚜껑이 닫히지 않습니다 (내솥의 손잡이가 본체의 홈에 들어가도록 하십시오)
- 7 전원플러그를 꽂고 뚜껑 결합 손잡이를 "읍"(잠김) 방향으로 돌려 주십시오.
 - ▶ 표시부에 잠김 표시가 켜지면 뚜껑이 완전히 결합 되었음을 알 수 있습니다.
 - ► 뚜껑 결합 손잡이를 "● "(잠김방향으로 돌리지 않고 취사버튼을 누르면 경고음 및 "돈() "표시가 나고 취사가 되지 않습니다.
 - ※ 보온 중일 때는 취소 버튼을 눌러 보온을 취소한 후 원하시는 기능을 선택하여 주십시오
 - ▶ 이외에 "Ē do "표시가 나올 경우에는 뚜껑 결합 손잡이를 "열림" 방향으로 돌 린 후 다시 "잠김"으로 돌려 주시면 정상적으로 동작 됩니다 (뚜껑체결 감지 장치의 동작 확인 기능)
 - ※ 이전 취시에서 취사 완료 후 한번 이상 뚜껑결합 손집이를 '열림' 방향으로 돌렸을 경우에는 해당되지 않습니다.





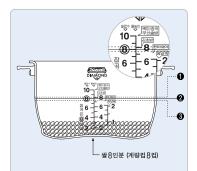

- 진밥을 원할때 : 물을 규정량보다 많이 부어 주십시오
- ② 쌀 8인분의 경우 (계량컵 8컵) 내솥의 백미, 잡곡, 무쇠솥밥 눈금 8에 물을 맞춥니다.
- 살을 충분히 불렸을 때 또는 된밥을 원할 때: 물을 규정랑보다 적게 부어 주십시오.







맛있는 밥을 드시려<mark>면</mark>



압력밥솥으로 맛있는 밥짓기

맛있는 압력밥솥 밥을 드시려면 다음 사항을 꼭 알아두십시오.

쌀은 계량컵으로! 물은 내솥눈금 으로 정확히!	 쌀은 반드시 계량컵을 사용하여 정확히 계량합니다. (시중에 유통되고 있는 쌀통은 제품에 따라 쌀의 양이 다소 차이가 날 수도 있습니다.) 물의 양은 내솥을 평평한 곳에 놓고 내솥의 물(水) 높이에 맞춥니다. 	쌀의 양과물의 양이 맞지 않으면 밥이 퍼석하거나 설익거나 질게 될 수가 있습니다.
쌀은 보관 방법이 중요!	 쌀은 가급적이면 소량으로 구입하여 통풍이 잘되고 직시광선이 없는 서늘한 곳에 쌀의 수분이 잘 증발 되지 않도록 보관합니다. 쌀을 개봉한 지 오래되어 말라 있는 경우는 물을 반눈금 정도 더 넣고 취사를 하면 좋습니다. 	쌀이 많이 말라 있는 경우는 계량을 정확히 하더라도 밥이 퍼석할 수가 있습니다.
예약 취사 시간은 짧을수록 좋습니다!	• 쌀이 많이 말라 있는 경우는 가급적 예약취사를 피하시고 물을 반눈금 정도 더 넣고 취시합니다.	10시간 이상 예약취사하거나 말라있는 쌀을 예약취사할 경우는 밥이 퍼석 하거나 설익을 수가 있으며 심한 경우는 층밥이 될 수도 있습니다. 예약 설정 시간이 길어질수록 멜라노이징(미세 밥 눌음 현상이 증가 할 수 있습니다.
보온시간은 짧을 수록 좋습니다!	• 보온은 12시간이내로 하는 것이 좋습니다.	장시간 보온을 하게되면 밥색깔이 변하거나 밥에서 냄새가 날 수도 있습니다.
제품은 깨끗하게!	• 청소를 자주 하십시오 특히, 뚜껑부에 이물질이 묻어 있지 않도록 자주 닦아 주십시오.	청소를 자주 하지 않으면 세균이 번식하여 보온시 밥에서 냄새가 날 수 있습니다.



취사는 이렇게 하십시오

- · 취사 전 압력추를 수평으로 맞추어 주십시오
- · 메뉴버튼을 누를 때마다 백미→백미쾌속→무쇠솥밥→김초밥→잡곡→ 현미/발아→영양밥→영양죽→누룽지→세척미→만능찜→홍삼
- →자동세척(스팀세척)순으로 반복 선택됩니다
- · 버튼을 계속 누르고 있으면 메뉴 순서대로 연속으로 변합니다.
- ·백미 김초밥 잡곡 현미발아 경우 한번 취사가완료 되고나면 메뉴가 기억되므로 동일 메뉴를 연속 사용할 경우는 메뉴선택을 하지 않아도 됩니다.



예)김초밥을 선택 할 경우

▶ "김초밥"이라는 음성이 나옵니다. 김초밥 취사를 하실 경우 취사 중 자동증기 배출장치가 작동합니다.

으로 알려쉬사 / 백미쾌속 버튼을 눌러 취사를 시작합니다.

- · 취사를 하기전에 반드시 뚜껑 결합 손잡이를 " 🖨 "(잠김) 방향으로 돌리고 압력취사 / 백미쾌속 버튼을 누르면 "백미 쿠쿠가 맛있는 취사를 시작합니다." 하는 음성과 함께 취사가 시작됩니다.
- · 뚜껑 결합 손잡이를 "▲"(잠김)방향으로 돌리지 않고 압력취사 버튼을 누르면 경고음과 함께 "長日1"이 나타난 후 "뚜껑 결합 손잡이를 잠김으로 돌려주세요"하는 음성이 나오고 작동이 되지 않습니다.



예) 백미를 취사 할 경우

뜸들이기 (예 : 백미)

- · 뜸 진행 부터는 "뜸들이기를 시작합니다"하는 음성과 함께 표시부에 남은 취사시간을 표시합니다. 메뉴에 따라 남은 시간 은 차이가 있습니다.
- · 뜸완료 1~3분 전에 증기배출효과음(기차소리)이 나오고 "증기배출이 시작됩니다." 하는 음성과 함께 증기가 자동배출 되므로 놀라거나 화상을 입지 않도록 주의하십시오.

예)14분 남은 경우



실 취사완료

- · 취사가 끝날 때 완료음(쿠~쿠~, 쿠쿠하세요, 새소리)이 울리고 "쿠쿠가 맛있는 백미밥을 완료하였습니다." 하는 음성과 함께 보온 기능을 시작합니다.
- · 취사가 끝나면 즉시 밥을 골고루 잘 섞어 주십시오. 섞지 않고 그냥 두면 밥이 굳고 변색되어 냄새가 발생합니다.
- · 뚜껑 결합 손잡이가 잘 돌아가지 않는 경우는 압력추를 젖힌 다음 내부 증기를 완전히 빼낸 후 뚜껑 결합 손잡이를 돌려 주십시오.
- · 취사 중에는 취소 버튼을 누르지 마십시오. 취사가 취소됩니다.





					D	ll뉴별	취사시	간					
메뉴 구분	백미	백미쾌속	김초밥	잡곡	현미/발아	무쇠솥밥	영양밥	영양죽	누룽지	세척미	만능찜	홍삼	자동살균세척 (스팀세척)
취사량	2인분~ 10 인분	2인분~ 6인분	2인분~ 8인분	2인분~ 8인분	2인분~ 6인분	2인분~ 10인분	2인분~ 6인분	1인분~ 2인분	2인분~ 4인분	2인분~ 10 인분		를 상세 안내를	물눈금 2까지
취사시간	약27분~ 약37분	약13분~ 약26분	약44분~ 약51분	약41분~ 약52분	약55분~ 약62분	약28분~ 약40분	약29분~ 약37분	약61분~ 약71분	약36분~ 약42분	약31분~ 약44분	표되는데글 참조하여 주십시오.	약18분	

- ※ 만능찜, 홍삼 등의 요리 후 취사하게 되면 냄새가 배어들 수도 있습니다. (40쪽을 참조하여 패킹과 뚜껑 부위를 깨끗하게 닦아 낸 후 사용하여 주십시오.)
- ※ 메뉴별 취사시간은 제품의 사용환경에 따라 다소 차이가 날 수 있습니다.

취사는 이렇게 하십시오




취사메뉴 사용법

백미	백미를 차지게 취사할 때 사용합니다.	김초밥	일반밥솥과 차진 압력밥솥의 중간밥을 드시고자 할때 사용합니다.				
잡곡	백미를 곡류에 섞어서 취사할 경우 사용합니다. 현미/발아		헌미를 발아시켜 발아헌미밥을 드시고자 할 때 사용합니다.				
무쇠솥밥	무쇠솥밥을 취사할 때 사용합니다.	영양밥을 취사할 때 사용합니다.					
영양죽	영양죽을 끓이는 기능입니다. 누렇지 취사할 때 누룽지를 만들어 줍니다.						
세척미	세척미를 취사할 때 사용합니다.	만능찜	수동으로 찜시간을 설정해서 요리합니다.				
홍삼	수심을 증숙하고 달일 경우에 사용합니다. 자동세철 스트세철 취사, 보온 또는 요리 후 배어든 냄새를 세척할 때 사용합니다.						
백미쾌속	· 백미쾌속 취사는 밥짓는 시간이 단축됩니다. (백미 2인분 기준 약 13분 정도 걸림) · 백미쾌속 취사는 정상 취사보다 밥 상태가 좋지 않으므로 6인분 이하에서만 사용하여 주십시오. · 취사전 쌀을 20분 정도 불린 다음 백미쾌속으로 취사하시면 밥맛이 더욱 좋아집니다.						

[※] 메뉴별 상세한 요리 방법은 요리안내 71~76쪽을 참조하십시오

자동살균세척(스팀세척)은 이렇게 하십시오

자동살균 세척(스팀세척)은 이렇게 하십시오.



내솥에 물을 물눈금 2까지 붓고, 뚜껑을 덮어 뚜껑 결합 손잡이를 잠김으로 돌려 주십시오. 방법1. 메뉴/선택버튼으로 자동세척 메뉴를 선택한 후 압력취사 버튼을 눌러 주십시오. 방법2. 대기상태에서 예약버튼을 2회 눌러 자동세척(스팀세척)을 선택한 후 압력 취사 버튼을 눌러 주십시오

세척미는 이렇게 하십시오.

- 1. 내솥에 계량컵으로 세척미를 원하시는 용량만큼 계량하여 넣은 후 백미 물눈금 기준에 맞추어 물을 부어 주십시오. (세척미는 최소 2인분 ~ 최대 10인분 까지 취사 기능합니다.)
- 2. 세척미와 물이 잘 섞이도록 주걱으로 골고루 잘 저어 주신 후 뚜껑을 잠그고 메뉴/선택 버튼으로 세척미 메뉴를 선택한 후 압력취사 버튼을 눌러 주십시오.
- ※ 세척미는 별도로 세척하지 않고 물만 부어 취사를 진행하므로 취사 후 멜라노이징(미세 밥 눌음)한상이 나타날 수 있습니다.
- ** 세척미는 습기에 약하므로 습한 곳에 보관하지 마시고, 여름철이나 장마철에는 변질되거나 벌레가 생길 수 있으므로 시중에서 세척미 구입 시 소포장 단위로 구입하여 주십시오.

멜라노이징(미세 밥 눌음) 현상

이 압력밥솥은 밥의 밑면에 엷은 누런 빛깔이 나타나는데, 이는 밥이 잔여수분을 밥 내부로 흡수시켜 밥 특유의 구수한 향기와 맛을 내는 멜라노이징 현상을 일으켜 맛있는 밥이 되도록 설계되어 있기 때문입니다. 특히 "예약취사"와 같이 쌀알이 오랜 시간 침전되면 내솥 바닥에 미세 전분이 가라앉아 "일반취사"보다 멜라노이징(미세 밥 눌음)한상이 증가할 수 있습니다.

※ 백미에 곡류를 섞어서 잡곡을 취사할 경우 백미만으로 취사할 때 보다 멜라노이징(미세 밥 눌음)현상이 증가할 수 있습니다.



쿠쿠 맞춤밥맛 기능은 이렇게 하십시오

쿠쿠 맞춤밥맛이란

세계 최초로 쿠쿠만의 가변밥맛 기술을 개발하여 밥의 "부드러운 정도"와 "차지고 구수한 정도"를 자신의 기호에 맞게 선택하여 취사하는 기능으로 소비자가 원하는 밥맛으로 취사할 수 있는 쿠쿠만의 특허 기술입니다.

쿠쿠 맞춤밥맛기능


"불림시간"을 길게 선택하면: 밥맛이 부드러워집니다. (불림시간 4단계 선택가능)

"가열유지시간"을 길게 선택하면 : 밥맛이 더 구수해집니다. 멜라노이징이 발생 할 수 있습니다. (가열유지시간 4단계 선택가능) ※ 기호에 따라 불림시간 가열유지시간을 각각 선택하셔도 되고 두 기능을 동시에 선택하셔도 됩니다.

쿠쿠 맞춤밥맛 사용방법

맞춤밥맛이 지원되는 메뉴(백미, 잡곡, 현미/발아, 누룽지, 세척미, 무소솥밥)를 선택하신 후 모드 버튼을 1초 이상 누르면 "맞춤밥맛 설정모드입니다. 선택버튼으로 불림 및 가열 단계를 선택한 후 확인 버튼을 눌러 주세요." 하는 음성과 함께 맞춤밥맛 설정모드로 진입합니다. ※ 아래의 설정방법의 예는 백미 메뉴 기준입니다.

● 메뉴 선택 화면

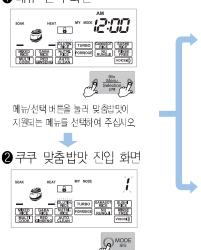


원하시는 메뉴를 선택하신 후 모드 버튼을 1초 이상 1회 누르면 맞춤밥맛설정모드로 진입합니다.

▶메뉴/선택 버튼이 점멸하고 확인 압력취사 / 백미 쾌속 취소 버튼이 켜집니다 ❸ 불림시간 조정모드



Menu Selection D

- **幻** 버튼을 눌러 원하시는 불림시간을 선택하십시오.
- ▶확인 버튼이 점멸하고, 압력취사 /백미 쾌속, 취소, 메뉴/선택 버튼이 켜집니다.
- 4 가열유지시간 조정모드



⑤ 설정 완료 화면



원하시는 맞춤밥맛을 설정하신 후 압력취사/ 백미쾌속 버튼을 눌러 주십시오

▶압력취사 / 백미쾌속 버튼이 점멸하고, 메뉴/선택, 확인 취소 버튼이 켜집니다.

- ▶ 버튼을 눌러 원하시는 가열면장시간을 선택하신
- 후 확인 버튼을 눌러 주십시오.
- ▶확인 버튼이 점멸하고 압력취사/백미쾌속 취소.메뉴/선택 버튼이 켜집니다.
- ※ 16가지 맞춤밥맛은 16가지 밥맛그래프를 참조하여 주십시오. (49쪽 참조)

불림시간 및 가열유지시간 설정시 설정된 시간만큼 표시부에 위의 그림과 같이 단계표시가 나타나며 취사, 예약, 보온, 재가열 중에도 계속 나타납니다

- ▶ '쿠쿠 맞춤밥맛' 기능은 백미, 잡곡, 현미/발아, 누룽지, 세척미, 무쇠솥밥 메뉴에 개별 적용됩니다.
- ※ 한 번 설정된 선택시간은 다시 변경하기 전까지 계속 기억되므로, 매번 취사시마다 시간을 맞출 필요가 없습니다. 취사 및 보온, 예약취사가 진행 중일때는 불림시간, 가열유지시간을 조정할 수 없습니다.

주의사항

- '쿠쿠 맞춤밥맛' 기능 사용시 눌음현상 발생과 취사상태 등에 영향을 줄 수 있습니다 어린이의 조작 등으로 인해 시간이 임의로 변경되지 않도록 주의하여 주십시오
 ※초기 설정치(불림시간 0분, 가열시간 0분)는 "↓"번 밥맛으로 설정되어 있습니다.
- 2. '쿠쿠 맞춤밥맛' 기능을 사용하게 되면 설정된 시간만큼 취사시간이 다소 길어질 수 있습니다.
- 3. 가열유지시간을 길게 설정하면, 눌음현상이 나타날 수 있습니다.

쿠쿠 맞춤밥맛 기능은 이렇게 하십시오




쿠쿠 맞춤밥맛의 단계별 그래픽 표시










쿠쿠 맞춤밥맛의 16가지 밥맛 그래프



- * 가. 쌀이 단단하고 찰기가 있는 밥맛이 됩니다.
- * 나. 쌀이 부드럽고 잘 부풀어 오른 밥맛이 됩니다.
- * 다. 쌀이 부드럽고 찰기가 있는 밥맛이 됩니다.
- ※ 밥맛번호(1~16가 숫자로 디스플레이 창에 표시 됩니다.


쿠쿠 맞춤취사 기능(취사온도 조절기능)


취사시 가열완료 온도단계를 조절(온도의 높고, 낮음)하여 취사할 수 있는 기능으로 기존 취사시 고정되어 있던 온도단계를 소비자가 직접 조절할 수 있으므로 소비자가 원하는 기호에 맞게 취사할 수 있습니다.

- 높은단계: 잡곡류로 취사하실 경우나 차진밥을 좋아하실 경우에 설정해 주십시오.
- 낮은단계: 햅쌀로 취사하실 경우나 차진밥을 싫어하실 경우에 설정해 주십시오

쿠쿠 맞춤취사 사용방법

대기상태에서 모드 버튼을 5회 누르면 부자음과 함께 "맞춤취사 설정모드 입니다. 선택버튼으로 화력을 조절한 후 확인 버튼을 눌러 주세요" 하는 음성과 함께 "맞춤취사 설정모드"로 들어갑니다. 이 때 '쿠쿠 맞춤취사' 가 지원되는 전 메뉴가 표시부에 나타납니다.



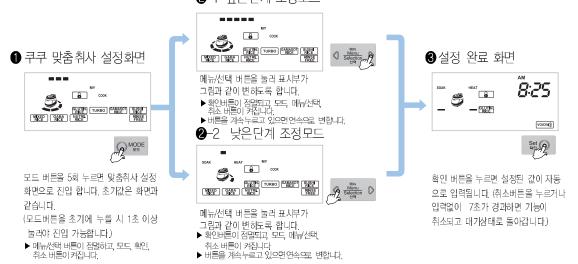

- 1. '쿠쿠 맞춤취사' 기능은 백미, 백미쾌속, 김초밥, 잡곡, 현미/발아, 영양밥, 세척미, 무쇠솥밥 메뉴에 일괄 적용됩니다.
- 2. 초기 표시 화면을 기준으로 하여 기호에 따라 맞춤취사 단계를 설정하여 주십시오. 취사단계가 높은 경우 눌음현상이 발생할 수 있습니다.
- 3. 단계별 설정 후 취사시 쌀의 상태 및 함수율에 따라서 취반상태에서 차이가 있을 수 있습니다.



쿠쿠 맞춤밥맛 기능은 이렇게 하십시오

누룽지 눌음강화 기능의 설정 방법

- ▶ "누룽지" 메뉴 취사 시 바닥의 밥 눌음 정도를 조절할 수 있는 기능으로 기호에 따라 설정해 주십시오.
- ▶ 누룽지 눌음강화기능 설정 방법 (누룽지 취사 시 눌음량의 증가를 원하시는 경우)



- 1. 대기상태에서 모드 버튼을 7회 누르면 "누룽지 눌음강화" 설정모드로 진입합니다. 모드버튼을 초기에 누름시 1초 이상 눌러야 진입 가능합니다
- 2. "누룽지 눌음강화" 설정모드로 들어왔을때 "누룽지 눌음강화 설정 모드입니다. 선택버튼으로 누룽지 눌음 강화를 선택 또는 해제한 후 확인 버튼을 눌러 주세요." 하는 음성이 나옵니다. 이때, 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
- 3. 메뉴/선택 버튼을 누르면 "누룽지 눌음강화가 선택되었습니다. 확인 버튼을 눌러주세요"하는 음성이 나옵니다. 원하시는 모드를 선택한 후 확인 버튼을 눌러 주십시오, 이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 켜집니다.
- 4. "누룽지 눌음강화" 설정모드 진입 후 아무런 버튼 입력없이 7초가 지나거나 취소 버튼을 누르면 "시간이 초과되어 기능 설정이 취소 되었습니다." 하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.
- ▶ 누룽지 눌음강화 기능 해제 방법 (누룽지 일반 취사를 원하시는 경우)



- 1. 대기상태에서 모드 버튼을 7회 누르면 "누룽지 눌음강화" 설정모드로 진입합니다. 모드버튼을 초기에 누를시 1초 이상 눌러야 진입 가능합니다.
- 2. "누룽지 눌음강화" 설정모드로 들어왔을때 "누룽지 눌음강화 설정 모드입니다. 선택버튼으로 누룽지 눌음 강화를 선택 또는 해제한 후 확인 버튼을 눌러 주세요" 하는 음성이 나옵니다. 이때, 메뉴/선택 버튼이 점멸하고, 모드, 확인, 취소 버튼이 켜집니다.
- 3. 메뉴/선택 버튼을 누르면 "누룽지 눌음강화가 해제되었습니다. 확인 버튼을 눌러주세요"하는 음성이 나옵니다. 원하시는 모드를 선택한 후 확인 버튼을 눌러 주십시오. 이때, 확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소 버튼이 커집니다.
- 4. "누룽지 눌음강화" 설정모드 진입 후 아무런 버튼 입력없이 7초가 지나거나 취소 버튼을 누르면 "시간이 초과되어 기능설정이 취소 되었습니다."하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.
 - ▶본 기능을 눌음강화 설정 상태로 둘 경우. 누룽지 취사 중 표시부에 "MY" 문자가 표시됩니다.
 - ▶본 기능은 제품 출하시 눌음강화 해제 상태로 되어 있으니 필요에 따라 설정해 주십시오.

현미발아는 이렇게 하십시오

발아현미란

현미는 백미에 비교 영양가가 높은 식품이지만 먹었을 때 거칠고 딱딱하며, 소화하기 힘들다는 단점이 있으나 아주 조금만 발아시켜도 잠자고 있던 효소가 활성화되어 영양성분이 보다 풍부하게 되고 소화 흡수가 훨씬 수월한 형태로 변화됩니다.

현미구입방법

원산지: 경기용인 품 목 : 추청 단 위:15kg 생산년도 : XXXX 년산

도정일자: XXXX 년 XX월 XX일






- ① 먼저 생산일자와 도정일자를 확인 하십시오.
 - ▶ 수확한지 1년 이내 그리고 도정일자로부터 3개월 이내의 현미를 사용하십시오. (현미의 경우 수확년도와 도정날짜가 표시되어 있습니다.)
- 2 눈으로 현미를 직접 확인하십시오.
 - ▶ 시중에서 판매하는 현미의 대부분은 내부를 볼 수 있도록 되어 있습니다.
 - 씨눈이 살아 있는지 먼저 확인하십시오.
 - •쌀 표면이 밝은 황색을 띄고 표면에 윤기가 흐르면 좋은 현미이고 표면이 하얗게 일어나거나 색이 검은 기운을 띄면 발아에 적합하지 않은 현미입니다.
 - •조각나거나 덜 여문 현미는 피하시고 쭉정이가 없는 현미를 고르세요. 쭉정이는 발아 중 썩어 냄새를 유발하고 푸르스름한 색을 띄는 덜 여문 현미는 발아가 되지 않습니다.

발아현미의 특징

발아현미는 영양가 높은 현미를 발아 시켜 영양소를 더욱 증가시키고 현미의 단점인 거친 밥맛이 개선된 소화가 잘되는 훌륭한 영양원입니다.

- ▶ 현미보다 부드러운 밥맛을 즐기실 수 있습니다.
- ▶ 소화가 잘되고 영양소가 풍부합니다 발아과정에서 당화호르몬이 분비되어 소화흡수가 잘됩니다.
- ▶ 어린이나 수험생의 영양 건강식으로 좋습니다 식이섬유가 풍부합니다.
- ▶ 발아현미에는 GABA(감마아미노낙산)가 다량 함유되어 있습니다. GABA는 간장과 신장의 신진대사를 촉진하며 중성지방 증가 억제 작용, 혈압상승 방지효과, 뇌세포 대사 촉진 등 우리몸에 좋은 효과가 있음이 의학적으로 확인되었습니다.

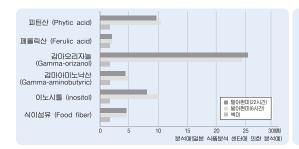

발이현미(6시간)와 백미의 영양 비교

발아현미는 백미에 비해 높은 영양소를 가집니다.

피틴산 10.3배 감마이미노낙산 5배 페롤릭산 1.4배 이노시톨 10배 감마오리자놀 23.9배 식이섬유 4.3배



현미발아는 이렇게 하십시오

현미발아 메뉴의 조작방법

🕕 발아를 더욱 촉진 시키기 위해 현미를 미리 16시간 이내로 침수하여 예비발아를 해주십시오.

예비발아방법

- ▶일반적으로 가정에서 사용하시는 용기에 씻은 현미를 넣은 뒤. 최대한 물을 충분히 넣고 침수시킨 후 예비발아하여 주십시오.
- ▶예비발아는 16시간 이내로 하여 주시고 현미/발아 메뉴 사용 전에는 반드시 흐르는 물에 세척하신 후 사용하여 주십시오. 지나차게 세게 문질러 세척하면 쌀눈배아이 떨어져 발아되지 않을 수 있습니다.
- ▶예비발아하실 때 침수시간에 따라 특유의 냄새가 날 수 있습니다.
- ▶예비발아가 완료된 현미는 씻은 후에 내솥에 넣고 취사량에 따라 물높이를 맞추신 후 현미/발아 메뉴를 사용하여 주십시오.
- ▶기온이 높은 여름이나 보관온도 등에 따라 예비발아시에는 냄새가 날 수 있으니 가급적 예비발아시간을 줄여 주시고 더 주의해서 깨끗이 잘씻어 주십시오.
- 무껑 결합 손잡이를 "잠김" 방향으로 돌리고, 메뉴/선택 버튼을 눌러 현미/발아를 선택합니다.



※ 초기 설정 2H(2시간)


현미/발아 메뉴가 선택되었을 때는 표시부에 2나가 표시됩니다. ('현미발아 확인버튼을 눌러주세요,' 하는 음성이 나옵니다.)

▶확인 버튼이 점멸하고, 모드, 메뉴/선택, 취소, 압력취사 버튼이 켜집니다.

확인버튼을 누르고 메뉴/선택 버튼으로 시간을 설정합니다.

- ▶메뉴/선택 버튼이 점멸하고, 모드, 취소, 압력취사 버튼이 켜집니다.
- 1. 이 Menu Selection 의 버튼을 누르면

현미발아시간이 2시간씩 증가합니다.



현미발아시간이 2시간씩 감소합니다.

- 3. 현미 발아시간은 0, 2, 4, 6시간으로 설정 가능합니다.
- ☞ 현미발아 ()' 시간으로 설정 후 압력취사 버튼 입력시 즉시 취사가 진행됩니다. 현미를 발아시키지 않고 취사할 경우 또는 이미 발아가 되어있는 현미로 취사 할 경우에는 ()' 시간으로 설정하십시오.

⁹ 압력취사 버튼을 누릅니다.



※ 발이잔여시간이 3시간 남이있을 때

- ▶압력취사 / 백미쾌속 버튼을 누르거나 확인버튼을 누른 후 압력취사 버튼을 누르면 설정된 시간만큼 현미발아를 시작하고 발아 완료 후 즉시 취사가 시작됩니다.
- ▶현미 발이중에는 '취사표시가 나타나며 남은 시간이 표시됩니다 ("현미발아 쿠쿠가 맛있는 취사를 시작합니다." 하는 음성이 나옵니다)

현미발아 취사 시 유의사항

- 발아된 싹의 크기를 키우지 않고 좀 더 빨리 드시고 싶으면 예비발아를 하지않고 현미/발아를 선택하여 원하는 발아시간을 설정하신 후 취사버튼을 눌러 취사하십시오. (싹의 크기에 따른 영양분의 차이는 크지 않습니다.)
- ❷ 기온이 높을때 오랜시간 발아시키면 냄새가 날 경우가 있습니다. 그 경우에는 발아 설정시간을 단축하여 짧게 설정하여 주십시오
- ❸ 현미/발아 메뉴로 취사하실 경우에는 최대 6인분 이하로 하여 주십시오.
- ④ 물은 수돗물을 사용하셔도 무방하나 생수를 이용하시면 더욱 좋습니다. 단, 뜨거운 물, 끓인 물은 식힌 경우라 하더라도 발아가 되지 않을수 있으니 사용을 피해주십시오.
- 현미의 발아율이나 싹의 길이 등의 발아상태는 현미의 종자와 보관상태, 보관기간에 따라 차이가 있을 수 있습니다.
 ─ 발아현미는 현미를 싹퇴운 것으로, 현미의 종자에 따라 발아율 및 발아된 후의 싹의 길이에 차이가 있을 수 있습니다.
 발아시킬 현미는 반드시 수확후 1년 미만의 것을 사용해 주시고, 도정후 보관기간이 가급적 짧은 것을 이용해 주십시오.
- ⑥ 현미/발아 메뉴의 경우 4H, 5H, 6H 설정시에는 예약이 되지 않습니다. 예약을 원하실 경우에는 "♬ "로 설정하신 후 예약해 주십시오 (55쪽 참조)
- 현미의 종류에 따라 멜라노이징 또는 밥상태의 차이가 나타날 수 있습니다기호에 맞게 물량을 가감하거나 맞춤밥맛 기능을 이용해 주십시오(48~49쪽 참조)

홍삼은 이렇게 하십시오



홍삼메뉴의 조작방법

홍삼메뉴를 이용하여 수삼을 증숙 및 달임을 하실 수 있습니다.

- - ▶ 확인 버튼이 점멸하고, 메뉴/선택, 취소, 압력취사 버튼이 켜집니다



홍삼이 선택되었을 때는 표시부에 12H가 표시 됩니다. ("홍삼 확인 버튼을 눌러 주세요." 하는 음성이 나옵니다.)

※ 초기 설정 12H (12시간)

- ▶ 증숙을 하실경우 내솥의 물4컵과 찜판을 놓고 수삼을 올려 주십시오.
- ▶ 증숙한 삼을 달여 드실 경우에는 찜판을 꺼낸 후 다시 물을 추가하여 주십시오. (72쪽 참조)
- ▶ 증숙 및 달임 시간은 ②의 설명과 같이 메뉴/선택 버튼으로 변경하여 사용하실 수 있습니다.
- 확인 버튼을 누르고 메뉴/선택 버튼으로 시간을 설정합니다.
 - ▶ 메뉴/선택 버튼이 점멸하고, 취소, 압력취사 버튼이 켜집니다.
 - 1. 물 바람 버튼을 누르면 홍삼 시간이 2시간씩 증가 합니다.
 - 2. Menu Selection D
- 버튼을 누르면 홍삼 시간이 2시간씩 감소 합니다.
 - ▶ 버튼을 계속 누르고 있으면 연속으로 변합니다.
- 3. 홍삼시간은 2시간 ~ 24시간으로 2시간 단위로 설정 가능합니다. (초기설정 시간은 12시간입니다.)
- 압력취사 / 백미쾌속 버튼을 누릅니다.
 - ▶ 압력취사 / 백미쾌속 버튼이 점멸하고. 메뉴/선택, 취소 버튼이 켜집니다.
 - ▶ 압력취사 / 백미쾌속 버튼을 누르거나, 확인 버튼을 누른 후 압력취사 버튼을 누르면 설정된 시간만큼 증숙 또는 달임을 진행합니다.
 - ▶ 홍삼 진행중에는 '취사' 표시가 나타나며, 남은 시간이 표시 됩니다. ("홍삼 메뉴를 시작합니다." 하는 음성이 나옵니다.)

좋은 수삼을 골라 구입하는 요령

- 1. 몸통의 상하가 균형이 있으며, 상처나 흠집이 없이 되도록 매끈하여야 합니다.
- 2. 사람의 다리와 같이 뿌리가 균형있게 둘. 많으면 셋 정도이며, 잔뿌리가 골고루 무성해야 합니다.
- 3. 인삼의 주성분인 사포닌은 3년근 부터 생겨나기 시작해서 6년근에 최대치를 이룹니다. 따라서 6년근이 약성이 제일 좋긴하나, 가격이 비싸므로 앞서 설명한 홍삼 구입 요령을 참고하여 3-4년 근이라 하여도 좋은 수삼을 고를 수 있습니다.

수삼 저장법

- 1. 수삼은 인삼 잎이 지는 기을철에 채취하여 출하하므로 이 시기가 수삼을 싼 가격에 구입할 좋은 시기입니다.
- 2. 수삼은 $3 \sim 5$ 도 정도로 저온의 건조한 곳에서 보관하는 것이 좋으며, 냉장 보관을 요합니다.
- 3. 대개 수삼은 구입한지 2주가 지나면 부패되기 쉬우므로, 2주 내로 복용할 양만 구입합니다.

※ 홍삼 기능은 예약이 되지 않습니다.



만능찜 • 누룽지는 이렇게 하십시오

만능찜 사용 및 예약방법





뚜껑 결합 손잡이를 "읍"(잠김) 방향으로 돌리고, 메뉴/선택 버튼을 눌러 만능찜을 선택합니다.

- ▶확인 버튼이 점멸하고, 메뉴/선택, 취소, 압력취사 버튼이 켜집니다
- ▶만능찜 메뉴가 선택되었을때는 표시부에 20분이 표시됩니다. ("만능찜 확인버튼을 눌러주세요." 하는 음성이 나옵니다.)
- 2 확인버튼을 누르고 메뉴/선택 버튼으로 시간을 설정합니다.

"선택버튼으로 요리시간을 맞춘 후 취사버튼을 눌러주세요."하는 음성이 나옵니다.(메뉴별 시간 설정은 요리안내를 참조하세요.) ▶ 메뉴/선택 버튼이 점멸하고, 취소, 압력취사 버튼이 켜집니다.



버튼을 누르면 만능찜 시간이 5분씩 증가합니다. (90분이후에는 10분씩 증가합니다)

▶계속 누르고 있으면 연속으로 변합니다



버튼을 누르면 만능찜시간이 5분씩 감소합니다. (90분이후 에는 10분씩 감소합니다)

▶계속 누르고 있으면 연속으로 변합니다 3. 만능찜 시간은 10분~120분 까지 설정 가능합니다. 4. 원하시는 시간을 선택 후 확인버튼을 누르면 "취사나 예약버튼을 눌러주세요" 하는 음성이 나옵니다.





압력취사 / 백미쾌속 버튼을 누릅니다.

- ▶ 압력취사 / 백미쾌속 버튼이 점멸하고, 메뉴/선택, 취소 버튼이 켜집니다. 압력취사 / 백미쾌속 버튼을 누르면 만능찜 취사가 시작됩니다. 만능찜 취사가 시작되면 취사 표시가 나타나며 남은 시간이 표시됩니다. "만능찜 쿠쿠가 맛있는 요리를 시작합니다." 하는 음성이 나옵니다.
- 4 만능찜 예약은 이렇게 하십시오.

1. 현재 시각이 맞는지 확인합니다 2, 뚜껑결합손잖이를 "♠"(잠김) 방향 으로 돌리고 예약 바른을 누릅니다



3. 메뉴/선택 버튼을 눌러 예약시각을 설정하고 확인 버튼을 누릅니다.





4. 메뉴/선택 버튼을 눌러 만능찜을 선택하고 확인 버튼을 누릅니다.





5. 메뉴/선택 버튼을 눌러 민능찜 요리시간을 설정합니다



6. 확인 버튼을 누르고 압력취사 버튼을 누릅니다.



누룽지 만드는 방법

- 1. 뚜껑 결합 손잡이를 "▲"(잠김) 방향으로 돌리고 메뉴/선택 버튼을 눌러 누룽지를 선택합니다. (50쪽 참조)
- 2. 압력취사 / 백미쾌속 버튼을 눌러 취사를 시작합니다.
- 3. 누룽지가 완료되면 뚜껑을 열고 밥은 덜어내 드시고, 바닥의 누룽지는 기호에 따라 드시면 됩니다.
- ▶ 누룽지 취사는 최대 4인분까지만 가능합니다.
- ▶ 누룽지 취사시 물량은 "백미, 잡곡" 물눈금 기준으로 맞추시면 됩니다.
- ▶ 쌀을 너무 깨끗이 씻지 말고(물이 불투명할 정도)취사하십시오.
- ▶ 나룽지를 강하게(눌게)하고 싶은 경우, 물량을 맞춘 내솥을 제품에 넣고 뚜껑을 닫아 쌀을 30분 정도 물에 불린 후 취사하십시오.

9:00

VOICE(())

예약취사는 이렇게 하십시오

예약 취사하는 방법


현재 시각이 오후 9시이고 다음날 오전 7시 40분에 식사를 하고 싶을 경우

- 현재 시각이 맞는지 확인합니다.
 - ▶현재 시각을 맞추는 방법은 43쪽을 참조하십시오
 - ▶현재 시각이 맞지 않을 경우 예약취사 시각이 맞지 않으므로





- ▶메뉴/선택 버튼이 점멸하고, 확인, 취소, 압력취사 / 백미쾌속 버튼이 켜집니다.
- ▶예약 시각은 제품 출하시 오전 6시 30분에 맞추어져 있으므로 이 시각에 예약 취사를 원하시는 분은 예약시각 설정을 하지 않아도 됩니다.
- ▶뚜껑 결합 손잡이를 "角 "(잠김) 방향으로 돌리지 않고 예약 / 자동세척 버튼을 누르면 예약이 되지 않습니다.
- ▶예약 / 자동세척 버튼을 누르면 그림과 같이 기존에 설정되어 있는 예약 시각 표시가 나타나고 예약표시가 깜박거립니다. "선택버튼으로 취사완료 시각을 맞춘 후 취사나 확인버튼을 눌러주세요" 하는 음성이 나옵니다.
- ▶현미발아 메뉴의 경우 "[[]] "설정시에만 예약이 가능합니다.
- ※보온 중일 때 예약 취사를 설정하실 경우 취소버튼을 눌러 보온을 취소한후 예 약시간을 설정해 주십시오



- ▶확인 버튼이 점멸하고. 메뉴/선택. 취소. 압력취사 버튼이 켜집니다.
- ▶"**○**"버튼을 누를 때마다 10분 단위로 증가합니다. "(4)" 버튼을 누를 때마다 10분 단위로 감소합니다. 계속 누르고 있으면 연속으로 변합니다. (반복기능)

※오전/오후가 바뀌지 않도록 주의하십시오.



※예약시각 오전 7시 40분 설정시


4) 확인버튼을 누른 후 메뉴/선택 버튼을 눌러 원하는 메뉴를 선택합니다.

- ▶ "선택버튼으로 예약 메뉴를 선택한 후 취사버튼을 눌러주세요." 하는 음성이 나옵니다.
- ▶확인 버튼이 점멸하고, 메뉴/선택, 압력취사 / 백미쾌속, 취소 버튼이 켜집니다.
- ▶맞춤밥맛이 지원되는 메뉴(백미, 잡곡, 현미/발아, 누룽지, 세척미, 무쇠솥밥)의 경우 모드버튼이 켜집니다.

5) 압력취사 / 백미쾌속 버튼을 누릅니다.

- ▶압력취사 / 백미쾌속 버튼이 점멸하고, 메뉴/선택, 취소 버튼이 켜집니다.
- ▶ "백미 맛있는 취사가 예약 되었습니다.내일OO. OO시 OO분에 예약취사가 완료됩니다"하는 음성이 나옵니다.
- ▶예약 설정된 시각에 예약 취사가 완료됩니다. (취사량 및 사용조건에 따라 완료시각이 다소 차이가 날 수도 있습니다.)
- ▶한 번 설정되어 취사가 완료된 예약 시각은 항상 기억되므로 예약 시각을 맞출 필요없이 예약 버튼만 누르면 됩니다.
- ※예약 취사 시간은 메뉴별 최대인분 기준으로 설정되어 있으므로 소량 취사시 예약시간보다 일찍 취사가 완료될 수 있습니다.









예약취사는 이렇게 하십시오

예약 취사시 유의사항

1 예약 취사를 할 경우

- ▶쌀이 개봉된 지 오래되어 매우 말라버린 경우에는 층밥이 되는 수도 있습니다.
- ▶ 예약취사 설정시간 또는 주변 환경조건에 따라서 밥이 되거나 질어질 수 있으므로 내솥표시의 물(水)높이 기준에서 가감하여 물량을 조절해 주십시오.
- ▶예약 취사 용량이 많거나 장시간 예약취사를 설정하실 경우 멜라노이장(미세 밥 눌음)현상이 증가할 수 있습니다.
- ▶세척미는 침전된 전분이 많으므로 예약 취사 시 눌음이 발생할 수 있습니다. 세척미를 흐르는 물에 행궈 취사하시거나, 취사 용량을 적게 해주시면 눌음 정도가 감소합니다.

② 예약 시각 변경

▶예약시각을 변경할 경우는 취소 버튼을 2초 이상 눌러 취소시킨 후 다시 시작하십시오.

③ 예약 설정 가능 시간을 벗어난 경우

▶설정 시간이 예약 설정 가능 시간보다 짧았을 경우 즉시 취사를 시작합니다.

4 설정시간이 13시간을 초과할 경우

- ▶" *감* "가 표시되고 예약 시간은 자동적으로 13시간으로 변경됩니다.
 - 예) 오후 5시에 내일 오전 7시 취사 완료를 예약하면 (설정시간 14시간이 됨) "*검* "가 표시되고 예약 시각이 오전 6시로 자동 변경됩니다. (설정시간 13시간)
 - ※예약시간이 13시간을 초과할 경우 냄새 및 변색의 원인이 되고, 여름철에는 쌀이 쉬기 때문에 13시간 이하로 예약설정 가능시간을 설정하였습니다.
 - ※낮 12시에 예약취사 완료를 원하실 경우 오후 12:00로 설정해 주십시오
 - ※예약취사 기능은 현재시각 기준 1시간 후에서 13시간 이내로 취사완료를 원하실때 사용해 주십시오.
 - ※예약취사 진행중에 현재 시각을 확인하려면 확인 버튼을 누르면 현재 시각이 약 2초간 나타납니다.














	메뉴별 예약 설정 가능시간											
메뉴 구분	백미	백미쾌속	김초밥	잡곡	현미/발아	무쇠솥밥	영양밥	영양죽	누룽지	세척미	만능찜	자동살균세척 (스팀세척)
예약설정 기능시간	(37분+맞춤 밥맛시간 ~13시간	26분 ~13시간	51분 ~13시간	(52분+맞춤 밥맛시간) ~13시간	(62분+맞춤 밥맛시간) ~13시간	(40분)맞춤 밥맛시간 ~13시간	(37분+맞춤 법맛시간 ~13시간	71분 ~13시간	(42분+맞춤 밥맛시간) ~13시간	(44분+맞춤 밥맛시간) ~13시간	(설정시간 +1분) ~13시간	18분 ~13시간





식사하실 때

▶보온 중 식사를 하실 때 따끈따끈한 밥을 원하시면, 보온/재가열 버튼을 누르면 "따끈따끈한 보온/재가열을 시작합니다."하는 음성과 함께 보온재가열이 시작되고 9분 후 밥을 드시면 금방 지은 밥처럼 따끈따끈한 밥을 드실 수 있습니다.

〈보온중〉



표시부의 "計"는 보온경과 시간이 3시간임을 의미합니다.

〈재기열 중〉



표시부의 "[기계 표시가 빙글빙글 돌아 가며 재가열을 합니다.

〈재기열 완료〉



재가열이 끝나면 "보온재가열이 완료 되었습니다."하는 음성과 완료효과음 (법을 잘 저어주세요 쿠~쿠~)이 나온 후 다시 보온을 진행하며 보온경과 시간을 표시합니다.

(현재 보온온도 표시)



보온 중 확인 버튼을 누르면 현재 보온온도가 표시되고 다시 한번 누르면 현재 시각이 표시됩니다. 확인버튼을 1회 더 누르면 보온경과 시간을 표시합니다.

- ** 표시되는 보온온도는 온도감지기가 감지하는 온도이므로 사용조건 및 환경에 따라 밥 내부 온도와는 차이가 있을수 있습니다
- ※ 취사 후에는 밥이 뜨거우므로 설정된 보온온도보다 온도가 높을 수 있습니다.

※ 보온 중일 때 현재시각을 변경할 경우에는 43쪽을 참조하여 주십시오

- ▶재가열 기능을 너무 자주 사용하시면 밥이 변색되거나 마르는 경우가 있습니다. 1일 1~2회만 사용하세요.
- ▶별도의 전열기구나 가스불로 밥을 지은 경우는 밥을 밥솥에 담은 후 보온/재가열 버튼을 1회 눌러 보온을 합니다. 이때, 표시부에는 "[[]] "가 표시됩니다. (이와 같이 차가운 밥솥에 뜨거운 밥을 옮겨 담아 보온할 경우 냄새나 변색이 있을 수 있습니다.)
- ▶보온 24시간 경과 이후부터 보온 경과시간을 깜빡이게 표시하여 보온이 장시간 경과 되었음을 알립니다.

보온할 때 주의사항

취사 직후나 보온 중 뚜껑을 열 때 압력에 의해 뚜껑이 잘 안열리는 경우가 있습니다. 뚜껑을 열 때는 압력추를 젖혀 압력이 완전히 제거된 다음 열어 주십시오.

보온 또는 재가열시 반드시 뚜껑 결합 손잡이를 "▲"(잠김)방향으로 돌려주십시오. (뚜껑 열림 버튼 파손 및 보온성능에 영향을 줍니다.)

취사 완료 후 밥을 밑면까지 골고루 섞어 보온하면 밥상태가 좋습니다. (적은 밥은 내솥의 중앙에 불룩하게 모아서 보온하십시오.)

보온 중 내솥에 밥이 없거나 사용하지 않을 경우에는 취소 버튼을 눌러 보온을 취소하거나. 전원코드를 콘센트에서 뽑아 주십시오.

주걱을 내솥을 넣어 둔 채로 보온하지 마십시오. 특히, 나무주걱 등은 세균을 발생시켜 냄새의 원인이 됩니다. 장시간 보온하면 밥이 변색되고 냄새가 날 수 있으므로 보온은 12시간 이내로 하는 것이 좋습니다.

특히, 압력밥은 특성상 일반 밥솥의 밥보다 변색이 빨리 됩니다. 보온 24시간 경과 이후부터 보온 경과시간을 깜빡이며 표시합니다.

잡곡,현미는 백미보다 보온 상태가 좋지 않으므로 가급적 보온은 피하십시오.

보온 중 내솥의 가장자리나 증기 배출구 하단부는 부분적으로 밥이 하얗게 변하고 부풀어 오를 수도 있습니다. 이럴 경우는 밥을 저어서 섞어 주십시오.

너무 적은 밥을 보온하거나 먹다 남은 밥이나 찬밥을 보온 중인 밥과 섞어서 보온하지 마십시오. 밥에서 냄새가날 수 있습니다.(찬밥은 전자레인지를 이용하십시오.)




밥을 맛있게 보온하려면

보온온도 조정방법

청소를 지주하고 물을 끓여 소독을 하였는데도 냄새가 나고 물이 맺히거나 색깔이 변하는 경우는 보온 온도가 맞지 않은 경우이므로 보온 온도를 조정합니다.

보온 온도를 조정하고자 하실 때는 서비스 센터로 문의 하시면 상세히 안내해 드리겠습니다.

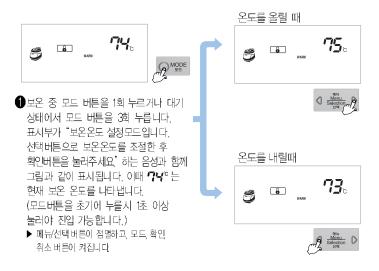

②-1 메뉴/선택 버튼을 눌러 표시부가 74° + 75° + 75° + 77° **78°→ 79°→80°** 와 같이

- 변하도록 합니다.
- ▶ 확인버튼이 점멸하고, 모드, 메뉴/선택, 취소버튼이 켜집니다.
- ▶ 계속누르고 있으면 연속으로 변합니다.
- ❸ 원하는 온도를 설정한 후 확인버튼을 누르면 설정된 온도가 "보온온도 설정이 완료되었습 니다"하는 음성과 함께 자동으로 입력됩니다. (취소 버튼을 누르거나 입력없이 7초가 경과 하면 기능이 취소되고 대기상태로 돌아갑니다.)
- **2**-2 메뉴/선택 버튼을 눌러 표시부가 74°+73°+72°+71°+70°+55°
 - 와 같이 변하도록 합니다.
 - ▶ 확인버튼이 점멸하고, 모드, 메뉴/선택, 취소버튼이 켜집니다.
 - ▶ 계속누르고 있으면 연속으로 변합니다.


※ 제품 출고 시 설정된 기준온도는 설명서와 다를 수 있습니다.

온도조정치

1, 쉰 냄새가 많이 나고 물이 많이 맺하는(밥이 삭는)경우 : 보온 온도가 낮은 경우 입니다. 보온 온도를 1~ 2° C정도 높여 줍니다. 2. 밥 색깔이 심하게 누렇고 밥이 마르면서 냄새가 날 경우 : 보온 온도가 높은 경우 입니다. 보온 온도를 1~2℃정도 낮춰 줍니다.

맞춤보온 기능 조정방법

보온 시 뚜껑을 열 때 물이 많이 흐를 경우나 밥 가장자리에 밥 퍼짐 현상이 생길 경우에 사용합니다.

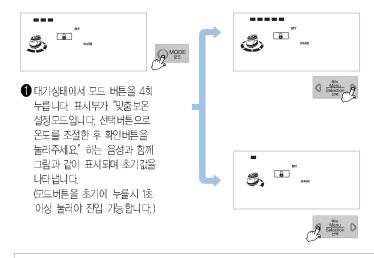

- ② -1 메뉴/선택 버튼을 눌러 표시부가 그림과 같이 변하도록 합니다.(높임)
 - ▶ 확인 버튼이 점멸하고 모드, 메뉴/선택 취소 버튼이 켜집니다.
 - ▶ 계속 누르고 있으면 연속으로 변합니다.
- **3** 원하는 값을 설정한 후 확인버튼을 누르면 설정된 값이 "맞춤보온 설정이 완료되었습니다" 하는 음성과 함께 자동으로 입력됩니다. (취소버튼을 누르거나 입력없이 7초가 경과 하면 기능이 취소되고 대기상태로 돌아갑니다.)
- **2**-2 메뉴/선택 버튼을 눌러 표시부가 그림과 같이 변하도록 합니다.(낮춤)
 - ▶ 확인버튼이 점멸하고, 모드, 메뉴/선택, 취소버튼이 켜집니다.
 - ▶ 계속누르고 있으면연속으로 변합니다.
- 뚜껑을 열때 물이 많이 흐를 경우 : 메뉴/선택 버튼을 눌러 설정모드를 높여 줍니다.
- 밥 가장자리에 밥퍼짐 현상이 생기는 경우 : 메뉴/선택 버튼을 눌러 설정모드를 낮춰 줍니다.

밥을 맛있게 보온하려면



취침보온 모드 설정방법

- ▶ 장시간 보온을 유지할 시 밥품질(변색, 마름, 냄새등)의 저하예방을 위해 취침시간(PM 10 : 00 ~AM 04 : 00)동안 보온온도를 저온상태로 유지하는 기능으로 필요에 따라 설정해 주십시오.
 - ▶ 설정방법



- 1. 대기상태에서 모드 버튼을 6회 누르면 취침보온 모드로 진입합니다. 모드버튼을 초기에 누를시 1초이상 눌러야 진입 가능합니다.
- 2 "취침보온" 설정모드로 들어왔을 때 "취침보온 설정모드입니다. 선택 버튼으로 취침 보온을 선택 또는 해제한 후 확인버튼을 눌러주세요."하는 음성이 나옵니다. 이때, 메뉴/선택 버튼이 점멸하고, 모드,확인,취소 버튼이 켜집니다.
- 3. 메뉴/선택 버튼을 누르면 "취침 보온이 선택되었습니다. 확인 버튼을 눌러주세요"하는 음성이 나옵니다. 원하시는 모드를 선택한 후 확인 버튼을 눌러 주십시오.이때, 확인 버튼이 점멸하고, 모드,메뉴/선택,취소 버튼이 켜집니다.
- 4. "취침보온" 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소 되었습니다."하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.
- ▶ 설정 상태에서 해제방법



- 1. 대기상태에서 모드 버튼을 6회 누르면 취침보온 모드로 진입합니다. 모드버튼을 초기에 누를시 1초이상 눌러야 진입 가능합니다.
- 2 "취침보온" 설정모드로 들어왔을 때 "취침보온 설정모드입니다. 선택 버튼으로 취침 보온을 선택 또는 해제한 후 확인버튼을 눌러주세요"하는 음성이 나옵니다. 이때, 메뉴/선택 버튼이 점멸하고, 모드,확인,취소 버튼이 켜집니다.
- 3. 메뉴/선택 버튼을 누르면 "취침 보온이 해제되었습니다. 확인 버튼을 눌러주세요"하는 음성이 나옵니다. 원하시는 모드를 선택한 후 확인 버튼을 눌러 주십시오.이때, 확인 버튼이 점멸하고, 모드,메뉴/선택,취소 버튼이 켜집니다.
- 4. "취침보온" 설정모드 진입 후 취소 버튼을 누르거나 아무런 버튼 입력없이 7초가 지나면 "시간이 초과되어 기능 설정이 취소 되었습니다."하는 음성과 함께 기능이 설정되지 않고 취소되며 대기모드로 돌아갑니다.
- ▶ 본 기능을 설정시 취침시간 동안 보온온도가 저온상태로 유지되오니 취침시간에 보온이 필요하신 분은 설정하지 마십시오. 기온이 높은 여름철에는 밥이 상해서 변색되거나 냄새가 날 수 있습니다. 여름철에는 "취침보온" 모드 설정을 가급적 하지 마십시오.
- ▶ 본 기능은 제품 출하시 해제 상태로 되어 있으니 필요에 따라 설정해 주십시오.

보온 시 냄새가 날 때

- ▶ 청소를 지주 해 주십시오. 특히, 뚜껑부의 청소상태가 나쁘면 세균이 번식하여 보온시 냄새가 날 수 있습니다.
- ▶ 외관상 깨끗하더라도 곳곳에 세균이 서식하여 보온시 냄새를 발생시킬 수 있으므로 냄새가 많이 날 경우는 지동살균세척(스팀 세척) 메뉴를 이용하여 세척하여 주십시오. 자동살균세척(스팀세척) 완료 후 내솥을 반드시 깨끗이 씻어 냅니다. (47쪽 참조)
- ▶ 탕이나 찜 등의 요리를 한 후 깨끗이 씻어내지 않고 보온하면 밥에 냄새가 배어들 수 있습니다.



절전 기능은 이렇게 하십시오.

대기모드 절전기능이란

▶ 전원코드를 뽑지 않으면 동작하지 않는 대기상태라 할지라도 약간의 전력이 소모됩니다. 이를 대기전력이라고 하는데 이를 절감하기 위해 밥솥내부의 전기회로를 외부 전원으로부터 차단시켜 전력 소모를 최소(1와트미만)화 하는 기술입니다.

수동 사용방법

▶ 절전 시작방법

대기 상태에서 취소 버튼을 3초간 누르고 있으면 "절전모드를 시작합니다."하는 음성과 함께 절전기능이 설정됩니다.



▶ 절전 종료방법

방법1) 아무 버튼이나 누르면 "절전모드가 종료되었습니다. 원하시는 기능을 선택해 주세요"하는 음성과 함께 절전모드가 해제되고 대기 상태로 돌아갑니다 방법2) 뚜껑 결합손잡이를 열거나 닫으면 "절전모드가 종료되었습니다. 원하시는 기능을 선택해 주세요"하는 음성과 함께 절전모드가 해제되고, 대기 상태로 돌아갑니다.



자동 사용방법

「자동절전기능 설정모드」에서 대기시간을 'O'이 아닌 값으로 선택하면 대기상태에서 선택된 시간이 경과한후 자동으로 절전 기능이 시작됩니다.(※제품출고시 설정된 값은 60분입니다.)

만약 대기시간이 경과되기전 뚜껑결합 손잡이를 돌리거나 버튼을 누르면 대기시간이 선택된 설정값부터 다시 감소합니다.

▶ 설정방법



- 1. 대기상태에서 모드 버튼을 8회 누르면 "자동절전기능" 모드로 진입합니다. 모드버튼을 초기에 누를시 1초이상 눌러야 진입 가능합니다.
- 2, "자동절전기능" 설정모드로 들어왔을 때 "자동절전기능 설정모드입니다. 선택 버튼으로 대기시간을 선택한 후 확인 버튼을 눌러주세요."하는 음성이 나옵니다.
- 3. 메뉴/선택 버튼을 눌러 '0'분을 선택하면 절전기능이 해제되어 자동절전기능을 지원하지 않는 상태로 됩니다. 원하시는 시간을 설정한 후 확인 버튼을 눌러 주십시오.
- 4. "자동절전기능"설정모드 진입 후 아무런 버튼 입력없이 7초가 지나면 취소 버튼을 누르면 "시간이 초과되어 기능 설정이 취소되었습니다."하는 음성과 함께 기능이 설정되지 않고 취소되며 대기 모드로 돌아갑니다.

버튼 잠금기능은 이렇게 하십시오

버튼 잠금기능

▶ 터치 방식의 버튼으로 청소 시나 어린이 접촉에 의한 오동작을 방지하기 위해 터치버튼에 대해 잠금(LCCK)을 설정할 수 있는 기능 입니다.

▶ 설정방법



- 1. 취사. 예약. 보온. 재가열 중이나 대기상태에서 "확인" 버튼을 3초이상 누르면 버튼 잠금이 설정됩니다.
- 2. 버튼잠금이 설정 되었을때, "버튼잠금이 선택되었습니다."하는 음성이 나옵니다. 이때, 화면에 버튼잠금이 표시됩니다.

▶ 해제방법



- 1. 버튼 잠금 상태에서 "확인" 버튼을 3초이상 누르고 있으면 버튼잠금이 해제 됩니다.
- 2. 버튼잠금이 해제 되었을때, "버튼잠금이 해제되었습니다." 하는 음성이 나옵니다. 이때. 화면에 버튼 잠금 표시가 사라집니다.
- ※ 버튼잠금이 설정된 상태에서 확인버튼을 제외한 다른 버튼을 누를 경우, 부저음이 발생됩니다.
- ※ 확인버튼을 3초이상 눌러 버튼잠금을 해제한 후 원하시는 기능을 설정하실 수 있습니다.
- ※ 버튼 잠금이 설정된 상태에서 전원 OFF후 재인가시 버튼 잠금 기능이 해제됩니다.

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 고객상담실로 문의하시기 전에 이래 사항을 확인해 주십시오.

 증 상	확인사항	조치사항
5 6		
밥이 되지 않을 때	• 압력취사 버튼을 눌렀습니까?	• 원하는 메뉴선택 후 반드시 압력취사 버튼을 1회 눌러 표시부에 "[_]" 표시가 나타나는지 확인하십시오.
	•취시중 정전이 되지 않았습니까?	1외 눌러 표시구에 (_ j 표시가 나타나는지 확인이업시오. • 정전보상 기능에 대해서는 43쪽을 참조하십시오
	* 취직성 경찰에 되자 ᆭᆻ답니까!	* 영산보장 기장에 대에서는 40독교 검포하다시고.
밥이 설익거나 퍼석할 때	• 계량컵을 시용하셨습니까?	• 44~45쪽을 참조하여 올바르게 사용하십시오.
또는 층밥이 될 때	•물 조절은 정확히 하셨습니까?	
	•쌀을 깨끗이 씻었습니까?	
	•쌀을 장시간 불린 후 취사하셨습니까?	
	•쌀을 개봉한지 오래되어 너무 말라있지 않습니까?	•물을 반눈금 정도 더 넣고 취사하십시오.
콩(잡곡/현미)이 설익을 때	• 콩(잡곡/현미)이 너무 마르지 않았습니까?	•콩(잡곡/현미)을 불리거나 삶아서 잡곡/현미메뉴에서
		취사를 하십시오. 잡곡의 종류에 따라 설익을 수도 있습니다.
밥이 너무 질거나 된밥일 때	•메뉴 선택은 맞게 하셨습니까?	• 원하는 메뉴를 바르게 선택하십시오.
	•물 조절은 정확히 하셨습니까?	•물 조절을 정확히 하십시오.(44~45쪽 참조)
	•뜸을 들이는 상태에서 뚜껑을 열지는 않았습니까?	• 취사 완료음이 울린 후 압력이 완전히 제거된 다음 뚜껑을 열고 밥을 섞어주십시오
취사 도중 밥물이 넘칠 때	• 계량 컵을 사용하셨습니까?	•44~45쪽을 참조하여 올바르게 사용하십시오
	•물 조절은 정확히 하셨습니까?	
	• 메뉴 선택을 정확히 하셨습니까?	
보온 중 냄새가 날 때	• 뚜껑을 꼭 닫았습니까?	• 뚜껑을 완전히 닫아주십시오.
	• 보온중 전원플러그가 콘센트에서 빠지지 않았습니까? • 12시간 이상 보온하였거나 너무 적은 밥을	• 보온중 전원플러그를 항상 꽂아 주십시오. • 보온시간은 기능한 12시간 이내로 하십시오.
	* IZA인 이상 모든이었거나 나무 적는 답들 보온하지 않았습니까?	•모든시인는 기능한 12시인 이대도 아십시오.
	• 주걱이나 식은밥 혹은 다른 종류의 밥을	•백미 이외의 메뉴와 식은밥은 보온하지 마십시오
	넣어서 보온하지 않았습니까?	
" <i>{ ","{ } _ [</i> " 표시가 나타날때	•온도감지기 또는 냉각팬에 이상이 있을 때	• 전원을 치단 후 고객상담실로 문의하십시오
" % " 표시가 깜빡일 때	나타납니다.	
보온 중 보온경과시간 표시가	•보온 후 24시간이 경과하지 않으셨습니까?	•보온 24시간이 경과하면 보온이 장시간 경과되었음을
깜빡일때		알라는 기능입니다.
보온 중 밥이 많이 식었거나	• 보온을 취침보온모드로 설정하지 않으셨습니까?	•필요에 따라 취침보온모드를 해제 또는 설정한 후
물이 많이 흐를 때		보온하여 주십시오
" <i>Edo</i> " 표시가 나타날때	•취사 완료 후 전원이 인가된 상태에서 한번도 뚜껑	•뚜껑 결합 손잡이를 "≧"(열림) 방향으로 돌린 뒤 다시
	결합 손잡이를 "급"(열림) 방향으로 돌리지 않고 보온이 취소된 상태(대기상태)에서 압력취사	" 🖨 "㈜김) 방향으로 돌려 주십시오
	버튼을 누르지 않으셨습니까?	
" <i>Eco</i> " 표시가 나타날때	•분리형 커버가 장착되어 있습니까?	•분리형 커버를 장착해 주십시오.(40쪽 참조)
		•분리형 커버가 장착된 상태에서 " $m{\it Eco}$ " 표시가
		계속 점멸할 경우 고객 상담실로 문의하십시오.
보온 중 경고음이 울리거나	•분리형 커버가 장착되어 있습니까?	•분리형 커버를 장착해 주십시오.(40쪽 참조)
보온 중 재기열이 되지 않을 때		

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 고객상담실로 문의하시기 전에 이래 사항을 확인해 주십시오

증 상	확인사항	조치사항		
버튼 입력시 "[_]"표시가 나타날 때	• 내솥이 제품에 들어 있습니까? • 사용전원을 확인 하셨습니까?	 내솥이 들어 있지 않은 상태에서는 버튼조작이 되지 않습니다. 내솥을 넣어 주십시오 본 제품은 120V전용 제품입니다. 전원을 바르게 사용하십시오. 		
압력취사, 예약 등의 버튼이 작 동되지 않고 "E () 1" 표시가 나타날 때	 뚜껑 결합 손잡이를 "▲ "(잠김) 방향으로 돌리셨습니까? 잠김 표시에 불이 들어와 있습니까? 	 뚜껑 결합 손잡이를 완전히 "▲"(잠김) 방향으로 돌립니다. 뚜껑 결합 손잡이가 완전히 체결되지 않으면 압력취사 / 백미 쾌속 예약 / 자동세척버튼이 작동되지 않습니다. 		
밥이 심하게 눌을 때	온도감지기, 내솥외면에 밥알이 심하게 눌어 붙어 있거나 이물질이 있지는 않습니까? "쿠쿠 맞춤밥맛" 또는 "맞춤취사" 기능을 설정하지 않으셨습니까?	온도감지기, 내솥외면의 이물질을 제거해 주십시오. (40쪽 참조) 필요에 따라 맞춤밥맛 또는 맞춤취사 기능을 해제 또는 설정한 후 취사하여 주십시오.		
장시간동안 취사가 완료되지 않고 " E []] " 표시가 나타날 때	• 시용전원을 확인 하셨습니까?	• 제품에 이상이 생겨(하더단선, 열량 부족 등) 장시간 밥이 완료되지 않을 때 나타나는 표시입니다. 전원을 차단후 고객상담실로 문의하십시오 • 물만 넣고 장시간 가열할 경우에 " E 03 "표시가 나타나는 것은 정상입니다. • 본 제품은 120V 전용 제품입니다. 전원을 바르게 사용하십시오		
예약 취사 시각이 맞지 않을 때	• 현재 시각이 맞습니까? •오전 오후를 잘못 선택하지 않았습니까? • 예약시간을 13시간 이상으로 선택하지 않았습니까?	• 현재시각을 맞추지 않으면 예약시각에 취사가 완료되지 않습니다. 현재시각을 맞추십시오. (43쪽 참조) • 오전, 오후를 확인하십시오. • 최대 예약시간은 13시간입니다. (55~56쪽 참조)		
취사 직후나 보온 중 밥에서 이상한 냄새가 날 때	• 닭찜, 갈비찜 등의 요리를 하신 후 청소를 깨끗이 하셨습니까?	• 40쪽을 참조하여 뚜껑부의 패킹을 깨끗이 닦아낸 후 사용하여 주십시오.		
뚜껑이 닫혀지지 않을 때	 뚜껑 결합 손잡이가 ()가 "ሬ"(열림) 방향으로 완전히 돌려졌습니까? 내솥에 밥이나 뜨거운 음식물이 들어 있지 않습니까? 내솥을 본체에 완전히 넣었습니까? 	 뚜껑 결합 손잡이를 '' '' '' '' '' '' '' '' '' '' '' '' ''		
"E_u,:00" 번갈아 가면서 표시가 나타날 때	•마이컴 전원에 이상이 있을때 나타납니다.	• 전원을 차단후 고객성담실로 문의하십시오		
"E_E;:00" 번갈아 가면서 표시가 나타날 때	• 환경선서에 이상이 있을때 나타납니다.	• 전원을 차단후 고객상담실로 문의하십시오		
취사, 보온/재가열, 예약 시작시 " <i>바투</i> "표시가 나타날때	•내솥이 제품에 들어 있습니까?	• 전용 내솥을 넣어 주십시오. 지속적으로 표시가 나타날 경우에는 전원을 차단 후 고객상담실로 문의하십시오.		
제품 동작중 "片 " 또는 " 片 " 표시가 나타날 때		•전원또는 제품에 이상 점검 기능입니다. 지속적으로 표시가 나타날 경우에는 고객상담실로 문의 하십시오		

고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 고객상담실로 문의하시기 전에 이래 사항을 확인해 주십시오.

THE II TO TOME OF IE	▼ 제품에 이성이 성있을 성구에는 고객성 함말도 문의하시기 전에 어때 저성을 확인에 무겁지고. 							
증 상	확인사항	조치사항						
뚜껑 결합 손잡이가 "열림" 방향으로 움직이지 않을 때	 취사 또는 요리중에 뚜껑 결합 손잡이를 돌리지 않았습니까? 증기가 완전히 배출되지 않은 상태에서 뚜껑 결합 손잡이를 돌리지 않았습니까? 	 취사 또는 요리중에는 뚜껑이 열리지 않습니다. 뚜껑을 강제로 열지 마십시오. 부득이한 경우는 취소 버튼을 2초간 눌러 취소시킨 다음 압력추를 젖혀 증기를 완전히 빼낸 후 열어 주십시오. 압력추를 젖혀 증기를 완전히 빼낸 후 뚜껑을 열어 주십시오. 						
뚜껑 결합 손잡이가 "열림" 방향으로 완전히 돌아갔는데도 뚜껑이 열리지 않을 경우		•압력 때문입니다. •압력추를 젖혀 증기를 완전히 빼낸 후 뚜껑을 열어 주십시오						
뚜껑 사이로 증기가 누설되거나 "삐"하는 휘파람 소리가 날 때	• 패킹에 이물질(밥알 등)이 묻어있지 않습니까? • 패킹이 낡지 않았습니까?	 패킹을 행주나 부드러운 형점으로 깨끗이 닦은 후 사용하십시오 패킹 주변은 항상 깨끗이 유지시켜 주십시오. 증기가 누설되면 곧바로 취소 버튼을 2초간 눌러 증기를 빼낸 후 전원플러그를 뽑아 사용을 중지하고 고객상담실로 문의하십시오. 패킹의 수명은 약 12개월이므로 1년에 한번씩 교체하여 사용하는 것이 좋습니다. 낡은 패킹을 계속하여 사용시증기가 누설되어 압력취시법이 되지 않을 수 있습니다. 						
취사 또는 요리중 취소 버튼이 눌러지지 않을 때	• 내솥의 내부가 뜨겁지 않습니까? • 버튼잠금이 설정되어 있지 않습니까?	 취사 또는 요리중 부득이하게 취소할 경우, 내솥 내부온도가 높으면 안전을 위해 취소 버튼을 2초간 눌러야 취사 또는 요리가 취소됩니다. 취사 또는 요리가 취소되면 자동증기배출장치로 증기가배출되면서 내용물이 비산할 수 있으므로 얼굴과 손등에 화상을 입을 수 있으니 주의하십시오. 확인버튼을 3초이상 눌러 버튼잠금 기능을 해제하여주십시오. 						
취사나 보온시 이상한 소음이 날 때	• 취사시 바람부는 소리("붕")가 나지 않습니까? • 취사 및 보온중 "찌"하는 소리가 납니까?	 내부 부품의 열을 식혀주기 위해 송풍모터가 돌아가는 소리입니다. 정상입니다. 취사 및 보온중 "찌"하는 소리는 IH 압력밥솥이 동작 될 때 나는 소리입니다. 정상입니다. 						
현미가 제대로 발아되지 않을때	정격용량 이상의 현미를 넣고 발아시키지 않았습니까? 묵은 현미를 사용하지 않았습니까?	• 정격용량의 현미를 넣어주십시오. • 묵은 현미나 오염된 현미를 사용했을 때 발아율이 떨어질 수 있습니다.(51쪽 현미 구입방법 참조)						



Tasty Rice

Multigrain Rice

Boiled Rice



Ingredients

Rice 6 cups

*The "cup" in ingredients means a measuring cup in the rice cooker, 1 cup (180cc) is for one pleson.

Recipe

- Put clean-washed rice in the inner pot and pour water by water gradation 6.
- @Firstly, lock the cover, and select [White Rice] in the menu, and then push the [Pressure Cook / turbo] button.
- Mix rice when cooking is finished.

Reference

According to gradation on the inside of inner pot, when cooking with newly harvested rice the amount of water should be less than the gradation, and when cooking with old rice the amount of water should be more than gladation.(Control the amount of water according to preference of each family)

Five-grain Rice



Ingredients

Rice 1,5cup, millet1/3cup, glutinous rice1/2cup, red bleans 1/3cup, sorghumt/3cup and salt 1

Recipe

- Wash rice, glutinous irce, millet and sorghum clean and scoop them with a landing net.
- 2 Boil red beans on high heat, and then put only water in which red beans were boiled in another
- 18 Put rice, glutinous rice, millet and sorghum on a landing net into the inner pot and pour water in which red beans were boiled and water by white rice water gradation 3.
- ◆Put the boiled red beans and then look the cover. After select [multigrain] in the menu, push.
- 6 Mix rice when cooking is finished.

Reference

Oriental medicine calls red beans as Jeoksodu which holds moisture, removes steam and discharges accumulated pus as well as relieving edema by making thirst and diarrhea stopped and bladder empty.

Multigrain Rice

Boiled Fresh Germinated Brown Rice



Ingredients

Brown rice 4 cups

Recipe

- Put washed brown rice into the inner pot, and then put it into the inner pot and pour water by water gradation.
- After locking the cover and choosing [germinaled blown rice] in the menu, push the button of [Piessure Cook / tuiloo] button after setting up the time of germinated brown rice for four hours,
- Mix rice when cooking is finished.

Reference

- ·Control the time of germinated blown rice according to each pleference.
- · When cooking with germinated brown rice, set up germinating time for 0 hour if you want to have 100% boiled brown rice without germination,

Boiled Brown Rice with Red Beans



Ingredients

Brown rice 1 cup, rice 2 cups and red beans 1/3 cup

Recipe

- Boil red beans until it become soft, but not to break the shape of red beans and separate it from water,
- Wash brown rice clean and put it in the inner pot. Put the boiled red beans after pouring water by germinated brown rice water "scale 3".
- After locking the cover and choosing [germinated blown rice] in the menu, push [Pressure Cook / turbo] button after setting up the filme of germinated brown rice for four hours,
- Mix rice when cooking is finished.



Well-being Boiled Rice

Saessak Bibimbap (rice with sprout and vegetables)



Ingredients

2 cups of brown rice and some sprouts and vegetables Seasoning red pepper paste: Red pepper paste: (Zoup, beef (crushed) 40 g, sesame oil 1 tablespoon, honey 1 tablespoon and sugart tablespoon

Recipe

- Wash brown rice clean, put it into the inner pot and pour water by germinated brown rice water "scale 2".
- After booking the cover and choosing [germinated brown rice] in the menu push [Ressure Cook / turo of button after setting up the time of germinated brown rice for four hous.
- Of Pour sesame oil in a pot and stir—fry the crushed beef, Stir—fry it a little more after stirring up it with red pepper paste and 1/3cup of water in order to be thick put sugar, honey and sesame oil.
- After stirring up rice when it is changes to heating mode, put the prepared sprouts and vegetables on germinated brown rice.
- 6 Put red pepper paste so that sprouts may not cause a mess.
 - Broccoli sprout: Prevention of cancer,
 - Chinese cab bage sprout: Good for stomach and improve constipation
- Turnip sprout: improve hepatitis and jaundice,
- Cabbage sprout: include selenium, preventing aging and cancer
- Daikon sprout: Lowers body heat and makes swelling subside,
- Wheat sprout: purify blood

Nutrious Rice

: Nutrious Rice



Ingredients

Rice 4cups, fresh gin seng 4 roots, chestnut 4 units, jujube 4 units, ginkgo nut 12 units and refined rice wine 2 tablespoon

Marinade: Soy sauce 4 tablespoon, chopped scallion 2 tablespoon, crushed garlic 1/2 tablespoon, red pepper powder 1/2 teaspoon, ground sesame mixed with salt 2 teaspoon and sesame oil 1 teaspoon

Recipe

- 1 Cut out the rhizome of fresh ginseng clearly and chop them into slices.
- Peel the skin of chestnuts and cut them into two pieces. After washing jujub es clean and separating their seeds from them, cut them into two pieces.
- Stirfry gingko nuts with some oil and peel their skins, or put gingko nuts in boiled water for 2~3 minutes and peel their skins with a spoon.
 After putting clean-washed rice in the inner pot and pouring water by white iroe
- water "scale 4", stir it up with two tablespoons of refined rice wine.
- 9 Rut fesh ginseng, chestruts, ging konuts and jujubes pepaled in step Np.4.
 6 After Locking the cover and choosing [Nutrition Rice] in the menu, push [Pressure Cook / turb o] button.
- Mix rice when cooking is finished, mix marinade prepared according to your preference with rice.

References

When nutrious rice is cooked, there may be differences in melanoid ine according to amount or conditions of materials (jujube, fresh ginseng) after cooking is completed. Therefore, control the amount of food according to your preference.

Healthy Porridge

Special Porridge

Pine Nut Porridge



Ingredients

Rice 1 cup, pline nut 1/2 cup and some sat

Recipe

- Wash ince and pine nuts clean,
- Put rice on a landing net and crush pine nuts with an electric mixer.
- Our water on the rice and the crushed pine nuts by nutrition porridge water "scale 1,5".
- After locking the cover and choosing [Nutrition Porridge] in the menu, push [Pressure Cook / Jurbo] button.
- Mix rice when cooking is finished, and stir it with salt according to your preference.

References

- t is important to cook porridge according to the time, And cooled down porridge or reheated porridge is not tastly.
- ■t is good to eat it with watery plain kimichi, well-digesting fish boiled in soy sauce and Pollack lint.
- ■White porridge is cooked in the same way as pine nut porridge in the form of putting only rice.

■How to chose a Korean pine rut: There is gloss or luster on the pine nut and no outer seed. And there should be a pine nut perfume or pineresin perfume.

: Special Chicken Porridge



Ingredients

Rice 1cup, chicken 200g, chicken soup 600cc, green pepper 1 unit, red pepper 1 unit and some salt Sæsoning: Chopped scalion 1 tablespoon, crushed gartic 1

- critiques scallici i habespoons, some tablespoons soy souce2 tablespoons, some grounds as ame mixed with sat, sea ame oil 2 teas poons and some ground papper

Recipe

- Wash rice dean and put fin water for more than one hour,
- Boil well-timmed chicken for a long time. Tear it into pieces and season them with the above materials.
 Separate seeds from red peppers and green
- peppers and chop them into pieces
- Remove oil from chicken soup and put it on absorbent gauze,
- Put step Nb. 1, 2 and 3 into the inn er pot and pour the chicken soup.
- Pour water by nutrition porridge water "scale 2".
 After locking the cover and choosing [nutrition
- After locking the cover and choosing Inutrition poridge in the menu, push [Plessure Cook / turb di button
- Mix rice when cooking is finished and stirit with salt according to your preference,

: White Porridge



Ingredients

Rice 1 cup

Recipe

- Wash rice clean and put it into the inner pot, And pour water by nutrition porridge water "scale 1".
- After locking the cover and choosing [nutrition porridge] in the menu, push [Pressure Cook / turb d button.
- Porridge is one of the oldest food developed in our tradition and culture.

It is presumed that people in the New Stone Age with agricultural culture boiled grain with water, It is the origin of porridge,



Red Ginseng

Red Ginseng



Ingredients

Large fresh ginseng 300g

Recipe

- Out the rhizome of fresh ginseng and wash it clean, paying attention so that its roots may not fall out and fresh ginseng may not be damaged.
- Pour 4 cups of water into the inner pot, place clean-washed steam plate on the inner pot and put fresh ginseng on the steam pot.
- After locking the cover and choosing [Red Ginseng] in the menu, select the steam aging time of your choice then pless the [Pressure Cook / turb button. (The initial setting time is 12hours. The setting time is adjustable from 2 to 24 hours]
- Without breaking the steam-aged ginseng, take the steam plate out of the oven, put 6 cups of water, then press the pressure cooking button after setting the decording time of your choice. (After decording is completed, keep it cold)

Note

Dry ginseng in a cool place where ventilation is good, where mold can not grow. Decoct ginseng with puritied water or clean tap water.

Effect of red ginseng

Red ginseng increases defensive immunity against different kinds of diseases and stress from the environment, an effect of adaptogen, which makes the body adapt to the environment more easily. It is scientifically proven.

Baby Food

Sweet Pumpkin Soup



* Post Baby Food (after 12 months)

Ingredients


Sweet pumpkin 200g, bread crumbs 2 tablespoons, water 1/2cup, some salt and some milk

Recipe

- After selecting well-ripened yellow sweet pumpkin, peel its skin and remove its seeds, then cut it into thin slices and rinse them with water.
- thin slices and rinse them with water,
 Place step no. 1 with bread drumbs, 2 tablespoons of bread drumbs and 1/2 cup of water in the imer pot.
- Alter boking the cover and choosing [Liniversal Steam] in the menu lautton, push [Plessure Cook / turbo button after setting up the time of universal steam 10 minutes.
- After cooking is completed, mash it up with a rice paddle. When it is hot, mix it with milk.

References (Notes)

Sweet Potato & Apple Porridge



* Post Baby Food (after 12 months)

Ingredients

Sweet potato100g, apple100g, water1/4cup and some honey

Recipe

- Peel the skins of apple and sweet potato and cut them into thin slices.
- Ploae the recipe no 1 and with 1/4 cup of water in the inner pot
- After locking the cover and choosing Universal Steam) in the menu button, push [Pressure Cook / tulbo] button after setting up the time of universal steam for 20 minutes.
- After cooking is completed, mash up it with a rice paddle and mix it with some honey.

Thin Rice Gruel with Vegetables



Ingredients

Fice1,2cup, broccoli30g, water1/2cup and some salt

Recipe

- After washing the rice clean and soaking the rice in water for 30 minutes, grind it with broccoli.
- 2 Putstep no,1 and 1/2 cup of water in the inner pot,
- After locking the cover and choosing [Universal Steam] in menu button, push [Pressure Cook / turb o] button after setting up the time of universal steam to 25 minutes.
- Cooking with unginded rice may result in water overflow,
- It is possible to cook in the same method as above with other veigetables (spinach, carrot, etc) besides broccol.

Post baby food (after 9~12 morths): they can eat smooth solids at this time. Therefore, make themeat them at a fixed time three times every day.

The perfect period of baby food (after 12 months): It is a period of transition to go into a meal which an adult can have. Make them have a balanced diet by giving them diverse types of foods.

- ※ Clam, shrimp, milk, honey, tomato and com may cause allergy. Therefore, make children take the recipe's above after the first day.
- * Depending on the loaby, some ingredients may cause allergy. Therefore, pay attention to children's reactions.



Universal Steam

Steamed Rib



Ingredients

Beef rib (port ito 1,2kg, sake 3 tab lespoons, nicely ag ed soy sauce 5 tablespoons, crushed garlic 1 tablespoon, sesame oil 1 tablespoon, onion juice 3 tablespoons, pear juice 3 tablespoons, sugar 3 tablespoons, chopped scalifon 5 tablespoons, ground sesame mixed with salt 1 tablespoon, ground pepper 1 teaspoon, cairct 1 unit, chestnut 10 units, ginkgo nut 20 units and ground pine nuts 1 tablespoon

Recipe

- Remove fat and tendons from chopped rib and remove blood by putting it in cold water.
- Remove water by scooping it with a basket and keep the rib smooth by marinating it in sake and pear juice.
- Peel the skins of chestnuts and divide large chestnuts into two pieces, Stir-fry gingko nuts with oil and peel the skins of gingko nuts. Cut carrots into chestnut-size pieces.
- Mix all the prepared ingredients with seasoning and marinate them for one hour. After that, put them in the inner caldron (It is not necessary to pour additional water since it is cooked with moisture from ribs and marinade)
- After locking the cover and choosing [Universal Steam] in menu button, push [Pressure Cook / Turbo] button after setting up the time of universal steam to 45 minutes.
- 6 After cooking is completed, scatter ground pine nuts on the steamed rib.

Steamed Chicken



Ingredients

1 chicken (fkg), potatof00g, carrof100g, sugar 3tablespoons, chopped scallion 1 tablespoon, crushed garlic 1 tablespoon, nicely aged soly sauce 6 tablespoons, ginger juice 1tablespoon, ground pepper 1/2leaspoon, ground sesame mixed with salt 1 tablespoon and sesame oil 1,5 tablespoons.

Recipe

- Wash a chicken, dean and remove feathers and internal organs and cut the fat in the tail
- After cutting the chicken into a suitable eating size, make cuts in the chicken to make it well-seasoned and to roast quickly.
- After putting carrots, potatoes and sliced chicken in a large bowl and mixing the m with prepared seasing, marinate,
- 4 Put enough marinated chicken, pdatoes and carrots in the inner caldron.
- After locking the cover and choosing [Universal Steam] in menu button, push [Pressure Cook / turbo] button after setting up the universal steam times to 45 minutes;

Universal Steam

:: Boiled Pork



Ingredients

Pork (shank or pork belly) 400g, ginger 1EA, some garlic, onion 1EA, scall ion 1EA and some kimchi

Recipe

- 1 Put two cups of water in the inner cald on and put the steam plate above it.
- ② Cut pork into 2√3 pieces and put them on the steam plate with 2√3 pieces
 of ginger cut into thin slices.
- After locking the cover and choosing [Universal Steam] in menu button, push [Pressure Cook / tubo] button after setting up the time of universal steam to 40 minutes
- After cooking is completed, put the pork on a plate with onion, garlic, scallion and kimchi,

:: Steak



Ingredients

Beef (for steak) 500g, some steak sauce, some salt and some ground piepper

- Recipe

- After scattering ground pepper and salt on beef to suit its taste, put the beef in the inner caldron and pour 1/2 cup of water.
- After locking the cover and choosing [Universal Seam] in menu button, push [Pressure Cook / turbo] button after setting up the time of universal steam to 30 minutes
- 3 After cooking is completed, pour some steak sauce on the steak.

How to make wine sauce

After mincing button mushrooms, garifc and onions, stir-fry the prepared material with salt and ground pepper.

After boiling enough led wine, boil it down in ketchulp, barbecue sauce, pepper com and laurel leaves.



Universal Steam

Steamed Blue Crab



Ingredients

Blue crab 2EA, beef 150g, to'u 1/2 block, red/green p.epper each 1/2EA, yolk 1/2EA and some flour

Recipe

- Wash the blue crab clean and separate its body.
- 2 Crush meat of the separated body into thin slices,
- After crushing beef and tofu into thin slices, mix them with the crushed crab meat.
- After crushing red/green pepper into thin slices, mix them with yolk
- After scattering flour on the crab skin and filling up step no. 3 in the crab skin, cover it with step no. 4
- ② Pour one measuring cup of water in the inner cald ron. After locking the cover and choosing [Universal Steam] in menu button, push [Pressure Cook / tub of button after setting up the time of universal steam to 30 minutes.

Steamed Fish



Ingredients

Snapper 1EA, beef 50 g, shiftake 3EA, stone mushroom 2EA, red pepper 1EA, egg1EA, some scallion, some garlic, some soy sauce, some ground sesame mixed with salt, some cooking oil, some sesame oil, some salt and some ground pepper

Recipe

- 1 Make outs on the well-trimmed snapper at intervals of 2cm.
- Season crushed beef with soy sauce, scallion, ground sesame mixed with salt, gartic and ground peoper.
- 3 Pour the prepared seasoning on the snapper.
- 4 After pouring two cups of water into the inner pot, place the steam plate on it,
- Should be a prepared shapper on the steam plate.
- 6 After locking the cover and choosing [Universal Steam] in the menu, push [Pressure Cook / turbo] button after setting up the time of universal steam to 30 minutes.
- After cooking is completed, decorate it with the remaining garnish.

Universal Steam

Japchae (stir-fried vegetables, and shredded meat)



Ingredients

Cellophane250g, paprika (green, red) each 1EA, carrot 100g, onion 100g, some spinach, enoki mushroom 100g, fishcake 100g and cooking oil 2 tablespoors

Recipe

- After cutting paprika, onion, carrot and fish cake into thin slices, wash enoki mushroom clean, and blanch spinach in boiling water. Cut it after removing from water. (paprika and carrot 2~8mm, onion and fish cake 5mm)
- After spaking cellophane in lukewarm water for 20 minutes, wash it with cold water (When cellophane is spaked for a long time, cellophane may be too soft or agglomerated. According to preference, spak cellophane for 10 minutes > 30 minutes)
- Ster putting two tablespoons of cooking oil, 1/2 quip of water and cellophane in the inner caldron, put the prepared fish cake, carrot, onion and paprika together.
- After locking the cover and choosing [Universal Steam] in the menu, push [Pressure Cook / turbo] after setting up the time of universal steam to 25 minutes (When cellophane is too soft or when you want more chewy noodle, set up the time of universal steam for 20 minutes)
- After cooking is completed, but spinach blanched in boiled water and mix with soly source, sesame oil and sugar according to your preference, Scatter sesame seeds or ground sesame mixed with salt on the seasoned Japohae.



Universal Steam

Steamed Dumpling



Ingredients

Dumplings 20 EA

Recipe

- Pour two cups of water into the inner pot.
 Put steam pot on the inner caldron and put
- dumplings on the steam plate,

 Atter locking the cover and choosing
 [Universal Steam] in the menu, push
 [Pressure Cook / turbol button after setting
 up the time of universal steam to 25 minutes

:: Steamed Chestnut



Ingredients

Chestnut 30EA

Recipe

- Pour two cups of water into the inner pot
 Put steam pot on the inner caldron and put
- chestnuts on the steam plate (peel partial skin or chestnut to prevent bursting)

 After locking the cover and choosing
- After locking the cover and choosing [Universal Steam] in the menu, push [Pressure Cook / turbd] button after setting up the time of universal steam to 30 minutes.
- When cooking is completed, be careful with the hot chest nuts

Sweet Potato



Ingredients

Sweet potato 5EA

*When sweet potato is large (more than 150g), cut it into two pieces.

Recipe

- 1 Pour two cups of water in the inner pot
- Put steam pot in the inner caldron and put sweet potatoes on the steam plate.
- After locking the cover and choosing [Universal Steam] in the menu, push [Pressure Cook / turb of button after setting up the time of universal steam to 35 minutes.
- When cooking is completed, be careful with the hot sweet potatoes.

Diverse-effect of sweet potato

- Steamed sweet potato for constituation: When you take steamed sweet potato with its skin, it is good for constituation.
- Fresh sweet potato for weak person: Sweet potato includes a lat of vitamin B, mineral and cardane. Therefore, it is bood with high nutrition, Especially, when taking ground fresh sweet potato, it is good for your health, Many kinds of enzymes are included in the fluid flown out from sweet potates.

Universal Steam

:: Potato



Ingredients

Potato (less than 200g) 6EA

Recipe

- Pour two cups of water into the inner pot.
- Put steam pot on the inner caldron and put potatoes on the steam plate.
- After locking the cover and choosing [Universal Steam] in the menu, push Pressure Cook / turbol button after setting up the time of universal steam to 45 minutes
- When cooking is completed, be careful with the hot potatoes

How to keep potato

When potations are is kept at normal temperature in the summer, it sprouts right away. Therefore, it is good to keep them in the refrigerator, if there is a great amount, put potations in a bag and keep it in an opened cardion box. At this time, putting one or two apples together with potatoes will be helpful to prevent sprouting because of the effect of enzymes in apple.

Corn



Ingredients

Com 4EA

Recipe

- Pour two cups of water into the inner pot.
- Put steam pot in the inner caldron and put corn on the steam plate.
- After locking the cover and choosing [Universal Steam] in the menu, push [Pressure Cook / turbol button after setting up the time of universal steam to 40 minutes.
- When cooking is completed, be careful with the hot corn.

Fresh Cream Cake



Ingredients

Hour (week tbur)1/2cup, egg. 2EA, 1/2 tablespoon of butter, 1/2 tablespoon of milk, some vanilla perfume, 1/2cup of sugar and some salt Whipped creem 100cc of creem, 1/4cup of sugar Fruits: Cherry 1EA, strawberry 3EA, 1/4can of tangetine and kiwi 1EA.

Recipe

- Put salt in flour and sieve it,
- Separate the yolk from an egg.
- Of Put the white of an egg in a vessel and stirit in a fixed direction, When bubbles take place, put sugar by dividing it in several times, Stirup bubbles until they don't flow down when the vessel caves over.
- Oontinue to stir while putting the yolk in recipe no.3 little by little and put some vanilla perfume.
- 6 When step no.4 becomes cream, mix with flour.
- Mix boiled butter with milk
- After putting butter on the bottom and the side of the inner caldron, pour cake dough into the inner cald ion.
- 8 After locking the cover and choosing [Universal Seam] in the menu, push [Pressure Cook / turbo] button after setting up the time of universal steam to 40 minutes.
- (9) Cool down the cooked sponge cake,
- ① After pouring whipped cream in a vessel and making bubbles to be regarded to be thick, put powdered sugar(put sugar in a cutter and grind it)
- 1 Apply cream on the cooled sponge cake.
- Decorate it with different kinds of prepared fruit,

맛있는 밥

잡곡밥

쌀밥



준비할 재료

쌀 6컵

※재료에 표시된 컵은 밥솥에 들어있는 계량컵 기준입니다 1컵(180cc기준)은 1인분에 해당합니다.

- 이렇게 만드세요

- ●깨끗이 씻은 쌀을 내솥에 넣고 백미 물눈금 6까지 물을 부어 주십시오
- ❷뚜껑을 잠그고 메뉴 버튼을 눌러 「백미」를 선택한 후 백미래속 버튼을 눌러 주십시오
- ❸보온으로 되면 밥을 잘 섞어주십시오.

참고

제품의 내용에 표시된 물링을 기준으로 햅쌀은 눈금보다 약간 적게 묵은 쌀은 눈금보다 약간 많게 물을 맞추어 주십시오. (각 가정의 기호에 따라 물의 양을 조절하십시오)

오곡밥



준비할 재료

쌀 1.5컵, 조 1/3컵, 찹쌀 1/2컵, 팥 1/3컵 수수 1/3컵, 소금 1작은술

- 이렇게 만드세요

- 쌀, 찹쌀, 조, 수수를 같이 깨끗이 씻어서 건진 다음 체에 받쳐 두십시오
- ② 팥은 센불에서 70~80% 삶아서 팥물만따로 다른 그릇에 받아 두십시오
- ❸ 체에 받쳐둔 쌀, 찹쌀, 조, 수수를 내솥에 담고 팥물과 물을 백미 물눈금 3까지 부어 주십시오
- ④ 그 위에 삶아놓은 팥을 얹고 뚜껑을 잠근 뒤 메뉴 버튼을 눌러 「잡곡」을 선택한 후 압력취사 / 백미쾌속 버튼을 눌 러 주십시오.
- ⑤ 보온으로 되면 밥을 잘 섞어 주십시오.

한의학에서는 팥을 적소두라고 하여 수분을 빼주고 종기를 없애거나 뇡膿이 생긴 것을 배출시키는 효과에다 갈증과 설사를 멈추게 하고 소변이 잘 나오게 하며 부종을 가라 앉히는데 좋은 식품으로 알려져 있습니다.

:: Fresh 발01현미밥



준비할 재료

현미 4컵

- 이렇게 만드세요

- ❶ 현미를 깨끗이 씻어서 내솥에 넣고 현미/발아 물눈금 4까지 물을 부어 주십시오 ② 뚜껑을 잠그고 메뉴 버튼을 눌러 「현미/발아」를 선택한 후
- 현미밥이 시간을 4시간으로 설정한 뒤 압력취사 / 백미쾌속 버튼을 눌러 주십시오.
- ❸ 보온으로 되면 밥을 잘 섞어 주십시오.

참고

· 기호에 따라현미 발아시간을 조절하신 뒤취시해 주십시오. · 발아가 되어있는 현미로 취사를 하실 때, 발아를 하지 않고 100% 현미밥을 드시고자 하실 때에는 현미 발아 시간을 0시간으로 조절한 뒤 취사해 주십시오

영양밥 웰빙밥 잡곡밥

현미팥밥



준비할 재료

현미 1컵, 쌀 2컵, 팥 1/3컵

- 이렇게 만드세요

- 팥은 모양이 깨어지지 않을 정도로 부드럽게 될때까지 삶아 팥물과 분리해 주십시오
- ❷ 현미는 깨끗이 씻어 내솥에 넣고 현미/발아 물눈금 3까지 물을 부은 후 삶아 놓은 팥을 넣어 주십시오.
- ❸뚜껑을 잠그고 메뉴 버튼을 눌러 「현미/발아」를 선택한 후 현미발아 시간을 0시간으로 설정한 뒤 사 / 백미쾌속 버튼을 눌러 주십시오.
- ④ 보온으로 되면 밥을 잘 섞어 주십시오.

새싹 비빔밥



- 준비할 재료

현미 2컵, 새싹채소 조금씩

약고추장: 고추장 1/2컵 쇠고기(다진것 40g, 참기름 1큰술 꿀 1큰술, 설탕 1큰술

━ 이렇게 만드세요

- ❶ 현미를 깨끗이 씻어서 내솥에 넣고 현미/발아 물눈금 2까지 물을 부어 주십시오
- ❷ 뚜껑을 잠그고 메뉴 버튼을 눌러 「현미/발아를 선택한 후 현미 발아시간을 4시간으로 설정한 뒤 압력취사 / 백미쾌속 버튼 을 눌러 주십시오
- ❸ 냄비에 참기름을 두르고 다진 쇠고기를 볶다가 고추장과 물 1/3컵을 넣어 걸죽해질 때까지 잘 저어 볶은 후 설탕, 꿀, 참기름을 넣고 조금 더 볶아 주십시오.
- ₫ 보온으로 되면 밥을 잘 섞은 뒤 발아현미밥 위에 준비된 새싹채소를 예쁘게 담아내어 주십시오
- ⑤ 고추장은 새싹이 흐트러지지 않게 얹어 주십시오.
- ■브로콜리싹:암예방
- ■배추싹: 위에 좋고 변비 개선
- ■순무싹: 간염, 황달 개선
- ■양배추싹: 노화 암예방하는 셀레늄함유
- ■무싹: 열 낮추고 부기 가라앉힘 ■밀싹: 혈액 정화

영양밥



준비할 재료

쌀 4컵 수삼 4뿌리, 밤 4개, 대추 4개, 은행 12개, 청주 2큰술 양념장: 간장 4큰술, 다진파 2큰술, 다진마늘 1/2큰술 고춧기류 1/작은술, 깨소금 2작은술 참기름 1작은술

이렇게 만드세요

- 수심은 깨끗이 씻어 놔두 부분을 질라내고 얇게 어슷 썰어두십시오.
- ❷ 밤은 껍질을 벗겨 반으로 썰고 대추는 깨끗이 씻어 씨를 발라낸 뒤 반으로 잘라 두십시오
- ❸은행은 기름을 조금 넣고 볶아 껍질을 벗기거나 끓는물에 넣고 2~3분 정도 삶으면서 숟가락 등으로 문질러 껍질을 벗겨 두십시오.
- ●깨끗이 씻은 쌀을 내솥에 넣고 백미 물눈금 4까지 물을 부은 후 청주 2큰술을 넣고 잘 섞어 주십시오.
- ⑤ 4에 준비한 수삼 밤, 대추, 은행을 골고루 얹어주십시오. ⑥뚜껑을 잠그고 메뉴 버튼을 눌러「영양밥을 선택한 후 버튼을 눌러 주십시오
- ⑦보온으로 되면 밥을 위이래로 잘 섞어 밥그릇에 푼뒤 기호에 따라준비한 양념장을 같이 밥에 조금씩 얹어 비벼 드십시오

━ 참고

영양밥 취사시 사용하는 재료(대추, 수삼 등)의 양이나 상태에 따라 취사완료후 멜라노이징(미세 밥눌음)정도의 차이가 나타날 수 있으므로 기호에 따라 재료의 양을 조절하여 취시해 주십시오.



건강죽

별미죽

: 잣죽



- 준비할 재료

쌀1컵, 잣1/2컵, 소금 약간

- 이렇게 만드세요

- 쌀과짓을 깨끗이 씻어 주십시오
- ❷ 쌀은체에 받쳐 두고 짓은 믹서에 갈아 두십시오.
- ❸ 쌀과 같은 짓을 넣고 영양축 물눈금 1,5까지 물을 부어 주십시오
- 뚜껑을 잠그고 메뉴 버튼을 눌러 「영양죽」을 선택한 후 압력취사 / 백미쾌속 버튼을 눌러 주십시오.
- 5 보온으로 되면 기호에 맞게 소금을 넣고 가볍게 저어 주십시오.

참고

- ■육 드실 시간에 맞추어 육을 쑤는 것이 중요하며, 4은 죽이나 다시 데은 육 맛이 떨어지니다.
- ■뮒차 화가돼는 쌩젦, 봯 뿌리 등을 곁이면 더욱 좗다.
- 흰죽 요리는 쌀만 넣은 상태에서 잣죽과 동일한 방법으로만듭니다.
- ■국산닷을 고르는 법: 윤기가 있고 광택이 있으며 잣의 씨는 덮개가 거의 없고 잣나무향과 송진향이 납니다.

: 특미닭죽



- 준비할 재료

쌀 1컵, 닭 200g, 닭국물 600cc, 청고추 개, 홍고추 개, 소금 약간 양념 : 다진과 1근술 다진마늘 1근술, 긴장 2근술 깨소금 약간, 참기름 2작은술, 후춧기루 약간

- 이렇게 만드세요

- ❶ 쌀을 깨끗이 씻어물에 1시간 이상 불려 두십시오
- ② 닭은 손질하여 푹 삶아 먹기 좋게 찢어서 위의 재료로 양념해 두십시오.
- ❸ 청고추, 홍고추는 씨를 버리고 잘게 썰어 두십시오.
- 4 닭국물은 기름기를 제거하고 가아제에 받쳐 두십시오
- ⑤ 내솥에 ①의 쌀과 ②, ③의 닭과 고추를 넣고, 받쳐 둔 닭국물을 부어 주십시오.
- ⑤ 물은 영양죽 물눈금 2까지 부어 주십시오
- 뚜껑을 잠그고 메뉴 버튼을 눌러 「영양죽」을 선택한 후 압력취사 / 백미래속 버튼을 눌러 주십시오
- ③ 보온으로 되면 기호에 맞게 소금을 넣고 가볍게 저어 주십시오

: 흰죽



- 준비할 재료

싹 1컨

- 이렇게 만드세요

- 깨끗이 씻은 쌀을 내솥에 넣고 영양죽 물눈금 1까지 물을 부어 주십시오
- ② 뚜껑을 잠그고 메뉴 버튼을 눌러 영양국」을 선택한 후 압력취사 / 백미례속 버튼을 눌러 주십시오

죽은 우리의 먹거리 중에서 가장 일찍부터 발달한 주식입니다.

농경 문화가 시작된 신석가시대에 토기에 물과 함께 곡물을 넣어 끓였을 것으로 추정되는데, 이것이 죽의 기원이라고 할 수 있습니다.

홍삼

∷ 홍삼



- 준비할 재료

수삼 큰 것 300 g

- 이렇게 만드세요

- 수삼은 놔두 부분을 잘라내고, 뿌리 부분이 떨어지거나, 수삼에 상치가 생기지 않도록 주의하여 깨끗하게 씻어 두십시오.
- ② 내솥에 4컵의 물을 붓고 깨끗이 씻은 찜판을 올린 후 수삼을 올려 놓아 주십시오.
- 뚜껑을 잠그고 메뉴 버튼을 눌러 「홍삼」을 선택한 후 원하시는 증숙시간을 선택하여 압력취사 / 백미쾌속 버튼을 눌러 주십시오.

(초기 설정 시간은 12시간 이며, 2시간~24시간까지 설정 가능 합니다)

④ 증숙 완료된 삼을 부서지지 않도록 주의하여 덜어내어 두고 찜판을 까낸 후 다시 물 6컵과 증숙된 수삼을 넣고 원하시는 달임 시간을 설정한 후 압력취사 버튼을 눌러 조사사이

(달임이 완료되면 보온으로 장시간 두시지 마시고 냉장 보관하여 주십시오)

― 잠고

삼을 말려서 드실 경우에는 바람이 잘 통하는 서늘한 곳에 곰팡이가 생기지 않도록 말려 주십시오, 달임 물은 정수된 물 또는 깨끗한 수돗물을 사용하여 주십시오.

- 홍삼의 효능

홍삼은 어댑토겐(adaptogen適應素) 효괴로서 주위 환경으로부터 오는 각종 유해작용인 누병淚病), 각종 스트레스 등에 대해 방어능력을 증가시켜 생체가 보다 쉽게 적응하도록 하는 능력이 있음이 과학적으로 입증되고 있습니다.



이유식

단호박스프



※ 이유식 완료기 (12개월 이후)

- 준비할 재료

단호박200g, 뺑가루2큰술, 물 1/2컵 소금 약간, 우유 약간

- 이렇게 만드세요

- **①**단호박은 노랗게 잘 익은 것으로 골라 껍질을 벗기고 씨를 제거한 후 얇게 썰어 물에 헹궈 주십시오.
- ② 내솥에 ①의 재료와 빵가루 2분술, 물 1/2컵을 넣어 주십시오.
- ❸뚜껑을 잠그고 메뉴 버튼을 눌러 「만능찜을 선택한 후 만능찜 시간을 10분으로 설정한 뒤 알 사 / 백미쾌속배튼을 눌러 주십시오.
- ❹요리가 완료되면 나무주걱으로 으깨어 뜨거울 때 우유를 섞어 주신 시오

고구마사과죽



※ 이유식 완료기 (12개월 이후)

- 준비할 재료

고구마 100g, 시과 100g, 물 1/4컵, 꿀 약간

이렇게 만드세요

- 사과와 고구마는 껍질을 벗기고 얇게 썰어 주십시오.
- ❷ 내솥에 ◐과 물 1/4컵을 넣어 주십시오.
- ❸뚜껑을 잠그고 메뉴 버튼을 눌러 [만능찜]을 선택한 후 만능찜 시간을 20분으로 설정한 뒤 입력취사 / 백미쾌속 버튼을 눌러
- ④요리가 완료되면 나무주 겉으로 곱게 으깨어 꿀을 조금 넣어 섞어 주십시오

야채쌀미음



※ 이유식 후기 (9~12개월 이후

━ 준비할재료

쌀 1/2컵, 브로컬리 30g, 물 1.5컵, 소금, 약간

이렇게 만드세요

- ❶ 쌀을 깨끗이 씻어서 30분 정도 불린 후 브로컬리와 함께 곱게 갈아 준비해 주십시오
- ❷ 내솥에 ◐과 물 1,5 컵을 넣어 주십시오
- ❸ 뚜껑을 잠그고 메뉴 버튼을 눌러 「만능찜」을 선택한 후 만능찜 시간을 25분으로 설정한 뒤 압력취사 / 백미쾌속 버튼을 눌러 주십시오.
- ※ 쌀을 갈지 않고 조리시 죽물이 올라올 수 있으니주의하여주십시오. ※ 브로컬리 외의 야채(사금치, 당근 등)를 이용하여 같은 방법으로 조리 가능합니다.

- 참고

이유식 후기(9~12개월 이후): 부드러운고형식을 먹을 수 있는 사기로서, 하루 세차례에 걸쳐 정해진 사간에 먹을 수 있도록 해주십시오. 이유식 완료기(12개월 이후): 어른이 먹을수 있는 식사로 넘어가는 과도가로서, 음식 종류를 다양하게 주어 편식 습관이 생기지 않도록 해주십시오. ※ 조개, 새우, 생우유, 꿀, 토마토, 옥수수 등은 알레르기를 유발할수 있으므로 돌아 지난 후에 섭취할 수 있도록해주십시오.

※ 이기에따라 알레르기를 유발 할 수 있는 이유식 재료나 섭취시기가 다를 수 있으므로 주의하여 섭취할 수 있도록해주십시오.

갈비찜



준비할 재료

쇠갈비(돼지갈비) 1.2kg, 정종 3큰술, 진간장 5큰술, 다진마늘 1큰술, 참기름 1큰술 양파즙 3큰술, 배즙 3큰술설탕 3큰술, 다진파 5큰술, 깨소금 1큰술, 후춧가루 1작은술, 당근 1개, 밤 10개, 은행 20개, 짓기루 1큰술

- 이렇게 만드세요

- 토막난 갈비에 기름기와 힘줄을 제거하고 찬물에 담궈 핏물을 빼두십시오
- ② 소쿠리에 건져 물기를 빼고 정종과 배즙에 재워 고기를 연하게 해두십시오
- ❸ 밤은 껍질을 벗겨 큰것은 반으로 자르고 은행은 후라이팬에 기름을 조금 넣어 볶아 껍질을 벗겨낸 뒤 당근은 밤톨 크기로 깎아 주십시오.
- ₫ 준비한 모든 재료에 양념을 넣고 버무려 1시간 정도 양념이 배도록 재워 놓은 후 내솥에 넣어 주십시오 (갈비와 양념장에서 우러나오는 수분으로 조리가 되기 때문에 별도의 물을 부을 필요가 없습니다.)
- **⑤** 뚜껑을 잠그고 매뉴 버튼을 눌러 「만능찜을 선택한후 만능찜 시간을 45분으로 설정한 뒤 압력취사/ 백미래속 버튼을 눌 기시스 다
- **6** 음식이 완료되면 갈비찜 위에 짓가루를 뿌려 식탁에 내놓으십시오.

닭찜



준비할 재료

닭 1마리(1 kg), 감자 10 0g, 당근 10 0g, 설탕 3큰술, 다진파 1근술, 다진미늄 1근술 진간장6근술, 생강즙1근술, 후춧기류 1/2작은술 깨소금 1큰술 참기름 1,5큰술

- 이렇게 만드세요

- 닭고기를 깨끗이 씻어 잔털과 내장을 완전히 없어고 꼬리 부분에 뭉쳐 있는 기름을 잘라내 주십시오
- ② 닭고기를 먹기에 알맞은 크기로 자른 후 양념이 잘 배고 빨리 익도록 칼집을 내어 주십시오
- ❸ 먹기에 알맞은 크기로 자른 당근, 감자, 닭고기를 커다란 볼에 넣고 준비한 양념과 골고루 섞은 후 양념이 충분히 배일 때까지 재워 두십시오.
- ❹ 충분히 재워둔 닭고기와감자 당근을 내솥에 넣어주십시오
- ⑤ 뚜껑을 잠그고 메뉴 버튼을 눌러 「만능찜」을 선택한 후 만능찜 시간을 45분으로 설정한 뒤 압력취사 / 백미쾌속 버튼을 눌러 주십시오

수육



준비할 재료

돼지고기(사태 또는 삼겹살) 400g, 생강 1개, 마늘 약간, 양파 1개, 대파 1개, 김치 약간

- 이렇게 만드세요

- 내솥에 물을 2컵 정도 넣고 찜판을 넣어주십시오
- ② 돼지고기를 2~3등분하여 찜판위에 놓고 생강을 얇게 썰어 2~3쪽 넣어 주십시오
- ❸ 뚜껑을 잠그고 메뉴 버튼을 눌러 「만능찜」을 선택한 후 만능찜 시간을 40분으로 설정한 뒤 압력취사 / 백미쾌속 버튼을 눌러주십시오.
- 4 취사 완료 후 양파, 마늘 대파, 김치를 곁들여서 접시에 담아 식탁에 내놓으십시오.



만능찜

: 스테이크



- 준비할 재료

고기(스테이크용) 500g, 스테이크 소스 약간, 소금 약간, 후춧가루 약간

- 이렇게 만드세요

- 고기에 후춧가루와 소금을 뿌려 간을 배이게 한 다음 고기를 내솥에 넣고 반컵 가량의 물을 부어 주십시오.
- 뚜껑을 잡고고 메뉴 버튼을 눌러 『만능찜을 선택한 후 만능찜 시간을 30분으로 설정한 뒤 압력취사 / 백미쾌속 버튼을 눌러 주십시오.
- ❸ 요리가 완료되면 고기를 꺼내어 스테이크 소스를 끼얹어 주십시오.

- 외인소스 만드는 법

양송이와 마늘 양파를 다져 놓은 뒤 준비한 재료를 소금 후 축가루로 간하여볶아 주십시오

여기에 레드와인을 넉넉히 넣어 끓인 후 케찹, 바비큐소스, 통후추, 월계수잎을 넣어 조려 주십시오

: 꽃게찜



- 준비할 재료

꽃게 2마리, 쇠고기 150g, 두부 1/2모, 청·홍고추 반개씩, 달걀노른자 반개분, 밀가루 약간

- 이렇게 만드세요

- 꽃게의 몸통을 손으로 잡고 깨끗이 씻어낸 다음 몸통을 떼어 두십시오
- ② 떼어낸 몸통의 살을 발라내어 곱게 다져 주십시오.
- ❸ 쇠고기와 두부는 곱게 다진 후 몸통살 다진것과 합하여 골고루 버무려 주십시오
- ❹ 청·홍고추는 잘게 다져 달걀노른지와 섞어 주십시오
- ⑤ 꽃게의 껍질안에 밀가루를 뿌리고 ③을 도톰하게 채운 후 그 위에 ④를 고르게 펴발라 주십시오.
- ⑥ 내솥에 계량컵 1컵의 물을 부어 뚜껑을 잠그고 메뉴 버튼을 눌러 「만능점」을 선택한 후 만능점 시간을 30분 으로 설정한 뒤 압력취사/ 백미대속 버튼을 눌러 주십 시오

생선찜



- 준비할 재료

도미 1마리, 쇠고기 50g, 표고바섯 3장, 석이버섯 2장, 홍고추 1개, 달걀 1개 파 약간, 마늘 약간 간장 약간, 깨소금 약간, 식용유 약간 참기름 약간 소금 약간, 후춧가루 약간

- 이렇게 만드세요

- 손질해 놓은 도미를 등쪽으로 2cm간격이 되도록 칼집을 넣어 두십시오.
- ② 다진 쇠고기에 간장, 파, 마늘, 참기름, 깨소금, 후춧가루를 넣어 양념해 주십시오
- ❸ 도미의 칼집을 넣은 부분에 준비해둔 양념을 꼭꼭 채워 넣어 주십시오.
- ₫ 내솥에 2컵의 물은 부은뒤 찜판을 넣어 주십시오
- ⑤ 찜판 위에 준비해둔 도미를 넣어 주십시오.
- ⑥ 뚜껑을 잠그고 메뉴 버튼을 눌러 「만능찜」을 선택한 후 만능찜 시간을 30분으로 설정한 뒤 입력취사 / 백미과속 버튼을 눌러 주십시오.
- ⑦ 요리가완료되면 나머지 고명을 얹어 장식해 주십시오.

만능찜

:: 잡채



- 준비할 재료

당면 250g, 피맹청, 황 각각 1개, 당근 100g, 양파 100g, 시금치 약간, 팽이버섯 100g, 어묵 100g, 식용유 2큰술 양념장: 설탕약간, 간장 약간, 참기름 약간, 통깨·깨소금 약간

- 이렇게 만드세요

- 피망, 양파, 당근, 어묵은 잘게 채썰고 팽이버섯은 다듬어 깨끗이 씻은 후 시금치는 끓는 물에 살짝 데쳐서 물기를 꼭 짠후 먹기좋게썰어 주십시오.(피망, 당근은 2~8mm 정도가 적당하고 양파, 어묵은 5mm 정도로 채써는 것이 적당합니다.)
- ② 미지근한 물에 당면을 20분 정도 담궈둔 후 찬물에 넣어 씻은 뒤 건져 두십시오. (당면을 오래 담궈두면 잡채 완료 후 당면이 펴지거나 뭉치는 경우가 있습니다. 기호에 따라서 면을 담궈 두는 시간을 10분에서 30분 사이로 조절해 주십시오.)
- ❸ 내솥에 식용유 2큰술, 1/2컵의 물을 넣은 후 당면을 내솥에 넣고 준비한 어묵 및 당근, 양파, 피망을 같이 넣어 주십시오.
- ④ 뚜껑을 잠그고 메뉴 버튼을 눌러 만능찜을 선택한 후 만능찜 시간을 25분으로 설정한 뒤 압력취사/백미례속 버튼을 눌러 주십시오 (당면을 많이 불러셨거나, 소비자 기호에 따라 좀 더 쫄깃한 면을 원하시면 만능찜 시간을 20분으로 설정해 주십시오)
- ⑤요리가 완료되면 뚜껑을 열어 데쳐놓은 시금차를 넣고 기호에 따라 간장과 참가름 설탕을 넣고 골고루 섞어 주십시오. 양념한 잡채에 통깨나 깨소금을 뿌려 접시에 담아 주십시오.

: 만두찜



- 준비할 재료

만두 20개

- 이렇게 만드세요

- 1 내솥에 2컵의 물을 부어 주십시오
- ② 찜판을 내솥에 넣고 그 위에 만두를 고르게 올려 주십시오.
- ❸ 뚜껑을 장그고 메뉴 버튼을 눌러 「만능찜을 선택한 후 만능찜 시간을 25분으로 설정한 뒤 압력취사 / 백미과속 버튼을 눌러주십시오.



만능찜

밤찜



- 준비할 재료

밤 30개

- 이렇게 만드세요

- ●내솥에 2컵의 물을 부어주십시오
- ② 찜판을 내솥에 넣고 그위에 밤을 올려 놓아 주십시오 (밤은 터짐 방지를 위해 껍질을 일부 벗기고 찜판에 놓아 주십시오)
- ❸ 뚜껑을 잠그고 메뉴 버튼을 눌러 만능찜을 선택한 후 만능점 시간을 30분으로 설정한 뒤 압력취사 / 백미계속 버튼을 눌러 주십시오
- ④ 요리가 완료되면 밤이 뜨거우므로 주의하십시오.

고구마



- 준비할 재료

고구마 5개

※큰 고구매(150g이상)는 반으로 잘라서 조리하십시오

- 이렇게 만드세요

- 내솥에 2컵의 물을 부어 주십시오
- ❷ 찜판을 내솥에 넣고 그위에 잘 씻은 고구마를 올려 놓아 주십시오
- 뚜껑을 참그고 메뉴 버튼을 눌러 "만능찜을 선택한 후 만능찜 시간을 35분으로 설정한 뒤 압력취사 / 백미과속 버튼을 눌러 주십시오.
- ④ 요리가 완료되면 고구마가 뜨거우므로 주의하십시오

- 다양한 효과의 고구마

- 변비에는 찐 고구마: 찐 고구마를 껍질째 먹으면 변비에 ㅎ과가이다
- 하약체절인 시람에게는 생고구마: 고구마는 비타민 B군과 미네랄 카로틴 등이 다랑으로 함유되어 있어 영양가가 높은 식품인데, 특히 생고구마를 갈아서 먹으면 해약 체질인 사람의 건강 증진에 효과가 있다 이는 생고구마를 질렀을 때 나오는 유즘과 같은액체에 각종효소가 함유되어 있기 때문이다.

: 감자



- 준비할 재료

감자(20 0g 이하) 6개

- 이렇게 만드세요

- 내솥에 2컵의 물을 부어 주십시오
- 图판을 내솥에 넣고 그위에 감자를 올려 놓아 주십시오
- 뚜껑을 잠그고 메뉴 버튼을 눌러 '만능찜'을 선택한 후 만능찜 시간을 45분으로 설정한 뒤 압력취사 / 백미쾌속 버튼을 눌러 주십시오
- ▲ 요리가 완료되면 감자가 뜨거우므로 주의하십시오.

- 감자보관법

감자는 여름철의 경우 상은에 두면 금방 싹이 돌아나므로 냉장고에 넣는 것이 좋지만 양이 많을 경우에는 봉투에 감자를 넣고 입구를 벌린 채로 골판지 상자에 보관합니다 이때 사과 1, 2개를 함께 넣어 두면 효소의 작용으로 싹이 잘 나지 않는다고 합니다

만능찜

:: 옥수수



- 준비할 재료

옥수수 4개

- 이렇게 만드세요

- ●내솥에 2컵의 물을 부어주십시오.
- ❷ 찜판을 내솥에 넣고 그위에 옥수수를 올려 놓아 주십시오
- 뚜껑을 잠그고 메뉴 버튼을 눌러 '만능찜'을 선택한 후 만능찜 시간을 40분으로 설정한뒤 입력취사/ 백미쾌속 버튼을 눌러 주십 시오
- ❹ 요리가 완료되면 옥수수가 뜨거우므로 주의하십시오.

: 생크림케익



- 준비할 재료

밀가루(박력분 1/2컵, 계란 2개 버터1/2큰술, 우유1/2큰술, 배닐라향 약간, 설탕1/2컵, 소금 약간 휘핑크림 : 생크림 100∞ , 설탕 1/4컵

과일: 체리 1개, 딸기 3개, 밀감통조림 1/4통, 키위 1개

※ 1컵은 계량컵 1컵 기준입니다.

이렇게 만드세요

- 밀가루에 소금을 넣고 체에 내려 주십시오
- ❷ 계란 흰자와 노른자를 분리해 두십시오
- ③ 흰자를 그릇에 넣고 일정한 방향으로 저어 거품을 내다가 커다란 거품이 일면 설탕을 여러 번 나누어 넣고, 그릇을 뒤잡었을 때 흘러내리지 않을 정도까지 거품을 저어 주십시오.
- ♦ ●에 노른자를 조금씩 넣으면서 계속 젓고 비닐라향을 조금 넣어 주십시오
- ⑤ ❹가 크림상태가되면 밀가루를 넣고 날밀기루가 보이지 않게 살살섞어 주십시오.
- 응 우유와 중탕한 버터를 섞어 두십시오

- ③ 뚜껑을 잠그고 메뉴 버튼을 눌러 「만능찜을 선택한 후 만능찜 시간을 40분으로 설정한 뒤 압력취사 / 백미래속 버튼을 눌러주십시오.
- 회취사가 완료된 카스텔라를 식혀 주십시오
- ① 그릇에 휘핑크림을 붓고, 되다고 여겨지도록 충분히 거품을 낸 뒤에 슈가피우다를 넣어 주십시오. (슈가파 우더는 설탕을 컷트기에 넣어서 갈아주시면 됩니다.)
- ① 식힌 카스텔라에 생크림을 고르게 펴발라주십시오.
- ② 준비된 여러가지 과일로 장식해 주십시오.

Cooking Guide 로 즐거운 요리를 만들어 보세요

주방문화를 선도하는 쿠쿠는 보다 맛있는 요리로 사랑하는 가족의 행복을 한단계 업그레이드 시켜 행복한 주방과 웃음소리가 귓가에 그득한 식탁을 만들어드리겠습니다.

요리 선택표

요리종류	메뉴선택	요 리 방 법			
흰 죽					
팥 죽		1, 내솥에 준비된 재료를 넣고 용량에 따라 물을 적당한			
 닭 죽		물눈금까지 부어 주십시오. 1인분 : 영양죽 물눈금 1, 1,5인분 : 영양죽 물눈금 1.5,			
 잣 죽	영양죽	2인분 : 영양죽 물눈금 2 (※ 참고시항 : 영양죽 취사시의 최대용량은 2인분입니다)			
전 복 죽					
새 우 죽		2, 뚜껑을 잠그고 메뉴 버튼을 눌러 「영양국」으로 선택한 후 압력취사 / 백미쾌속 버튼을 눌러 주십시오.			
굴 죽					
갈 비 찜	만능찜	1, 내솥에 준비된 재료를 넣어 주십시오 2. 뚜껑을 잠그고 메뉴 버튼을 눌러 『만능찜』을 선택한 후			
닭 찜		만능찜 시간을 45분으로 설정한 뒤 압력추사 / 백미쾌속 버튼을 눌러 주십시오			
고 구 마 만능찍		1. 내솥에 물을 계량컵으로 2컵~3컵 정도 부어 주십시오. 2. 찜판을 내솥에 넣고 준비한 재료를 찜판위에 올려 놓아 주십시오.			
# T U		3, 뚜껑을 잠그고 메뉴 버튼을 눌러 만능찜,을 선택한 후 만능찜 시간을 35분으로 설정한 뒤 압력취사 / 백미래속 버튼을 눌러 주십시오			

※ 요리설명은 쿠쿠홈페이지(www.cuckco.co.kr)를 참조하세요.

만능찜 요리별 시간표

요리종류	요리시간	요리종류	요리시간	
단호 박스 프	10분	대 합 찜	35분	
고구마사과죽	20분	고 구 마	ುಂಹ	
야 채쌀미 음		수 육		
두 부 찜	25분	오 향 장 육	40분	
잡 채	202	- 00 4	402	
만 두 찜		생크 림케익		
갑오징어조림				
스 테 이 크		갈 비 찜		
꽃 게 찜			45분	
생 선 찜	30분	닭 찜	40€	
가 지 찜				
호 박 찜		감 자		
밤 찜		_ '		





CUCKOO ELECTRIC RICE COOKER/WARMER LIMITED WARRANTY

KEY Company, P&K USA TRADING CORP and Cuckoo Trading Canada. will repair at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use, during the warranty period listed below from the date of original purchase. This warranty is good only to the original purchaser of the product during the warranty period. P&K USA TRADING CORP covers the east and the central districts, KEY Company covers the west and the central districts, Cuckoo Trading Canada covers the whole Canada.

WARRANTY PERIOD

MODEL# #LABOR PARTS HOW SERVICE IS HANDLED

CRP-HN10 1YEAR 1YEAR The East and the Central Districts

Call: 718 888 9144

Address: 129-04 14th Avenue College Point, NY 11356, USA

The West and the Central Districts.

Call: 213 687 9828 Toll Free: 877 481 9828 Address: 700 Jackson Street, L.A, CA 90012, USA

Canada (TORONTO)

Call: 416 878 4561 / 905 707 8224 Address: #D8-7398 Yonge Street Thornhill Ontario Canada L4J 8J2

Canada (VANCOUVER)

Call: 604 540 1004 / 604 523 1004

Address: 945 Lougheed Hwy Coquitlam BC Canada V3K 3T4

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. CUCKOO ELECTRONICS CO.,LTD, SHALL NOT BE LIABLE FOR THE LOSS, THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts: so these limitations or exclusions may apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

THE ABOVE WARRANTY DOES NOT APPLY IN THESE CASES:

- * To damages problems which result from delivery or improper installation.
- * To damages problems which result from misuse, abuse, accident, alteration, or incorrect electrical current or voltage.
- * To serve call which do not involve defective workmanship or material and explaining the operation of the unit.

Therefore, these costs are paid by the consumer. Customer assistance numbers:

To Prove warranty Coverage:
Retain your Sales Receipt to prove date of purchase

► Copy of your Sales Receipt must submitted at the time warranty service is provided.

To Obtain Product, Customer, or Service Assistance and Nearest Authorized service center, Parts Distributor or Sales Dealer:

The East and the Central Districts Call : 718 888 9144 Address :129-04 14th Avenue College Point, NY 11356, USA The West and the Central Districts. Call: 213 687 9828 Toll Free: 877 481 9828 Address: 700 Jackson Street, L.A,

CA 90012, USA

Canada (Toronto) Call : 416 878 4561 / 905 707 8224 Address : #D8-7398 Yonge Street Thomhill Ontario Canada L4J 8J2 Canada (Vancouver) Call : 604 415 9858/604 524 8282 Address : 103-4501 North Road Burnaby BC Canada V3R 4R7