


QUICK & EASY FILTER REPLACEMENT

You can replace the filters for your CUCKOO water Purifier by following this instruction

FILTER CONFIGURATION & REPLACEMENT CYCLE

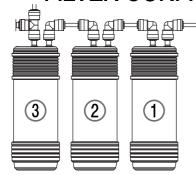

FILTER	LABEL COLOR	REPLACEMENT CYCLE
① PRE CARBON BLOCK 2,0 FILTER(802P)	GREEN	4 months
② NANO POSITIVE PLUS FILTER(M801NP)	RED	12 months
③ MINERALIZER FILTER(801MI)	SKY BLUE	12 months

Please check the type and the filter # of the new filters before removing the old filters!

REPLACEMENT GUIDE


· You must use genuine CUCKOO Filter.



1. Open the Filter Cover on the right side of the product. Remove two screws and slide the cover panel to backwards.



2. Dispense water completely until there is no water left in the product.



3. Unplug the Water Purifier.



4. Remove a filter by lifting first and pulling it down.



5. Remove a cap from the new filter. Insert the filter to the inlet and push it into the filter case to connect it properly.




Close the Filter Cover and tighten the screw. and Plug it in.

7. How to Check the Filter Replacement Alarm and to Intialize Filter Replacement Alarm: When the filter's lifespan has expired, the Filter Replacement LED will be turned on.

How to check whether to replace the filter: Press the Filter Replacement button to enter the Filter Check mode. (The LED of the expired filter will be turned on.)

How to reset the filter alarm: After replacing the filter, hold down the LED button of the changed filter for three seconds, and the life of the filter will be initialized.



When the Filter 1 has expired, the LED on the Filter Change 1 button lights up. When the Filter 2,3 has expired, the LED on the Filter Change 2, 3 button lights up. When the Filter 1, 2, 3 has expired, the LED on the Filter Change 1, 2, 3 button lights up.

8. The indicator on the Control Panel on top of your water purifier may flash at first. It is not a malfunction and you can start a filter stabilization process with one of the options below.



If the Veggie water lever is installed,

8-a. Please open the water valve and let water keep coming out. After about 10 minutes, close the water valve that was open.



If the Veggie water lever is NOT installed,

8-b. On the back of your water purifier, you can find the Ball valve connected to "EXTENSION" water line. Please open it. After about 10 minutes, close the ball valve that was open.



If the Veggie water lever or The Ball Valve is NOT installed

8-c. Press the Non-Stop Flow button to drain it for 1 minutes. Repeat it 10 times.

Still having a trouble replacing your filters?

CUCKOORENTAL.COM

Please visit our homepage! You can find the Video instruction. We can help!

888.700.0425 -----

Please contact CUCKOO CUSTOMER SERVICE CENTER! Our professional staffs can happily assist you. **Business Hours**: M-F, 9AM-6PM (PST)

P/N: 10384-0001C0 REV.2




CP-MN031/MN011

초간편 필터 교체

설명서 안내에 따라 직접 필터를 교체하실 수 있습니다.

필터 구성 및 교체 주기를 먼저 확인하세요

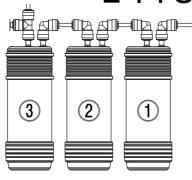

필터	라벨 색상	교체 주기
① 프리카본 블록 2.0 필터(802P)	연두색	4개월
② 나노 포지티브 플러스 필터(M801NP)	빨간색	12개월
③ 미네랄라이저 필터(801MI)	하 늘 색	12개월

새필터의 종류와 번호를 먼저 확인해 주십시오.

교체 주기에 따라 배송되는 필터의 수량과 종류가 상이하므로 교체가 필요한 필터만 제거/교체 하시면 됩니다.

교체 방법 안내

· 반드시 쿠쿠 정품 필터를 사용해 주십시오.



1. 제품 우측면의 **필터 도어를 열어 주십시오.** 드라이버를 사용해 나사 2개를 제거하신 후 도어 패널을 뒤로 밀듯이 당기시면 됩니다.



2. 출수 버튼을 눌러 물이 더 이상 나오지 않을 때 까지 정수기 내부의 잔수를 제거해 주십시오.



3. 전원 플러그를 뽑아 주십시오.



4. 그림과 같이 교체하려는 필터를 들어올린 후 아래 방향으로 당겨서 제거하여 주십시오.



5. 새 필터를 개봉 후, 연결부의 **캡을** 제거 하십시오. 필터 연결부를 홈에 끼워 넣은 후 필터를 케이스 안쪽으로 밀어 넣어 연결하시면 됩니다.



6. 필터 도어를 닫고 제거했던 나사를 다시 단단히 조인 후 전원 플러그를 연결해 주십시오.

7. 필터 교체 알람 확인 및 초기화 방법

필터 교체 알람: 해당 필터의 수명이 만료되면 필터 교체 LED가 켜집니다. 필터 교체 여부 확인 방법: 필터 교체 버튼을 누르면 필터 확인 모드에 진입합니다.(수명이 만료된 필터의 LED가 켜집니다.)

필터 알람 재설정 방법: 필터 교환 후에, 해당 필터 교환 LED 버튼을 3초간 누르면 해당 필터의 주기가 초기화 됩니다.



8. 필터 교체 후, 제품 상단 디스플레이 패널에 불이 들어올 수 있습니다. 오작동이 아니니 아래와 같은 방법으로 **필터 안정화 과정을 진행**하십시오.



⁻ 우리집에 조리수가 설치되어 있다면

8-a. 조리수 밸브를 열어 물이 계속 출수 되게 하십시오. 약 10분이 경과되면 조리수 밸브를 닫아 주십시오.



우리집에 조리수가 설치되어 있지 않다면

8-b. 정수기 후면에 조리수 라인(External Tube)에 연결된 **볼 밸브를 열어**주십시오. 약 10분이 경과되면 볼 밸브를 닫아 주십시오.



우리집에 조리수 또는 볼 밸브가 설치되어 있지 않은 경우

8-c. 연속 출수(Non-stop) 버튼을 눌러 물이 1분간 출수되도록 하십시오. 이 과정을 약 10회 정도 반복해 주십시오.

필터교체에 어려움이 있으세요?

CUCKOORENTAL.COM

저희 홈페이지를 방문하시면 동영상 가이드라인에 따라 필터를 교체하실 수 있습니다. 저희가 도와드리겠습니다!

안내해 드립니다. **운영시간**: 미 서부 기준 오전 9시 - 오후 6시

P/N: 10384-0001C0 REV.2