

# MILK FROTHER


PE-MF013  
**User Manual**



## CONTENTS

English 03/06

Français 07/11

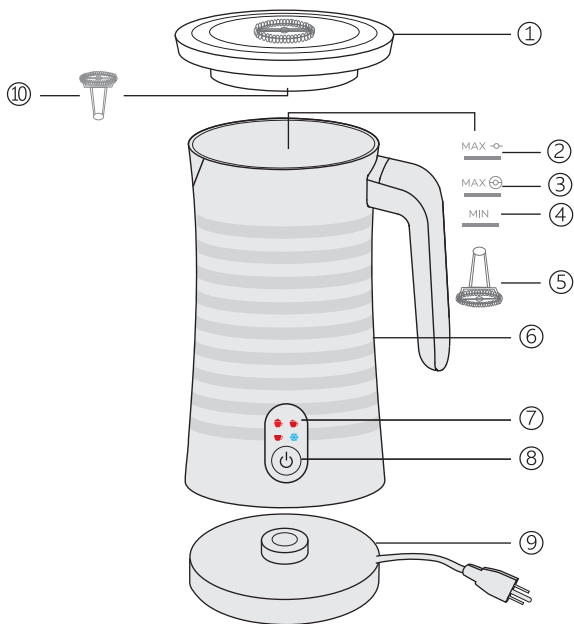

**EN**

## **Product Diagram**

1. Transparent Lid
2. Max Heating Level
3. Max Frothing Level
4. Min Level
5. Whisk
6. Pitcher
7. LED Indicators
8. Power Button
9. Power Base
10. Spare Whisk

**FR**

## **Product Diagram**

1. Couvercle transparent
2. Niveau de chauffe maximal
3. Niveau de mousse maximal
4. Niveau minimal
5. Fouet
6. Pichet
7. Indicateurs LED
8. Bouton d'allumage
9. Base d'alimentation
10. Fouet supplémentaire

## **IMPORTANT**

Before use of this product, basic precaution and instructions should always be followed:

1. Read the instructions thoroughly and keep it for future reference.
2. This appliance must be earthed.
3. Keep the product away from water and other liquids to avoid short circuit.
4. Stop using the product when it is damaged in any manner (including breakage of the cable).
5. Don't place the appliance on a wood surface to prevent damages.
6. Do not touch the electrical parts of the device when it is powered on.
7. Power the product through a power supply within the permitted voltage range.
8. Don't use extension cords.
9. Do not let the cord hang over the edge of a table or counter.
10. Do not touch or move the plug with wet hands to avoid electrical shock.
11. Do not put the plug on a heated surface; keep away from oil.
12. Unplug from the power outlet when not in use, before cleaning, or during setup.
13. Do not touch the metal parts, whisk, and surface of this product when it is powered on to avoid burning.
14. Do not use broken cable or plug. If any breakage occurs, please contact the manufacturer, its service agent or similarly qualified person for replacement to avoid hazards.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person

- responsible for their safety.
16. Keep away from children.
  17. This appliance is for indoor use only.
  18. Do not add milk higher than the max level or lower than the minimum level.
  19. Do not operate the appliance when there is no milk inside it.
  20. Don't leave the running appliance unattended.
  21. Never operate the appliance on uneven surface.
  22. Use fire blankets only to extinguish fire on the appliance.
  23. This appliance is for household use only. It is not designed for commercial or industrial use.
  24. Don't touch the whisk when it is working.
  25. Don't put your finger or any objects into the gap of the frother.
  26. Use the included frother pitcher and cap only.
  27. Dispose of this product as per local regulations.
  28. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
  29. Do not attempt to modify the plug in any way.
  30. Don't attempt to repair the product by yourself.
  31. Don't remove the lid when the unit is working to avoid burning.

**This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.**

## Package Contents

- 1 x Paris Rhône Milk Frother
- 2 x Whisks
- 1 x Cleaning Brush

## Specifications





Model	PE-MF013
Input	AC 120V ~ 60Hz
Power	400W
Capacity	300ml / 10.1 oz Max
Cable Length	≥0.65m / 25.6 in
Working Time	210 seconds max

## How to Use



1. Add an appropriate amount of milk into the pitcher, cap on the lid. Connect to a power source, the product is in stand by mode now with a beep.
2. Press the Power Button to start frothing / heating.



Operation	LED Indicator	Function
1 <sup>st</sup> Press	 Lights up in red	Frothing and heating densely textured foam
2 <sup>nd</sup> Press	 Lights up in red	Frothing and heating fluffy foam
3 <sup>rd</sup> Press	 Lights up in red	Heating only
4 <sup>th</sup> Press	 Lights up in blue	Frothing cold foam

**Note:**

1. The LED indicator will light up accordingly when working and start flashing then turn off with 3 beep sound when the process is completed.
2. Milk will warm up once frothed.
3. It is recommended to use whole milk (Fat content>3%) for better result.
4. The frother can heat the milk up to  $65 \pm 5^{\circ}\text{C}$  /  $149 \pm 9^{\circ}\text{F}$
5. There will be a small amount of frothing once the milk is heated.

## Cleaning and Maintenance

1. Always disconnect the appliance from power after use and before cleaning.
2. Never immerse the power base and cord in water or expose them to moisture.
3. Clean the pitcher with the included cleaning brush or a soft cloth, never use hard nylon brush or metal brush to avoid scratches. Do not use a brasive cleaner.
4. To clean the lid, remove it from the pitcher, separate the lid and the silicon ring, clean under tap water.
5. Rinse the whisk with clean water and wipe it dry, store it in a safe place.
6. Do not wash the unit in dishwasher.

## IMPORTANTE

Avant d'utiliser ce produit, des précautions et des consignes basiques doivent être observées en tout temps:

1. Lisez ces consignes en détail et conservez-les pour vous y référer plus tard.
2. Cet appareil doit être mis à la terre (masse).
3. Tenir le produit éloigné de l'eau et d'autres liquides pour éviter les courts-circuits.
4. Arrêtez d'utiliser le produit s'il est endommagé d'une quelconque manière (y compris une rupture de câble).
5. Ne pas placer l'appareil sur une surface en bois pour éviter des dommages.
6. Ne pas toucher les parties électriques lorsque l'appareil est allumé.
7. Alimentez l'appareil avec une alimentation dans la fourchette de tensions autorisées.
8. Ne pas utiliser de rallonges.
9. Ne pas laisser le câble traîner au bord d'une table ou d'un plan de travail.
10. Ne pas toucher ou déplacer la prise avec les mains mouillées pour éviter l'électrocution.
11. Ne pas brancher la prise au dessus d'une surface chauffée/chaude; tenir éloigné des huiles.
12. Débrancher de la prise d'alimentation lorsqu'il n'est pas utilisé, avant nettoyage ou pendant la mise en place.
13. Ne pas toucher les parties en métal, le fouet et la surface du produit lorsqu'il est allumé pour éviter les brûlures.
14. Ne pas utiliser un câble ou une prise rompus/cassés. En cas de dommage, veuillez contacter le fabricant, son agent de service ou une personne qualifiée pour le remplacement pour éviter les risques.
15. Cet appareil n'est pas destiné à l'usage par des personnes (enfants

inclus) aux capacités physiques, sensorielles ou mentales limitées, ou manquant d'expérience ou de connaissances, à moins d'être sous supervision ou d'avoir été instruites à l'utilisation de l'appareil par une personne responsable de leur sécurité.

16. Tenir éloigné des enfants.
17. Cet appareil est destiné à un usage en intérieur uniquement.
18. Ne pas ajouter de lait plus haut que le niveau maximal ou moins que le niveau minimal.
19. Ne pas utiliser l'appareil sans lait à l'intérieur.
20. Ne pas laisser l'appareil en fonctionnement sans surveillance.
21. Ne jamais utiliser l'appareil sur une surface irrégulière.
22. N'utilisez que des couvertures anti-feu pour éteindre le feu sur l'appareil.
23. Cet appareil est destiné à un usage domestique uniquement. Il n'est pas conçu pour un usage commercial ou industriel.
24. Ne pas toucher le fouet lorsqu'il est en fonctionnement.
25. Ne pas mettre votre doigt ou tout objet dans la cavité du mousser.
26. Utilisez le pichet et le couvercle inclus uniquement.
27. Jeter ce produit conformément aux réglementations/lois locales.
28. Cet appareil dispose d'une prise polarisée (une broche est plus large que l'autre). Pour réduire le risque de court-circuit, cette prise est conçue pour ne pénétrer dans une prise d'alimentation que dans un sens. Si le branchement n'est pas parfait dans la prise, inverser le branchement. S'il ne rentre toujours pas, veuillez contacter un électricien qualifié.
29. Ne pas tenter de modifier la prise d'une quelconque manière.
30. Ne pas tenter de réparer le produit vous-même.
31. Ne pas retirer le couvercle lorsque l'appareil est en fonctionnement pour éviter les brûlures.

**Cet appareil peut être utilisé par des enfants âgés de 8 ans et plus, s'ils ont reçu une surveillance ou des instructions concernant l'utilisation de l'appareil de manière sécuritaire et s'ils comprennent les risques.**

**Le nettoyage et la maintenance ne doivent pas être effectués par des enfants à moins qu'ils soient âgés de plus de 8 ans et sous surveillance. Gardez l'appareil et son cordon hors de la portée des enfants de moins de 8 ans.**

## Contenu de la boîte

1 x Paris Rhône Mousseur à Lait

2 x Fouets

1 x Brosse de nettoyage





## Spécifications

Modèle	PE-MF013
Entrée	AC 120V ~ 60Hz
Puissance	400W
Capacité	300ml / 10.1 oz Max
Longueur de câble	≥0.65m / 25.6 in
Longueur de câble	210 seconds max

## Modalità di Utilizzo



1. Ajoutez une quantité de lait appropriée, fermez le couvercle. Branchez à une source d'alimentation, le produit passe en mode veille avec un bip sonore.
2. Appuyez sur le bouton d'allumage pour commencer à mousser / chauffer:

Action	Indicateur LED	Fonction
1 <sup>er</sup> appui	 Allumé en rouge	Mousse et chauffe, mousse à texture dense
2 <sup>eme</sup> appui	 Allumé en rouge	Mousse et chauffe, mousse légère
3 <sup>eme</sup> appui	 Allumé en rouge	Chauffe uniquement
4 <sup>eme</sup> appui	 Allumé en bleu	Mousse de lait froid

### Note:

1. L'indicateur LED s'allumera en fonction du fonctionnement et clignotera puis s'éteindra avec 3 bips sonores lorsque le processus est terminé.
2. Le lait chauffe lorsqu'il mousse.
3. Il est recommandé d'utiliser du lait entier (matière grasse > 3%) pour de meilleurs résultats.
4. Le mousser peut chauffer le lait jusqu'à  $65 \pm 5^{\circ}\text{C}$  /  $149 \pm 9^{\circ}\text{F}$ .
5. Il y a création d'un petit peu de mousse lorsque le lait est chauffé.

## Nettoyage et entretien

1. Toujours débrancher l'appareil de l'alimentation après utilisation et avant nettoyage.
2. Ne jamais immerger la base et le câble dans l'eau ou les exposer à l'humidité.
3. Nettoyez le pichet avec la brosse fournie ou un chiffon doux, ne jamais utiliser une brosse dure en nylon ou en métal pour éviter les rayures. Ne pas utiliser de nettoyant abrasif.
4. Pour nettoyer le couvercle, le retirer du pichet, séparer le couvercle et l'anneau en silicone, nettoyer à l'eau claire
5. Rincer le fouet à l'eau claire et sécher avec un chiffon, ranger dans un endroit sûr.
6. Ne pas laver l'appareil au lave-vaisselle.

## WARRANTY

Thanks for choosing Paris Rhône Milk Frother.

This product is covered with Paris Rhône product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Paris Rhône.

We can only provide after-sales service for products that are sold by Paris Rhône or Paris Rhône authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

※Please have your invoice and order ID ready before contacting Customer Support.

## **FCC Compliance**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



## **WEEE Compliance**

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.





[support@parishone.com](mailto:support@parishone.com)



[www.parishone.com](http://www.parishone.com)



Manufacturer: Shenzhen Danya Technology Co.,Ltd.  
Address: Room 3323,Building C,Galaxy World Phase II,  
Minle Community,Minzhi Street,Longhua District,Shenzhen China



Made In China







## Questions or Concerns?

[support@parishhone.com](mailto:support@parishhone.com)

PE-MF013小蛮腰 美规 说明书 20P 20