



KEY SAFE


en Operation manual

sk Návod na obsluhu



BURG-WÄCHTER KG
Altenhofer Weg 15
58300 Wetter
Germany

BA Key Safe 50 EN/SK SWI 141123

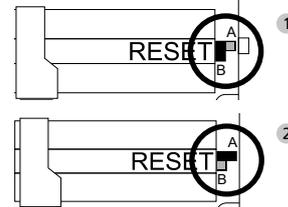

en Key Safe – Operation

Dear customer,

Thank you very much for deciding for a KEY SAFE manufactured by BURG-WÄCHTER. The KEY SAFE permits a reliable storage of keys and /or other valuables.

Important: Please read the entire User Manual before you start to mount the device and before resetting.

Let us wish you a high level of security and quality of living with your KEY SAFE

Your BURG-WÄCHTER KG

To Open

Slide shutter door down to reveal the dials and the door release button. Rotate all 4 dials to the pre-set combination, grasp the sides on the top section of the box and pull lid towards you.

Resetting Combination

1. Open the KEY SAFE using the secret number (the factory preset is "0 - 0 - 0 - 0").
2. Slide the reset pin to the left and down as per arrow (Fig 2).
3. Rotate the 4 dials on the front to your new secret combination. Ensure the numbers are positioned centrally and have clicked into position.

Attention: If the code gets lost the opening of the KEY SAFE is impossible.

4. Return the reset pin to the original position.
5. Close the lid and check the operation of the box using the new combination.

To lock

The combination must be scrambled by rotating the 4 digit rolls.

Maintenance:
It is recommended the digit rolls are rotated weekly to keep them moving freely.

Errors and changes reserved.

sk Key Safe – návod na obsluhu

Vážený zákazník,

ďakujeme, že ste sa rozhodli pre kúpu produktu KEY SAFE od spoločnosti BURG-WÄCHTER. KEY SAFE umožňuje bezpečné uloženie akýchkoľvek kľúčov a/alebo iných cenných predmetov.

Dôležité: Kým začnete s montážou alebo prestavovaním kódu, prečítajte si celý návod na obsluhu.

Prajeme vám bezpečný a kvalitný život s produktom KEY SAFE.

Vaša spoločnosť BURG-WÄCHTER KG

Otváranie

posuňte ochrannú klapku nadol, aby sa uvoľnili nastavovacie kolieska a otvárač dverí. Štyri kolieska s číslicami nastavte na predvolenú kombináciu, uchopte vonkajší kryt a potiahnite hornú časť KEY SAFE smerom k sebe.

Prestavenie číselnej kombinácie

1. Otvorte KEY SAFE tak, že zadáte aktuálne platný kód na otváranie. (výrobné nastavenie „0 - 0 - 0 - 0“) a potiahnete hornú časť smerom k sebe.
2. Resetovací kolík posuňte doľava nadol, ako znázorňuje šípka. (obr. 2).
3. Pomocou kolieska s číslicami nastavte nový kód na otváranie. Ubezpečte sa, že číslice sú umiestené v strede a že citelne zapadli na miesto.

Ak by ste kód stratili, otvorenie KEY SAFE už nebude možné!

4. Posuňte resetovací kolík späť do východiskovej polohy.
5. Zatvorte hornú časť a skontrolujte funkciu.

Uzatváranie

Po zatvorení hornej časti sa musia kolieska s číslicami prestať.

Odporúča sa raz týždenne otáčať číselné kolieska.

Chyby a zmeny vyhradené.