

AFX

FUZZY WONDERLAND

MANUAL



AFX_PEDALS



AFX PEDALS

WWW.AFXPEDALS.COM




AFX

FUZZY WONDERLAND


HANDWIRED IN JALISCO, MEXICO

ENGLISH

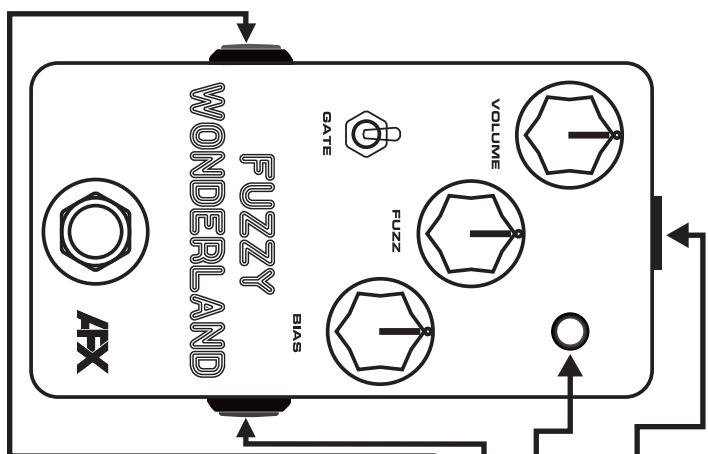

- POWER** Use a 9V DC negative center power supply. Pedal requires at least 4mA. Do not use more than 9V DC.
- LED INDICATOR** Blue light indicates effect on.
- INPUT** 1/4 Jack for guitar input.
- VOLUME** Controls the output level of the pedal.
- FUZZ** Controls the gain of the effect. When maxed out, fuzz can also be controlled with your guitar's volume knob.
- BIAS** Adjusts the power reaching the second gain stage of the effect. Maxed out is traditional fuzz Face style tone. Turning it counter-clockwise increases the sound gate.
- GATE** When in down position, it creates a strong sound gate on the effect.

ESPAÑOL

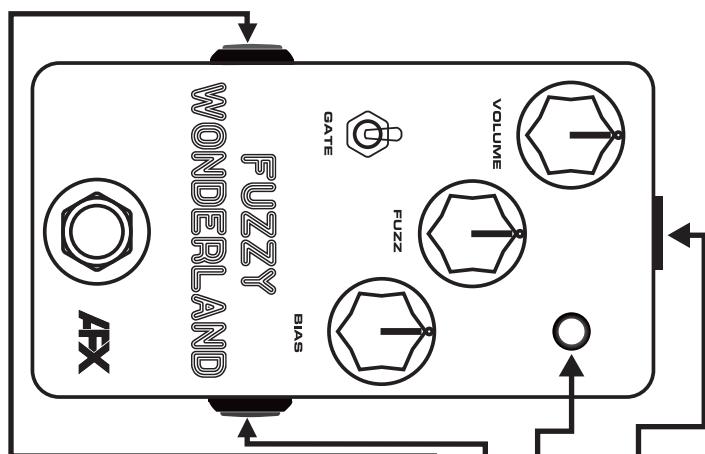

- ALIMENTACION** Use una fuente de alimentación de 9V DC. Este pedal requiere una alimentación de al menos 4mA. No use una alimentación superior a 9V DC.
- INDICADOR LED** La luz azul indica que el efecto está encendido.
- ENTRADA** Jack de 6,3mm de entrada (a guitarra).
- SALIDA** Jack de 6,3mm de salida (a amplificador).
- VOLUMEN** Controla el volumen de salida del pedal.
- BIAS** Ajusta el voltaje que entra a la segunda fase del efecto. Al máximo replica el sonido tradicional del Fuzz Face. Al girarlo contrariamente, se incrementa el Gate del efecto.
- GATE** Hacia abajo, crea un efecto "sound gate".