




適用型號 MODEL

WEM-121

無線電動打蛋器
**WIRELESS ELECTRIC
MIXER**

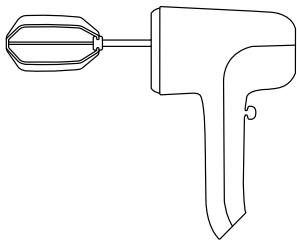

使用說明
USER MANUAL



使用產品前，請仔細閱讀本使用說明書。本產品僅限家居使用。

Before using the product, please read this user manual carefully and keep it for future reference.
This product is intended for indoor use.



本說明書中產品設計、規格及功能僅供參考，實際產品功能和規格可能會有所不同。
產品資料如有更改，恕不另行通知。如中英文版本有差異時，應以中文版為準。

The product design, specifications and functions in this manual are for reference only. Actual product may vary. Product details are subject to change without prior notice. In case there is any inconsistency or conflict between English version and Chinese version of the terms, the Chinese version shall prevail.

Bear•為香港蝸居而誕生

成立於2006年3月，於2019年8月23日正式掛牌上市。

Bear微家電/小家電集合實用、多功能、簡約、時尚、小巧等多種特色，放在家裡每個角落，也能成為裝潢的一部分，營造出家居品味。這些特點讓 Bear成為香港小家庭及單身男女在選購小家電時的優先選擇。


Bear以人為本，產品由入廚到生活家電，滿足你生活上各種需求，對於繁忙又對生活有要求的人，絕對是家中必備。

幸福就是那麼簡單！

Bear帶給你生活中的一點甜蜜幸福。無論是忙碌早晨的一片果醬鬆脆厚多士，夏日午後的一杯清新慢磨果汁，還是冬日睡前的暖暖花果茶。Bear為香港人繁忙的生活打造出片刻寧靜與優雅，療癒你的身心靈。



Bear•小餐桌上的廚樂

不需要大廚房，不需要巧手廚藝，只要一張小餐桌及Bear小廚具家電，你也做到的簡單料理，讓每個人也可體驗入廚樂趣。

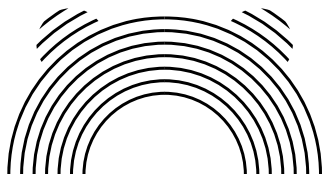




產品簡介

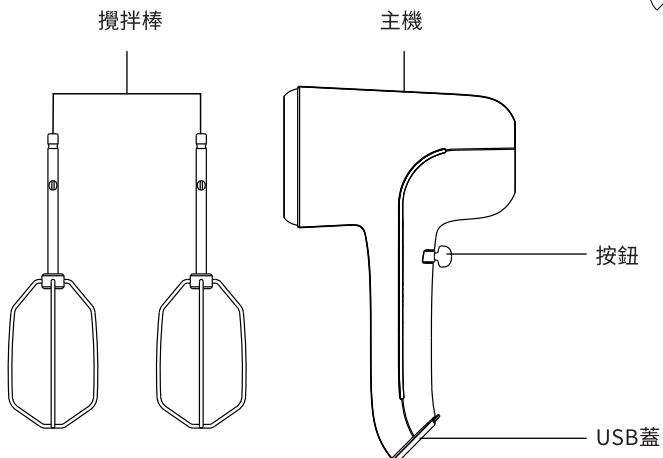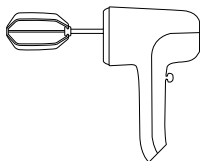

控制面板

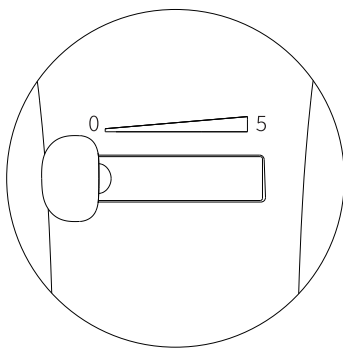



使用指南

安全注意事項

為防止觸電、火災、燙傷等事故，請遵守以下內容。

- 請勿在無人看管下使用本產品。本產品僅適用於家庭使用。
- 使用過程中如果低檔位阻力較大或轉動不順暢或者打蛋白效果不佳，可以向右推動按鈕，選擇更高轉速的檔位，直至達到使用要求。
- 清潔前及安裝和拆除攪拌棒時，請確保按鈕處於最左邊關機狀態。
- 本產品連續使用5分鐘，需讓產品冷卻15-30分鐘，再繼續下一次的使用，否則主機會因過熱造成機器壽命縮短。
- 採用非我司建議的配件可能會導致人身傷害。
- 操作期間，需要將各部件安裝到位，鎖緊無鬆動。
- 產品工作時，請勿讓手指、衣物、毛髮等接觸旋轉部件。
- 充電時禁止推動按鈕開機。
- 本產品在使用時嚴禁小孩以及肢體不健全、感覺或精神上有障礙或缺乏相關經驗和知識的人單獨操作，若有小孩在旁，須加倍小心使用本產品。切勿將本產品置於小孩能觸及的地方。
- 嚴禁任何拆解、擠壓、穿刺、短路本產品或投入水、火中或置於溫度高於60°C的環境中。
- 本產品中包含鋰電子電池，嚴禁私自拆開產品外殼，避免可能造成的電芯等損壞或其他危險。
- 切勿擅自改裝產品或使用非生產商提供的零件進行維修，否則可造成危險既令保修服務無效。
- 產品長時間擱置時，請清潔乾淨，裝入包裝箱，置放於通風和乾燥的地方，以免受潮，影響使用。


本產品內置鋰電池，需注意以下事項：

- A. 請將本產品在環境溫度為0-40°C中使用；
- B. 電量不足時請及時充電；
- C. 在低於10°C環境下充電速度可能變慢，屬於正常現象；
- D. 長時間不使用本產品，請每隔三個月充一次電，以防止電池損壞。
- E. 嚴禁私自拆開產品外殼，避免造成電芯等零件損壞或發生其它危險。如若發生意外，電池裸露在產品表面，請及時與本公司售後服務部門聯繫，並注意以下事項：
 - 不要將電池暴露在極熱或有火星的環境中。
 - 不要將電池短路，過充或過放
 - 不要使電池承受過重的機械沖擊。
 - 不要將電池浸入海水或水中，或者使其吸濕。
 - 不要顛倒電池的正負極。
 - 不要拆卸或修整電池
 - 不要和項鍊、硬幣或發夾等金屬物品放置在一起。
 - 不要使電池受到明顯的損害或變形。
 - 不要將電池與插座連接。
 - 不要直接焊接電池。
 - 不要直接接觸洩漏的電池。
 - 不要將電池用於其它設備。
 - 不要將鋰離子電芯混合使用。
 - 不要將電池放置在太陽光直射的地方。
 - 不要針刺、錘打或踐踏電池。
 - 不要撞擊或投擲電池。
 - 將電池放置在遠離兒童的地方。
 - 在廢棄器具前，必須將電池從器具中取出，并用絕緣紙包住電池的電極
 - 在取出電池時，器具必須要斷電。
 - 電池應安全地處置。


基本操作步驟

使用前，請先將攪拌盤、攪拌棒清洗乾淨，並將食材放入盤中。


請確保按鈕處於最左關機狀態。

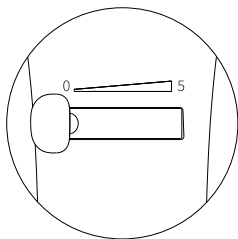

將攪拌棒插入主機孔中，聽到「喀嚓」一聲即為安裝到位。

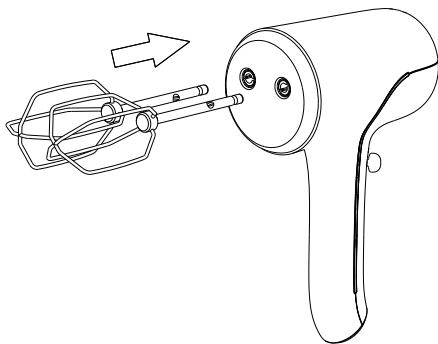


產品設有多個檔位，按鈕處於最左邊位置為關機；向右轉動，進入開機狀態，攪拌棒轉動速度逐漸增大，最右邊位置為最高檔速度。

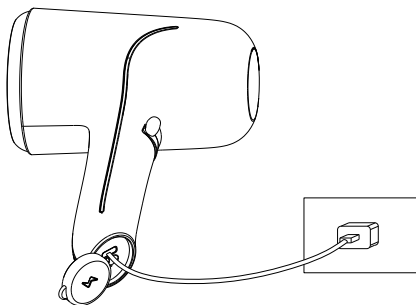

i 注意：請使用DC5V 1A或者1A以下的適配器給本產品充電，充電過程中，指示燈為紅色常亮，充滿電後，變為綠色常亮；產品在充電時，不能啓動工作，產品充滿電後，及時斷開電源，以免過充電，對電池造成損害，降低產品的使用壽命。

本產品只適用於攪拌稀的液態食材，如蛋白（單次最多攪拌8個蛋白）。
低檔打蛋白如果效果不佳，可以推動按鈕選擇更高檔位，直至達到使用要求。
攪拌黏稠的混合物（如脂肪和麵粉）會導致機器損壞，請勿攪拌黏稠的混合物。
產品不允許連續使用超過5分鐘。

工作完成後請將按鈕推至最左邊位置，拔出攪拌棒。

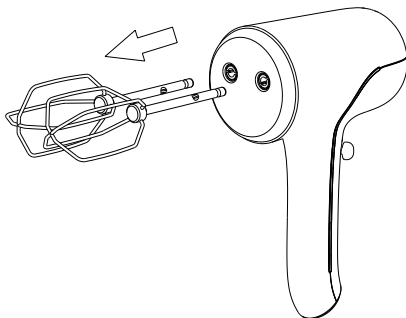



清潔及保養

1. 使用本產品後請及時清洗產品。
2. 攪拌棒可以放入水中清洗，主機嚴禁用水沖洗。
3. 主機有髒污時，可用濕毛巾擦拭，請切勿將機體放入水中清洗，以免漏電及發生故障。
4. 請勿用天拿水、汽油、去污粉、硬質刷或不鏽鋼絲球等來清潔，以免刮花腐蝕部件表面，導致產生異味或滋生細菌。
5. 請勿將本產品任何部件放入洗碗機、微波爐、消毒櫃或超過60°C的熱水中清洗或消毒，切勿使用其他設備加熱，以免部件變形或損壞。
6. 產品收納時要確保所有部件皆清潔乾燥，並存放於清潔乾燥處。
7. 電池浸水後，禁止使用。



常見問題

故障現象	原因分析	解決方法
攪拌時，食材攪進機內	食材過量	關上電源，取出多餘食材
推動按鈕但產品不運作	電量不足	及時充電
推動按鈕後，產品進入工作狀態但不運作	食物太黏稠，瞬間嚴重超載，電路板產生保護	將按鈕推到最左邊，重新開機可以正常使用
	非正常工作，瞬間嚴重超載，電路板產生保護	將按鈕推到最左邊，重新開機可以正常使用
	食物太黏稠，持續嚴重超載，電路板產生保護	將按鈕推到最左邊開機，30分鐘後可以正常使用
	確保電量充足，非充電中，電路板非保護中，產品依然不運作	聯絡售後服務
產品運作時，配件攪拌時打滑不動	個別配件連接處打滑；主機內部齒輪打滑	插緊攪拌棒；齒輪打滑須聯絡售後服務
產品運作時紅綠燈閃亮	產品設置電量提醒功能，當電量低時，綠燈閃亮，提醒需要充電	屬正常現象，為避免產品電量用完不能啟動，請及時充電



產品規格

產品型號	WEM-121
額定電壓	7.4V
額定功率	50W
電池容量	1500mAh
充電電壓	5V
充電電流	1A
充電時間	4小時
可連續運作次數	約10-15次 (滿電)
轉速	1000-1400轉/分鐘
產品淨重	0.5kg
產品尺寸	252x202x77mm




Specifications

Model	WEM-121
Voltage	7.4V
Power	50W
Battery Capacity	1500mAh
Charge Voltage	5V
Charge Current	1A
Charge time	4 Hours
Continuously operate Times	~10-15 times (full charge)
Rotating Speed	1000-1400/min
Weight	0.5kg
Dimensions	252x202x77mm





Product Overview

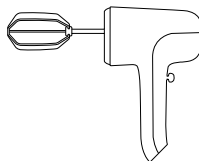

Beaters x2

Main Housing

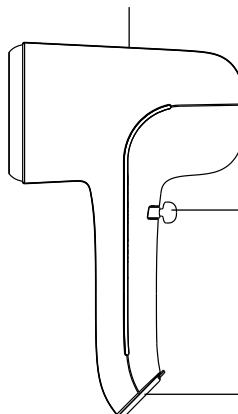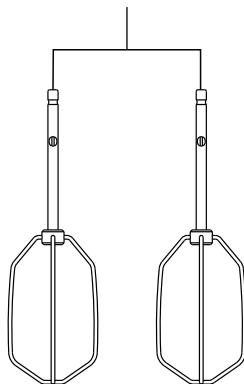


Control Panel

USB Port



Control Panel

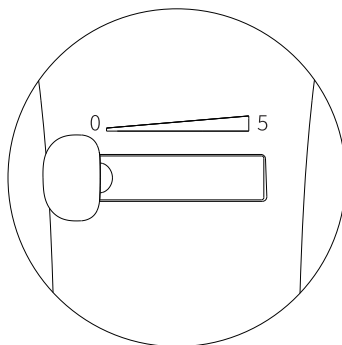



Instructions

Safety Instructions

Strictly observe the following instructions to prevent any accidents or injuries:

- Read all instructions carefully before you use the appliance. This production only for indoor use.
- Before Clean, install and remove beaters, please make sure control panel is off state.
- Do not continuously operate the mixer over 5 minute. The motor may overheat. Please let the mixer rest for 15-30 minute, after completely cool down may start again.
- Do not operate the appliance with a damaged cord or plug it after the appliance malfunctions, or is dropped or damaged in any manner. Return to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Before use the appliance, check all the component install tight.
- Keep fingers, hair and clothes far away from beaters when you use the appliance.
- Do not use the appliance when it charge.
- This appliance cannot be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, but only if they have been given supervision. Great care is necessary in using the appliance, especially near children. Please place the appliance out of reach of children.
- This appliance have Nickel Cadmium Battery. Do not remove product casing by yourself.
- When the product will not be used for a period of time, the machine should be kept clean. Put it into the packaging box and place it in a ventilated and dry place to prevent dampness.


This appliance have Nickel Cadmium Battery, remind the following:

- A. Please use the appliance in an ambient temperature of 0-40°C;
- B. Please charge when the battery is low;
- c. It is normal that the charging speed may become slower in an environment below 10°C;
- D. If not use this product for a long time, please charge it every 3 months to prevent battery damage.
- E. Do not remove product casing to avoid damage to the battery and other parts or other dangers. If an accident occurs and the battery is exposed on the surface of the product, please contact the after-sales service department and remind following matters:
 - Do not expose the battery to extreme heat or sparks.
 - Do not short-circuit, overcharge or overdischarge the battery
 - Do not subject the battery to excessive mechanical shock.
 - Do not immerse the battery in seawater or water, or allow it to absorb moisture.
 - Do not reverse the polarity of the battery.
 - Do not disassemble or trim the battery
 - Do not place it with metal objects such as necklaces, coins or hairpins.
 - Do not subject the battery to obvious damage or deformation.
 - Do not connect the battery to the socket.
 - Do not solder the battery directly.
 - Do not touch leaking batteries directly.
 - Do not use the battery with other equipment.
 - Do not mix lithium-ion cells.
 - Do not place the battery in direct sunlight.
 - Do not use needle, hammer or trample on the battery.
 - Do not hit or throw the battery.
 - Keep the battery away from children.
 - Before discarding the appliance, the battery must be removed from the appliance and the electrodes of the battery should be covered with insulating paper
 - The appliance must be switched off when the battery is removed.
 - Should be disposed battery safely.

Operating Instructions

Before use the appliance, clean the mixture bowl, beaters.


Put all the ingredients inside.

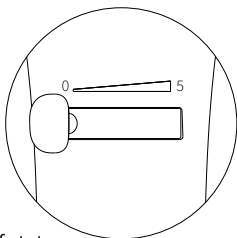


*Make sure control panel is off state.

Place the beaters at the bottom of the main body and insert into the beater holes.

When hear the snapping sound, the installation is completed.

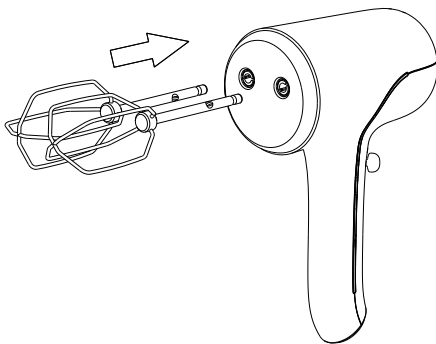

Leftmost position on the control panel is to turn off; turn to the right to enter the power-on state. The rotation speed of the stirring rod gradually increases. And the rightmost position is the highest speed.

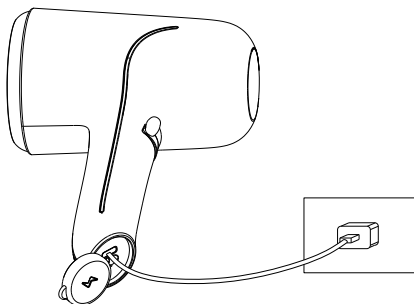


- i** Reminder: please use DC5V 1A or below 1A adapter for charge. When the appliance is charge, indicator light will be red. Full charge will be green light. Do not use the appliance when it is charge. Do not over charge.

This appliance is only suitable for stirring liquid ingredients, such as egg whites (up to 8 egg white at a time).

Do not continuously operate the mixer over 5 minute. The motor may overheat. Please let the mixer wite for 15-30 minue, after completely cool down may start again.

After finish the work, push the button to the far left and pull out the beater.

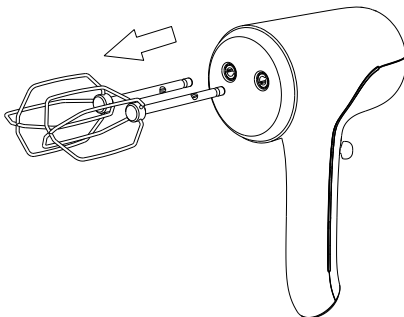



Cleaning and Maintenance

1. Clean the appliance after use.
2. Do not put the main body into water.
3. Dry them with cloth, store in the package box.
4. Do not use when the battery is damp.



Troubleshooting

Fault Description	Possible Cause	Solution
Ingredients stuck to main body	Too much ingredients	Turn off and take out some ingredients
Pull the control panel to right side but the appliance is not working	Low battery	Please charge it
	Ingredients is too sticky	Pull the panel to left side and start again
	Make sure battery have enough power and not charge, but still not working	Contact the after-sales service department
Beater can not mix well	Some part of the appliance is wear	Place the beaters well; if they are wear please contact the after-sales service department
Flashes red light when the appliance is working	Low Battery	Please charge it



www.bears.com.hk



Manufacturer: **BEAR ELECTRIC APPLIANCE CO., LTD.**

Distributor: **HOMESTUFF INTERNATIONAL COMPANY LIMITED**

電郵 Email: info@bears.com.hk

官方網站 Official Website: www.bears.com.hk

Find Us On



Bear Hong Kong