Featherbed Air Mattress

User Guide

ROOFNEST

⚠ WARNING: Always ensure the air mattress is fully deflated before closing your tent to prevent damage to the tent.

Inflation

STEP 1 | Unroll the air mattress. Locate the valve on the mattress and open the valve cap. Turn the valve to the "IN" Position.

STEP 2 | Allow the mattress self-inflate. This mattress is designed to self-inflate to a comfortable level.

For additional firmness, add air using the air pump.

STEP 3 | Close the valve cap securely to prevent any air from escaping. Your air mattress is now ready. Enjoy a comfortable night's sleep in your tent!

Deflation

STEP 1 | Open the valve cap and turn the valve to the "OUT" position to allow air to escape.

STEP 2 | Use the air pump to deflate the mattress. Alternately, you can deflate without the pump by rolling the mattress from the end opposite the valve

STEP 3 | Once all the air has been expelled, close the valve cap to prevent air from re-entering.

Keep the fully deflated air mattress inside your tent, or roll it back up for storage. Use the air pump to deflate the mattress.

Alternately, you can deflate without the pump by rolling the mattress from the end opposite the valve.
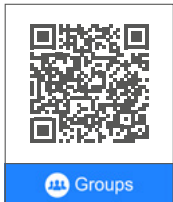

PRO TIP

Optimizing Space: If your tent came with a memory foam mattress, we recommend removing it when using the air mattress. When the air mattress is fully deflated, this will free up space, allowing you to conveniently store bedding inside the tent.

⚠ WARNING: Always ensure the air mattress is fully deflated before closing your tent to prevent damage to the tent.
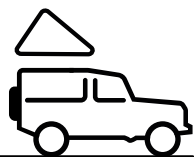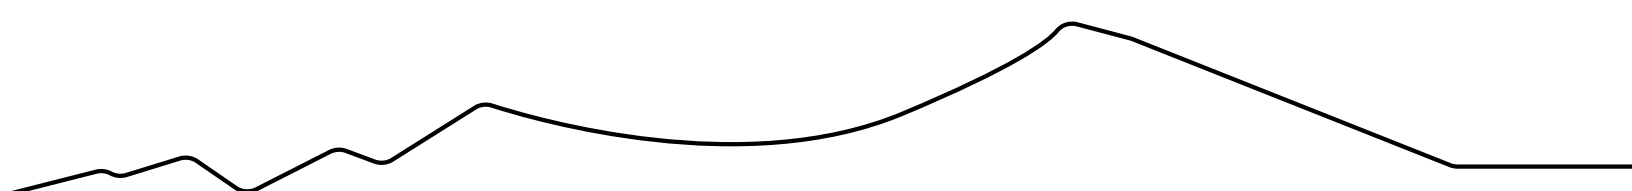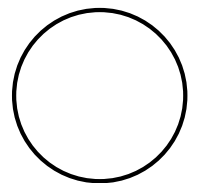
Thank you for being a Roofnest customer!

Please stay in touch and let us know where your travels take you **– we love to get photos!**

We also have a great community online where customers post photos, share stories, tips, and good vibes – the Roofnest Flock – find it on Facebook by searching for "Roofnest Flock".

e: support@roofnest.com
p: (303) 502–5406
roofnest.com

ROOFNEST

Now go camping and enjoy!
Share Your Adventures **#Roofnest**