MIKIT

SAY HELLO TO T80
User Guide

Three Ways of Connecting Devices

Short Press:
Hold `FN` first,
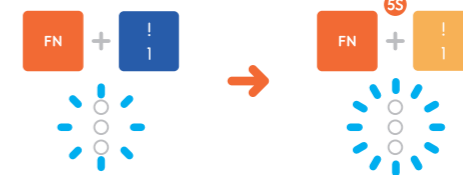then the `corresponding key`,
and release both keys.

Long Press:
Hold `FN` first,
then the `corresponding key`.
Hold for 5 seconds until
the indicator starts blinking.

Bluetooth Mode

1. Toggle the keyboard Mode Switch to the wireless side.

2. Short Press FN+1 to make the indicator blink, then Long Press FN+1 to make the indicator flash.

   `FN` + `1` → `FN` + `1`

3. Select the pairing device [Mikit T80 BT].

   MIKIT T80 BT

4. The indicator turns off when the keyboard is paired successfully.

*In order to complete the pairing of the keyboard with a second or third new Bluetooth device, repeat the instructions from Step 2 and replace the "FN+1" with "FN+2" or "FN+3".

2.4GHz Mode

1. Toggle the keyboard Mode Switch to the wireless side.

2. Plug the 2.4GHz receiver into your computer.

3. Press FN+4 to enter 2.4GHz connecting mode.

   `FN` + `$ 4` →

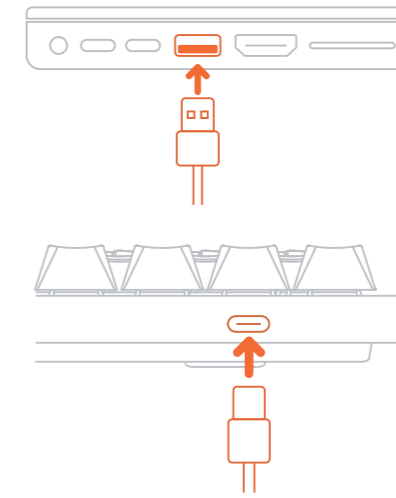4. The indicator turns off when the keyboard is connected successfully.

*Please find the 2.4GHz receiver inside the package.

Wired Mode

1. Toggle the keyboard Mode Switch to the wired side.

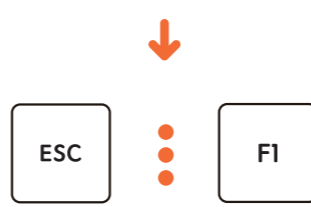2. Plug the USB cable into your device.

*When being plugged into the computer, the keyboard will start to charge automatically.

*Caution: The rated power for the charger must not exceed 5V~1A.Connection to a higher power output will damage the keyboard.
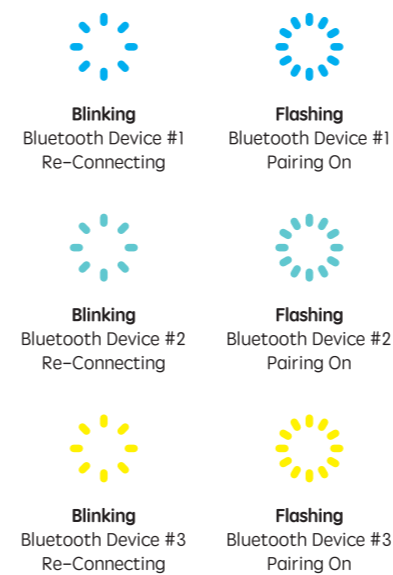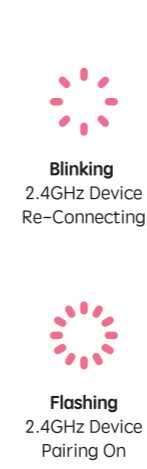
LED Indicator Status Description

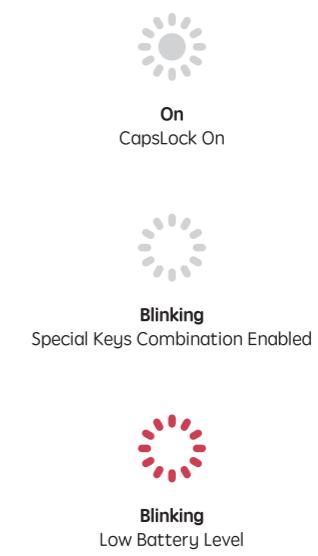The indicator is located between ESC and F1.

`ESC` ⁝ `F1`

Bluetooth		2.4GHz	Others
Blinking Bluetooth Device #1 Re-Connecting	**Flashing** Bluetooth Device #1 Pairing On	**Blinking** 2.4GHz Device Re-Connecting	**On** CapsLock On
Blinking Bluetooth Device #2 Re-Connecting	**Flashing** Bluetooth Device #2 Pairing On	**Flashing** 2.4GHz Device Pairing On	**Blinking** Special Keys Combination Enabled
Blinking Bluetooth Device #3 Re-Connecting	**Flashing** Bluetooth Device #3 Pairing On		**Blinking** Low Battery Level

Function Keys Combinations

■ Short Press
■ Long Press

Prev · Play · Next · mute
Backlight Effects Switching
Backlight Speed − · Backlight Speed +

Switch Between Mac/ Windows Layout
Swap CapsLock and Left Ctrl
Backlight On/Off

Up: Vol+
Down: Vol−

Rotary Knob #1
Clockwise: Brightness+
Counterclockwise: Brightness−

Rotary Knob #2
Rotate: Backlight Effects Switching

WinLock
Battery Level Check
(The LED Indicator blinks 1, 2, 3,···10 times, which stands for 10%, 20%, 30%,···100% battery level.)
Reset to Default
Backlight Colors Switching