



OPTIMAX MK885 RGB OPTICAL SWITCH KEYBOARD

What's included in the box

1. FANTECH OPTIMAX MK885 RGB Optical Switch Keyboard
2. Switch Plugger
3. Keycaps Plugger
4. User's manual

System requirements

1. Operating systems: Windows XP/7/8/10; MAC OS
2. One free USB 2.0/3.0 port

USER MANUAL

Instruction Manual

Thank you for purchasing FANTECH OPTIMAX MK885 RGB optical switch keyboard.

FANTECH OPTIMAX MK885 is a plug and play usb interface RGB keyboard, no need to install any driver for your first use.

TECHNICAL SPECIFICATION

EN

- PRODUCT NAME : RGB Optical Switch Keyboard
- NUMBER OF KEYS : 104 keys
- POWER CONSUMPTION: 300mA
- WORKING VOLTAGE: DC 4.5-5V
- CABLE LENGTH : 160cm


MK885 OPTIMAX Size



GAME MODE

How To Set Game Mode

1. Select Custom Mode FN+1, FN+2, FN+3, FN+4 or FN+5 to be recorded, press FN+HM to start the recording process.
2. The three indicator light will blink, press or select the color for the selected keys on keyboard, press the key simultaneously for more color selection.
3. Finish the selection with FN+HM to save.
4. To view the profile, press the previous recorded / selected custom mode.

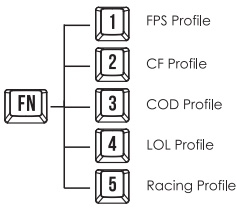

Software



Macro editing & setting

- * To make a new macro, right click on macro list and input the macro key name and then input the action.
- * The command recording will start just after you press the Record button.
- * You can edit the delay time before saving the macro.
- * Press Stop record button and the save button to save your macro and then it will be ready to use.



Key editing & setting

- * Select each key for function replacement. Make sure "Light" checkbox leave unchecked.
- * You can choose 3 function Key Assignment, Macro and Media.
- * After choosing your desire function, Press OK.

EN


Caution

- * Keyboard's main board has been coated with water and dust proof nano-technology. If accidentally poured with water, plug out the cable immediately and turn the keyboard with button faced down to make water flow out easily.
- * This keyboard designed with replaceable switch, if you found some button is not working, you can purchase and replace the switch by yourself without opening or soldering any part of keyboard.

Warning

- * Do not attempt to open, service or modify this keyboard to prevent the risk of electricity shock or other hazard and void the warranty.
- * Do not remove or change the warranty label.
- * Clean using only with dry cloth. Do not use alcohol or detergent.
- * Keep away from fire or any heat more than allowed operating and storage condition.

Keys Function Map

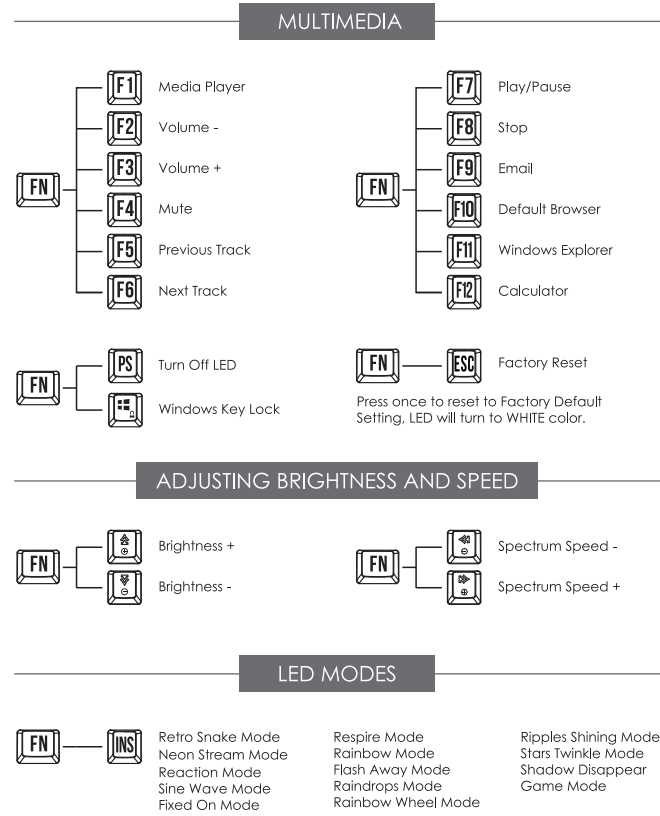

ID

Perhatian

- * Mainboard keyboard ini telah dilapisi dengan teknologi nano untuk anti air dan debu. Apabila tersiram air, lepas kabel dari usb port dan balikkan posisi keyboard dengan tombol menghadap kebawah agar air mudah keluar, Biarkan hingga benar-benar kering.
- * Keyboard ini didesain dengan sistem switch yang bisa diganti. Apabila ada tombol yang tidak berfungsi, anda bisa membeli dan mengganti switch dengan mudah Tanpa harus membuka dan mensolder bagian apapun dari keyboard ini.

Perhatian

- * Jangan pernah mencoba untuk membuka, servis atau memodifikasi keyboard ini untuk menghindari resiko sengatan listrik atau bahaya lainnya dan membatalkan garansi
- * Jangan membuang atau merubah label garansi
- * Bersihkan hanya dengan kain kering, jangan menggunakan alkohol atau deterjen
- * Jauhkan dari api atau panas yang melebihi suhu pemakaian dan penyimpanan

TH

ข้อควรระวัง

เป็นคีย์บอร์ดที่มีแผงเมนบอร์ดด้านในผลิตด้วยนาโนเทคโนโลยีทำให้สามารถป้องกันน้ำและฝนละอองได้ในระดับหนึ่งเพื่อป้องกันการอุบัติเหตุที่เกิดขึ้นจากน้ำที่หกโดนตัวคีย์บอร์ด. หากคีย์บอร์ดมีน้ำหกใส่ ให้รีบดึงสาย USB ที่คีย์บอร์ดออกทันทีหลังจากนั้นให้นำเป็นพินมาแทนที่เป็นปุ่มคว่ำลงเพื่อให้เข้าไปไหลออกมาได้อย่างรวดเร็ว ตัวคีย์บอร์ดได้ถูกออกแบบมาเพื่อให้สามารถถอดปุ่มออกมาเปลี่ยนได้ ถ้าหากพบว่าบางปุ่มไม่สามารถทำงานได้ ก็สามารถซื้อปุ่มใหม่มาเปลี่ยนได้เอง โดยที่ไม่ต้องเปิดแผงด้านในของคีย์บอร์ดออกมาเพื่อทำการซ่อมแซมใดๆ

คำเตือน

- * อย่าพยายามที่จะเปิดให้บริการหรือแก้ไขแป้นพิมพ์ขึ้นเพื่อป้องกันความเสี่ยงชีวิตไฟฟ้าหรืออันตรายอื่น ๆ ก็ถือว่าเป็นการหมดประกัน
- * ไม่ควรแกะสติกเกอร์การรับประกัน หรือทำให้ ฉีกขาด
- * ควรทำความสะอาดด้วยผ้าแห้ง ไม่ควร ใช้ยาใดๆที่มีแอลกอฮอล์ทำความสะอาด
- * เก็บให้ห่างจากไฟหรือความร้อนได้ เกินกว่าความร้อนที่กำหนดไว้
- * คำเตือน * อาจจะมีการสปลาคของกระแสไฟฟ้า หากไม่มีสายดิน เนื่องจากแผงคีย์บอร์ดเป็นอลูมิเนียม จึงอาจเป็นตัวนำไฟฟ้าได้ หรือเคสคอมพิวเตอร์มีอาจาร รั่วของกระแส

ไฟฟ้าอยู่ก่อนแล้ว

** วิธีแก้ไข **

1. ให้ใช้วัสดุที่ไม่นำไฟฟ้ามารองใต้เคสคอมพิวเตอร์
2. ใส่รองเท้าในขนาดใช้งานคอมพิวเตอร์
3. ให้หาฟารองเท้าไม่ควรสัมผัสพื้นโดยตรง หากพื้นเป็นกระเบื้อง