



Low Profile Mechanical keyboard

L75 User Manual


Welcome

Thank you for choosing Mechanical Rechargeable Keyboard. For the best results, please read the user manual carefully before using this product.

Package Contents

- 1*Tri-Mode Mechanical keyboard
- 1*2.4Ghz RF transceiver
- 1*USB Type-C Cable
- 1*User Manual
- 1* 2 in 1 keycap puller/switch puller

Introduction

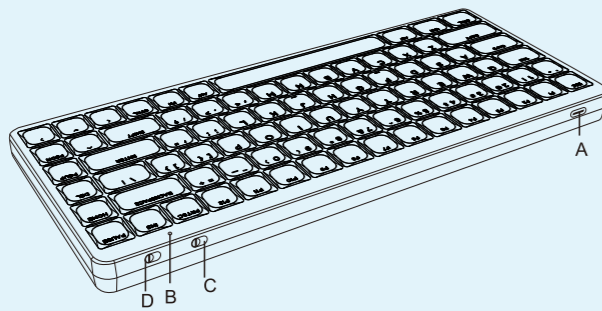

1

A Type-c Interface

B Prompt light
Different states of the keyboard display different lights. Charging is required: Flashing red.
Charging: Continuous red.
Charging completed: Change to other state lights.
Bluetooth/2.4G connecting: Flashing light
Bluetooth/2.4G connected: Stop flashing
Switch wireless connection channel: Blink and stop

C Wireless mode switch
OFF: Wired mode
ON: Wireless mode

D Win/Mac switch

Installation, Connection and Use

1|Wired mode
Toggle the switch to "off" for wired mode.
Connect the USB charging cable to your computer

2|2.4G wireless mode
Toggle the switch to "on" for wireless mode.
Press FN+R 3-6 seconds -> Prompt light flashing -> Plug the 2.4Ghz RF transceiver into the USB port of your computer -> The Prompt light stops flashing -> It can be used normally.

3|Bluetooth mode
Toggle the switch to "on" for wireless mode.
Press FN+R 3-6 seconds -> Prompt light flashing -> Your computer or mobile phone can find the Bluetooth, click Bluetooth connection -> The Prompt light stops flashing -> It can be used normally.
The name of the Bluetooth device is XVX L75 5.0/XVX L75 3.0.

2

This product has three Bluetooth channels, FN+Q, FN+W and FN+E, each of which can be connected to a device. The connection method is the same as above. Press FN+Q/FN+W/FN+E once to switch channels.

For example:FN+Q is connected to PC A, FN+W is connected to PC B, FN+E is connected to PC C, and 2.4G is connected to PC D. In wireless mode, press FN+Q to switch to PC A for use, press FN+W to switch to PC B for use, press FN+E to switch to PC C for use, and press FN+R to switch to PC D for use. When switching, the prompt lamp will flash once and then stop, indicating that the switching is succeeded. If the keyboard is not used for a long time, please turn off the wireless mode to save power.

4. It is better to use it after charging for the first time. This will extend battery life.
When charging, the indicator light is red, and the red color changes to other colors after full charge. When the battery is low, the indicator will flash red. Please charge it in time.

5. Win/Mac/other
This product is applicable to Windows and Mac systems. Please turn the Win/Mac switch to the corresponding position. It can also be used on Android smartphones, iPhone and iPad through Bluetooth.

RGB Backlit Modes

| |
|---|
| FN+ : Adjust 20 LED backlight modes |
| FN+DEL : Adjust lighting color , 8 modes |
| FN+→ : Increase speed (When the maximum level is reached, the→key will flash once.) |
| FN+← : Decrease speed (When the minimum level is reached, the←key will flash once.) |
| FN+F5 : Keyboard backlight - (When the minimum level is reached, the↓key will flash once.) |
| FN+F6 : Keyboard backlight + (When the maximum level is reached, the↑key will flash once.) |
| FN+TAB : Constant backlight mode (Click again to exit) |

3

When the keyboard is not in use for 2-3 minutes, the backlight will automatically turn off. Press any key to wake up the backlight again.

Multimedia Function

| MAC | WINDOWS | Function |
|-----------------------|---------|--|
| F1 | FN+F1 | Screen brightness - |
| F2 | FN+F2 | Screen brightness + |
| F3 | FN+F3 | Task switching |
| F4 | FN+F4 | The computer |
| F5 | FN+F5 | Keyboard backlight - |
| F6 | FN+F6 | Keyboard backlight + |
| F7 | FN+F7 | Previous song |
| F8 | FN+F8 | Pause/Play |
| F9 | FN+F9 | Next song |
| F10 | FN+F10 | Mute |
| F11 | FN+F11 | Volume - |
| F12 | FN+F12 | Volume + |
| FN+WIN | | Lock/Open WIN |
| FN+INS | | END |
| FN+ESC 3-5 seconds | | Restore factory settings (Except Bluetooth and 2.4G connection) |

4

Features

- 1.Low profile Mechanical keyboard
- 2.Bluetooth + 2.4G wireless + USB type-c wired Tri-Mode
- 3.Rechargeable battery :3000mA
- 4.RGB backlight ,20 kinds of lighting modes
- 5.N-key rollover

Troubleshooting Tips

If you have problems using the keyboard, here are some ways to help you troubleshoot the problem:
Check whether the battery is powered.
Check whether the wireless mode switch is in the correct position.
Check whether the Win/Mac switch is in the correct position.
Check whether the 2.4Ghz RF transceiver is normally plugged into the USB port.
Check whether Bluetooth has been switched to the correct channel.
Try reducing the distance between the keyboard and the computer.
Remove any large metal objects located between the keyboard and the computer that could interrupt the signal.
Cancel the Bluetooth connection, turn off the wireless mode, and disconnect type-c. Then turn on the wireless mode and reconnect the Bluetooth connection. (You can reconnect multiple times).

Pro Software Download Link

https://www.xvxchannel.com
★ Please note the macro software is only available for windows pc at this time.
★ The software can only be used in wired mode.

5



https://www.xvxchannel.com

instagram.com/xvx_keyboard facebook.com/xvxkeyboard



L75ゲーミング キーボード

取扱説明書

紹介


このたびは、XVXゲーミングキーボード「L75」をお買い上げいただき誠にありがとうございます。

※本製品をご使用になる前に必ずこの取扱説明書をよくお読みください。

パッケージ内容

- 1×ゲーミングキーボード
- 1×2.4Ghz RFワイヤレスレシーバー
- 1×USB Type C ケーブル
- 1×取扱説明書
- 1×2in1キーボード引抜/軸引抜工具

紹介

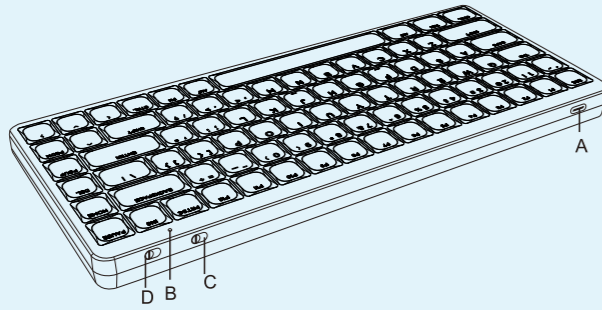

1

A Type-c接続口

B 指示ランプ
キーボードの状態によって、表示される光は異なります。
充電が必要→赤色点滅。
充電中→赤色連続点灯。
充電完了→他の状態ランプに変わる。
Bluetooth/2.4G接続中→ランプ点滅
Bluetooth/2.4G接続完了→点滅停止
ワイヤレス接続チャンネルを切り替える→点滅と停止

C ワイヤレスモードスイッチ
OFF→有線モード
ON→ワイヤレスモード

D Win/Macスイッチ

インストール、接続、使用

1|有線モード
スイッチを「オフ」に切り替えると、ワイヤードモードになります。
USB充電ケーブルをパソコンに接続する

2|2.4Gワイヤレスモード
ワイヤレスモードのスイッチを「オン」に切り替えます。
FN+R 3~6秒押し→指示ランプが点滅する→2.4Ghz RFワイヤレスレシーバーをコンピュータのUSBポートに差し込む→指示ランプが点滅停止→普通に使えるようになります。

3|Bluetoothモード
ワイヤレスモードの場合はスイッチを「オン」に切り替えます。
FN+Rを3~6秒押し→指示ランプが点滅する→パソコンや携帯電話がBluetoothを見つけることができます→Bluetooth接続をクリックする→指示ランプが点滅停止→普通に使えるようになります。
キーボードBluetoothの名称は「XVX L75 5.0/XVX L75 3.0」です。
本製品は、FN+Q、FN+W、FN+Eの3つのBluetoothチャンネルを持ち、各部の機器に接続することが可能です。接続方法は上記と同じです。
FN+Q/FN+W/FN+Eを1回押しすと、チャンネルが切り替わります。

2

例: FN+QはPC Aに、FN+WはPC Bに、FN+EはPC Cに、2.4GはPC Dに接続されています。ワイヤレスモードでは、FN+Qを押すとPC Aに切り替えて使用、FN+Wを押すとPC Bに切り替えて使用、FN+Eを押すとPC Cに切り替え、FN+Rを押すとPC Dに切り替えて使用することが可能です。切り替えの際、指示ランプが一回点滅して停止し、切り替えに成功したことを示します。

4. 初めて充電した後に使用するのがよいです。そうすれば、電池の寿命が延びます。
充電中、指示ランプは赤色で、フル充電後、赤色は他の色に変わります。電池残量が少なくなると、指示ランプが赤く点滅します。時間内に充電してください。

5、Win/Mac/その他
本製品は、WindowsおよびMacシステムに対応しています。Win/Macのスイッチを対応する位置に回してください。また、Androidスマートフォン、iPhone、iPadでもBluetoothで使用することができます。

RGBバックライト モード

| |
|--|
| FN+ : 20種類のLEDバックライトモードを調整可能 |
| FN+DEL : バックライトの色を調整する、8モード |
| FN+→ : スピードを上げる (最大レベルに達すると、→キーが1回点滅します) |
| FN+← : スピードを減る (最小レベルに達すると←キーが1回点滅します) |
| FN+F5 : キーボードバックライト - (最小レベルに達すると、↓キーが1回点滅します。) |
| FN+F6 : キーボードバックライト + (最大レベルに達すると、↑キーが1回点滅します。) |
| FN+TAB : バックライト常時点灯モード (もう一度お押しと、終了) |

3

キーボードを2~3分使用しないと、自動的にバックライトが消灯します。いずれかのキーを押せば、バックライトが再び点灯します。

マルチメディア機能

| MAC | WINDOWS | マルチメディア機能 |
|-----------------------|---------|--|
| F1 | FN+F1 | スクリーンの明るさ- |
| F2 | FN+F2 | スクリーンの明るさ+ |
| F3 | FN+F3 | タスクの変換 |
| F4 | FN+F4 | コンピューター |
| F5 | FN+F5 | キーボードのバックライト- |
| F6 | FN+F6 | キーボードのバックライト+ |
| F7 | FN+F7 | 前の曲 |
| F8 | FN+F8 | 音楽を再生/音楽を停止する |
| F9 | FN+F9 | 次の曲 |
| F10 | FN+F10 | ミュート |
| F11 | FN+F11 | ボリューム- |
| F12 | FN+F12 | ボリューム+ |
| FN+WIN | | WINキーをロック / アンロック |
| FN+INS | | END |
| FN+ESC 3-5 seconds | | 工場出荷時の設定に戻す (Bluetoothおよび2.4G接続を除く) |

4

特徴

1. ロープロファイルメカニカルキーボード
2. Bluetooth+2.4Gワイヤレス+USB type-c有線トライモード
3. 充電式バッテリー: 3000mA
4. RGBバックライト、20種類の照明モード
5. N-key ロールオーバー

トラブルシューティングのヒント:

キーボードに問題がある場合、トラブルシューティングに役立つ方法を紹介します。
・バッテリーが充電されていることを確認する。
・ワイヤレスモードスイッチが正しい位置にあることを確認してください。
・Win/Macスイッチが正しい位置であることを確認する。
・2.4Ghz RFトランシーバーがUSBポートに正しく差し込まれていることを確認してください。
・Bluetoothが正しいチャンネルに切り替わっていることを確認する。
・キーボードとパソコンの距離を縮めてみてください。
・キーボードとコンピュータの間に信号を妨害する可能性のある大きな金属製のものを取り除きます。
・Bluetoothの接続を解除し、ワイヤレスモードをオフにして、Type Cの接続を解除する。その後、ワイヤレスモードをONにして、Bluetooth接続を再試行してください。(複数回の再接続が可能です)。

ソフトウェアダウンロードリンク

★ご注意
現在、ソフトウェアはWindows PCのみ使用できます。
*このソフトウェアは、有線モードのみ使用できます。

5

当社の製品を受け取ったら、包装内の商品及び付属品をチェックして、すべてを確認してください。
部品が不足、商品が破損している場合、お気軽に弊店のアフターサービスに連絡ください。
当社の製品は1年品質保証があります。保証期間内に正常な使用状態でご使用の場合に限り品質を保証しております。万一保証期間内で故障がありました場合は、下記保証書の内容を文字で当店のアフターサービス-注文履歴に連絡してください。

| 保証書 | |
|------------|-------------------|
| 品番 | L75 |
| シリアルナンバー | |
| お客様 お名前 | |
| ご住所 | 郵便番号 |
| 販売店名称: | |
| 保証期間 | 1年 お買い上げ年月日 年 月 日 |

※必要事項をご記入の上、大切に保管してください。

https://www.xvxchannel.com

instagram.com/xvx_keyboard facebook.com/xvxkeyboard

